

TECHNICAL MANUAL

ILLUSTRATED PARTS BREAKDOWN

FLIGHTLINE
TOW TRACTOR
MODEL NO. 3

NSN 1740-01-173-0520YW

PSI Mobile Products, Inc.
F09603-84-C-0306
F09603-99-D-0382

BASIC AND ALL CHANGES HAVE BEEN MERGED
TO MAKE THIS A COMPLETE PUBLICATION

DISTRIBUTION STATEMENT - Distribution authorized to U.S. Government Agencies and their contractors (Administrative or Operational Use) (15 August 1994). Other requests for this document shall be referred to WR-ALC/LKC, Robins AFB, GA 31098. Questions concerning technical content shall be referred to WR-ALC/LES.

WARNING - This document contains technical data whose export is restricted by the Arms Export Control Act (Title 22, U.S.C., Sec 2751, et seq) or the Export Administration Act of 1979, as amended, Title 50, U.S.C., App. 2401 et seq. Violations of these export laws are subject to severe criminal penalties. Disseminate in accordance with provisions of DoD Directive 5230.25.

HANDLING AND DESTRUCTION NOTICE - Comply with distribution statement and destroy by any method that will prevent disclosure of contents or reconstruction of the document.

Published Under Authority of the Secretary of the Air Force

15 AUGUST 1984

CHANGE 11 - 16 AUGUST 2002

INSERT LATEST CHANGED PAGES. DESTROY SUPERSEDED PAGES.

LIST OF EFFECTIVE PAGES

NOTE: The portion of the text affected by the changes is indicated by a vertical line in the margins of the page. Changes to illustrations are indicated by miniature pointing hands. Changes to wiring diagrams are indicated by miniature pointing hands or by shaded areas. A vertical line running the length of a figure in the outer margin of the page indicates that the figure is being added.

Dates of issue for original and changed pages are:

Original	0	15 August 1984	Change	6	30 July 1989
Change	1	24 October 1985	Change	7	15 November 1989
Change	2	15 January 1987	Change	8	15 February 1991
Change	3	9 April 1987	Change	9	15 December 1991
Change	4	15 February 1989	Change	10	30 August 1995
Change	5	12 May 1989	Change	11	16 August 2002

TOTAL NUMBER OF PAGES IN THIS PUBLICATION IS 248, CONSISTING OF THE FOLLOWING:

Page No.	*Change No.	Page No.	*Change No.	Page No.	*Change No.
Title	11				
A	11				
i - ii	0				
iii	4				
iv Blank	0				
1-1 - 1-5	0				
1-6 Blank	0				
2-1	4				
2-2	0				
2-3 - 2-7	4				
2-8 - 2-46	0				
2-47	5				
2-48 - 2-92	0				
2-93 - 2-94	10				
2-95 - 2-110	0				
2-111	7				
2-112	8				
2-113	9				
2-114 - 2-115	4				
2-116 - 2-118	0				
2-119 - 2-120	6				
2-121 - 2-138	0				
2-139	1				
2-140 - 2-141	0				
2-142	4				
2-143 - 2-165	0				
2-166	3				
2-167 - 2-170	0				
2-171	11				
2-172 - 2-188	0				
2-189 - 2-190	4				
2-191 - 2-205 Added	4				
2-206 Blank Added	4				
3-1 - 3-5	4				
3-6	9				
3-7 - 3-8	10				
3-9 - 3-10	0				
3-11	10				
3-12	9				
3-13	10				
3-14 - 3-15	4				
3-16	6				
3-17 - 3-20	4				
3-21	11				
3-22 - 3-26	4				
3-27	8				
3-28	4				
3-29 - 3-30 Added	4				

*Zero in this column indicates an original page.

TABLE OF CONTENTS

Section		Page
I	INTRODUCTION.....	1-1
II	MAINTENANCE PARTS LIST.....	2-1
	2 Flightline Tow Tractor, Model No. 3	2-1
	3 . Extendable Hitch Connection Assembly Installation	2-8
	4 . Fuel Tank Assembly Installation	2-10
	5 . Electrical Assembly Installation	2-12
	6 . Hood and Hinges Group.....	2-16
	7 . Grille Group	2-17
	8 . Headlamps Group.....	2-18
	9 . Parking and Front Turn Lamps Group	2-19
	10 . Front Fender Group.....	2-20
	11 . Hood Latch, Prop Rod and Holddown Group.....	2-21
	12 . Windshield Frame Group	2-22
	13 . Glass Group	2-23
	14 . Door Group	2-24
	15 . Door Hinges Group.....	2-25
	16 . Door Latch Group.....	2-26
	17 . Door Handles and Lock Rod Group	2-27
	18 . Window Mechanism Group	2-28
	19 . Door Seals Group	2-29
	20 . Window Seals Group	2-30
	21 . Door Trim Panels and Arm Rest Group.....	2-31
	22 . Locks and Keys Group.....	2-32
	23 . Outside Mirrors Group.....	2-33
	24 . Hard Top Enclosure	2-34
	25 . Headliner and Moulding Group	2-35
	26 . Front Seat Frame and Pad Group	2-36
	27 . Front Seat Track Group.....	2-37
	28 . Front Seat Upholstery Group	2-38
	29 . Dome Lamp Group.....	2-39
	30 . Running Board Group	2-40
	31 . Body Side and Rear Panels Group	2-41
	32 . Sun Visor Group.....	2-42
	33 . Inside Rear View Mirror Assembly	2-43
	34 . Seat and Shoulder Belts Group.....	2-44
	35 . Floor Mat Group.....	2-45
	36 . Body Holddowns Group	2-46
	37 . Automatic Transmission Shifting Group	2-47
	38 . Parking Brake Group.....	2-49
	39 . Power Brake Booster and Master Cylinder Group	2-50
	40 . Accelerator Pedal and Linkage Group	2-52
	41 . Brake Pedal and Linkage Group	2-53
	42 . Steering Wheel Group	2-54
	43 . Steering Column Assembly and Upper Housing Group.....	2-55
	44 . Steering Column Lower Housing and Shafts Group.....	2-57
	45 . Instrument Cluster Group.....	2-59
	46 . Optional Instruments Including Hourmeter Group	2-61
	47 . Speedometer Cable Group	2-62
	48 . Directional, Ignition and Hazard Switches Group	2-63

TABLE OF CONTENTS (Continued)

Section		Page
49	. Ignition Switch Lock Cylinder Group	2-64
50	. Instrument Panel Switch Group	2-65
51	. Deleted	
52	. Heater Controls	2-66
53	. Heater Hose Group	2-67
54	. Fresh Air Intake Group	2-68
55	. Heater Group	2-69
56	. Defroster Duct Group	2-71
57	. Instrument Panel Group	2-72
58	. Floor Pan, Cowl and Dash Panel Group	2-74
59	. Fuse Panel and Parts Group	2-76
60	. Miscellaneous Switches Group	2-77
61	. Windshield Washer Group	2-78
62	. Windshield Wiper and Motor Group	2-79
63	. Battery and Mounting Group	2-80
64	. Horn Group	2-82
65	. Steering Linkage Group	2-83
66	. Steering Damper Group	2-85
67	. Steering Gear Components Group	2-86
68	. Rear Propeller Shaft Group	2-88
69	. Exhaust System	2-89
70	. Radiator, Hose and Coolant Recovery Group	2-90
71	. Transmission Cooling Lines Group	2-91
72	. Fuel Lines Group	2-93
73	. Brake Lines Group	2-95
74	. Brake Proportioning Valve Group	2-97
75	. Harnesses Group	2-98
76	. Miscellaneous Terminals and Connectors Group	2-99
77	. Miscellaneous Clips Group	2-100
78	. Deleted	
79	. Air Filter Assembly and Duct Group	2-101
80	. Positive Crankcase Ventilation System	2-102
81	. Power Steering Pump Mounting Group	2-103
82	. . Hydraulic Power Steering Pump Assembly	2-105
83	. Alternator, Starter and Vacuum Pump Mounting Parts Group	2-107
84	. Alternator and Vacuum Pump Group	2-109
85	. Belts Group	2-111
86	. Starting Motor Assembly	2-112
87	. Diesel Preheating Group	2-113
88	. Water Pump and Fan Group	2-114
89	. Oil Cooler and Filter Group	2-116
90	. Intake and Exhaust Manifolds Group	2-118
91	. Venturi and Dashpot Assembly Group	2-119
92	. Fuel Filter and Fuel Pump Assembly Group	2-121
93	. Injection Pump Assembly	2-123
94	. Governor Assembly Installation	2-126
95	. . Governor Assembly	2-128
96	. Injection Nozzles and Tubes Group	2-131
97	. Engine Oil Pan Group	2-133
98	. Engine Front Cover Group	2-134

TABLE OF CONTENTS (Continued)

Section	Page
99 . Camshaft and Valve Train Group	2-136
100 . Rocker Cover and Cylinder Head Group	2-138
101 . Oil Pump Group	2-140
102 . Crankshaft Pulley and Flywheel Group	2-142
103 . Piston, Connecting Rod and Crankshaft Group	2-143
104 . Engine Block Group	2-145
105 . Engine Overhaul Kit	2-147
106 . Engine Gasket Kit	2-149
107 . Front Engine Mounts Group	2-151
108 . Transmission Assembly and Case Assembly Group	2-152
109 . Torque Converter Group	2-154
110 . Throttle Valve Linkage Group	2-155
111 . Servo and Valve Body Group	2-156
112 . Governor Control Group	2-158
113 . Gears and Shafts Group	2-160
114 . Clutches Group	2-162
115 . Transfer Case Assembly and Transfer Case Housing Group	2-164
116 . Transfer Case Gears and Shafts	2-166
117 . Transfer Case Shift Forks Group	2-168
118 . Rear Engine Mounts Group	2-169
119 . Tire, Wheel and Weights Group	2-171
120 . Front Shock Absorber Group	2-172
121 . Front Stabilizer Bar Group	2-173
122 . Front Brake Caliper Group	2-175
123 . Front Brake Disc	2-176
124 . Front Spring Group	2-177
125 . Front Axle Housing Group	2-178
126 . Rear Shock Absorber Group	2-180
127 . Rear Brake and Cylinder Group	2-181
128 . Rear Axle Shafts Group	2-183
129 . Rear Axle Assembly and Rear Differential Group	2-184
130 . Rear Spring Group	2-186
131 . Rear Axle Housing Group	2-187
132 . Frame Assembly and Frame Components Group	2-188
133 . Winterization Kit	2-190
134 . Air System Installation	2-192
135 . . Idler Pulley Mounting	2-197
136 . . Air Compressor Governor Assembly	2-199
137 . . Alcohol Injector Assembly	2-200
138 . . Air Compressor Installation	2-202
139 . . . Air Compressor Assembly	2-204
III NUMERIC INDEX	3-1

SECTION I INTRODUCTION

1-1 GENERAL.

This Illustrated Parts Breakdown lists and describes the parts of the Flightline Tow Tractor, Model No. 3, manufactured by PSI Mobile Products, Inc., Mt. Clemens, MI 48043, as their part number 010341. This publication is arranged in the following manner:

- Table of Contents
- Section I - Introduction
- Section II - Maintenance Parts List
- Section III - Numerical Index

1-2 TABLE OF CONTENTS.

The Table of Contents shows the location of all illustrations within the Maintenance Parts List and also indicates the relationship of assemblies and subassemblies to each other by use of the indentation method described in paragraph 1-4 below. Illustrations are listed in the sequence of their appearance in the parts breakdown.

1-3 INTRODUCTION.

The Introduction consists of general information and instructions regarding the use of this Illustrated Parts Breakdown.

1-4 MAINTENANCE PARTS LIST.

The Maintenance Parts List contains a breakdown of the equipment into its assemblies, subassemblies and detail parts. Each assembly listed is followed immediately by its component parts properly indented to show their relationship to the assembly. An assembly beginning in column one has its detail parts beginning in column two. If a detail part is in turn an assembly, its detail parts begin in column three, etc. Attaching parts are listed immediately below and at the same indentation as the items which they attach. They are indicated by the symbol (AP) following the description.

All parts of the equipment are listed, except parts which lose their identity by being soldered, brazed, welded, riveted, swaged, cemented, potted, sealed, or otherwise permanently fastened to other parts or assemblies and are not subject to disassembly. In addition, certain bulk items such as insulation, sealant, etc., are not listed.

1-5 EXPLANATION OF COLUMNS USED IN THE MAINTENANCE PARTS LIST.

The seven columns used for the listing of information in the Maintenance Parts List are explained in the following paragraphs.

1-5.1 Figure and Index Number Column. The figure and index numbers key the parts breakdown list to the applicable illustration. The number preceding the dash is the figure number of the illustration. This figure number appears at the beginning of each page or listing. The number following the dash is the index number of a part appearing in the illustration. The index numbers are arranged in sequence and generally reflect the order of disassembly. Their main use is to facilitate the location of a part in the Maintenance Parts List after the part has been found in the Numerical Index.

1-5.2 Part Number Column. This column contains the manufacturer's, vendor's or Government standard (AN, MS, etc.) part number. Contractor or vendor (AMC) assigned part numbers or contractor specification control drawing numbers, if any, are shown in the description column. Part numbers are used to identify all parts, with the exception of parts which do not have a valid part number, in which case NO NUMBER is shown.

1-5.3 FSCM Column. This column lists the Federal Supply Code for manufacturers as presented currently in H4-1, H4-2 and H4-3 (NATO) catalogs.

Note

Contractor part numbers are identified with the code 31509. Parts shown parenthetically in the Description Column are contractor part numbers (figures 2 through 5 only).

The parenthetical part numbers reflected in the description column of figures 6 through 132 are AMC part numbers, not PSI (contractor) part numbers. AMC FSCM is 92871. This same PN relationship is reflected in the Numerical Index, Section III.

1-5.4 Description Column. This column identifies the parts being listed by noun name, followed by modifiers. When appropriate, the column also includes descriptive data such as: dimensions, material, applicable Government specifications, reference to approved publications for the article, or to previous listing of "REF" items as explained in paragraph 1-5.5. The contractor part number for all purchased parts is also reflected parenthetically in

this column. This column is also used to show the relationship between assemblies, subassemblies and their components by use of the indentation method explained in paragraph 1-4 above.

1-5.5 Units Per Assembly Column. This column indicates the quantity of parts required for the assembly or subassembly in which that part appears. "REF" (reference) is used in this column when the part has been previously listed and illustrated, with proper quantity, and is relisted for reference purposes only. The quantities listed in this column are, in the case of assemblies, the total quantity used at the location indicated. In the case of components of assemblies, the quantities listed indicate the number of parts used in one assembly. The quantities specified are not necessarily the total used in the equipment. The designation NP denotes parts not procurable as separate items, and AR denotes that the quantity of parts used is as required. NSS denotes not serviced separately.

1-5.6 Usable on Code Column. There is only one model tow tractor reflected in this technical manual. Part variations within assemblies (if any) are indicated by a letter symbol or combination of symbols appearing in this column. Where this column is left blank, parts listed are applicable to all models covered by this parts breakdown. The Usable on Code explanation appears at the end of the applicable parts list.

1-5.7 SMR Code Column. This manual contains Joint Military Services Uniform SMR Codes only. Definitions of these SMR codes are available in TO 00-25-195.

1-6 NUMERICAL INDEX.

This index contains a numerical listing of all parts that appear in the Maintenance Parts List and is arranged as shown below.

1-6.1 Part Number Column. This column lists all the parts in alpha-numerical sequence.

1-6.1.1 Part Number Arrangement. The order of precedence in beginning the part number arrangement on the extreme left is as follows:

Letters A through Z
Numerals 0 through 9

The order of precedence in continuing the part number arrangement from left to right is as follows:

Space (blank column)
Diagonal (/)
Point (.)
Dash (-)
Letters A through Z
Numerals 0 through 9

1-6.2 Figure and Index Column. This column lists the figure and index number on the parts list on which the part may be found. Standard parts are listed only for the first location at which they appear. When a part has not been assigned an index number, the figure and index number of the preceding part in the parts list is used with the letter "F" before the figure number, such as F7-6 (figure 7, index 6).

1-7 REPAIR PARTS KITS.

This publication reflects the listing of repair parts kits. Certain replacement parts are stocked only in kits. Standard parts and parts having multi-application are stocked in their appropriate classes and may also be stocked in kits. Kit parts should not be ordered from separate stock to make up a kit.

1-8 ABBREVIATIONS.

All symbols and abbreviations used in the Maintenance Parts List are in accordance with Specification MIL-STD-12, Abbreviations for Use on Drawings, and in Specifications, Standards and Technical Documents.

1-9 RELATED TECHNICAL MANUALS.

Other related manuals pertaining to the tow tractor are listed below.

Operation and Operator	TO 36A10-3-29-31
Maintenance Instructions	
Maintenance/Overhaul	TO 36A10-3-29-32
Instructions	

HOW TO USE THE ILLUSTRATED PARTS BREAKDOWN

IF PART NUMBER IS NOT KNOWN. . . . **Do This**

1. Determine in which system; fuel, oxygen, hydraulic, etc., or structure the part is located. Turn to the TABLE OF CONTENTS of the appropriate volume. From this list, select the illustration most likely to contain the desired part. Note figure number or page number.

2. Refer to figure number or page number of the illustration selected from TABLE OF CONTENTS. Locate the desired part on the illustration. Note index number.

3. Refer to corresponding GROUP ASSEMBLY PARTS LIST. Locate the index number selected from the illustration for part number, nomenclature, etc.

Page	Illustration	Page
2-1	Stick Landing Gear Installation.....	2-1
2-2	Stick Landing Gear Assembly.....	2-2
2-3	Stick Landing Gear Assembly.....	2-3
2-4	Stick Landing Gear Assembly.....	2-4
2-5	Stick Landing Gear Assembly.....	2-5
2-6	Stick Landing Gear Assembly.....	2-6
2-7	Stick Landing Gear Assembly.....	2-7
2-8	Stick Landing Gear Assembly.....	2-8
2-9	Stick Landing Gear Assembly.....	2-9
2-10	Stick Landing Gear Assembly.....	2-10
2-11	Stick Landing Gear Assembly.....	2-11
2-12	Stick Landing Gear Assembly.....	2-12
2-13	Stick Landing Gear Assembly.....	2-13
2-14	Stick Landing Gear Assembly.....	2-14
2-15	Stick Landing Gear Assembly.....	2-15
2-16	Stick Landing Gear Assembly.....	2-16
2-17	Stick Landing Gear Assembly.....	2-17
2-18	Stick Landing Gear Assembly.....	2-18
2-19	Stick Landing Gear Assembly.....	2-19
2-20	Stick Landing Gear Assembly.....	2-20
2-21	Stick Landing Gear Assembly.....	2-21
2-22	Stick Landing Gear Assembly.....	2-22
2-23	Stick Landing Gear Assembly.....	2-23
2-24	Stick Landing Gear Assembly.....	2-24
2-25	Stick Landing Gear Assembly.....	2-25
2-26	Stick Landing Gear Assembly.....	2-26
2-27	Stick Landing Gear Assembly.....	2-27
2-28	Stick Instl, Pilots Control 2-272	

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

2-28 Stick Instl, Pilots Control 2-272

Do This TO LOCATE THE PART BY SYSTEM INDEX DRAWING

1. Determine in which system; fuel, oxygen, hydraulic, controls, etc., the part is located. Turn to the COMPLETE SYSTEM INDEX DRAWING which appear as the last pages of the appropriate volume. Select the part in question or a part in the area in question of the appropriate SYSTEM INDEX DRAWING. Note volume and figure number.

3. Refer to corresponding GROUP ASSEMBLY PARTS LIST. Locate the index number selected from the illustration for the part number, nomenclature, etc.

2. Refer to the illustration of the volume and figure number noted on COMPLETE SYSTEM INDEX DRAWING. Locate the part on the illustration and note the index number.

2-272


Figur


2-28-1 R15016-1

20 Stick, Pilots Control 2-28

Figure 1-10. Stick Control System Index (Sheet 1 of 2)

HOW TO USE THE ILLUSTRATED PARTS BREAKDOWN-Continued

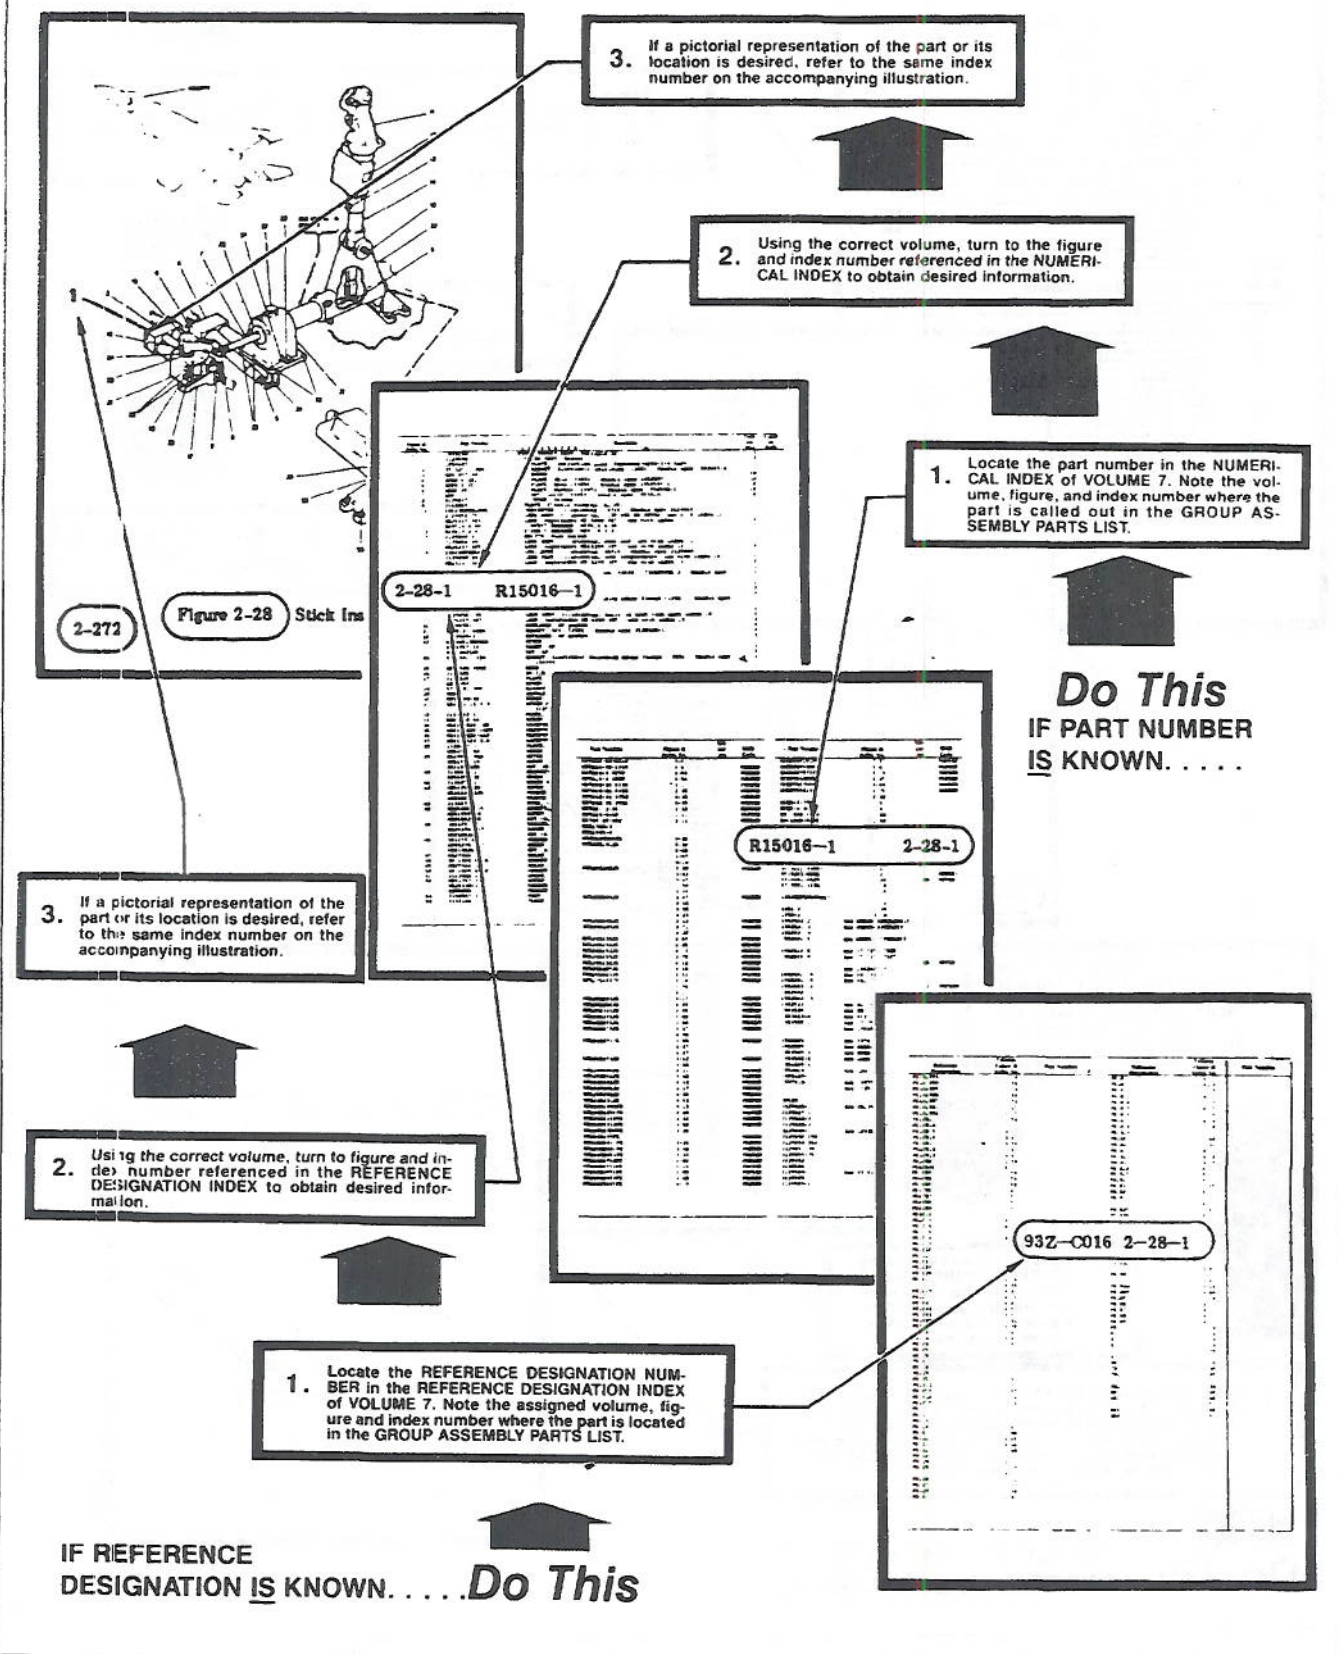

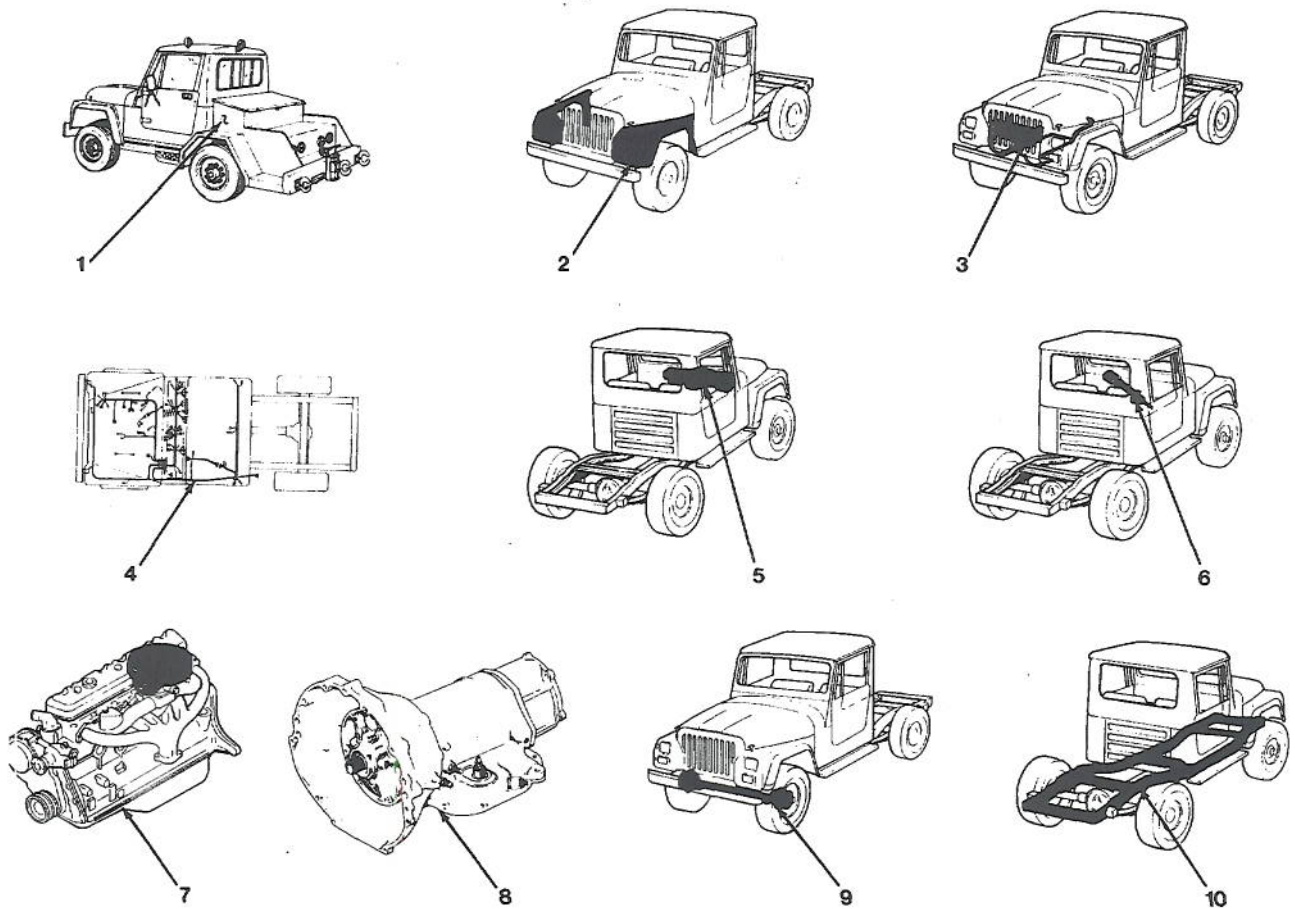

Index Number	Description	Figure Number
1	Conversion Assembly, CJ-10A Chassis	2-5
2	Sheet Metal and Cab Group	6-36
3	Linkage and Lines Group	37, 40, 41, 70-74
4	Electrical Systems Group	45-52, 59-64, 75-77
5	Heater, Air Intake, Dash, Prop Shaft and Misc. Group	53-58, 68-69, 78
6	Steering Group	42-44, 65-67
7	Engine and Related Parts Group	79-107
8	Transmission and Transfer Case Group	108-118
9	Suspension and Brakes Group	38, 39, 119-131
10	Frame Group	132

Figure 1. Flightline Tow Tractor, Model No. 3, Visual Index

10115B

SECTION II MAINTENANCE PARTS LIST

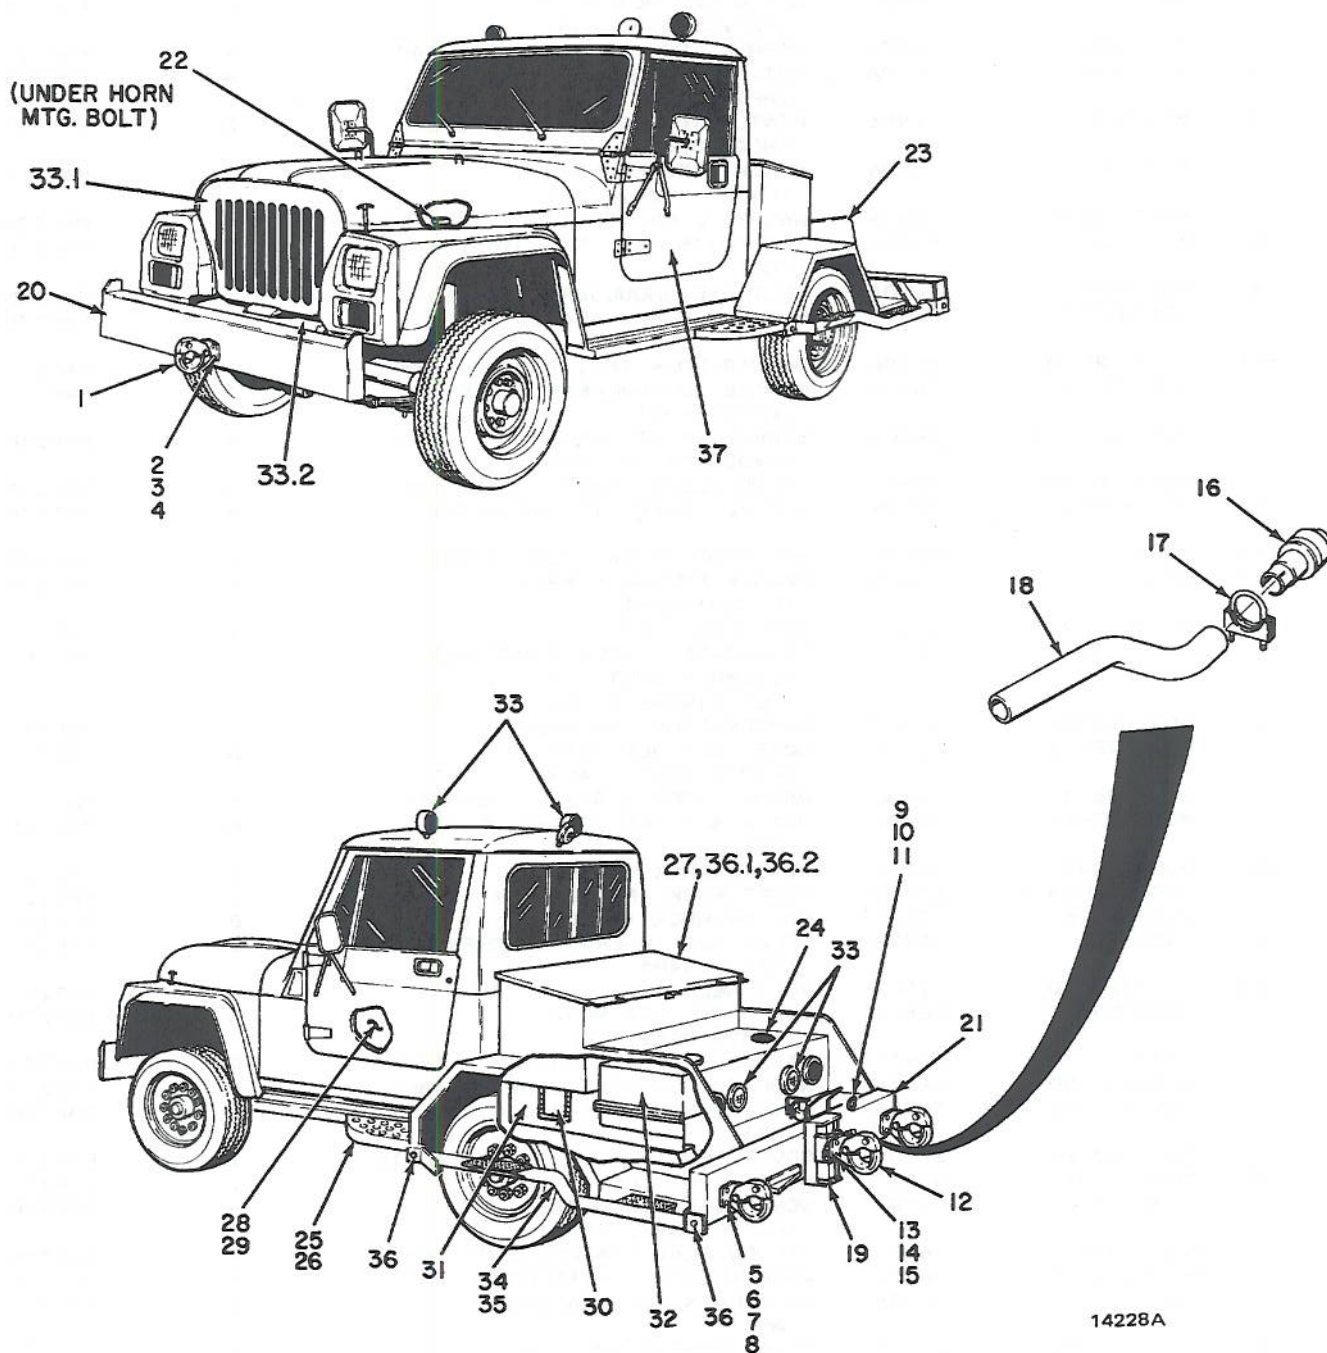


FIGURE 2. FLIGHTLINE TOW TRACTOR, MODEL NO. 3

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
2-	0000010341	31509		FLIGHTLINE TOW TRACTOR, MODEL NO. 3	1		AAAAF
	0000010343	31509		CONVERSION ASSEMBLY, AMC CJ-10A. CHASSIS	1		AAAAF
-1	MS51335-2	96906		PINTLE, TOWING, FRONT. (HC03006021)	1		PAFZZN
-2	MS90727-114	96906		SCREW, CAP, HEX HEAD (FA02010419) (AP)	4		PAFZZN
-3	MS35338-48	96906		WASHER, LOCK (FA11010276) (AP).	4		PAFZZN
-4	MS51968-14	96906		NUT, PLAIN, HEX (FA06010275) (AP)	4		PAFZZN
-5	MS51335-2	96906		PINTLE, TOWING, REAR OUTBOARD. (HC03006021)	2		PAFZZN
-6	MS90727-115	96906		SCREW, CAP, HEX HEAD (FA02010420) (AP)	8		PAFZZN
-7	MS35338-48	96906		WASHER, LOCK (FA11010276) (AP).	8		PAFZZN
-8	MS51968-14	96906		NUT, PLAIN, HEX (FA06010275) (AP)	8		PAFZZN
-9	MS51937-1	96906		BOLT, EYE, SHOULDER (FA27010421)	1		PAFZZN
-10	MS51967-2	96906		NUT, PLAIN, HEX (FA12010378) (AP)	1		PAFZZN
-11	MS35338-44	96906		WASHER, LOCK (FA11010380) (AP).	1		PAFZZN
-12	MS51335-2	96906		PINTLE, TOWING, REAR CENTER. (HC03006021)	1		PAFZZN
-13	MS90727-114	96906		SCREW, CAP, HEX HEAD (FA02010419) (AP)	4		PAFZZN
-14	MS35338-48	96906		WASHER, LOCK (FA11010276) (AP).	4		PAFZZN
-15	MS51968-14	96906		NUT, PLAIN, HEX (FA06010275) (AP)	4		PAFZZN
-16	5SLS	58180		ARRESTOR, SPARK (ED07010388).	1		PAFZZN
-17	3532	70655		HANGER, ENGINE EXHAUST. (ED02010389)	2		PAFZZN
-18	0000010477	31509		ELBOW, TAIL PIPE.	1		PAFZZN
-19	0000010381	31509		EXTENDABLE HITCH CONNECTION. ASSEMBLY INSTALLATION (SEE FIGURE 3 FOR DETAILS)	1		AAAAF
-20	0000010406	31509		BUMPER, FRONT, WELDMENT.	1		XBFZZ
	MS90728-111	96906		SCREW, CAP, HEX HEAD (FA02010334) (AP)	6		PAFZZN
	MS35338-48	96906		WASHER, LOCK (FA11010276) (AP).	6		PAFZZN
	MS51967-14	96906		NUT, PLAIN, HEX (FA06010335) (AP)	6		PAFZZN
-21	0000010407	31509		BUMPER, REAR, WELDMENT	1		XBFZZ
	C50LR-BR16-4	17446		RIVET, HUCK (FA17010311) (AP)	8		PAFZZN
	MGLP-R8-6	17446		COLLAR, HUCK (FA17010312) (AP).	8		PAFZZN
-22	1300-8	32498		RELAY, 12V (ENERGIZED OPEN) (EB11010485)	1		PAFZZN
-23	0000010410	31509		BODY WELDMENT.	1		XBFZZ
	MS90725-113	96906		SCREW, CAP, HEX HEAD (FA02010449) (AP)	6		PAFZZN
	MS27183-21	96906		WASHER, FLAT (FA12010451) (AP).	10		PAFZZN
	MS35338-50	96906		WASHER, LOCK (FA11010276) (AP).	6		PAFZZN
	MS51967-20	96906		NUT, PLAIN, HEX (FA06010335) (AP)	6		PAFZZN
-24	0000010366	31509		COVER, SENDING UNIT, NONMETALLIC	1		PAFZZN
-25	0000010390	31509		STEP, FRONT, LEFT HAND	1		XBFZZ
	MS90725-6	96906		SCREW, CAP, HEX HEAD (FA02010393) (AP)	4		PAFZZN
	MS27183-9	96906		WASHER, FLAT (FA12010379) (AP).	8		PAFZZN
	MS35338-44	96906		WASHER, LOCK (FA11010380) (AP).	4		PAFZZN
	MS51967-2	96906		NUT, PLAIN, HEX (FA12010378) (AP)	4		PAFZZN
-26	0000010391	31509		STEP, FRONT, RIGHT HAND.	1		XBFZZ
	MS90725-6	96906		SCREW, CAP, HEX HEAD (FA02010393) (AP)	4		PAFZZN
	MS27183-9	96906		WASHER, FLAT (FA12010379) (AP).	8		PAFZZN
	MS35338-44	96906		WASHER, LOCK (FA11010380) (AP).	4		PAFZZN
	MS51967-2	96906		NUT, PLAIN, HEX (FA12010378) (AP)	4		PAFZZN

FIG. & INDEX NO.	PART NUMBER	CAGE	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
2-27	0000010411	31509	..	LID, TOOL BOX, WELDMENT.	1		XBFZZ
	MGLP-RB-6	17446	..	RIVET, BLIND (FA17010312) (AP).	5		PAFZZN
-28	0000010452	31509	..	PLATE, SKID (UNDER ACCELERATOR. PEDAL)	1		PAFZZN
-29	SD6688	07707	..	RIVET, BLIND (FA08010469) (AP).	4		PAFZZN
-30	0000010345	31509	..	BALLAST ASSEMBLY (NOT. PROCURABLE SEPARATELY)	1		XA
-31	0000010314	31509	..	BALLAST MOUNTING ASSEMBLY. (NOT PROCURABLE SEPARATELY)	1		XA
-32	0000010350	31509	..	FUEL TANK ASSEMBLY. INSTALLATION (SEE FIGURE 4 FOR DETAILS)	1		AAAAF
-33	0000010351	31509	..	ELECTRICAL ASSEMBLY. INSTALLATION (SEE FIGURE 5 FOR DETAILS)	1		AAAAF
-33.1	0000-008430	31509	..	KIT, WINTERIZATION. (SEE FIGURE 133 FOR DETAILS)	1		AAAAF
-33.2	0000-008442	31509	..	AIR SYSTEM INSTALLATION. (SEE FIGURE 134 FOR DETAILS)	1		AAAAF
-34	0000010494	31509	..	RUB RAIL, LEFT HAND.	1		XBFZZ
-35	0000010495	31509	..	RUB RAIL, RIGHT HAND.	1		XBFZZ
-36	MS90725-134	96906	..	SCREW, CAP, HEX HEAD. (FA02010496) (AP)	4		PAFZZN
-36.1	82002	61674	..	JACK KIT, SCISSOR, 2 TON. (0001-008429)	1		PAFZZN
-36.2	7507	03683	..	WRENCH, LUG, 7/8 STD. (0002-008429)	1		PAFZZN
	0000010468	31509	..	DECAL, "DATA PLATE" (ON DASH. PANEL)	1		XBFZZ
	0000010466	31509	..	DECAL, "MAXIMUM TOWED LOAD. 40,000#" (ABOVE REAR CENTER TOWING PINTLE)	1		XBFZZ
	0000010467	31509	..	DECAL "DIESEL FUEL ONLY" (REAR OF FUEL FILLER NECK)	1		XBFZZ
	0000010464	31509	..	DECAL "WORK LIGHT" (LEFT SIDE. DASH PANEL ABOVE WORK LIGHT SWITCH)	1		XBFZZ
	0000010465	31509	..	DECAL "WARNINGS" (INSIDE LH. DOOR)	1		XBFZZ
-37	0000010342	31509	..	CAB AND CHASSIS ASSEMBLY, AMC. MODEL CJ-10A	1		AAAAF
	NO NUMBER	92871	..	HOOD AND HINGES GROUP. (SEE FIGURE 6 FOR DETAILS)	1		
	NO NUMBER	92871	..	GRILLE GROUP. (SEE FIGURE 7 FOR DETAILS)	1		
	NO NUMBER	92871	..	HEADLAMPS GROUP. (SEE FIGURE 8 FOR DETAILS)	1		
	NO NUMBER	92871	..	PARKING AND FRONT LAMPS GROUP. (SEE FIGURE 9 FOR DETAILS)	1		
	NO NUMBER	92871	..	FRONT FENDER GROUP. (SEE FIGURE 10 FOR DETAILS)	1		
	NO NUMBER	92871	..	HOOD LATCH, PROP ROD AND HOLD. DOWN GROUP	1		
	NO NUMBER	92871	..	WINDSHIELD FRAME GROUP. (SEE FIGURE 12 FOR DETAILS)	1		
	NO NUMBER	92871	..	GLASS GROUP. (SEE FIGURE 13 FOR DETAILS)	1		
	NO NUMBER	92871	..	DOOR GROUP. (SEE FIGURE 14 FOR DETAILS)	1		
	NO NUMBER	92871	..	DOOR HINGES GROUP. (SEE FIGURE 15 FOR DETAILS)	1		
	NO NUMBER	92871	..	DOOR LATCH GROUP. (SEE FIGURE 16 FOR DETAILS)	1		
	NO NUMBER	92871	..	DOOR HANDLES AND LOCK ROD. GROUP	1		
	NO NUMBER	92871	..	WINDOW MECHANISM GROUP. (SEE FIGURE 17 FOR DETAILS)	1		
			..	(SEE FIGURE 18 FOR DETAILS)			

FIG. & INDEX NO.	PART NUMBER	CAGE	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
2-	NO NUMBER	92871	..	DOOR SEALS GROUP (SEE FIGURE 19 FOR DETAILS)	1		
	NO NUMBER	92871	..	WINDOW SEALS GROUP (SEE FIGURE 20 FOR DETAILS)	1		
	NO NUMBER	92871	..	DOOR TRIM PANELS AND ARM REST. GROUP (SEE FIGURE 21 FOR DETAILS)	1		
	NO NUMBER	92871	..	LOCKS AND KEYS GROUP (SEE FIGURE 22 FOR DETAILS)	1		
	NO NUMBER	92871	..	OUTSIDE MIRRORS GROUP (SEE FIGURE 23 FOR DETAILS)	1		
	NO NUMBER	92871	..	HARDTOP ENCLOSURE (SEE FIGURE 24 FOR DETAILS)	1		
	NO NUMBER	92871	..	HEADLINER AND MOULDING GROUP (SEE FIGURE 25 FOR DETAILS)	1		
	NO NUMBER	92871	..	FRONT SEAT FRAME AND PAD GROUP (SEE FIGURE 26 FOR DETAILS)	1		
	NO NUMBER	92871	..	FRONT SEAT TRACK GROUP (SEE FIGURE 27 FOR DETAILS)	1		
	NO NUMBER	92871	..	FRONT SEAT UPHOLSTERY GROUP (SEE FIGURE 28 FOR DETAILS)	1		
	NO NUMBER	92871	..	DOME LAMP GROUP (SEE FIGURE 29 FOR DETAILS)	1		
	NO NUMBER	92871	..	RUNNING BOARD GROUP (SEE FIGURE 30 FOR DETAILS)	1		
	NO NUMBER	92871	..	BODY SIDE AND REAR PANELS. GROUP (SEE FIGURE 31 FOR DETAILS)	1		
	NO NUMBER	92871	..	SUN VISOR GROUP (SEE FIGURE 32 FOR DETAILS)	1		
	NO NUMBER	92871	..	INSIDE REAR VIEW MIRROR. ASSEMBLY (SEE FIGURE 33 FOR DETAILS)	1		
	NO NUMBER	92871	..	SEAT AND SHOULDER BELTS GROUP (SEE FIGURE 34 FOR DETAILS)	1		
	NO NUMBER	92871	..	FLOOR MAT GROUP (SEE FIGURE 35 FOR DETAILS)	1		
	NO NUMBER	92871	..	BODY HOLDDOWNS GROUP (SEE FIGURE 36 FOR DETAILS)	1		
	NO NUMBER	92871	..	AUTOMATIC TRANSMISSION SHIFTING GROUP (SEE FIGURE 37 FOR DETAILS)	1		
	NO NUMBER	92871	..	PARKING BRAKE GROUP (SEE FIGURE 38 FOR DETAILS)	1		
	NO NUMBER	92871	..	POWER BRAKE BOOSTER AND MASTER CYLINDER GROUP (SEE FIGURE 39 FOR DETAILS)	1		
	NO NUMBER	92871	..	ACCELERATOR PEDAL AND LINKAGE. GROUP (SEE FIGURE 40 FOR DETAILS)	1		
	NO NUMBER	92871	..	BRAKE PEDAL AND LINKAGE GROUP (SEE FIGURE 41 FOR DETAILS)	1		
	NO NUMBER	92871	..	STEERING WHEEL GROUP (SEE FIGURE 42 FOR DETAILS)	1		
	NO NUMBER	92871	..	STEERING COLUMN ASSEMBLY AND UPPER HOUSING GROUP (SEE FIGURE 43 FOR DETAILS)	1		
	NO NUMBER	92871	..	STEERING COLUMN LOWER HOUSING AND SHAFTS GROUP (SEE FIGURE 44 FOR DETAILS)	1		
	NO NUMBER	92871	..	INSTRUMENT CLUSTER GROUP (SEE FIGURE 45 FOR DETAILS)	1		
	NO NUMBER	92871	..	OPTIONAL INSTRUMENTS INCLUDING HOURMETER GROUP (SEE FIGURE 46 FOR DETAILS)	1		
	NO NUMBER	92871	..	SPEEDOMETER AND CABLE GROUP (SEE FIGURE 47 FOR DETAILS)	1		

FIG. & INDEX NO.	PART NUMBER	CAGE	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
2-	NO NUMBER	92871	..	DIRECTIONAL, IGNITION AND HAZARD SWITCHES GROUP (SEE FIGURE 48 FOR DETAILS)	1		
	NO NUMBER	92871	..	IGNITION SWITCH LOCK CYLINDER. . . . GROUP (SEE FIGURE 49 FOR DETAILS)	1		
	NO NUMBER	92871	..	INSTRUMENT PANEL SWITCH GROUP. . . . (SEE FIGURE 50 FOR DETAILS)	1		
	NO NUMBER	92871	..	HEATER CONTROLS. (SEE FIGURE 52 FOR DETAILS)	1		
	NO NUMBER	92871	..	HEATER HOSE GROUP. (SEE FIGURE 53 FOR DETAILS)	1		
	NO NUMBER	92871	..	FRESH AIR INTAKE GROUP (SEE FIGURE 54 FOR DETAILS)	1		
	NO NUMBER	92871	..	HEATER GROUP (SEE FIGURE 55 FOR DETAILS)	1		
	NO NUMBER	92871	..	DEFROSTER DUCT GROUP (SEE FIGURE 56 FOR DETAILS)	1		
	NO NUMBER	92871	..	INSTRUMENT PANEL GROUP (SEE FIGURE 57 FOR DETAILS)	1		
	NO NUMBER	92871	..	FLOOR PAN, COWL AND DASH PANEL. . . . GROUP (SEE FIGURE 58 FOR DETAILS)	1		
	NO NUMBER	92871	..	FUSE PANEL AND PARTS GROUP (SEE FIGURE 59 FOR DETAILS)	1		
	NO NUMBER	92871	..	MISCELLANEOUS SWITCHES GROUP (SEE FIGURE 60 FOR DETAILS)	1		
	NO NUMBER	92871	..	WINDSHIELD WASHER GROUP. (SEE FIGURE 61 FOR DETAILS)	1		
	NO NUMBER	92871	..	WINDSHIELD WIPER AND MOTOR GROUP (SEE FIGURE 62 FOR DETAILS)	1		
	NO NUMBER	92871	..	BATTERY AND MOUNTING GROUP (SEE FIGURE 63 FOR DETAILS)	1		
	NO NUMBER	92871	..	HORN GROUP (SEE FIGURE 64 FOR DETAILS)	1		
	NO NUMBER	92871	..	STEERING LINKAGE GROUP (SEE FIGURE 65 FOR DETAILS)	1		
	NO NUMBER	92871	..	STEERING DAMPER GROUP. (SEE FIGURE 66 FOR DETAILS)	1		
	NO NUMBER	92871	..	STEERING GEAR COMPONENTS GROUP . . . (SEE FIGURE 67 FOR DETAILS)	1		
	NO NUMBER	92871	..	REAR PROPELLER SHAFT GROUP (SEE FIGURE 68 FOR DETAILS)	1		
	NO NUMBER	92871	..	EXHAUST SYSTEM (SEE FIGURE 69 FOR DETAILS)	1		
	NO NUMBER	92871	..	RADIATOR, HOSES AND COOLANT RECOVERY GROUP (SEE FIGURE 70 FOR DETAILS)	1		
	NO NUMBER	92871	..	TRANSMISSION COOLING LINES GROUP (SEE FIGURE 71 FOR DETAILS)	1		
	NO NUMBER	92871	..	FUEL LINES GROUP (SEE FIGURE 72 FOR DETAILS)	1		
	NO NUMBER	92871	..	BRAKE LINES GROUP. (SEE FIGURE 73 FOR DETAILS)	1		
	NO NUMBER	92871	..	BRAKE PROPORTIONAL VALVE GROUP . . . (SEE FIGURE 74 FOR DETAILS)	1		
	NO NUMBER	92871	..	HARNESSES GROUP. (SEE FIGURE 75 FOR DETAILS)	1		
	NO NUMBER	92871	..	MISCELLANEOUS TERMINALS AND. CONNECTORS GROUP (SEE FIGURE 76 FOR DETAILS)	1		
	NO NUMBER	92871	..	MISCELLANEOUS CLIPS GROUP. (SEE FIGURE 77 FOR DETAILS)	1		
	8993000023	92871	..	ENGINE ASSEMBLY, DIESEL (INCLUDES ALL ACCESSORIES AND HANG ON'S)	1		PAFDDT

FIG. & INDEX NO	PART NUMBER	CAGE	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
2-	NO NUMBER	92871	...	AIR FILTER ASSEMBLY AND DUCT. . . GROUP (SEE FIGURE 79 FOR DETAILS)	1		
	NO NUMBER	92871	...	POSITIVE CRANKCASE VENTILATION. . . SYSTEM (SEE FIGURE 80 FOR DETAILS)	1		
	NO NUMBER	92871	...	POWER STEERING PUMP MOUNTING. . . GROUP (SEE FIGURE 81 FOR DETAILS)	1		
	7840045	52788	...	HYDRAULIC POWER STEERING PUMP . . . ASSEMBLY (SEE FIGURE 82) (3251017)	REF		
	NO NUMBER	92871	...	ALTERNATOR, STARTER AND VACUUM . . . PUMP MOUNTING PARTS GROUP (SEE FIGURE 83 FOR DETAILS)	1		
	NO NUMBER	92871	...	ALTERNATOR AND VACUUM PUMP. . . . GROUP (SEE FIGURE 84 FOR DETAILS)	1		
	NO NUMBER	92871	...	BELTS GROUP	1		
	23300-61504	S0356	...	STARTING MOTOR ASSEMBLY (8135170) (SEE FIGURE 86 FOR DETAILS)	1		PAFFFFP
	NO NUMBER	92871	...	DIESEL PREHEATING GROUP (SEE FIGURE 87 FOR DETAILS)	1		
	NO NUMBER	92871	...	WATER PUMP AND FAN GROUP. (SEE FIGURE 88 FOR DETAILS)	1		
	NO NUMBER	92871	...	OIL COOLER AND FILTER GROUP (SEE FIGURE 89 FOR DETAILS)	1		
	NO NUMBER	92871	...	INTAKE AND EXHAUST MANIFOLDS. . . . GROUP (SEE FIGURE 90 FOR DETAILS)	1		
	NO NUMBER	92871	...	VENTURI AND DASHPOT ASSEMBLY. . . . GROUP (SEE FIGURE 91 FOR DETAILS)	1		
	NO NUMBER	92871	...	FUEL FILTER AND FUEL PUMP ASSEMBLY GROUP (SEE FIGURE 92 FOR DETAILS)	1		
	16700-90061	S0356	...	INJECTION PUMP ASSEMBLY (8983501186) (SEE FIGURE 93 FOR DETAILS)	1		XBFZZ
	NO NUMBER	92871	...	GOVERNOR ASSEMBLY INSTALLATION. . . (SEE FIGURE 94 FOR DETAILS)	1		
	NO NUMBER	92871	...	INJECTOR NOZZLES AND TUBES. GROUP (SEE FIGURE 96 FOR DETAILS)	1		
	NO NUMBER	92871	...	ENGINE OIL PAN GROUP.	1		
	NO NUMBER	92871	...	ENGINE FRONT COVER GROUP. (SEE FIGURE 97 FOR DETAILS)	1		
	NO NUMBER	92871	...	CAMSHAFT AND VALVE TRAIN GROUP. . . . (SEE FIGURE 98 FOR DETAILS)	1		
	NO NUMBER	92871	...	ROCKER COVER AND CYLINDER HEAD. . . . GROUP (SEE FIGURE 99 FOR DETAILS)	1		
	NO NUMBER	92871	...	OIL PUMP GROUP.	1		
	NO NUMBER	92871	...	CRANKSHAFT PULLEY AND FLYWHEEL. . . GROUP (SEE FIGURE 100 FOR DETAILS)	1		
	NO NUMBER	92871	...	PISTON, CONNECTING ROD AND CRANKSHAFT GROUP (SEE FIGURE 103 FOR DETAILS)	1		
	NO NUMBER	92871	...	ENGINE BLOCK GROUP.	1		
	10101-Z9128	S0356	...	ENGINE OVERHAUL KIT	1		PAFZZN
	10103-Z9129	S0356	...	ENGINE GASKET KIT (SEE FIGURE 106 FOR DETAILS)	1		PAFZZN

FIG. & INDEX NO.	PART NUMBER	CAGE 1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
2-	NO NUMBER	92871	.. FRONT ENGINE MOUNTS GROUP. (SEE FIGURE 107 FOR DETAILS)	1		
	NO NUMBER	92871	.. TRANSMISSION ASSEMBLY AND CASE . . ASSEMBLY GROUP (SEE FIGURE 108 FOR DETAILS)	1		
	NO NUMBER	92871	.. TORQUE CONVERTER GROUP (SEE FIGURE 109 FOR DETAILS)	1		
	NO NUMBER	92871	.. THROTTLE VALVE LINKAGE GROUP . . . (SEE FIGURE 110 FOR DETAILS)	1		
	NO NUMBER	92871	.. SERVO AND VALVE BODY GROUP (SEE FIGURE 111 FOR DETAILS)	1		
	NO NUMBER	92871	.. GOVERNOR CONTROL GROUP (SEE FIGURE 112 FOR DETAILS)	1		
	NO NUMBER	92871	.. GEARS AND SHAFTS GROUP (SEE FIGURE 113 FOR DETAILS)	1		
	NO NUMBER	92871	.. CLUTCHES GROUP (SEE FIGURE 114 FOR DETAILS)	1		
	NO NUMBER	92871	.. TRANSFER CASE ASSEMBLY AND TRANSFER CASE HOUSING GROUP (SEE FIGURE 115 FOR DETAILS)	1		
	NO NUMBER	92871	.. TRANSFER CASE GEARS AND SHAFTS . . (SEE FIGURE 116 FOR DETAILS)	1		
	NO NUMBER	92871	.. TRANSFER CASE SHIFT FORKS. GROUP (SEE FIGURE 117 FOR DETAILS)	1		
	NO NUMBER	92871	.. REAR ENGINE MOUNTS GROUP (SEE FIGURE 118 FOR DETAILS)	1		
	NO NUMBER	92871	.. WHEELS AND WEIGHTS GROUP (SEE FIGURE 119 FOR DETAILS)	1		
	NO NUMBER	92871	.. FRONT SHOCK ABSORBER GROUP (SEE FIGURE 120 FOR DETAILS)	1		
	NO NUMBER	92871	.. FRONT STABILIZER BAR GROUP (SEE FIGURE 121 FOR DETAILS)	1		
	NO NUMBER	92871	.. FRONT BRAKE CALIPER GROUP. (SEE FIGURE 122 FOR DETAILS)	1		
	NO NUMBER	92871	.. FRONT BRAKE DISC (SEE FIGURE 123 FOR DETAILS)	1		
	NO NUMBER	92871	.. FRONT SPRING GROUP (SEE FIGURE 124 FOR DETAILS)	1		
	NO NUMBER	92871	.. FRONT AXLE HOUSING GROUP (SEE FIGURE 125 FOR DETAILS)	1		
	NO NUMBER	92871	.. REAR SHOCK ABSORBER GROUP. (SEE FIGURE 126 FOR DETAILS)	1		
	NO NUMBER	92871	.. REAR BRAKE AND CYLINDER GROUP. . . (SEE FIGURE 127 FOR DETAILS)	1		
	NO NUMBER	92871	.. REAR AXLES SHAFTS GROUP. (SEE FIGURE 128 FOR DETAILS)	1		
	NO NUMBER	92871	.. REAR AXLE ASSEMBLY AND REAR. . . . DIFFERENTIAL GROUP (SEE FIGURE 129 FOR DETAILS)	1		
	NO NUMBER	92871	.. REAR SPRING GROUP. (SEE FIGURE 130 FOR DETAILS)	1		
	NO NUMBER	92871	.. REAR AXLE HOUSING GROUP. (SEE FIGURE 131 FOR DETAILS)	1		
	NO NUMBER	92871	.. FRAME ASSEMBLY AND FRAME COMPONENTS GROUP (SEE FIGURE 132 FOR DETAILS)	1		


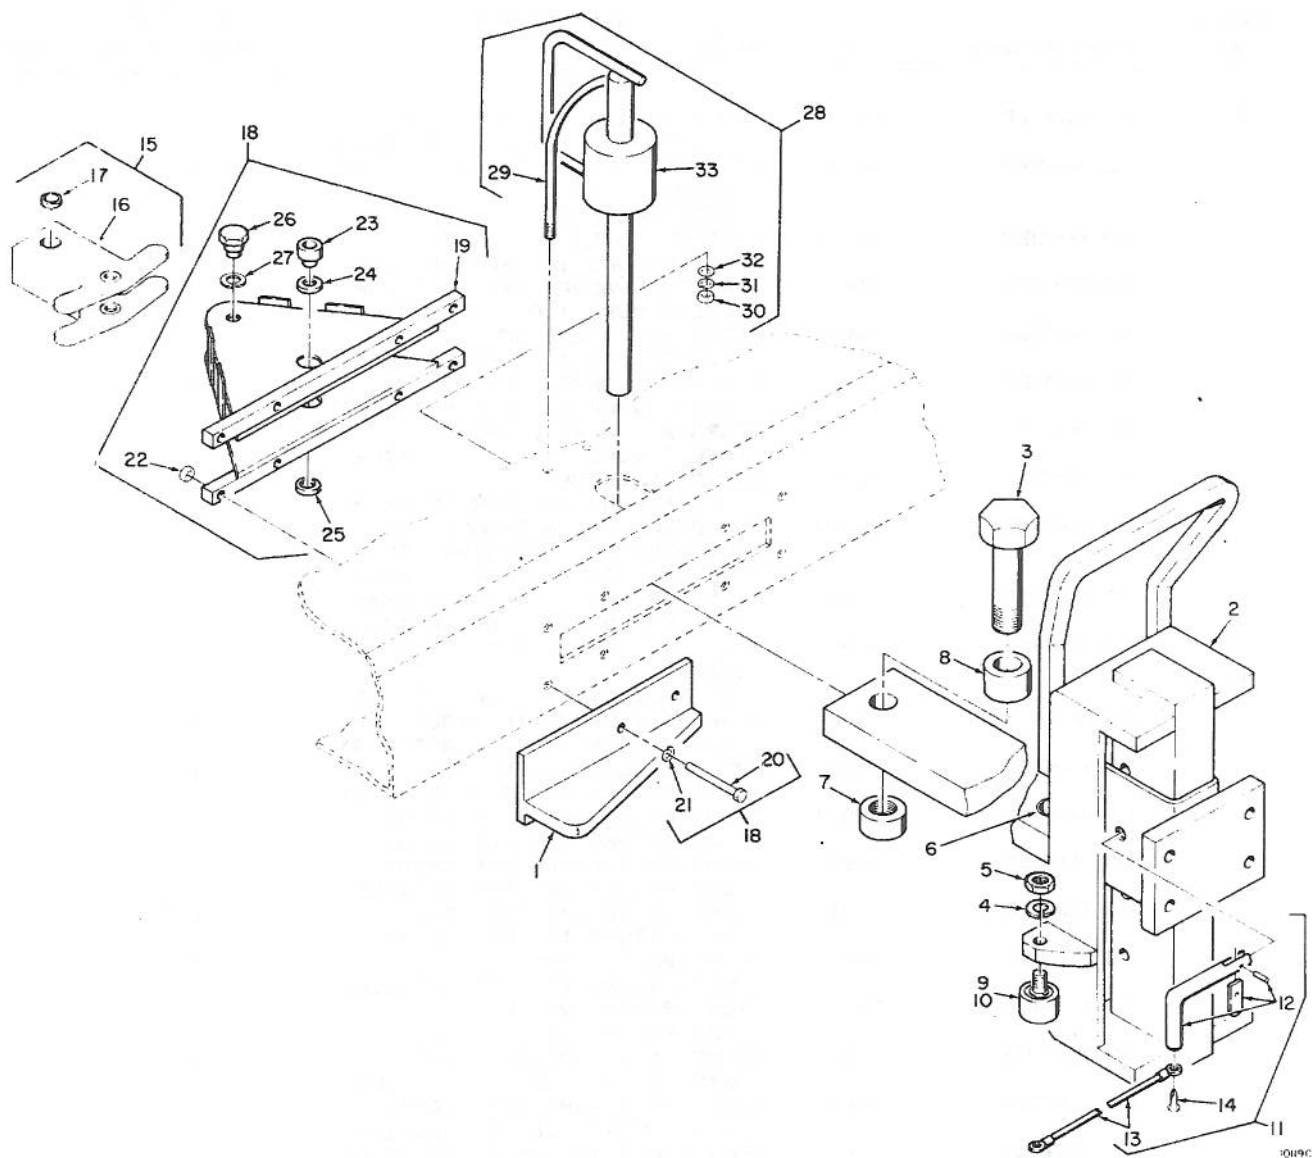


FIGURE 3. EXTENDABLE HITCH CONNECTION ASSEMBLY INSTALLATION


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
3-	0000010381	31509		EXTENDABLE HITCH CONNECTION. ASSEMBLY INSTALLATION (SEE FIGURE 2 FOR NHA)		REF	
-1	0000010412	31509		CAM WELDMENT.	1		XBFZZ
	0000010209	31509		HEIGHT ADJUSTABLE HITCH SUBASSEMBLY INSTALLATION	1		AF FFF
-2	0000010413	31509		HITCH, ADJUSTABLE HEIGHT, WELDMENT	1		XBFZZ
-3	MS90727-215	96906		SCREW, CAP, HEX HEAD (FA02010274) (AP)	1		PAFZZN
-4	MS35338-48	96906		WASHER, LOCK (FA11010276) (AP)	2		PAFZZN
-5	MS51968-14	96906		NUT, PLAIN, HEX (FA06010275) (AP)	2		PAFZZN
-6	0000010268	31509		BUSHING, PIN.	1		PAFZZN
-7	0000010269	31509		NUT, SPACER	1		PAFZZN
-8	0000010270	31509		SPACER	1		PAFZZN
-9	CF1-3-8S	92563		FOLLOWER, CAM (BA02010273)	2		PAFZZN
-10	17288	95879		FITTING, LUBRICATION. (LH05010483)	2		PAFZZN
-11	0000010373	31509		PIN ASSEMBLY INSTALLATION, HEIGHT ADJUST	1		PAFZZN
-12	559	83900		PIN, POSITIVE LOCKING. (HC07010459)	1		PAFZZN
-13	CL-73-KA-08	99862		CABLE ASSEMBLY (FA29010384)	1		PAFZZN
-14	FA22010385	31509		SCREW, SELF TAPPING, 10-32X3/8, RD HD, CAD PLATED	2		PAFZZN
-15	0000010277	31509		TUBE ASSEMBLY, GUIDE	1		XBFZZ
-16	0000010415	31509		TUBE, GUIDE (WELDMENT)	1		XBFZZ
-17	0000010281	31509		BUSHING, GUIDE TUBE	4		PAFZZN
-18	0000010282	31509		BRACKET ASSEMBLY	1		AF FFF
-19	0000010414	31509		BRACKET, WELDMENT	1		XBFZZ
-20	MS90727-115	96906		SCREW, CAP, HEX HEAD (FA02010420) (AP)	8		PAFZZN
-21	MS35338-48	96906		WASHER, LOCK (FA11010276) (AP)	8		PAFZZN
-22	MS51968-14	96906		NUT, PLAIN, HEX (FA06010275) (AP)	8		PAFZZN
-23	0000010287	31509		BUSHING, UPPER GUIDE	1		PAFZZN
-24	0000010288	31509		SPACER, BUSHING	1		PAFZZN
-25	0000010281	31509		GUIDE, BUSHING	1		PAFZZN
-26	0000010289	31509		PIN, PIVOT	2		PAFZZN
-27	MS35338-53	96906		WASHER, LOCK (FA11010290)	2		PAFZZN
-28	0000010336	31509		PIN ASSEMBLY, HITCH	1		PAFZZN
-29	0000010340	31509		ROD, RESTRICTION	1		XA
-30	MS51967-2	96906		NUT, PLAIN, HEX (FA12010378) (AP)	4		PAFZZN
-31	MS35338-44	96906		WASHER, LOCK (FA11010380) (AP)	2		PAFZZN
-32	MS27183-9	96906		WASHER, FLAT (FA12010379) (AP)	4		PAFZZN
-33	0000010416	31509		PIN, HITCH, WELDMENT	1		XA

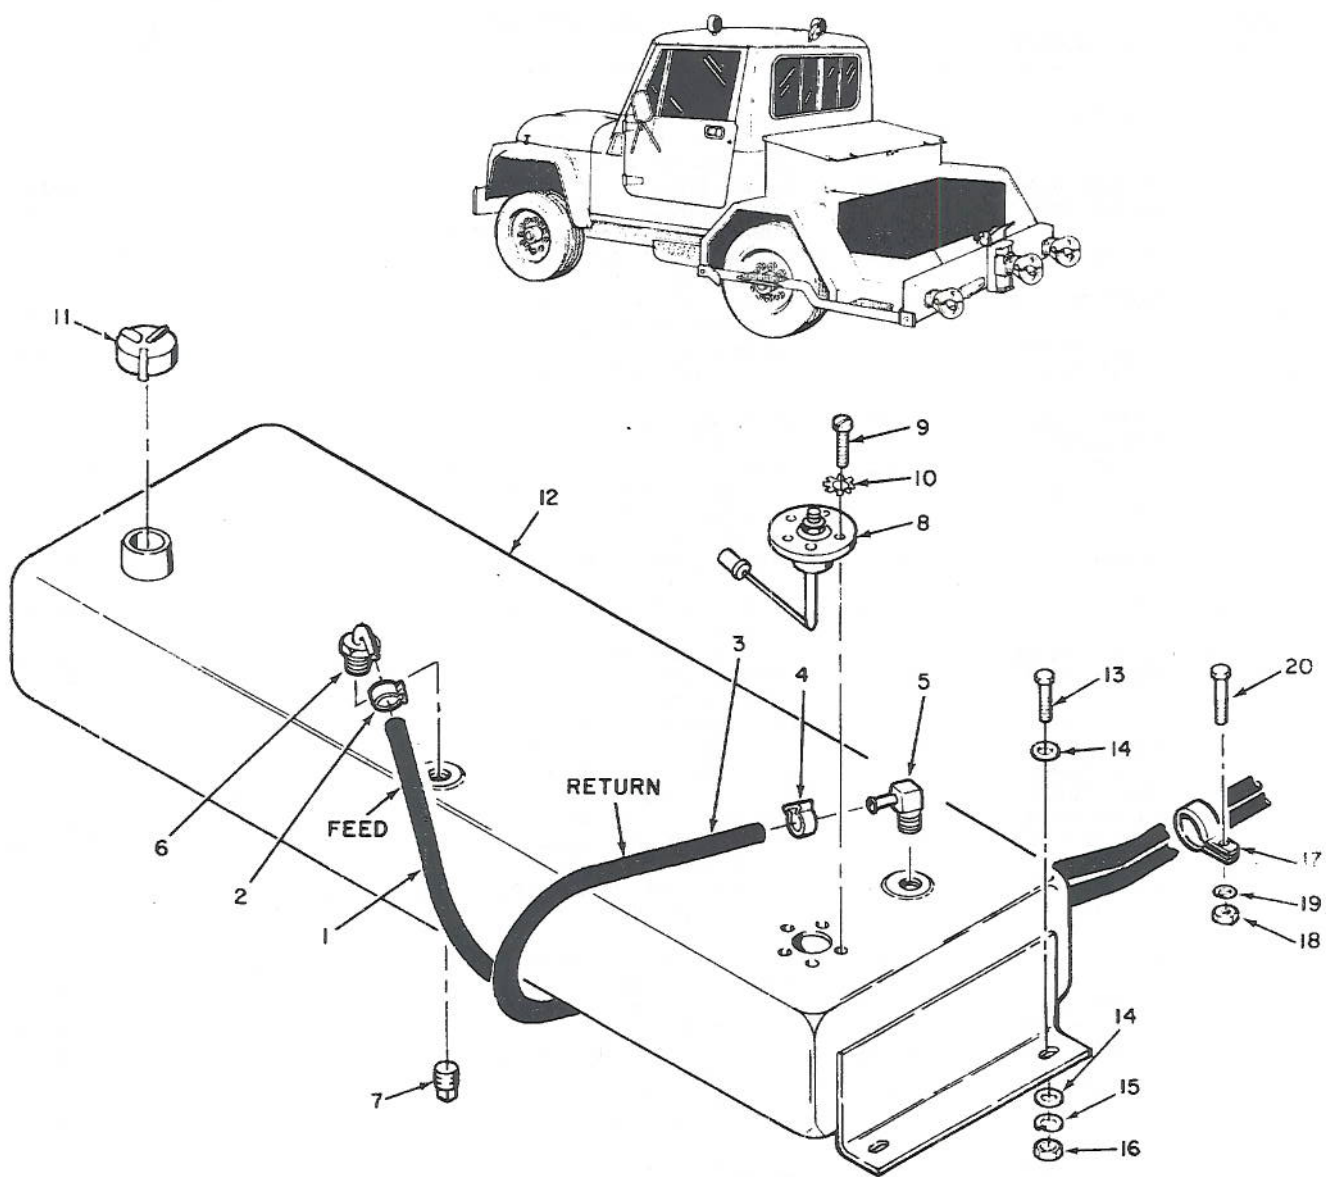

101173

FIGURE 4. FUEL TANK ASSEMBLY INSTALLATION

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
4--	0000010350	31509		FUEL TANK ASSEMBLY INSTALLATION (SEE FIGURE 2 FOR NHA)	REF		
-1	0000010471	31509		FUEL LINE, FEED, 5/16IDX9/16OD. X45 IN. LG	1		PAFZZN
-2	9328	70655		CLAMP, HOSE (FE12010472) (AP).	2		XA
-3	0000010470	31509		FUEL LINE, RETURN, 1/4IDX1/2OD. X42 IN. LG	1		PAFZZN
-4	9329	70655		CLAMP, HOSE (FE12010478) (AP).	2		XA
-5	1069X6	79470		CONNECTOR, ELBOW, MALE, 90 DEGREE. (FE05010505)	1		PAFZZN
-6	0000010458	31509		ELBOW, MALE, 90 DEG	1		PAFZZN
-7	3151X6	79470		PLUG, SQUARE HEAD (FE05010436)	1		PAFZZN
-8	92050657	78252		SENDING UNIT, WITH GASKET. (FE11010356)	1		PAFZZN
-9	MS35206-263	96906		SCREW, MACHINE (FA09010487). (AP)	5		PAFZZN
-10	MS35335-32	96906		WASHER, LOCK (FA11010517) (AP)	5		PAFZZN
-11	6862	79146		CAP, FILLER, OPENING. (FE06010454)	1		PAFZZN
-12	0000010355	31509		TANK, FUEL, WELDMENT.	1		XBFFZ
-13	MS18154-113	96906		SCREW, CAP, HEX HEAD. (FA02010437) (AP)	4		PAFZZN
-14	MS27183-17	96906		WASHER, FLAT (FA12010291) (AP)	8		PAFZZN
-15	MS35338-48	96906		WASHER, LOCK (FA11010276) (AP)	4		PAFZZN
-16	MS51967-14	96906		NUT, PLAIN, HEX (FA06010335). (AP)	4		PAFZZN
-17	9388	70655		CLIP, LOOP (WD19010518).	1		PAFZZN
-18	MS51967-2	96906		NUT, PLAIN, HEX (FA12010378). (AP)	1		PAFZZN
-19	MS35338-44	96906		WASHER, LOCK (FA11010380) (AP)	1		PAFZZN
-20	MS90725-8	96906		SCREW, CAP, HEX HD (FA02010398) (AP)	1		PAFZZN

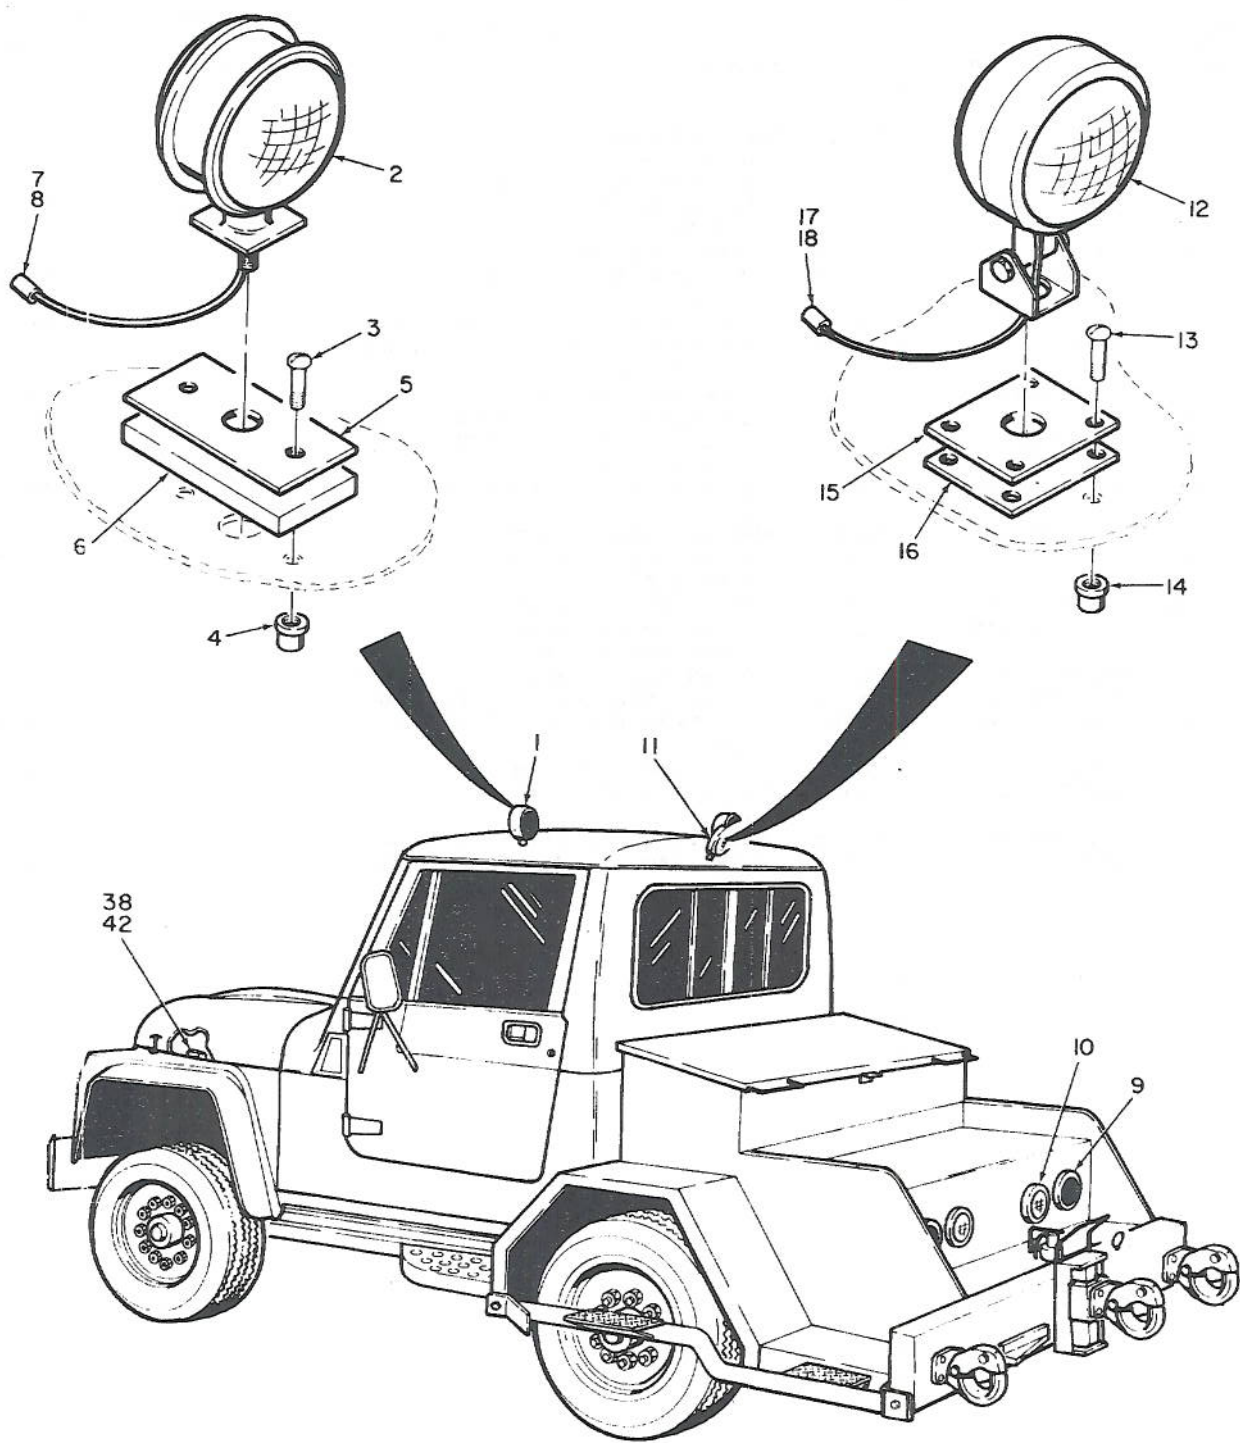

101208

FIGURE 5 ELECTRICAL ASSEMBLY INSTALLATION (SHEET 1 OF 2)



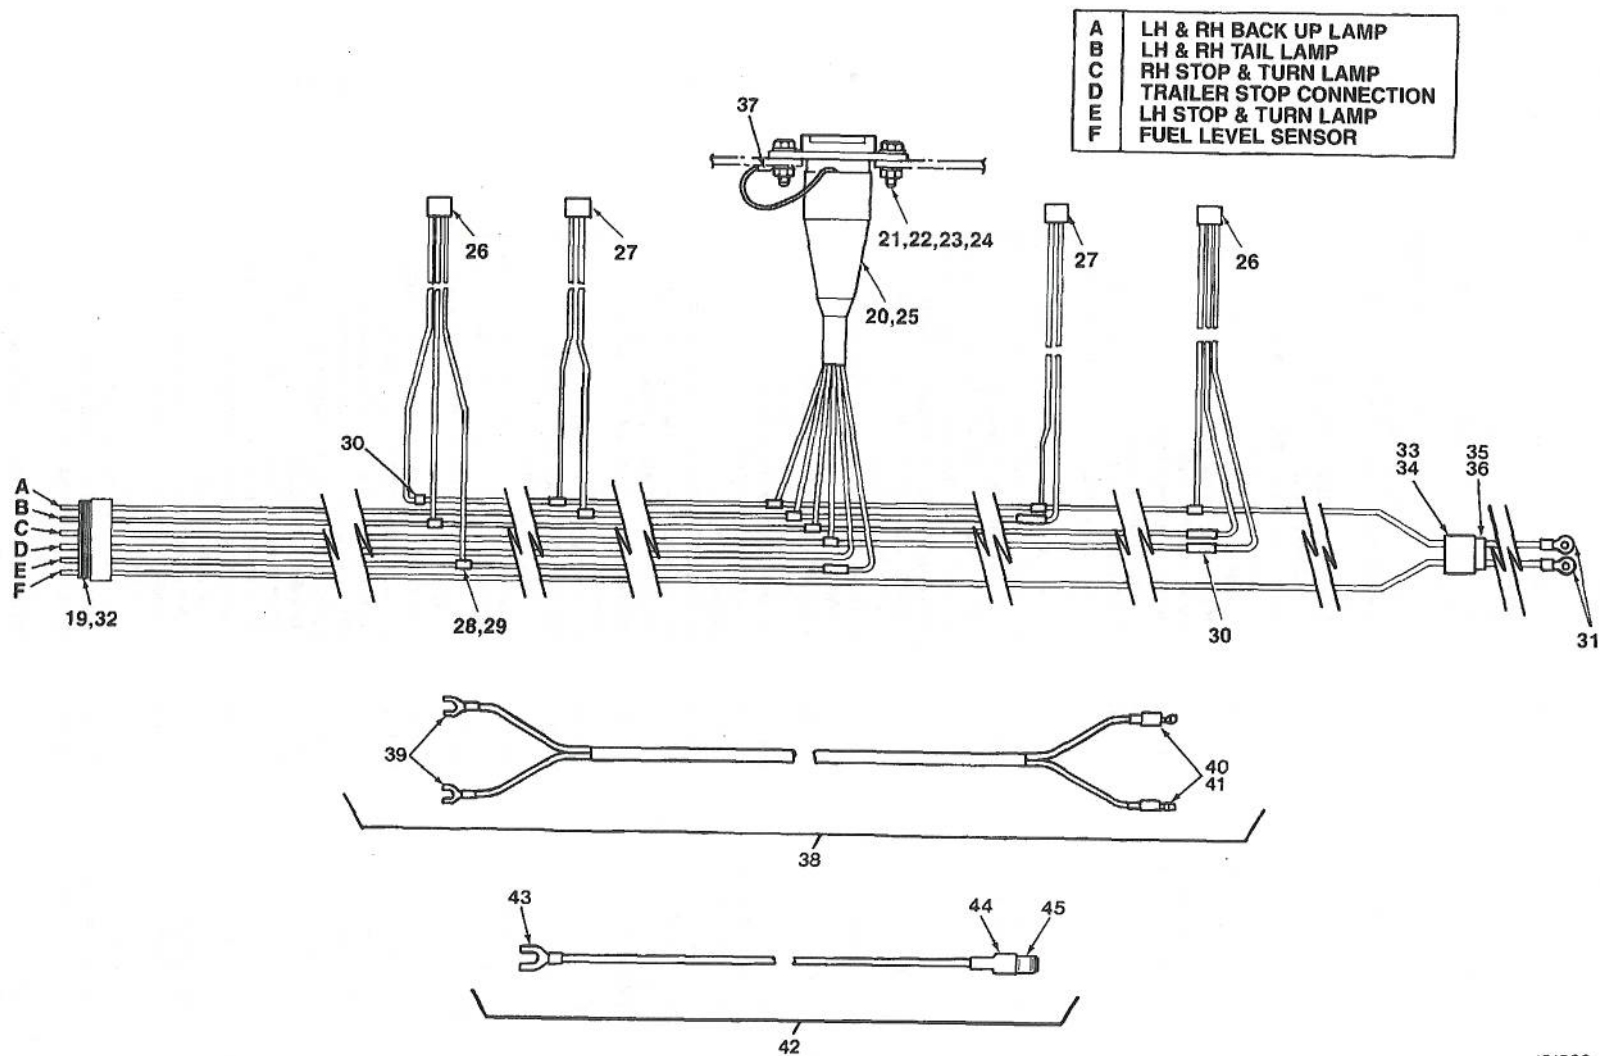


FIGURE 5. ELECTRICAL ASSEMBLY INSTALLATION (SHEET 2 OF 2)

FIG. & INDEX NO.	PART NUMBER	FSCN	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
5-	0000010351	31509		ELECTRICAL ASSEMBLY. INSTALLATION (SEE FIGURE 2 FOR NHA)	REF		
-1	0000010425	31509		LIGHT ASSEMBLY, ROOF, STOP AND TURN	2		AF FFF
-2	412	12662		LIGHT ASSEMBLY, ROOF, STOP AND TURN (LF10010431)	1		PA FFFP
-3	MS35206-265	96906		SCREW, MACHINE (FA09010433) (AP)	2		PA FZZN
-4	9505-10	19738		INSERT, SCREW THREAD. (FA28010432) (AP)	2		PA FZZN
	410-15	12662		LENS, LIGHT, RED OR AMBER (SPECIFY COLOR)	1		PA FZZN
	C3DZ13466A	23040		LAMP, INCANDESCENT	1		PA FZZN
	410-21	12662		RING, RETAINING, LENS	1		PA FZZN
-5	0000010423	31509		BASE, MOUNTING	1		PA FZZN
-6	0000010424	31509		GASKET, MOUNTING BASE	1		PA FZZN
-7	8900420	77060		CONNECTOR, MALE (WD11010429)	1		PA FZZN
-8	2971962	77060		TERMINAL, MALE (WD10010430)	1		PA FZZN
-9	0000010426	31509		LIGHT ASSEMBLY, STOP, TURN AND TAIL	2		PA FFFP
	426	12662		LAMP, SEALED BEAM (LF11010439)	2		PA FZZN
	426-18	12662		GROMMET, MOUNTING (LF11010440)	1		PA FZZN
-10	0000010427	31509		LIGHT ASSEMBLY, BACK UP	2		PA FFFP
	415	12662		LAMP, SEALED BEAM (LF13010438)	2		PA FZZN
	426-18	12662		GROMMET, MOUNTING (LF11010440)	1		PA FZZN
-11	0000010428	31509		LIGHT ASSEMBLY, REAR, FLOOD	1		PA FFFP
-12	408	12662		LIGHT ASSEMBLY, REAR FLOOD. (LF14010434)	1		PA FFFP
-13	MS35206-263	96906		SCREW, MACHINE (FA09010487) (AP)	4		PA FZZN
-14	9505-10	19738		INSERT, SCREW THREAD. (FA28010432) (AP)	4		PA FZZN
	4411	08108		LAMP, INCANDESCENT	1		PA FZZN
-15	0000010462	31509		PLATE, MOUNTING	1		PA FZZN
-16	0000010463	31509		GASKET, MOUNTING	1		PA FZZN
-17	8900420	77060		CONNECTOR, MALE (WD11010429)	1		PA FZZN
-18	2971962	77060		TERMINAL, MALE (WD10010430)	1		PA FZZN
	0000010397	31509		HARNESS ASSEMBLY, BODY WIRE	1		MFFFZ
-19	1201599	77060		CONNECTOR, SIX WAY TOWER. (WD11010417)	1		PA FZZN
-20	59S-7	79146		RECEPTACLE, 7 PIN (EB10010400)	1		PA FZZN
-21	MS16997-62	96906		SCREW, CAP, SOCKET HEAD. (FA02010398) (AP)	2		PA FZZN
-22	MS27183-9	96906		WASHER, FLAT (FA12010379) (AP)	2		PA FZZN
-23	MS35338-44	96906		WASHER, LOCK (FA11010380) (AP)	2		PA FZZN
-24	MS51967-2	96906		NUT, PLAIN, HEX (FA12010378) (AP)	2		PA FZZN
-25	59W-2-3	79146		BOOT, RECEPTACLE (EB10010401)	1		PA FZZN
-26	431-491	12662		PLUG, CONNECTOR (LF15010402)	2		PA FZZN
-27	431-49	12662		PLUG, HARNESS (LF15010403)	2		PA FZZN
-28	952F-250-32-NL	75037		SPLICE, WIRE (WD14010404)	10		PA FZZN
-29	72M-250-32-NL	75037		CONNECTOR, MALE (WD15010405)	10		PA FZZN
-30	62-P	75037		CONNECTOR, BUTT (WD13010399)	5		PA FZZN
-31	12-10-P	75037		TERMINAL, RING (WD10010395)	2		PA FZZN
-32	12010182	77060		TERMINAL, FEMALE (WD10010418)	6		PA FZZN
-33	2977762	77060		CONNECTOR BODY, FEMALE. (WD16010442)	1		PA FZZN
-34	2971962	77060		TERMINAL, MALE (WD10010430)	2		PA FZZN
-35	2973385	77060		CONNECTOR BODY, MALE. (WD16010443)	1		PA FZZN
-36	2965867	77060		TERMINAL, FEMALE (WD10010445)	2		PA FZZN
-37	MV14-14R/SX	75037		TERMINAL, STUD (WD10010479)	1		PA FZZN
-38	0000010396	31509		HARNESS ASSEMBLY, IGNITION LOCK OUT	1		MFFFZ
-39	MXU14-10FLX	75037		TERMINAL, TONGUE (WD10010484)	2		PA FZZN
-40	82M-180-P	75037		CONNECTOR, BULLET (WD11010416)	2		PA FZZN
-41	MNG14-156DFIX	75037		RECEPTACLE, BULLET (WD12010415)	2		PA FZZN



FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS USABLE		
					PER ASSY.	ON CODE	SMR CODE
5-42	0000010486	31509		HARNESS, WIRE, IGNITION LOCKOUT, . . . ALTERNATOR	1		MFFFZ
-43	MXU14-10FLX	75037		TERMINAL, TONGUE (WD10010484) . . .	1		PAFZZN
-44	72M-250-32-NL	75037		CONNECTOR, MALE (WD15010405) . . .	1		PAFZZN
-45	952F-250-32-NL	75037		SPLICE, WIRE (WD14010404) . . .	1		PAFZZN
	10059	70655		CLIP, WIRE (WD17010498) . . .	3		PAFZZN
	2306	70655		CLIP, WIRE (WD18010499) . . .	3		PAFZZN

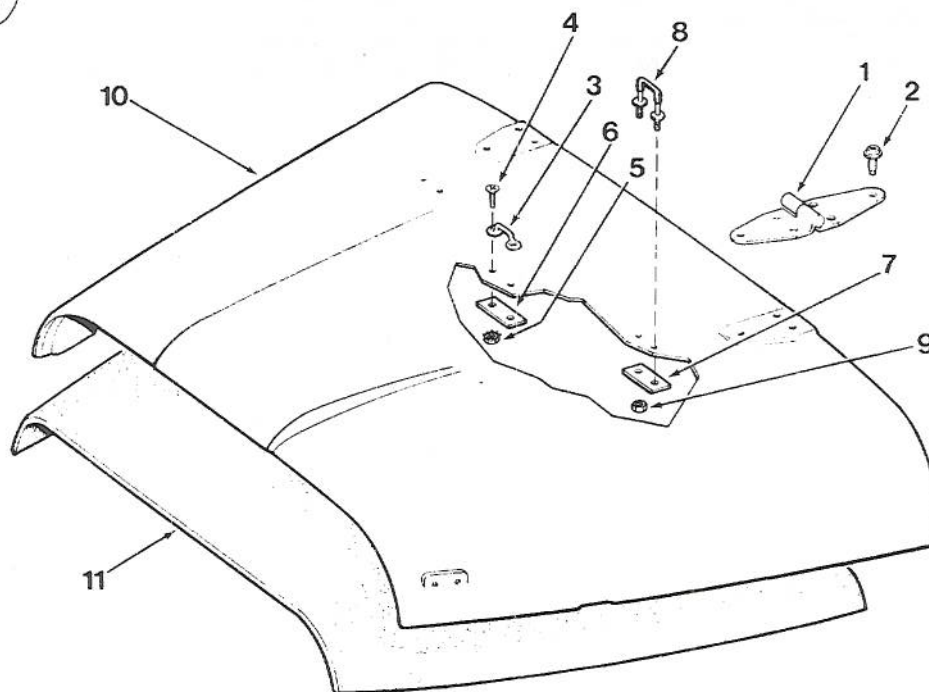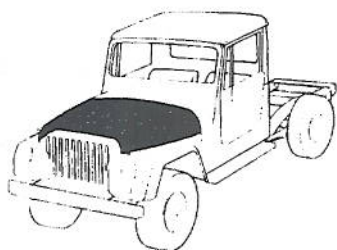

09792B

FIGURE 6. HOOD AND HINGES GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
6-	NO NUMBER	92871		HOOD AND HINGES GROUP.	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	5459516	92871		HINGE ASSEMBLY, HOOD	2		PAFZZN
-2	4004455	92871		SCREW AND WASHER (AP)	10		PAFZZN
-3	5455264	92871		LOOP, FOOTMAN.	1		PAFZZN
-4	4007088	92871		SCREW, MACHINE (AP)	2		PAFZZN
-5	271166	11862		NUT, PLAIN, ASSEMBLED WASHER.	2		PAFZZN
				(AP)			
-6	5455265	92871		REINFORCEMENT, HOOD.	1		PAFZZN
-7	689294	92871		REINFORCEMENT, HOOD, U-BOLT	2		PAFZZN
-8	979210	92871		U-BOLT, HOOD BUMPER (AP)	2		PAFZZN
-9	271172	24617		NUT, SELF-LOCKING (AP)	4		PAFZZN
-10	5761180	92871		HOOD WELDMENT ASSEMBLY,	1		XBFFZZ
				COMPLETE			
-11	5465058	92871		PAD, INSULATION, HOOD	1		XBFFZZ

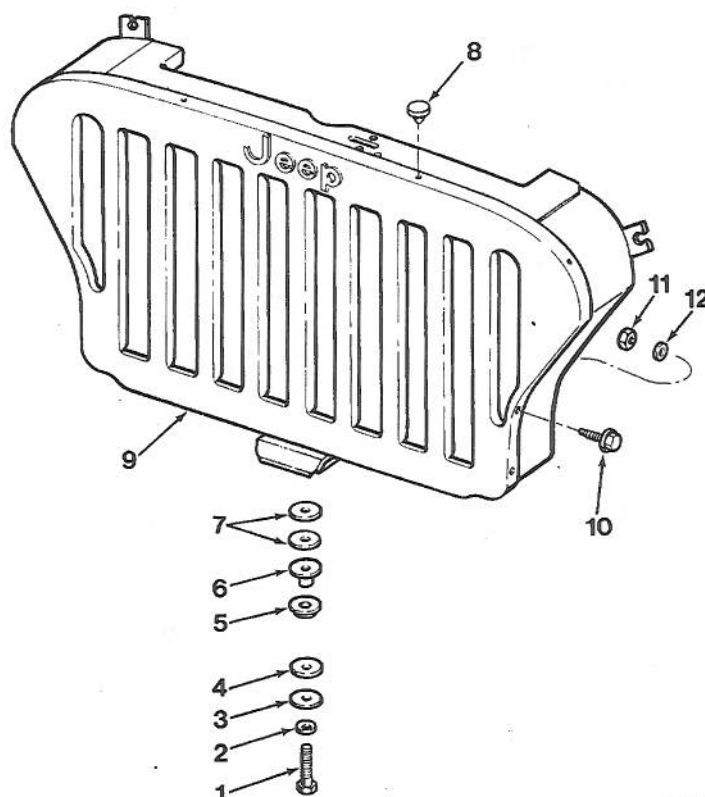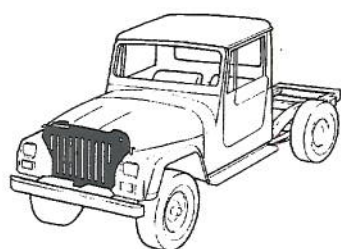

09779B

FIGURE 7. GRILLE GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
7-	NO NUMBER	92871		GRILLE GROUP	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	G180157	92871		. SCREW, CAP, HEX HD (180157)	1		PAFZZN
-2	4005633	92871		. WASHER, CONICAL	1		PAFZZN
-3	971672	92871		. WASHER, SPECIAL PLATED	1		PAFZZN
-4	971669	92871		. SPACER, BODY	1		PAFZZN
-5	972278	92871		. WASHER, BODY	1		PAFZZN
-6	971673	92871		. WASHER AND TUBE ASSEMBLY, BODY	1		PAFZZN
				HOLD DOWN			
-7	976871	92871		. WASHER, FLAT	2		PAFZZN
-8	5761372	92871		. BUMPER, HOOD	4		PAFZZN
-9	5994478	92871		. PANEL ASSEMBLY, RADIATOR GUARD	1		XBFZZ
-10	4004455	92871		. SCREW AND WASHER (AP)	6		PAFZZN
-11	120376	24617		. NUT, PLAIN, HEX (AP)	6		PAFZZN
-12	MS27183-13	96906		. WASHER, FLAT (AP)	6		PAFZZN



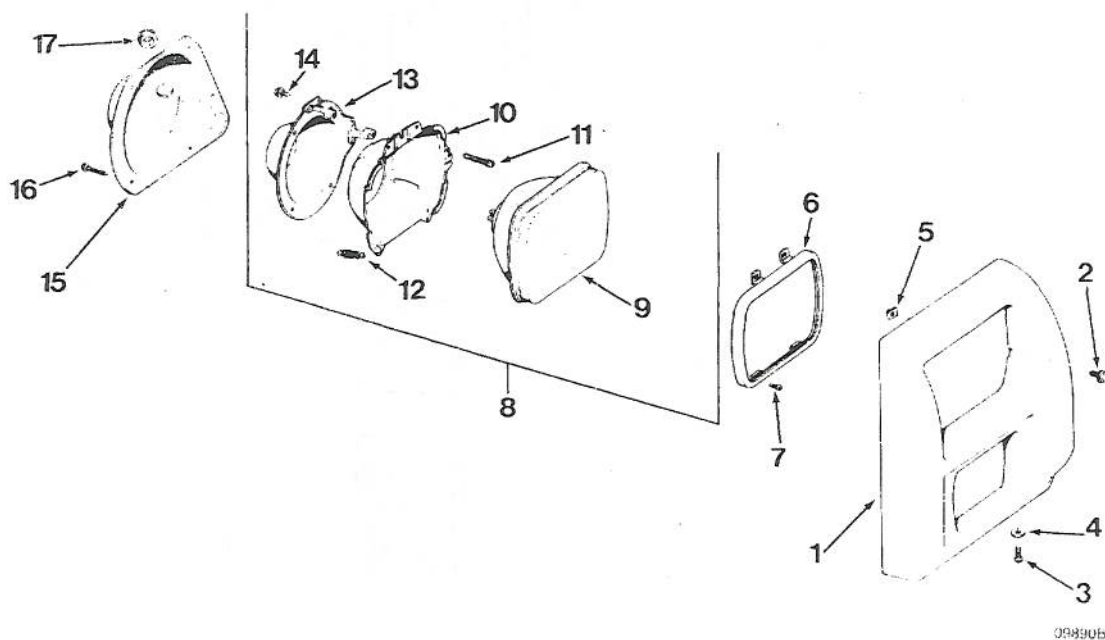


FIGURE 8. HEADLAMPS GROUP

FIG & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
8--	NO NUMBER	92871		HEADLAMPS GROUP.	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	5568147	92871		BEZEL, HEADLAMP, LEFT HAND	1		PAFZZN
	5568148	92871		BEZEL, HEADLAMP, RIGHT HAND	1		PAFZZN
-2	G9420510	92871		SCREW, OVAL HEAD (9420510) (AP)	4		PAFZZN
-3	G160539	92871		SCREW, MACHINE (160539) (AP)	4		PAFZZN
-4	G9419892	92871		NUT AND LOCK WASHER (9419892) (AP)	4		PAFZZN
-5	5994387	92871		NUT, J TYPE (AP)	4		PAFZZN
-6	8129439	92871		RING, RETAINING, HEADLAMP	2		PAFZZN
-7	G9413562	92871		SCREW, HEADLAMP RETAINER (9413562) (AP)	8		PAFZZN
-8	5994596	92871		HEADLAMP ASSEMBLY, RECTANGULAR	2		PAFZZN
-9	8128683	92871		LAMP, SEALED BEAM	1		PAFZZN
-10	8129592	92871		SHELL, HEADLAMP MOUNTING	1		PAFZZN
-11	8129405	92871		SCREW, HEADLAMP ADJUSTING	2		PAFZZN
-12	3202756	92871		SPRING, HEADLAMP ADJUSTING	1		PAFZZN
-13	8130053	92871		BODY, HEADLAMP MOUNTING	1		PAFZZN
-14	G9426241	92871		SCREW, CAP, HEX WASHER HEAD (9426241)	4		PAFZZN
-15	5994367	92871		COVER, REAR, LEFT HAND	1		PAFZZN
	5994621	92871		COVER, REAR, RIGHT HAND	1		PAFZZN
-16	G9419321	92871		SCREW, MACHINE (9419321)	10		PAFZZN
-17	5994437	92871		GROMMET	6		PAFZZN

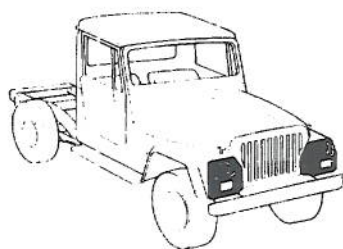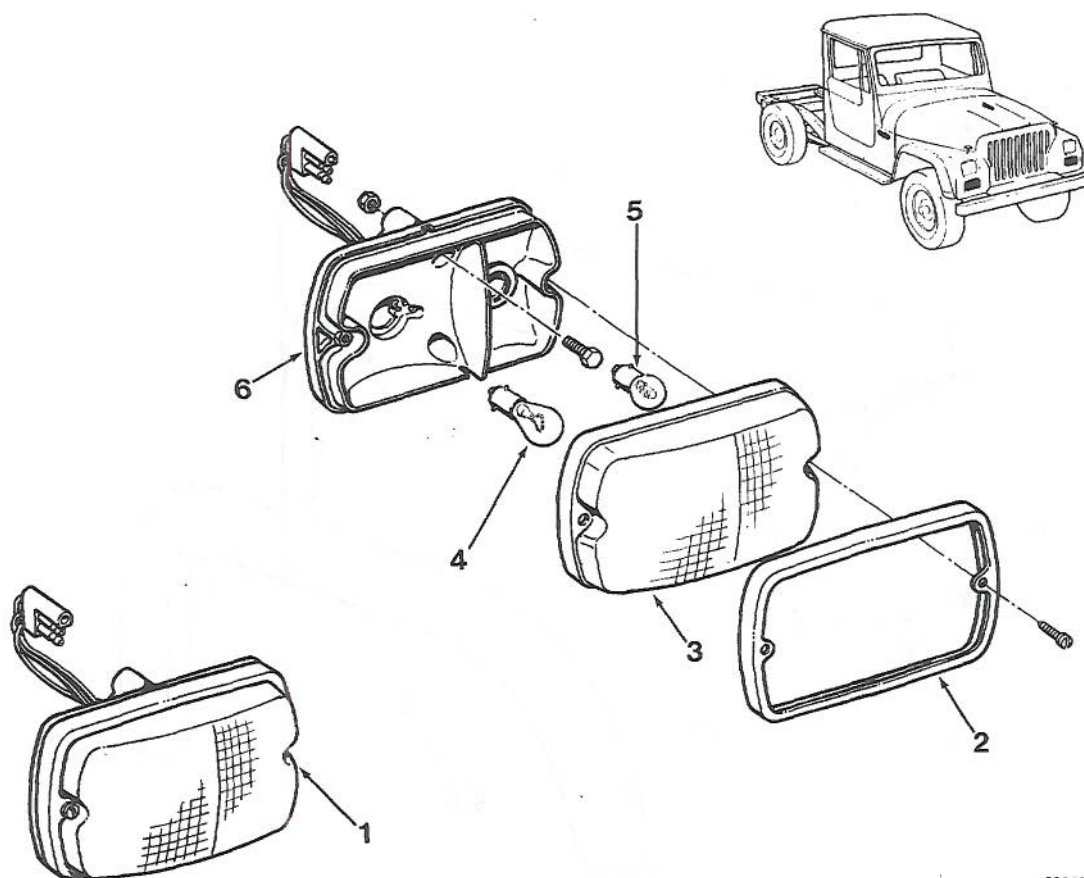

098188

FIGURE 9. PARKING AND FRONT TURN LAMPS GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
9-	NO NUMBER	92871		PARKING AND FRONT TURN LAMPS	REF		
				GROUP			
				(SEE FIGURE 2 FOR NHA)			
-1	5994464	92871		. LAMP ASSEMBLY, TURN SIGNAL, LEFT. . . .	1		PAFFFFP
	5994465	92871		. LAMP ASSEMBLY, TURN SIGNAL	1		PAFFFFP
				RIGHT HAND			
-2	15023	92871		. BEZEL (8134860).	1		PAFZZN
-3	15022	92871		. LENS (8134859)	1		PAFZZN
-4	P-25-1	08806		. LAMP, INCANDESCENT (5757455).	1		PAFZZN
-5	67	08806		. LAMP, INCANDESCENT (8133773).	1		PAFZZN
-6	NO NUMBER	08806		. BODY, LAMP ASSEMBLY (NOT	1		
				SERVICED SEPARATELY)			


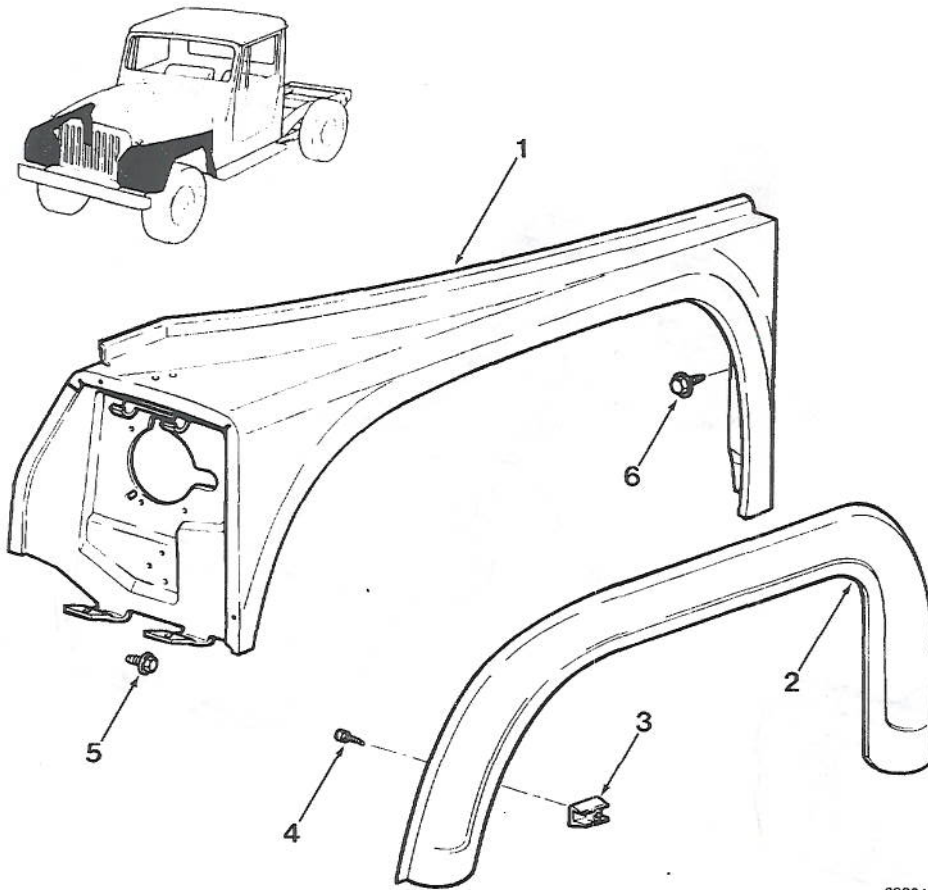


FIGURE 10. FRONT FENDER GROUP



FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
10-	NO NUMBER	92871		FRONT FENDER GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	5994479	92871		PANEL ASSEMBLY, FRONT FENDER AND SPLASH APRON, LEFT HAND	1		XBFZZ
	5994733	92871		PANEL ASSEMBLY, FRONT FENDER AND SPLASH APRON, RIGHT HAND	1		XBFZZ
-2	5567916	92871		EXTENSION, FENDER, FRONT, LEFT HAND	1		PAFZZN
	5567917	92871		EXTENSION, FENDER, FRONT, RIGHT HAND	1		PAFZZN
-3	4004868	92871		NUT	20		PAFZZN
-4	4005871	92871		SCREW, MACHINE	20		PAFZZN
-5	4004455	92871		SCREW AND WASHER	10		PAFZZN
-6	4003556	92871		SCREW AND WASHER	8		PAFZZN

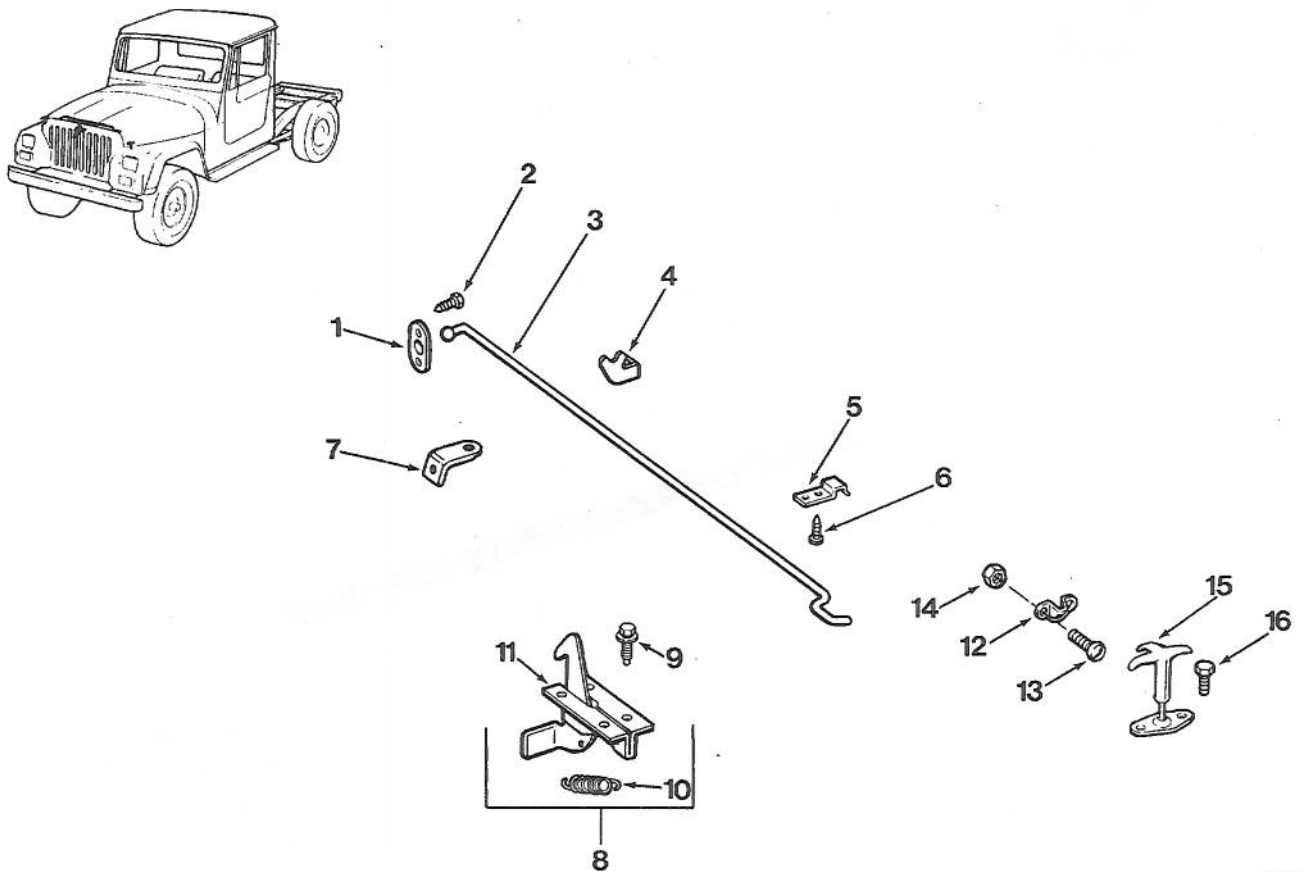

09823B

FIGURE 11. HOOD LATCH, PROP ROD AND HOLDDOWN GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
11-	NO NUMBER	92871		HOOD LATCH, PROP ROD AND HOLD DOWN GROUP	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	5464904	92871		BRACKET, HOOD PROP RETAINER	1		PAFZZN
-2	0456334	92871		SCREW AND WASHER (456334) (AP)	2		PAFZZN
-3	979722	92871		ROD, HOOD PROP	1		MFFFZ
-4	979725	92871		BRACKET, HOOD PROP CATCH (PART OF HOOD ASSEMBLY WELDMENT)	REF		
-5	979305	92871		CLIP, RETAINING, HOOD PROP ROD	1		MFFFZ
-6	0161860	92871		SCREW, MACHINE (161860) (AP)	2		PAFZZN
-7	973857	92871		BRACKET, SUPPORT HOOD PROP	1		MFFFZ
-8	5752530	92871		CATCH ASSEMBLY, HOOD SAFETY HOOK	1		PAFZZN
-9	987145	92871		SCREW AND WASHER (AP)	3		PAFZZN
-10	978984	92871		SPRING, SAFETY HOOK HOOD CATCH	1		PAFZZN
-11	NO NUMBER	92871		HOOK, SAFETY CATCH (NOT SERVICED SEPARATELY)	1		
-12	5751190	92871		BRACKET, HOOD CATCH	2		PAFZZN
-13	MS35206-279	96906		SCREW, MACHINE (AP)	4		PAFZZN
-14	271172	24617		NUT, SELF-LOCKING (AP)	4		PAFZZN
-15	5751191	92871		CATCH ASSEMBLY, HOOD	2		PAFZZN
-16	4007091	92871		SCREW, CAP, HEX HD (AP)	4		PAFZZN

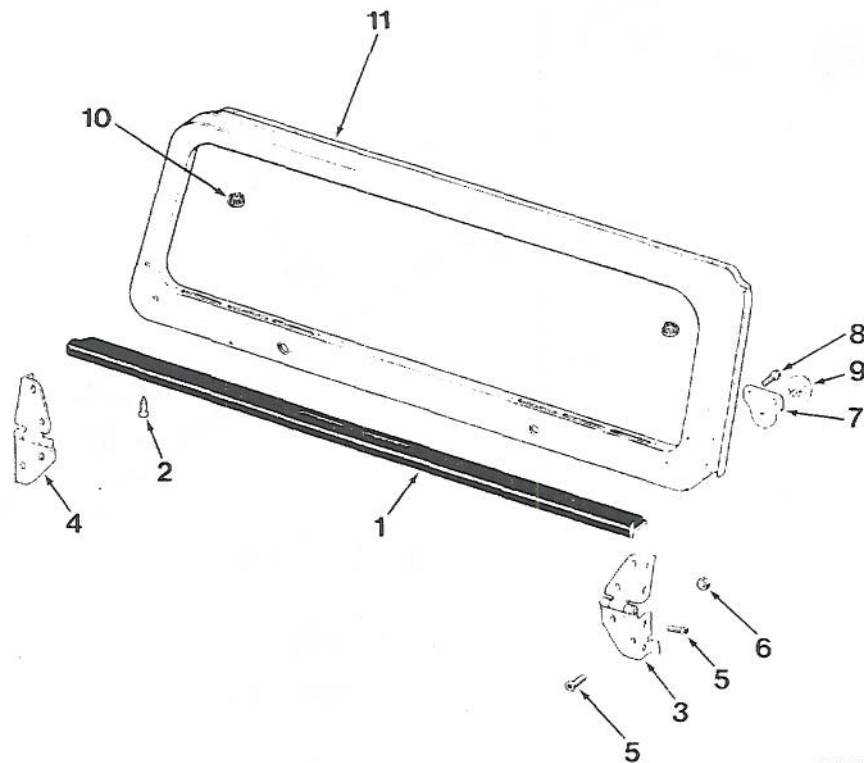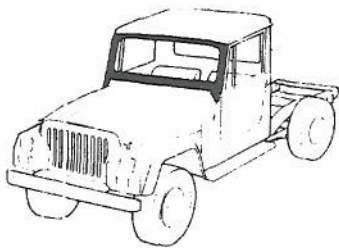

09861B

FIGURE 12. WINDSHIELD FRAME GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
12--	NO NUMBER	92871		WINDSHIELD FRAME GROUP	REF		
--1	5453950	92871		(SEE FIGURE 2 FOR NHA) WEATHER STRIP ASSEMBLY,	1		PAFZZN
--2	4004171	92871		WINDSHIELD TO COWL SCREW AND WASHER (AP)	9		PAFZZN
--3	5462425	92871		HINGE ASSEMBLY, WINDSHIELD AND	1		XBZZ
--4	5462424	92871		DOOR COWL, HALF, LEFT SIDE HINGE ASSEMBLY, WINDSHIELD AND	1		XBZZ
--5	4004956	92871		DOOR COWL, HALF, RIGHT SIDE SCREW, MACHINE (AP).	8		PAFZZN
--6	120376	24617		NUT, PLAIN, HEX (AP).	8		PAFZZN
--7	5453945	92871		BRACKET, WINDSHIELD HOLD DOWN.	2		XBZZ
--8	4007220	92871		SCREW AND WASHER (AP)	4		PAFZZN
--9	5457045	92871		KNOB, WINDSHIELD CLAMP	2		XBZZ
--10	6432453	92871		PLUG, BUTTON (432453).	2		XA
--11	5758971	92871		WINDSHIELD WELDMENT	1		XBZZ

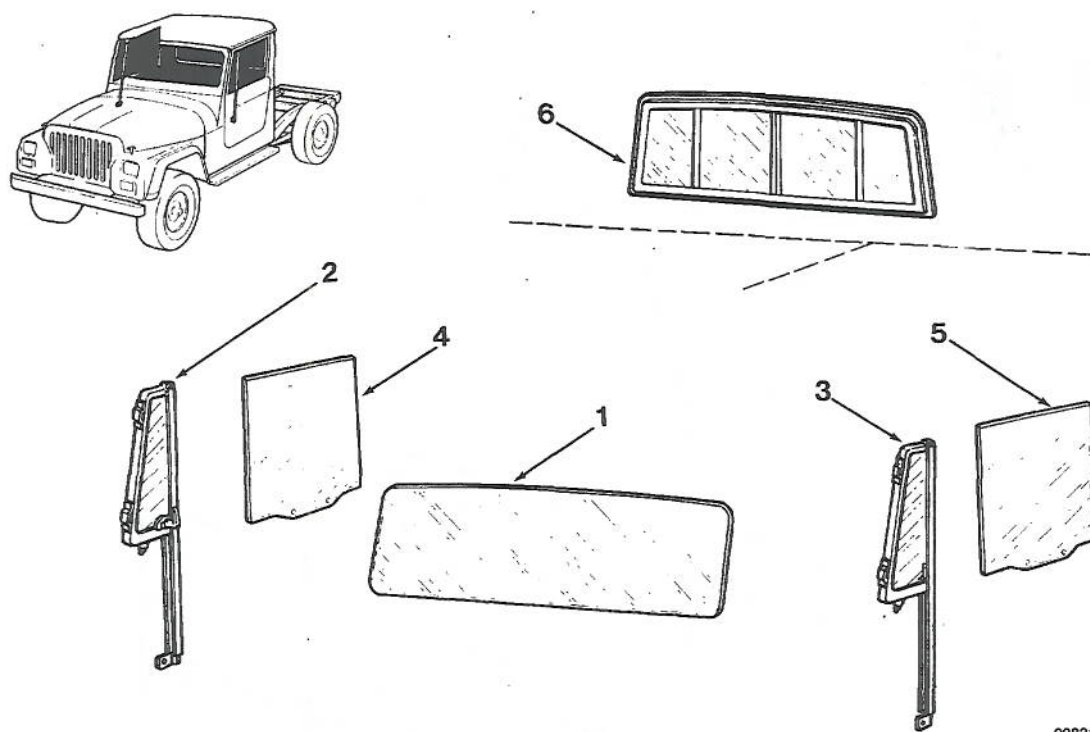

09831A

FIGURE 13. GLASS GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
13-	NO NUMBER	92871		GLASS GROUP.	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	5758372	92871		WINDSHIELD ASSEMBLY, GLASS	1		PAFZZN
-2	8995000611	92871		VENT WINDOW ASSEMBLY, TINTED	1		PAFZZN
				GLASS, RIGHT HAND			
-3	8995000610	92871		VENT WINDOW ASSEMBLY, TINTED	1		PAFZZN
				GLASS, LEFT HAND			
-4	8995000562	92871		GLASS, DOOR, RIGHT HAND, TINTED.	1		PAFZZN
-5	8995000561	92871		GLASS, DOOR, LEFT HAND, TINTED	1		PAFZZN
-6	8995000563	92871		WINDOW ASSEMBLY, SLIDING, REAR,	1		PAFZZN
				TINTED			

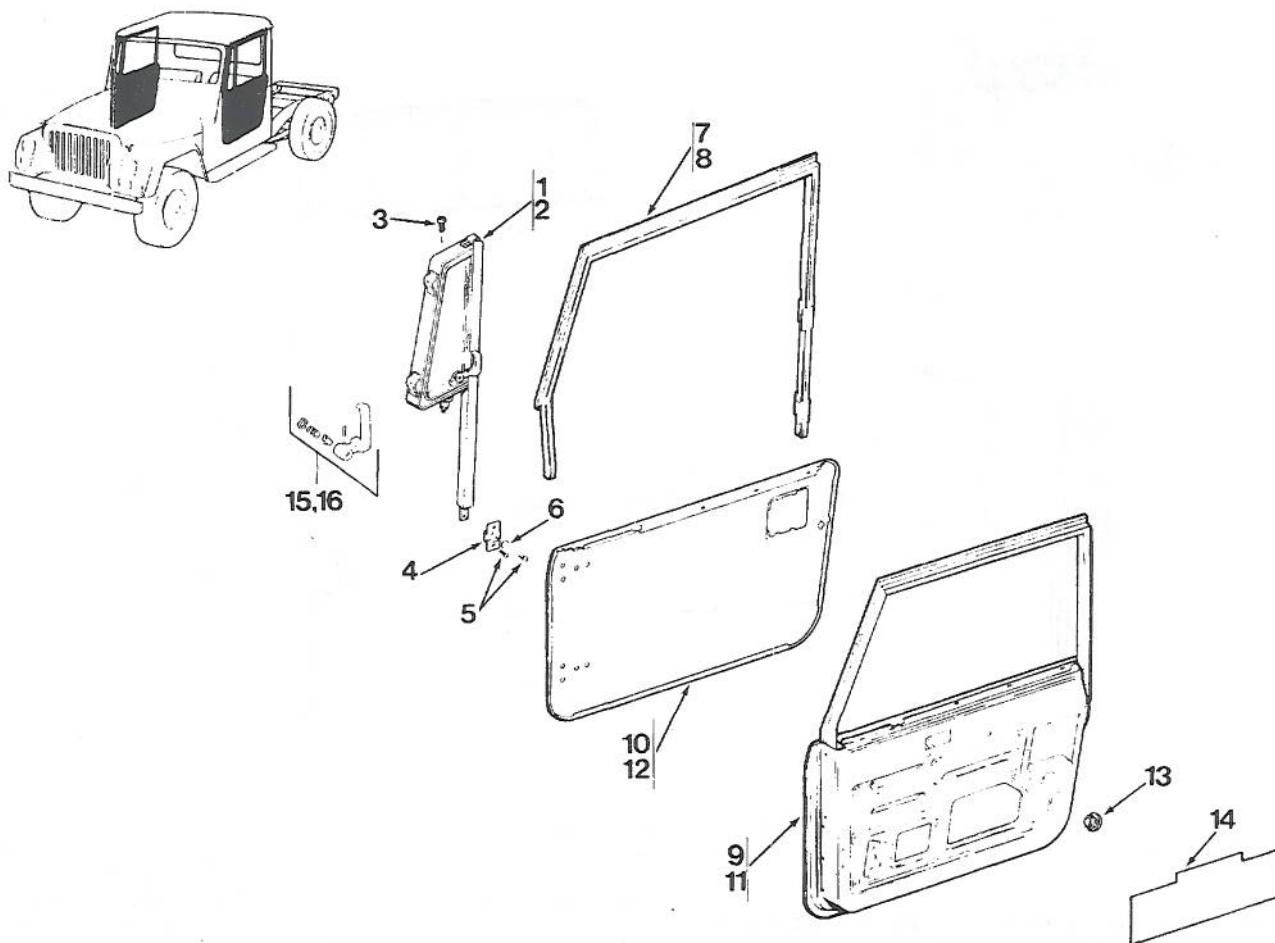

097918

FIGURE 14. DOOR GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
14--	NO NUMBER	92871		DOOR GROUP	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	8995000611	92871		WINDOW ASSEMBLY, VENT, RIGHT HAND	REF		
-2	8995000610	92871		WINDOW ASSEMBLY, VENT, LEFT HAND	REF		
-3	6457002	92871		SCREW, MACHINE (457002) (AP)	6		PAFZZN
-4	5457300	92871		BRACKET ASSEMBLY	2		PAFZZN
-5	6455683	92871		SCREW AND WASHER (455683) (AP)	6		PAFZZN
-6	120386	24617		WASHER, FLAT (AP)	2		PAFZZN
-7	5568056	92871		FRAME ASSEMBLY, DOOR GLASS, LEFT HAND	1		XBFZZ
-8	5568057	92871		FRAME ASSEMBLY, DOOR GLASS, RIGHT HAND	1		XBFZZ
-9	5568055	92871		DOOR ASSEMBLY, FRONT, RIGHT HAND	1		XBFZZ
-10	5761130	92871		PANEL, OUTER DOOR, RIGHT HAND	1		XBFZZ
-11	5568054	92871		DOOR ASSEMBLY, FRONT, LEFT HAND	1		XBFZZ
-12	5761131	92871		PANEL, OUTER DOOR, LEFT HAND	1		XBFZZ
-13	4005015	92871		PLUG, PLASTIC, PUSHIN	2		PAFZZN
-14	5766604	92871		WATERSHIELD, FRONT DOOR	4		XBFZZ
-15	8134852	92871		HANDLE KIT, VENT WINDOW, RIGHT HAND	2		PAFZZN
-15	8134853	92871		HANDLE KIT, VENT WINDOW, LEFT HAND	1		PAFZZN

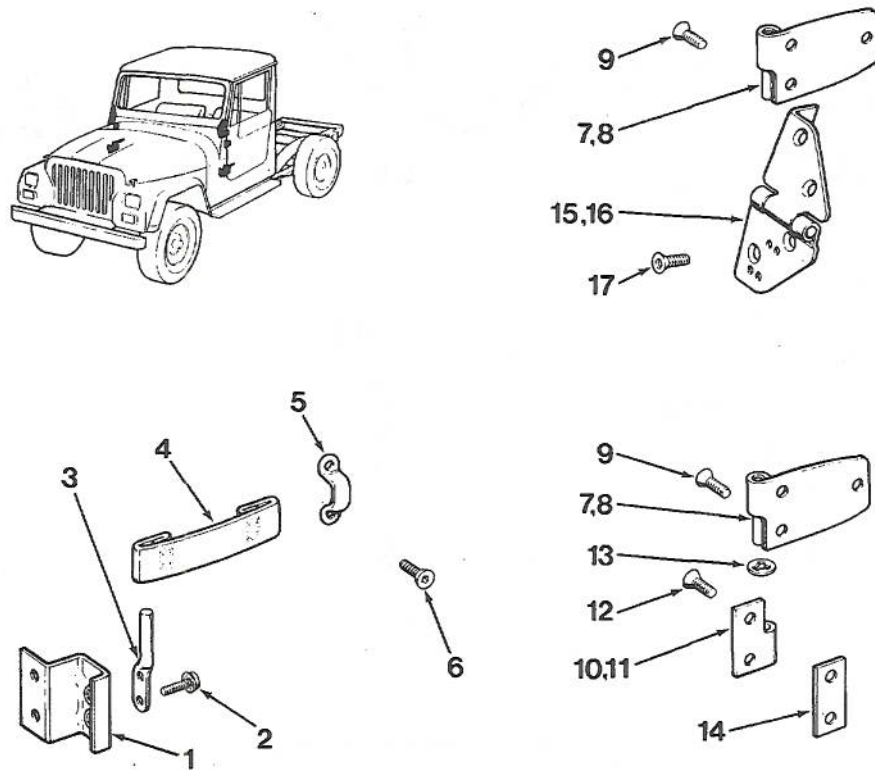

09860B

FIGURE 15. DOOR HINGES GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
15-	NO NUMBER	92871		DOOR HINGES GROUP.	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	5459280	92871		BRACKET ASSEMBLY, MOUNTING DOOR. . .	2		PAFZZN
				RESTRAINT			
-2	4006455	92871		SCREW AND WASHER (AP).	4		PAFZZN
-3	5459286	92871		PIN, DOOR RESTRAINT STRAP.	2		MFFFFP
-4	5459207	42271		STRAP, WEBBING	2		PAFZZN
-5	5455264	92871		LOOP, FOOTMAN.	2		PAFZZN
-6	4004995	92871		SCREW, MACHINE (AP).	4		XA
-7	5462412	92871		HINGE ASSEMBLY, HALF DOOR, RIGHT. . .	2		XBFZZ
				SIDE			
-8	5462413	92871		HINGE ASSEMBLY, HALF DOOR, LEFT . . .	2		XBFZZ
				SIDE			
-9	4004956	92871		SCREW, MACHINE (AP).	12		PAFZZN
-10	5457098	92871		HINGE, DOOR, RIGHT.	1		XBFZZ
-11	5457097	92871		HINGE, DOOR, LEFT	1		XBFZZ
-12	4004956	92871		SCREW, MACHINE (AP).	4		PAFZZN
-13	4005678	92871		SHIM, ROUND.	AR		PAFZZN
				SHIM, ROUND.	AR		PAFZZN
-14	5459281	92871		PLATE, TAPP, LOWER DOOR HINGE	2		MFFFFZ
-15	5462424	92871		HINGE, WITH SHIELD AND DRIVE	1		XBFZZ
				COWL, RIGHT			
-16	5462425	92871		HINGE, WITH SHIELD AND DRIVE	1		XBFZZ
				COWL, LEFT			
-17	4004956	92871		SCREW, MACHINE (AP).	6		PAFZZN

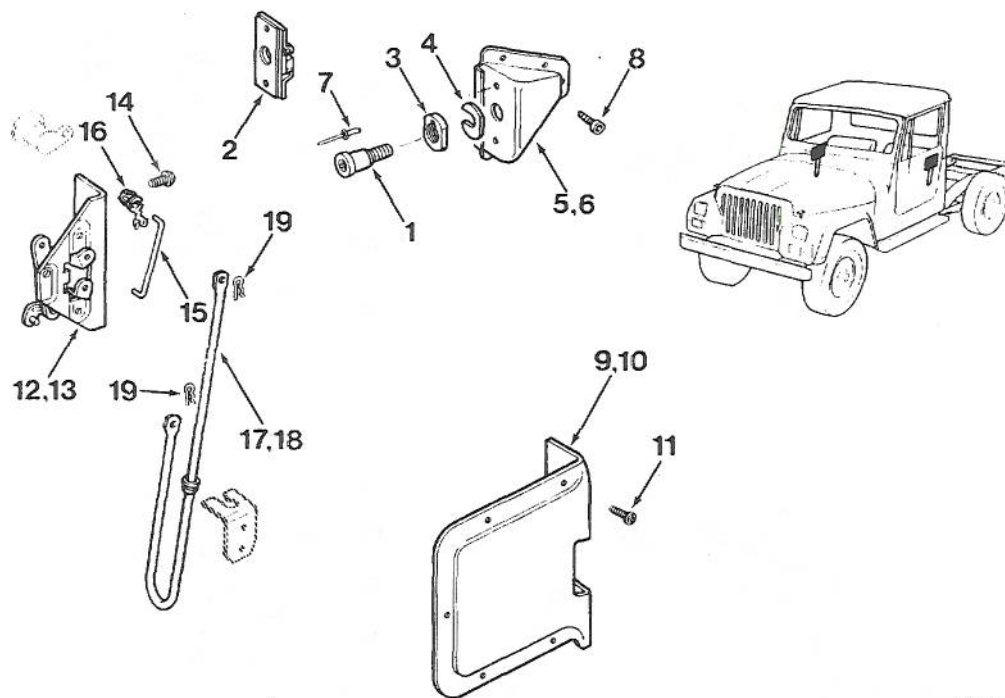

09805A

FIGURE 16. DOOR LATCH GROUP



FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
16--	NO NUMBER	92871		DOOR LATCH GROUP	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	5758191	92871		STRIKER ASSEMBLY, DOOR LATCH	2		PAFZZN
-2	5758194	92871		PLATE ASSEMBLY, STRIKER	2		PAFZZN
-3	5758192	92871		PLATE, STRIKER MOUNTING	2		PAFZZN
-4	5758193	92871		SHIM, STRIKER MOUNTING	AR		PAFZZN
-5	5758469	92871		COVER, STRIKER MOUNTING, LEFT	1		PAFZZN
				HAND			
-6	5758468	92871		COVER, STRIKER MOUNTING, RIGHT	1		PAFZZN
				HAND			
-7	4006878	92871		RIVET (AP)	4		PAFZZN
-8	4005817	92871		SCREW, MACHINE (AP)	10		PAFZZN
-9	5758171	92871		PLATE, COVER, LATCH, LEFT HAND	1		PAFZZN
-10	5758170	92871		PLATE, COVER, LATCH, RIGHT HAND	1		PAFZZN
-11	4004812	92871		SCREW AND WASHER (AP)	10		PAFZZN
-12	5758177	92871		LATCH ASSEMBLY, DOOR, LEFT HAND	1		PAFZZN
-13	5758176	92871		LATCH ASSEMBLY, DOOR, RIGHT HAND	1		PAFZZN
-14	4006874	92871		SCREW, MACHINE (AP)	8		PAFZZN
-15	5758190	92871		ROD, LOCK CYLINDER	2		MFFFZ
-16	4004532	92871		CLIP AND BUSHING	2		PAFZZN
-17	5765377	92871		ROD AND BUSHING ASSEMBLY, DOOR	1		PAFZZN
				HANDLE, LEFT HAND			
-18	5765376	92871		ROD AND BUSHING ASSEMBLY, DOOR	1		PAFZZN
				HANDLE, RIGHT HAND			
-19	4005122	92871		PIN, HITCH (AP)	4		PAFZZN

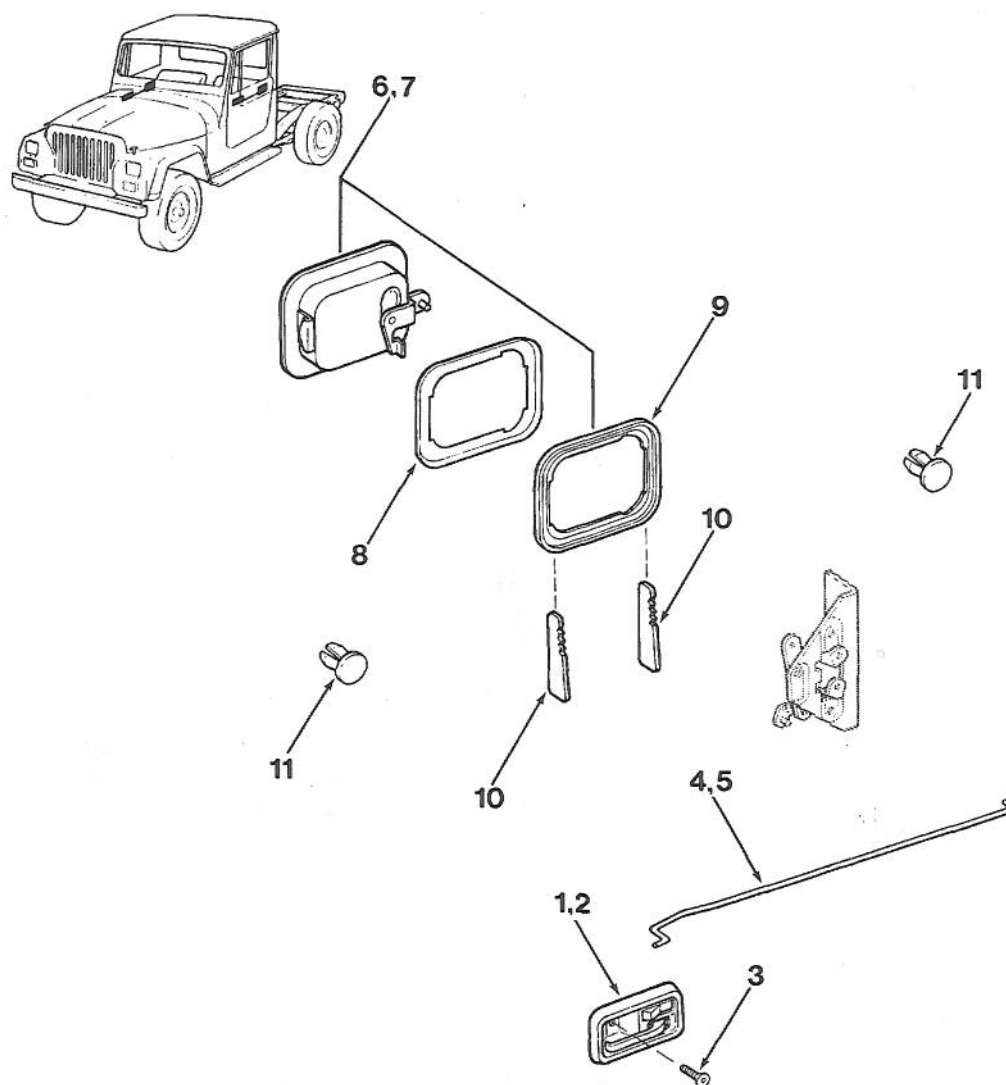

09807B

FIGURE 17. DOOR HANDLES AND LOCK ROD GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
17-	NO NUMBER	92871		DOOR HANDLES AND LOCK ROD. GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	5758184	92871		HANDLE ASSEMBLY, DOOR, RIGHT. HAND (7700650261)	1		PAFZZN
-2	5758185	34623		HANDLE ASSEMBLY, DOOR, LEFT HAND.	1		PAFZZN
-3	4006870	92871		SCREW, MACHINE (AP).	2		PAFZZN
-4	5758950	92871		ROD, SIDE, REMOTE HANDLE, RIGHT. HAND	1		PAFZZN
-5	5758951	92871		ROD, SIDE, REMOTE HANDLE, LEFT HAND	1		PAFZZN
-6	8995000600	92871		HANDLE ASSEMBLY, OUTSIDE, RIGHT HAND	1		PAFZZN
-7	8995000601	92871		HANDLE ASSEMBLY, OUTSIDE, LEFT. HAND	1		PAFZZN
-8	5758898	92871		BEZEL, DOOR LATCH.	2		PAFZZN
-9	5758174	92871		GASKET, DOOR, OUTSIDE HANDLE.	1		PAFZZN
-10	5758175	92871		KEEPER, DOOR, OUTSIDE HANDLE.	4		PAFZZN
-11	4004949	92871		PLUG.	4		PAFZZN

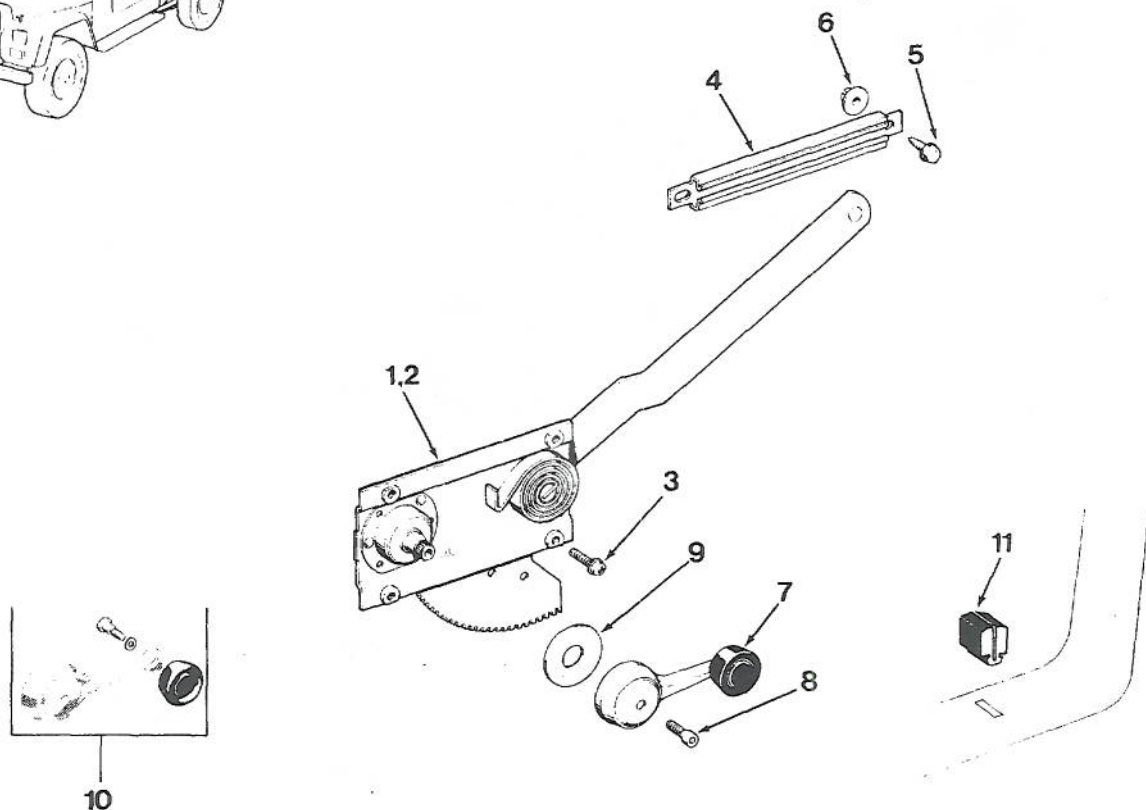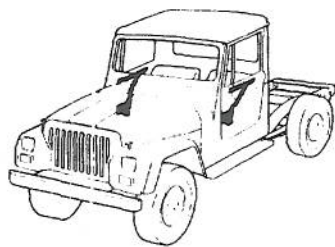

099478

FIGURE 18. WINDOW MECHANISM GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS USABLE		
					PER ASSY.	ON CODE	SMR CODE
18-	NO NUMBER	92871		WINDOW MECHANISM GROUP (PARTS KIT AVAILABLE) (SEE FIGURE 2 FOR NHA)	REF		
-1	5454145	92871		REGULATOR ASSEMBLY, LEFT	1		PAFZZN
-2	5454146	92871		REGULATOR ASSEMBLY, RIGHT	1		PAFZZN
-3	191985	24617		SCREW, ASSEMBLED WASHER (AP)	8		PAFZZN
-4	5454156	92871		GUIDE, REGULATOR, WINDOW	2		PAFZZN
-5	4000424	92871		SCREW, HEX, WASHER HEAD (AP)	4		PAFZZN
-6	4003706	92871		FASTENER, GUIDE (AP)	4		PAFZZN
-7	3726992	34623		HANDLE, REGULATOR, WINDOW	2		PAFZZN
-8	4005969	92871		SCREW, MACHINE (AP)	2		PAFZZN
-9	3613467	92871		WASHER, REGULATOR HANDLE	2		PAFZZN
-10	8134422	92871		KIT, KNOB, HANDLE, REGULATOR (K28)	AR		PAFZZN
-11	5764621	92871		BUMPER, GLASS STOP	2		PAFZZN

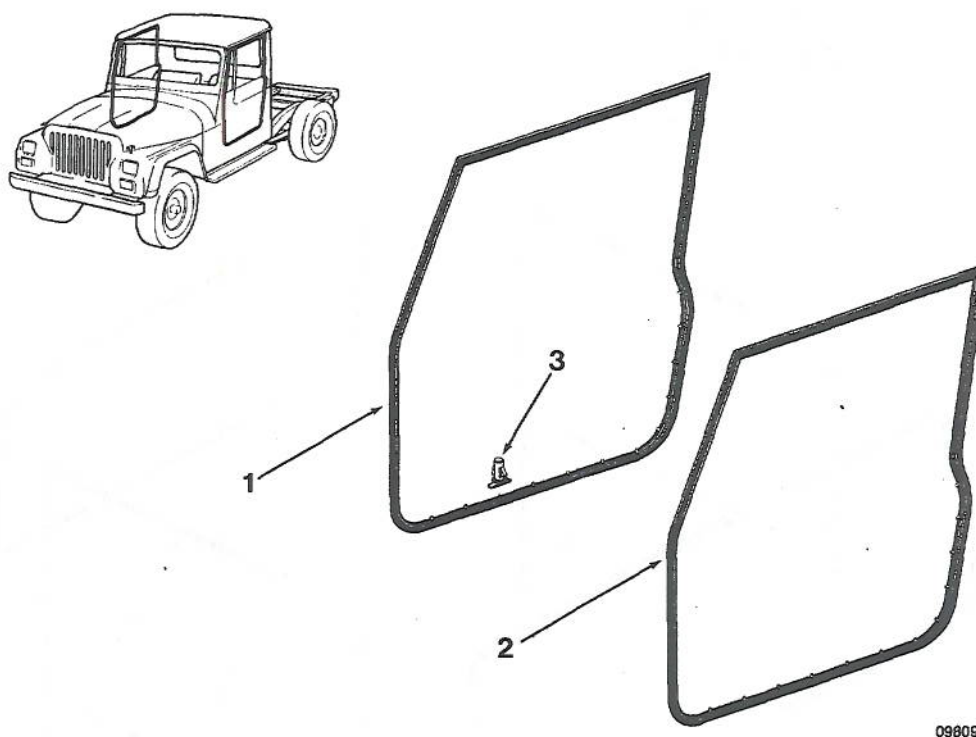

09809A

FIGURE 19. DOOR SEALS GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
19-	NO NUMBER	92871		DOOR SEALS GROUP	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	8053259	92871		SEAL ASSEMBLY, FRONT DOOR, RIGHT. . .	1		PAFZZN
				HAND			
-2	8053258	92871		SEAL ASSEMBLY, FRONT DOOR, LEFT . . .	1		PAFZZN
				HAND			
-3	4001916	92871		FASTENER, SEALER	26		PAFZZN

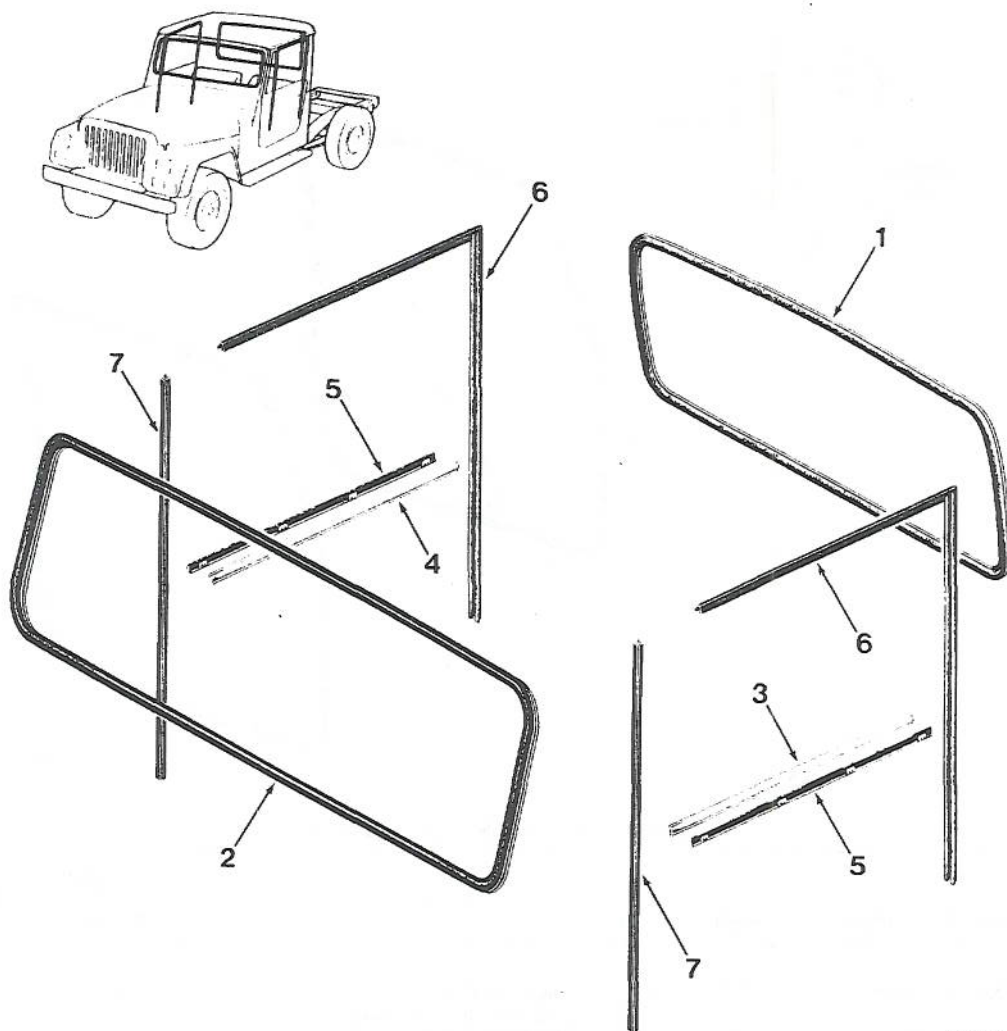

098108

FIGURE 20. WINDOW SEALS GROUP


FIG. & INDEX NO	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
20-	NO NUMBER	92871		WINDOW SEALS GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	5994006	92871		WEATHERSTRIP, BACKLIGHT GLASS	1		PAFZZN
-2	5453949	92871		WEATHERSTRIP, WINDSHIELD GLASS	1		PAFZZN
-3	5762385	92871		WEATHERSTRIP ASSEMBLY, DOOR BELT, INNER, LEFT HAND	1		PAFZZN
-4	5762384	92871		WEATHERSTRIP ASSEMBLY, DOOR BELT, INNER, RIGHT HAND	1		PAFZZN
-5	5459644	92871		WEATHERSTRIP ASSEMBLY, DOOR BELT, OUTER	2		PAFZZN
-6	5568181	92871		CHANNEL, GLASS RUN, DOOR FRAME	2		PAFZZN
-7	8134851	92871		WEATHERSTRIP, DOOR GLASS SLIDE	2		PAFZZN

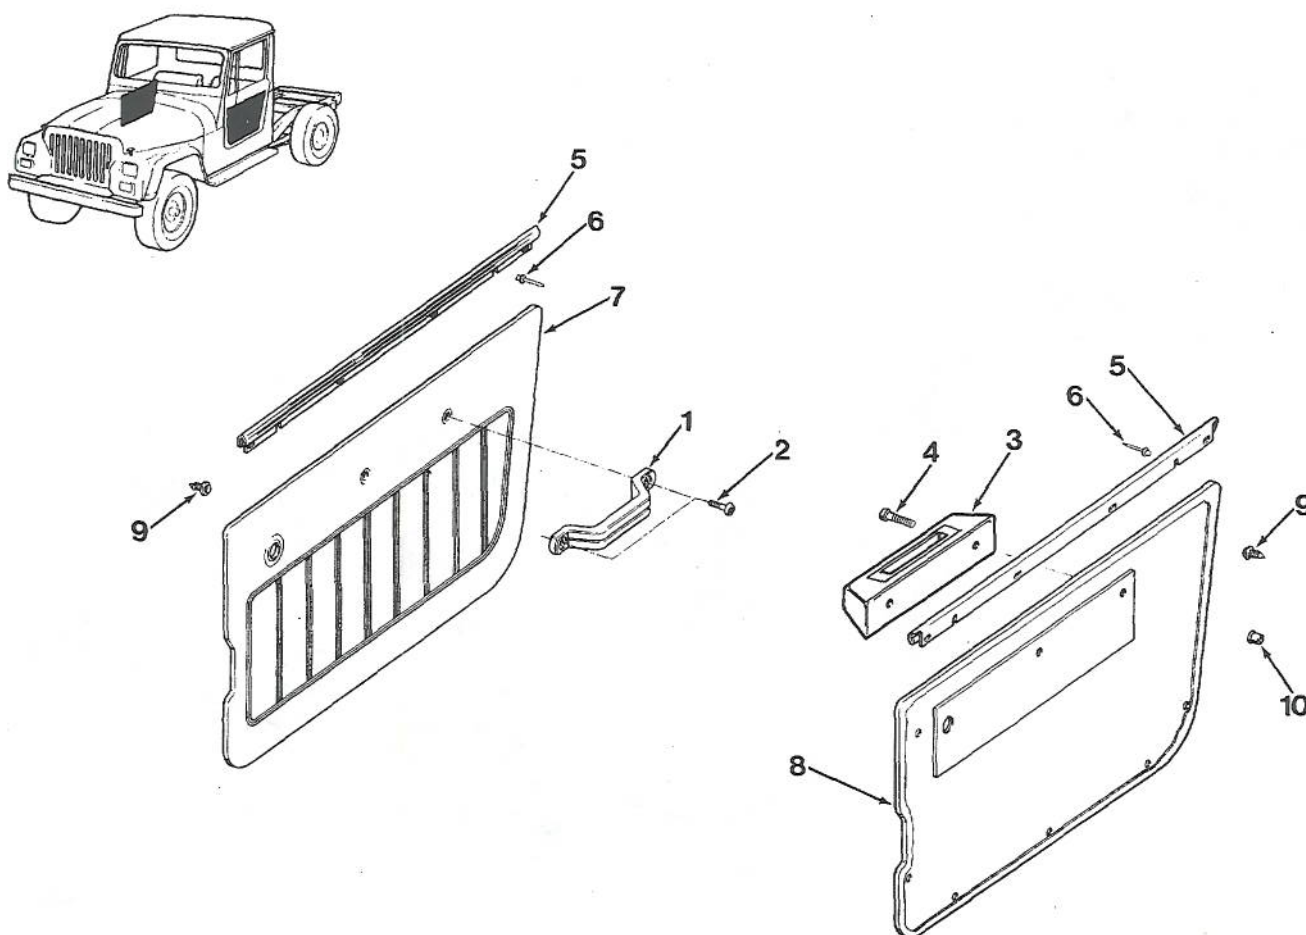

09842B

FIGURE 21. DOOR TRIM PANELS AND ARM REST GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
21-	NO NUMBER	92871		DOOR TRIM PANELS AND ARM REST.	REF		
				GROUP			
				(SEE FIGURE 2 FOR NHA)			
-1	5457831	92871		HANDLE, DOOR ASSIST.	1		PAFZZN
-2	4006136	92871		SCREW, MACHINE (AP).	2		PAFZZN
-3	8995000552	92871		ARM REST ASSEMBLY, LEFT SIDE	1		PAFZZN
-4	4007016	92871		SCREW, MACHINE (AP).	2		PAFZZN
-5	5757742	92871		RETAINER ASSEMBLY, FRONT DOOR.	2		PAFZZN
				TRIM PANEL			
-6	4006176	92871		FASTENER, TRIM PANEL (AP).	16		PAFZZN
-7	5764554	92871		PANEL ASSEMBLY, DOOR TRIM, RIGHT.	1		PAFZZN
				HAND			
-8	5764555	92871		PANEL ASSEMBLY, DOOR TRIM, LEFT	1		PAFZZN
				HAND			
-9	4004515	92871		RIVET, BLIND (AP).	6		PAFZZN
-10	4007101	92871		NUTSERT	1		PAFZZN

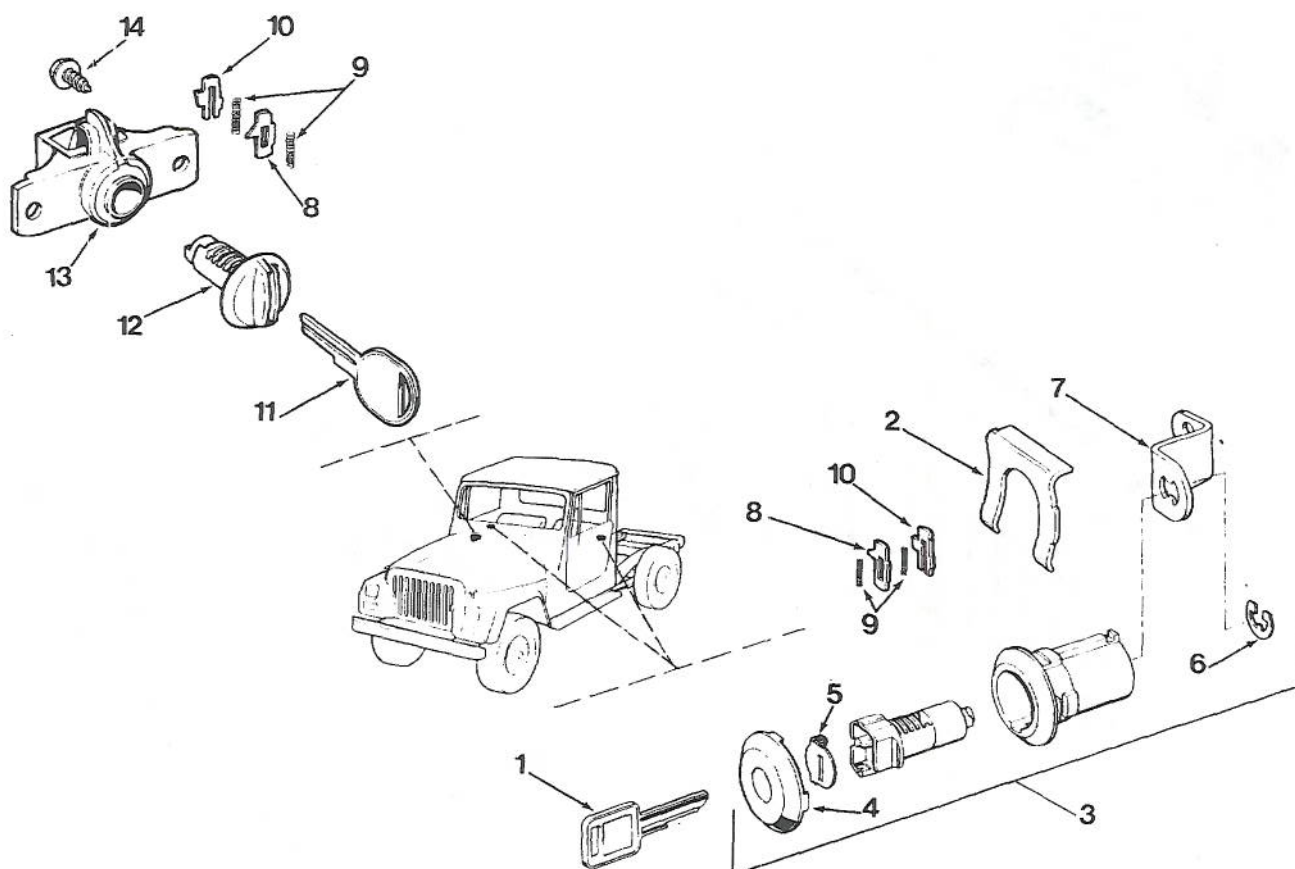

09824B

FIGURE 22. LOCKS AND KEYS GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
22-	NO NUMBER	92871		LOCKS AND KEYS GROUP	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	3641914	42271		KEY, PRIMARY LOCK SET	2		XA
				(INCL WITH LOCK ASSY, ITEM 3)			
-2	3516003	92871		RETAINER, DOOR LOCK CYLINDER	2		PAFZZN
-3	8122874	42271		LOCK ASSEMBLY, DECK DOOR	2		PAFZZN
-4	8127677	92871		CAP	1		XA
-5	8133585	92871		SHUTTER, UNIT	1		XA
-6	4002250	92871		RING, RETAINING	1		XA
-7	5762370	92871		LEVER, DOOR LOCK CYLINDER	2		PAFZZN
-8	8122876	92871		TUMBLER, POSITION 1, DOOR AND	AR		XA
				GLOVE BOX LOCK			
	8122877	92871		TUMBLER, POSITION 2, DOOR AND	AR		XA
				GLOVE BOX LOCK			
	8122878	34623		TUMBLER, POSITION 3, DOOR AND	AR		XA
				GLOVE BOX LOCK			
	8122879	34623		TUMBLER, POSITION 4, DOOR AND	AR		XA
				GLOVE BOX LOCK			
	8122880	42271		TUMBLER, POSITION 5, DOOR AND	AR		XA
				GLOVE BOX LOCK			
-9	8122881	42271		SPRING, LOCK	AR		XA
-10	8122875	92871		RETAINER, LOCK	AR		XA
-11	3641913	92871		KEY, SECONDARY LOCK SET	2		XA
				(INCL WITH LOCK ASSY, ITEM 12)			
-12	8125764	92871		LOCK ASSEMBLY, GLOVE BOX DOOR	1		PAFZZN
-13	3632495	92871		HOUSING, GLOVE BOX DOOR LOCK	1		XA
				(INCL WITH LOCK ASSY, ITEM 12)			
-14	4489486	92871		SCREW, MACHINE (AP)	2		PAFZZN



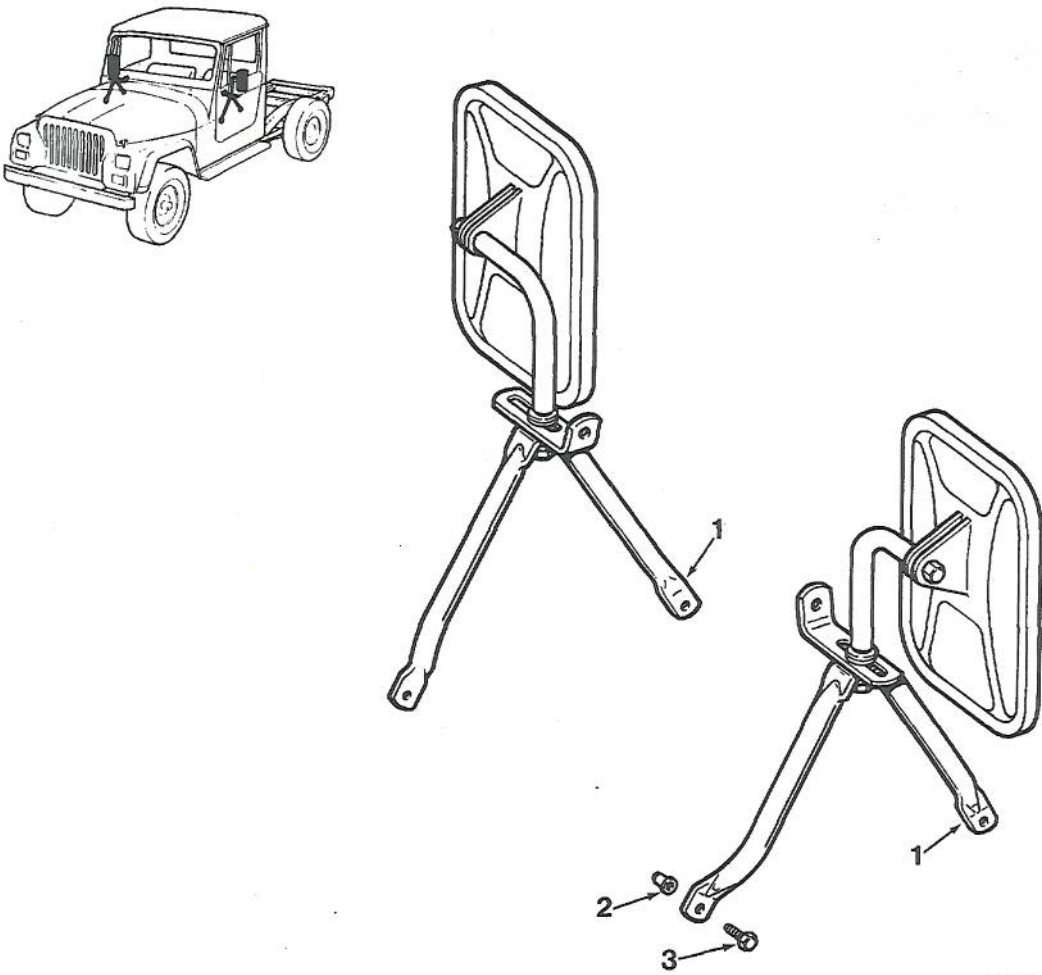


FIGURE 23. OUTSIDE MIRRORS GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
23-	NO NUMBER	92871		OUTSIDE MIRRORS GROUP.	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	8995000603	92871		MIRROR ASSEMBLY, OUTSIDE	2		PAFZZN
-2	4007101	92871		NUTSERT (AP).	6		PAFZZN
-3	2136455	23862		BOLT, MACHINE (AP)	6		PAFZZN

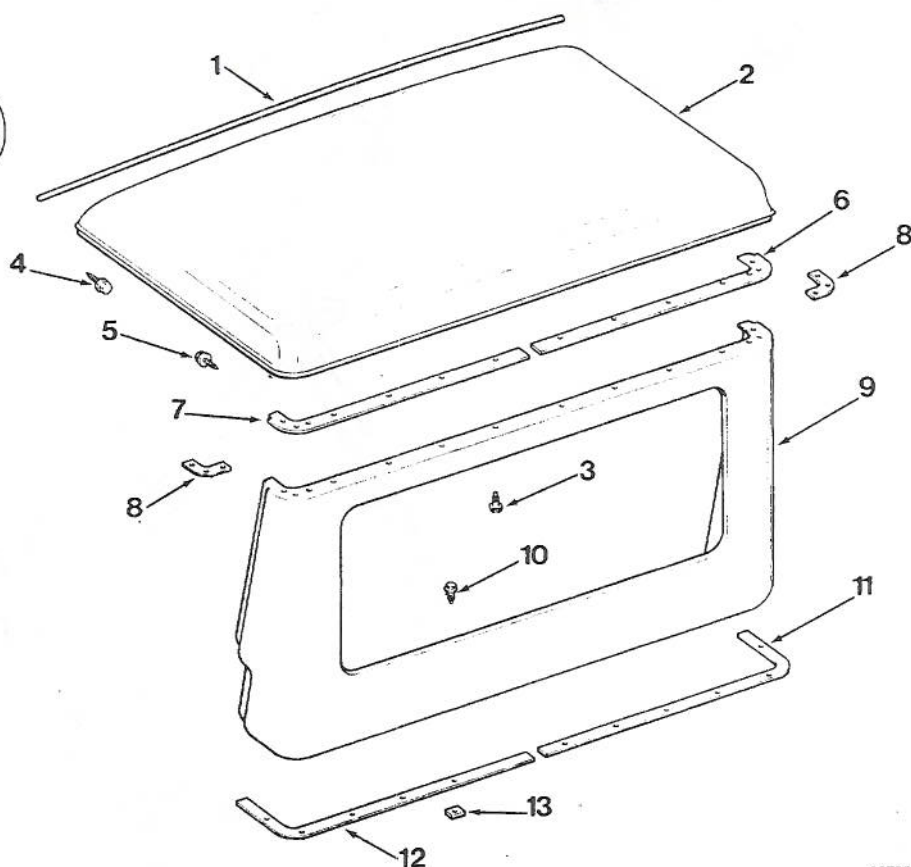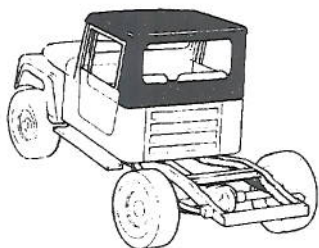

09790B

FIGURE 24. HARD TOP ENCLOSURE



FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
24--	NO NUMBER	92871		HARD TOP ENCLOSURE	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	5460180	92871		SEAL, ENCLOSURE TO WINDSHIELD.	1		PAFZZN
-2	5994474	92871		ROOF ASSEMBLY, WELDED.	1		XBFZZ
-3	4001933	92871		SCREW, CAP, HEX HD (AP)	13		PAFZZN
-4	09417855	92871		SCREW, CAP, HEX HD (9417855).	7		PAFZZN
				(AP)			
-5	09415163	92871		SCREW, CAP, HEX HEAD (9415163).	14		PAFZZN
				(AP)			
-6	5994284	92871		SEAL, ROOF PANEL TO BACK, RIGHT	1		PAFZZN
				HAND			
-7	5994283	92871		SEAL, ROOF PANEL TO BACK, LEFT.	1		PAFZZN
				HAND			
-8	5994704	92871		REINFORCEMENT, CORNER PANEL.	2		PAFZZN
				INNER UPPER			
-9	5994475	92871		PANEL ASSEMBLY, BACK, UPPER	1		XBFZZ
-10	4001933	92871		SCREW, CAP, HEX HD (AP)	13		PAFZZN
-11	5994282	92871		SEAL, ENCLOSURE, TO BODY SIDE,	1		PAFZZN
				RIGHT HAND			
-12	5994281	92871		SEAL, ENCLOSURE, TO BODY SIDE,	1		PAFZZN
				LEFT HAND			
-13	968155	92871		PLATE, TAPPING, SIDE PANEL.	1		PAFZZN
				REINFORCEMENT			

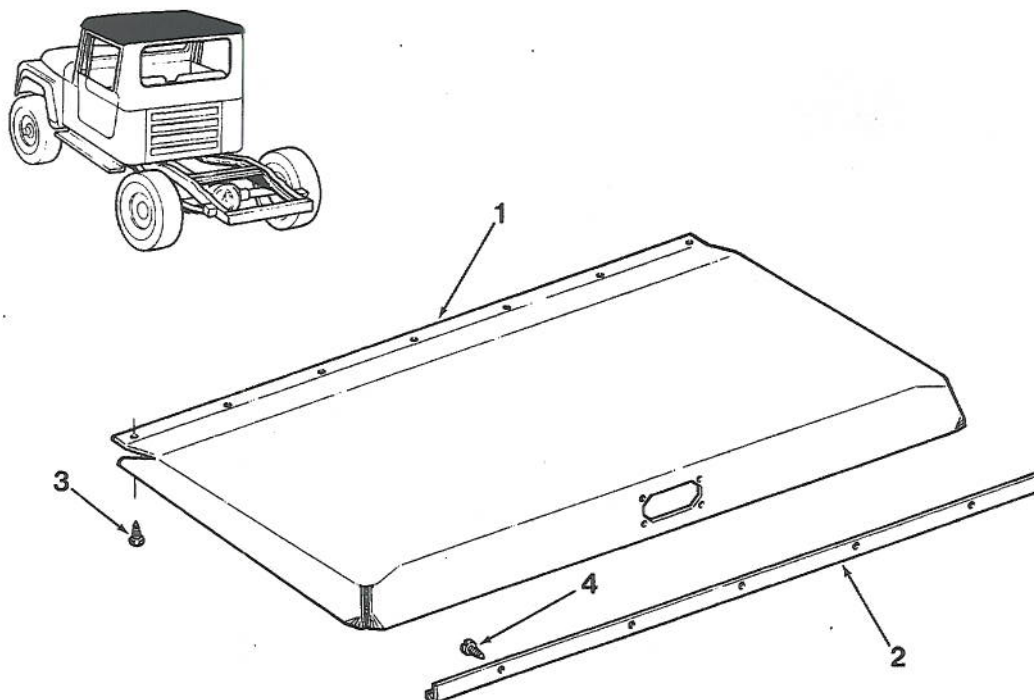

09812A

FIGURE 25. HEADLINER AND MOULDING GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
25-	NO NUMBER	92871		HEADLINER AND MOLDING GROUP.	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	8995000553	92871		. HEADLINER, BLACK	1		XBFZZ
-2	8995000556	92871		. MOLDING, J, REAR, BLACK.	1		XBFZZ
-3	4004919	92871		. FASTENER, PANEL (AP)	4		PAFZZN
-4	9414712	11862		. SCREW, TAPPING (AP).	10		PAFZZN

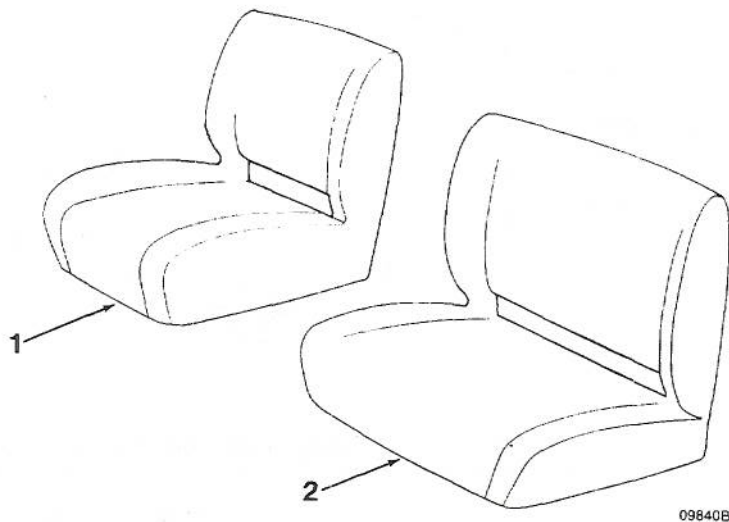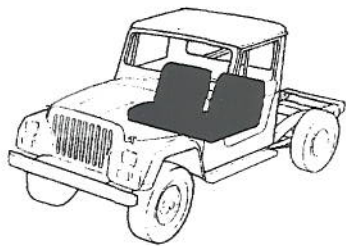

09840B

FIGURE 26. FRONT SEAT FRAME AND PAD GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS USABLE		
					PER ASSY.	ON CODE	SMR CODE
26-	NO NUMBER	92871		FRONT SEAT FRAME AND PAD GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	5463556	92871		FRAME, PASSENGER SEAT	1		XBFZZ
-2	5463555	92871		FRAME, DRIVER SEAT	1		XBFZZ

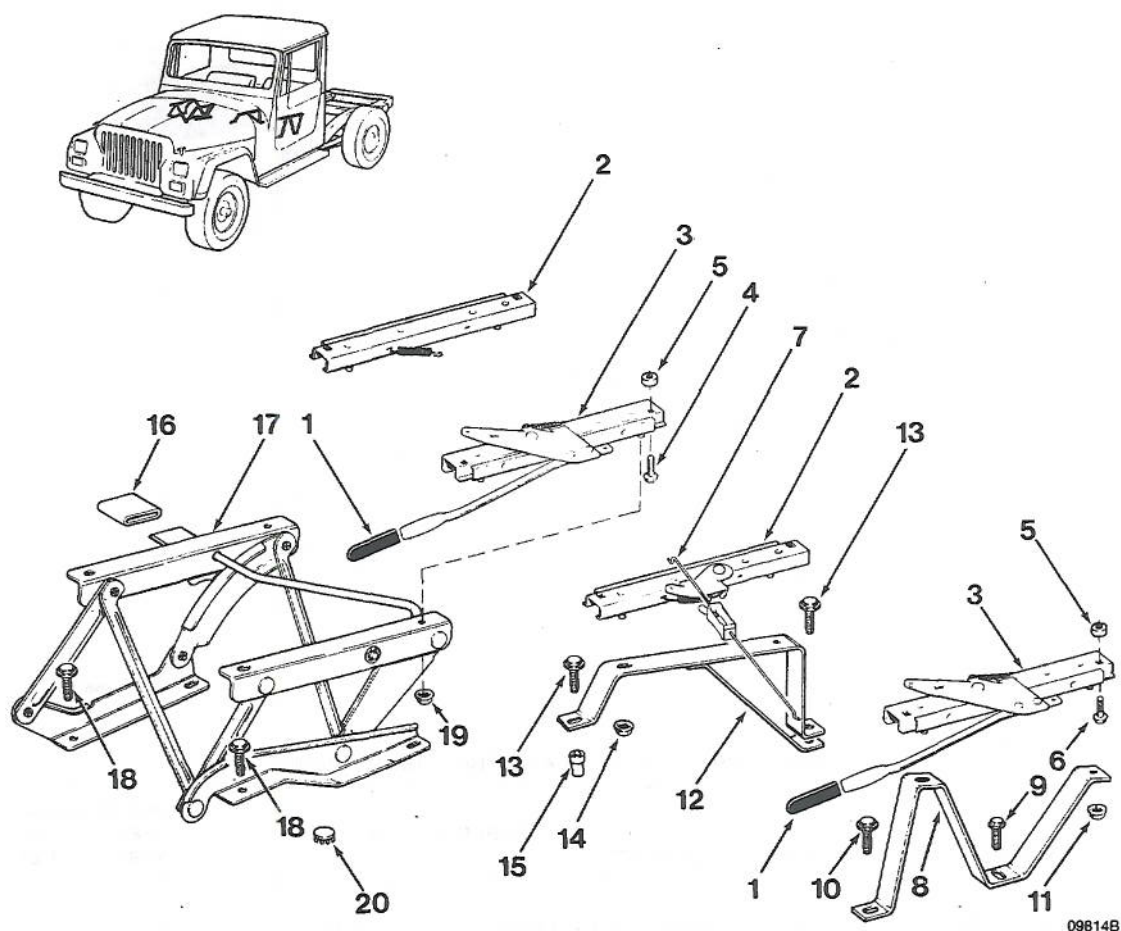


FIGURE 27. FRONT SEAT TRACK GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
27-	NO NUMBER	92871		FRONT SEAT TRACK GROUP	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	5461281	92871		. PROTECTOR, RELEASE LEVER, SEAT.	2		PAFZZN
-2	5994529	92871		. ADJUSTER ASSEMBLY, SEAT, SLAVE.	2		XBFZZ
-3	5994528	92871		. ADJUSTER ASSEMBLY, SEAT.	2		XBFZZ
-4	4004926	92871		. SCREW, MACHINE (AP).	4		PAFZZN
-5	5994523	92871		. SPACER, SEAT ADJUSTER MOUNTING	4		PAFZZN
				(AP)			
-6	5994524	92871		. SCREW, MACHINE (AP).	4		PAFZZN
-7	5459245	92871		. CONNECTOR ASSEMBLY, WIRE, SEAT.	1		XBFZZ
				ADJUSTING			
-8	5453866	92871		. SUPPORT ASSEMBLY, OUTBOARD	1		XBFZZ
				DRIVER			
-9	5463620	92871		. SCREW AND WASHER (AP)	1		PAFZZN
-10	5450077	92871		. SCREW AND WASHER (AP)	1		PAFZZN
-11	8122425	92871		. NUT, PLAIN HEX (AP).	1		PAFZZN
-12	5459267	92871		. SUPPORT ASSEMBLY, IN-BOARD LEG	1		XBFZZ
-13	5450077	92871		. SCREW AND WASHER (AP)	2		PAFZZN
-14	8122425	92871		. NUT, PLAIN HEX (AP).	2		PAFZZN
-15	4005658	92871		. PLUGNUT (AP).	2		PAFZZN
-16	5458945	92871		. PROTECTOR, PASSENGER SEAT LATCH.	1		PAFZZN
-17	5758501	92871		. LINKAGE ASSEMBLY, PASSENGER.	1		XBFZZ
				SEAT SUPPORT			
-18	5450077	92871		. SCREW AND WASHER (AP)	4		PAFZZN
-19	8122425	92871		. NUT, PLAIN HEX (AP).	4		PAFZZN
-20	4004875	92871		. PLUG, MAT AND CARPET	2		PAFZZN


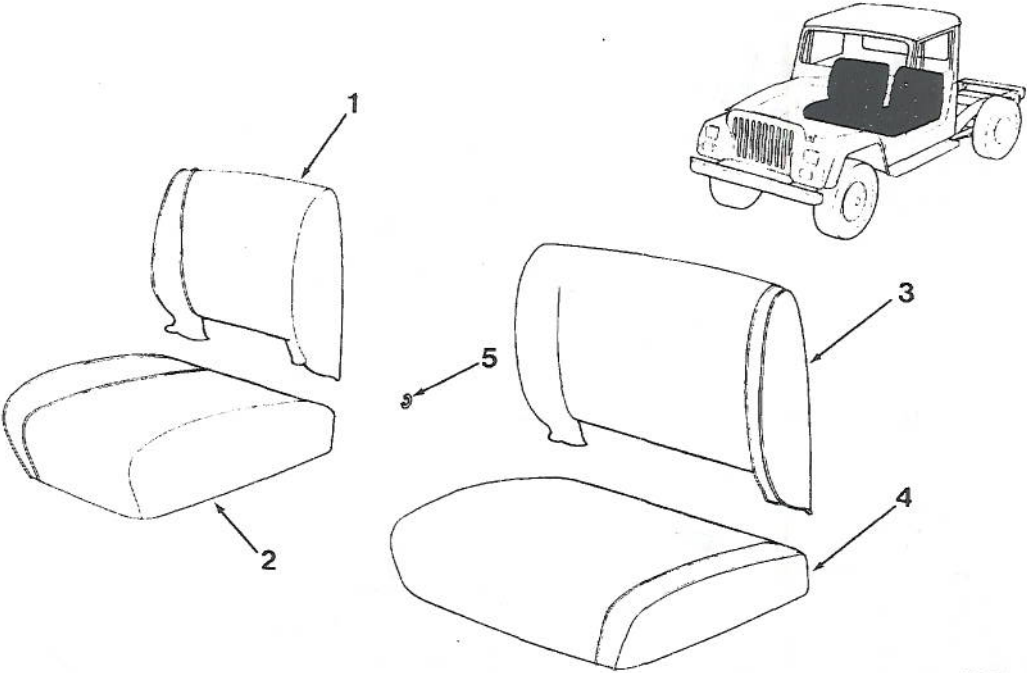


FIGURE 28. FRONT SEAT UPHOLSTERY GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
28-	NO NUMBER	92871		FRONT SEAT UPHOLSTERY GROUP. (SEE FIGURE 2 FOR NHA)	REF		
-1	8995000594	92871		. COVER, SEAT, BACK, BLACK	1		XBFZZ
-2	8995000593	92871		. COVER, SEAT, CUSHION, BLACK.	1		XBFZZ
-3	8995000596	92871		. COVER, SEAT, BACK, BLACK	1		XBFZZ
-4	8995000595	92871		. COVER, SEAT, CUSHION, BLACK.	1		XBFZZ
-5	4363256	92871		. RING, HDG.	AR		XBFZZ

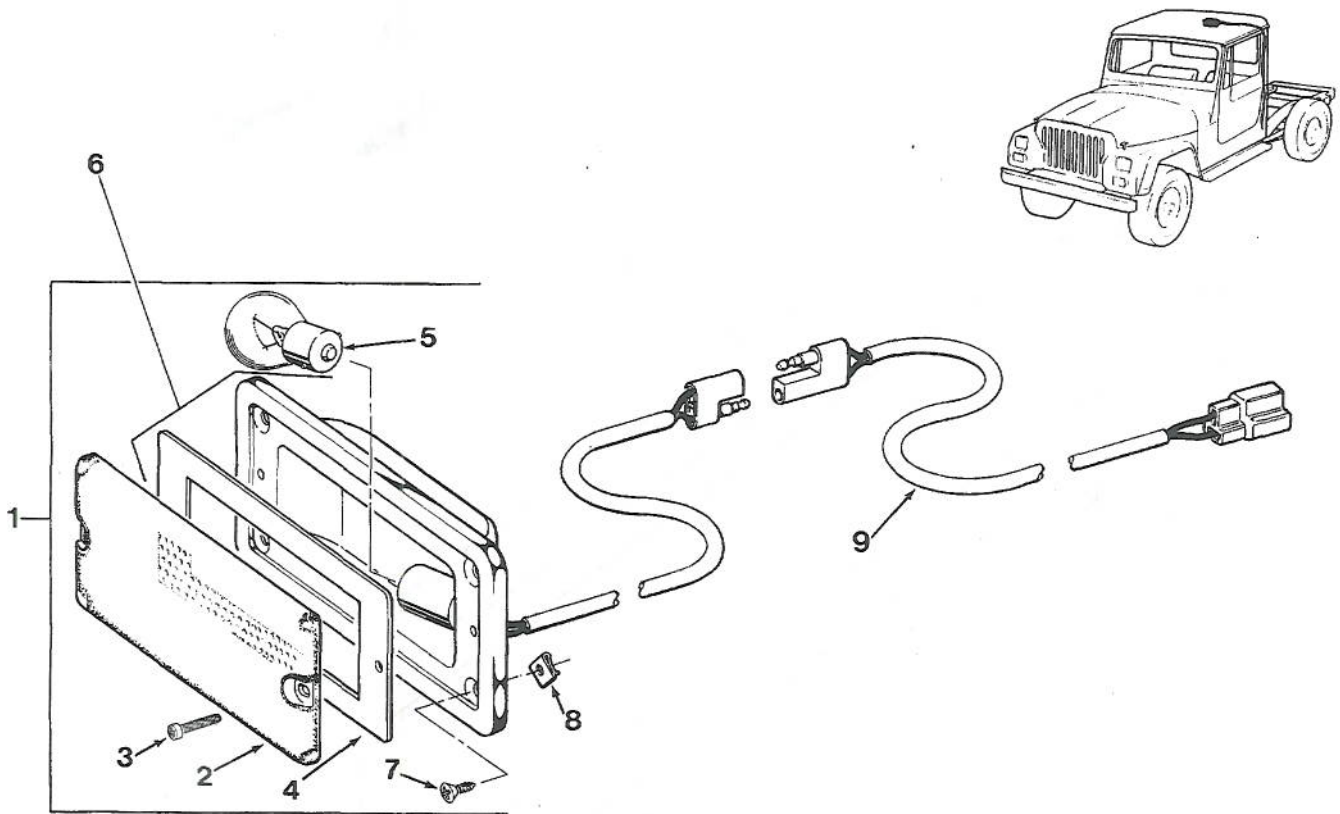

09884B

FIGURE 29. DOME LAMP GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
29-	NO NUMBER	92871		DOME LAMP GROUP.	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	5994341	92871		LAMP ASSEMBLY, DOME.	1		PAFFFF
-2	5452306	92871		LENS, DOME LIGHT.	1		PAFZZN
-3	Q164401	92871		SCREW, MACHINE (164401) (AP).	2		PAFZZN
-4	5452305	92871		GASKET, LENS (NOT SERVICED. SEPARATELY)	1		PAFZZN
-5	5994395	92871		LAMP, INCANDESCENT.	1		PAFZZN
-6	5452057	92871		BODY AND SOCKET ASSEMBLY, DOME. LIGHT (NOT SERVICED SEPARATELY)	1		PAFZZN
-7	Q9414721	92871		SCREW, MACHINE (9414721) (AP).	4		PAFZZN
-8	5994340	92871		NUT, U, SPRING (AP).	4		PAFZZN
-9	5994670	92871		HARNESS, JUMPER.	1		MFFFZ

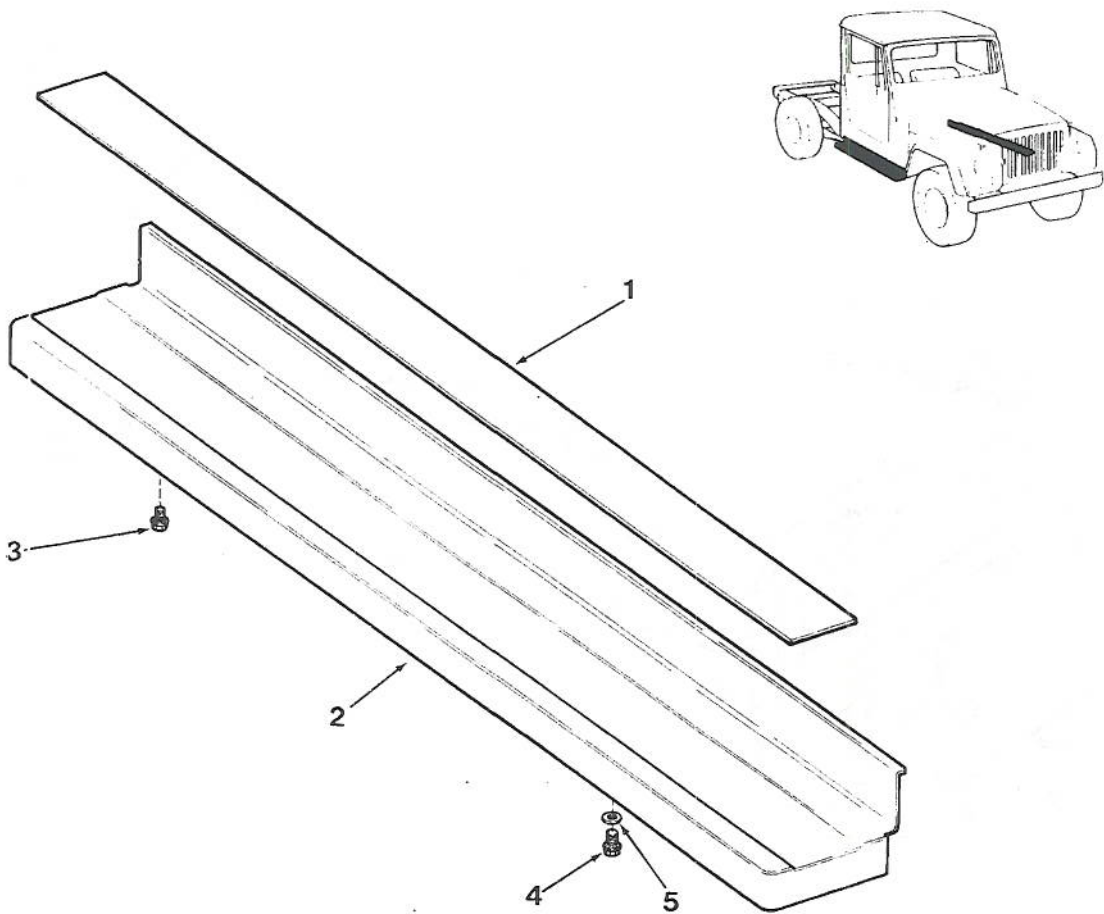

09822B

FIGURE 30. RUNNING BOARD GROUP



FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS USABLE		
					PER ASSY.	ON CODE	SMR CODE
30-	NO NUMBER	92871		RUNNING BOARD GROUP. (SEE FIGURE 2 FOR NHA)	REF		
-1	5994388	92871		. COVER, RUNNING BOARD, NONSLIP	2		XBFZZ
-2	5994144	92871		. RUNNING BOARD ASSEMBLY.	2		XBFZZ
-3	69423284	92871		. SCREW, CAP, HEX HEAD (9423284). (AP)	4		PAFZZN
-4	6456695	92871		. SCREW (456695) (AP)	4		PAFZZN
-5	MS27183-13	96906		. WASHER, FLAT (AP).	4		PAFZZN

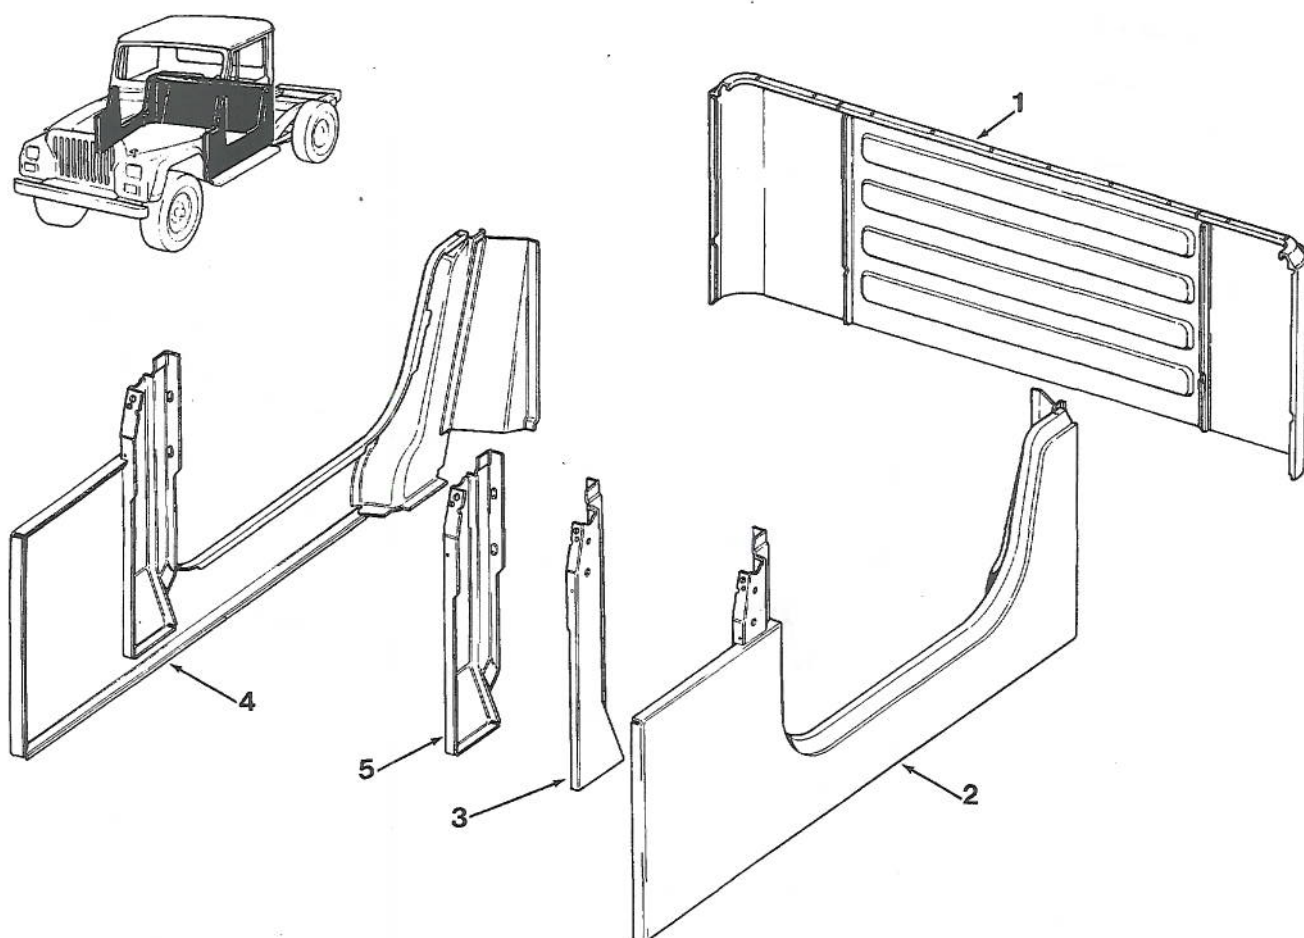

09789B

FIGURE 31. BODY SIDE AND REAR PANELS GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
31-	NO NUMBER	92871		BODY SIDE AND REAR PANELS. GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	5994476	92871		PANEL ASSEMBLY, REAR (NOT SERVICED SEPARATELY)	1		XBFZZ
-2	5995325	92871		PANEL ASSEMBLY, BODY SIDE, LEFT . . . HAND (NOT SERVICED SEPARATELY)	1		XBFZZ
-3	5453805	92871		PILLAR ASSEMBLY, COWL, LEFT HAND . .	1		XBFZZ
-4	5995326	92871		PANEL ASSEMBLY, BODY SIDE, RIGHT. . . HAND (NOT SERVICED SEPARATELY)	1		XBFZZ
-5	5453806	92871		PILLAR ASSEMBLY, COWL, RIGHT	1		XBFZZ

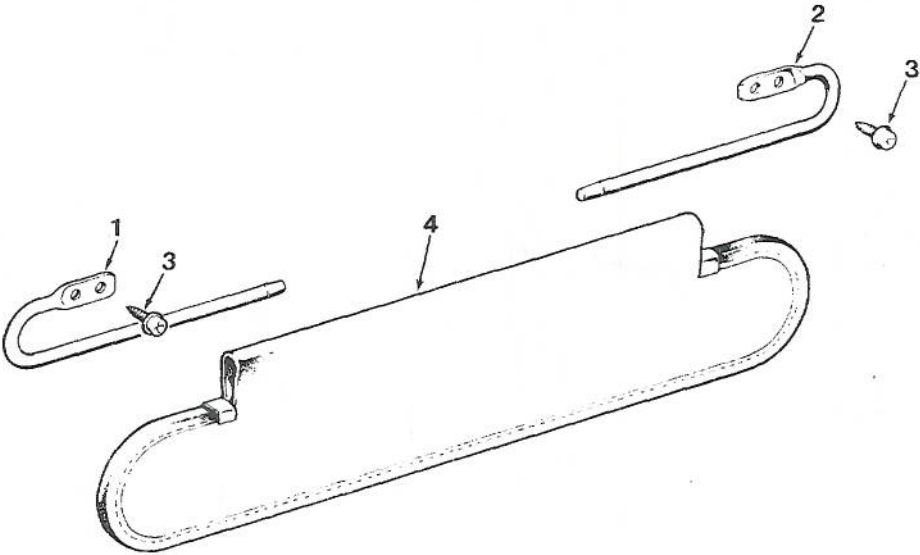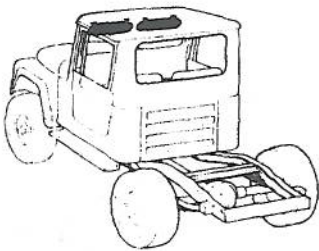

09778B

FIGURE 32. SUN VISOR GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS USABLE		
					PER ASSY	ON CODE	SMR CODE
32-	NO NUMBER	92871		SUN VISOR GROUP. (SEE FIGURE 2 FOR NHA)	REF		
-1	5761345	92871		. BRACKET, MOUNTING.	2		PAFZZN
-2	5761344	92871		. BRACKET, MOUNTING.	2		PAFZZN
-3	4005969	92871		. SCREW, MACHINE (AP).	8		PAFZZN
-4	5760699	92871		. VISOR, SUN, BLACK	2		PAFZZN

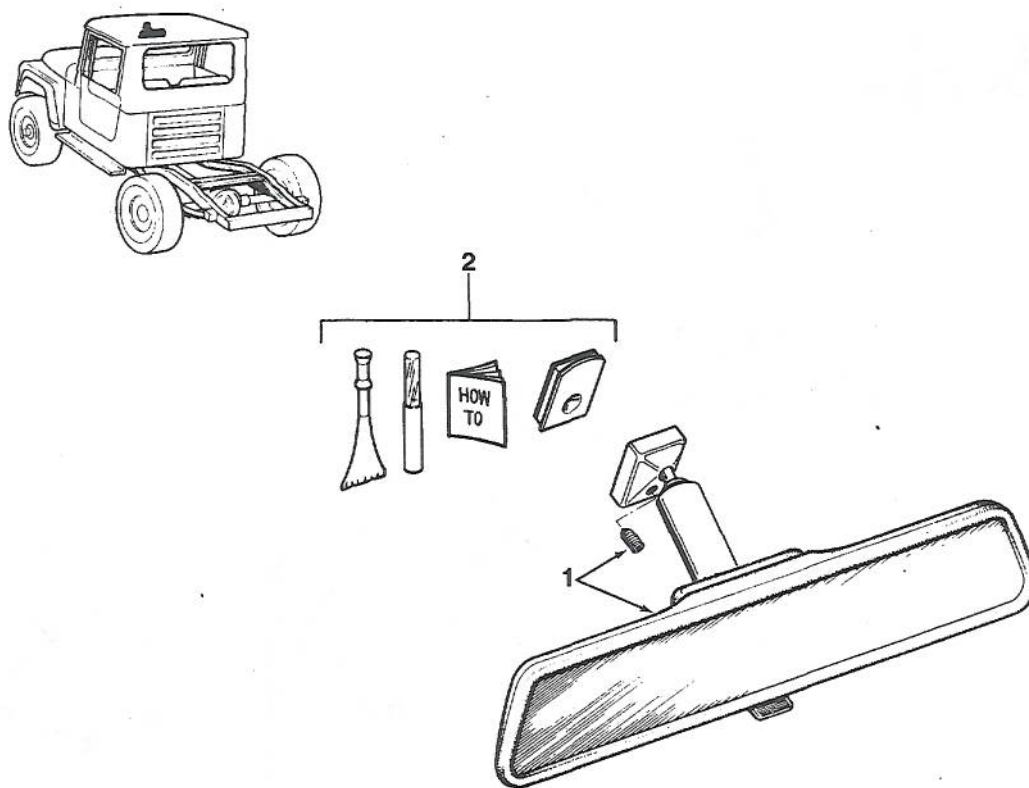

09782B

FIGURE 33. INSIDE REAR VIEW MIRROR ASSEMBLY


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS USABLE PER ASSY.	ON CODE	SMR CODE
33-	NO NUMBER	92871		MIRROR ASSEMBLY, INSIDE REAR VIEW (SEE FIGURE 2 FOR NHA)	REF		
-1	5756124	92871		MIRROR ASSEMBLY, INSIDE REAR VIEW	1		PAFZZN
-2	8133768	92871		INSTRUCTIONS, INSTALLATION	1		XA

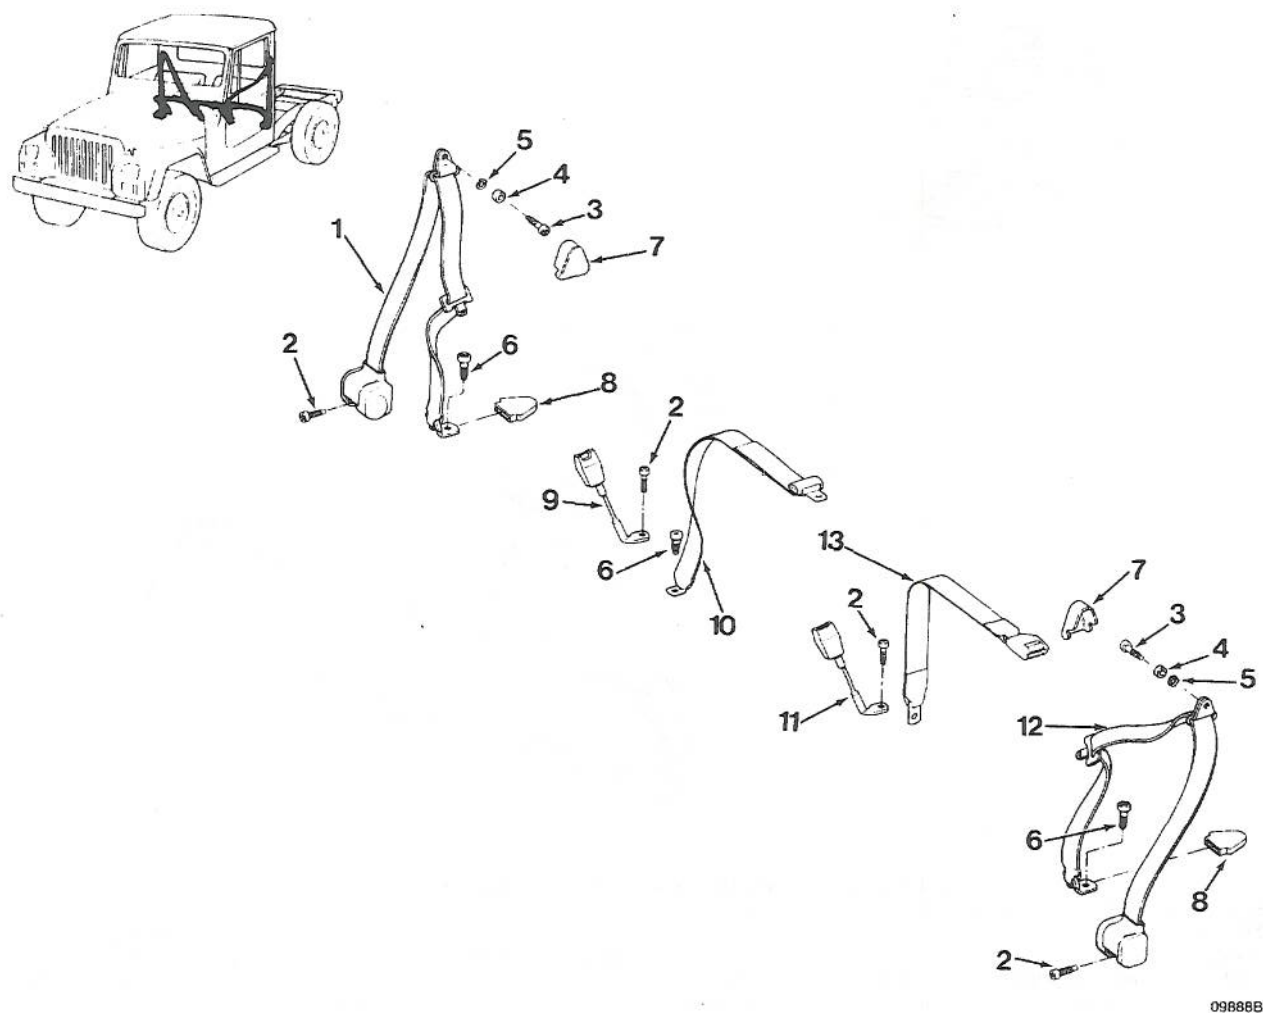

09888B

FIGURE 34. SEAT AND SHOULDER BELTS GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
34-	NO NUMBER	92871		SEAT AND SHOULDER BELTS GROUP.	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	5762158	92871		BELT, SEAT AND SHOULDER.	1		PAFZZN
-2	4006832	92871		BOLT, PAN HEAD, TORX (AP)	6		PAFZZN
-3	4006366	92871		BOLT, PAN HEAD, SHOULDER (AP)	2		PAFZZN
-4	4007209	92871		SPACER, BOLT (AP).	2		PAFZZN
-5	4004616	92871		WASHER, WAVE (AP).	2		PAFZZN
-6	4005506	92871		BOLT, PAN HEAD, SHOULDER (AP)	2		PAFZZN
-7	5756587	92871		COVER, SEAT BELT WEB GUIDE	2		PAFZZN
-8	3684028	92871		COVER, BOLT, HEAT SHIELD.	2		PAFZZN
-9	5760072	92871		BELT ASSEMBLY, SEAT, BUCKLE HALF.	1		PAFZZN
				RIGHT HAND			
-10	5760078	92871		BELT ASSEMBLY, SEAT, TONGUE HALF.	1		PAFZZN
-11	8995000560	92871		BELT ASSEMBLY, SEAT, CENTER	1		PAFZZN
				BUCKLE HALF			
-12	5762157	92871		BELT, SEAT, TONGUE AND RETRACTOR.	1		PAFZZN
-13	5760075	92871		BELT ASSEMBLY, SEAT, BUCKLE HALF.	1		PAFZZN

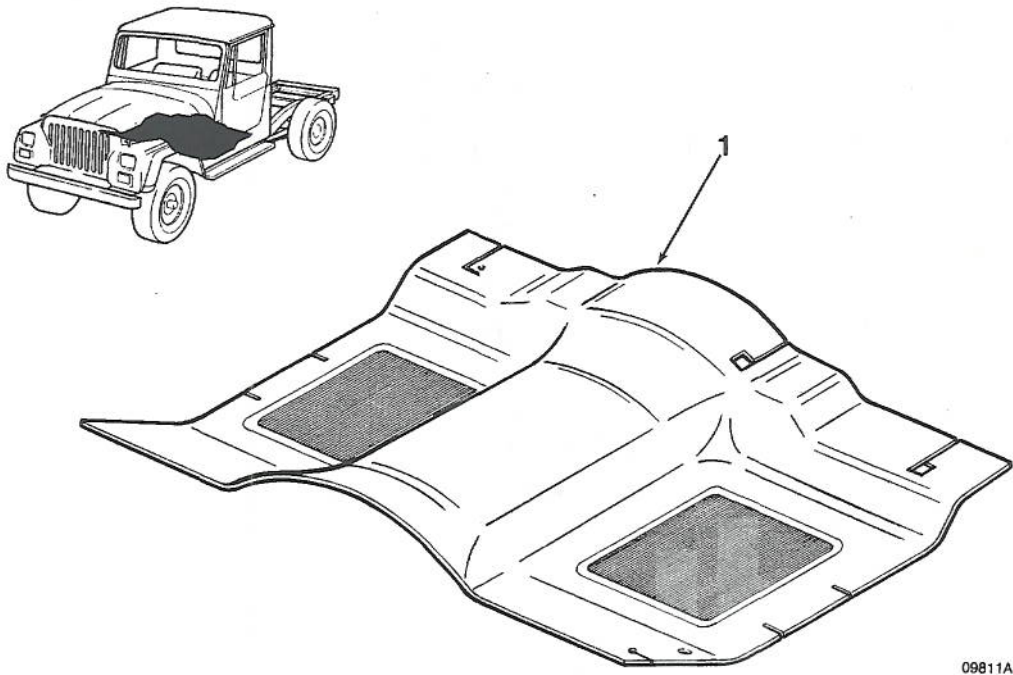

09811A

FIGURE 35. FLOOR MAT GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS USABLE		
					PER ASSY.	ON CODE	SMR CODE
35-	NO NUMBER	92871		FLOOR MAT GROUP.	REF		
-1	B995000584	92871		(SEE FIGURE 2 FOR NHA) . MAT ASSEMBLY, CAB FLOOR, FRONT. . . .	1		PAFZZN

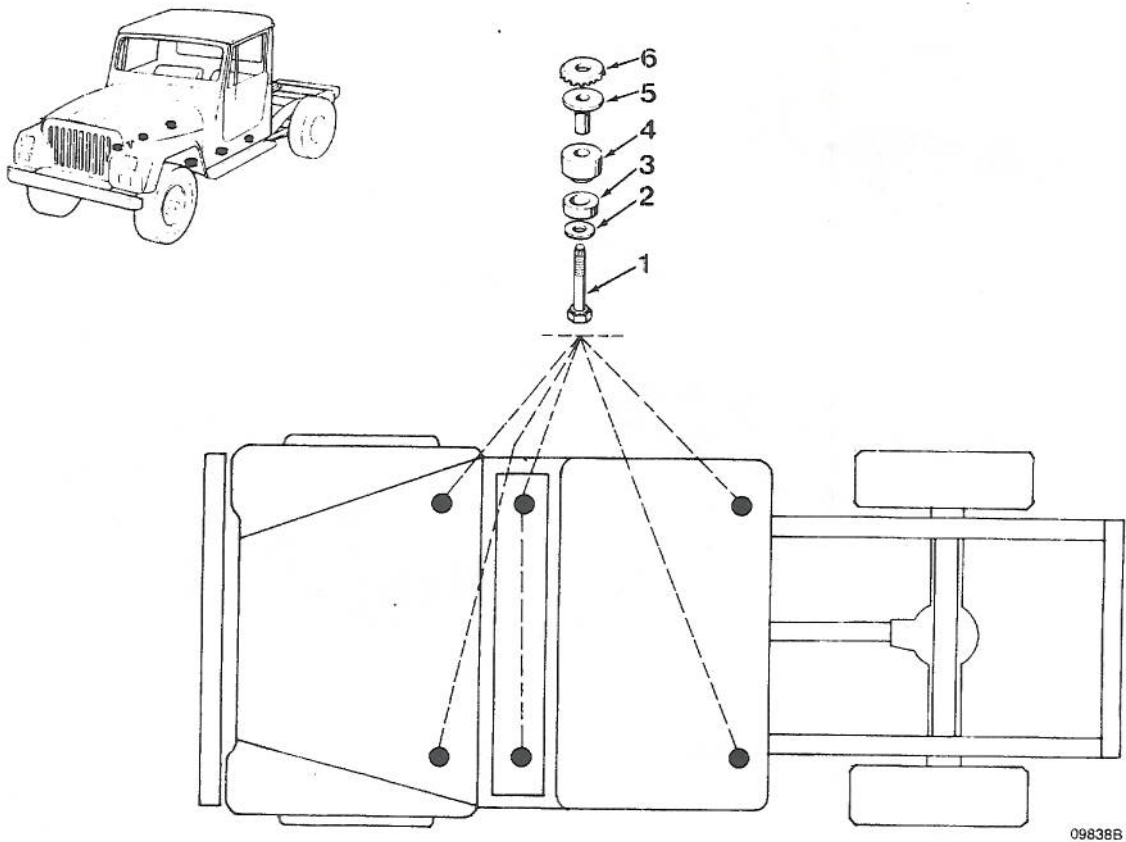


FIGURE 36. BODY HOLDDOWNS GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
36-	NO NUMBER	92871		BODY HOLDDOWNS GROUP	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	5994521	92871		SCREW, CAP, HEX HD.	6		PAFZZN
-2	4006423	92871		WASHER, FLAT	6		PAFZZN
-3	5459515	92871		INSULATOR, BODY HOLDDOWN	6		PAFZZN
-4	5459184	92871		INSULATOR, BODY HOLDDOWN	6		PAFZZN
-5	5459524	92871		WASHER AND TUBE, BODY HOLDDOWN	6		PAFZZN
-6	4004711	92871		WASHER, CONICAL, SERRATED	6		PAFZZN


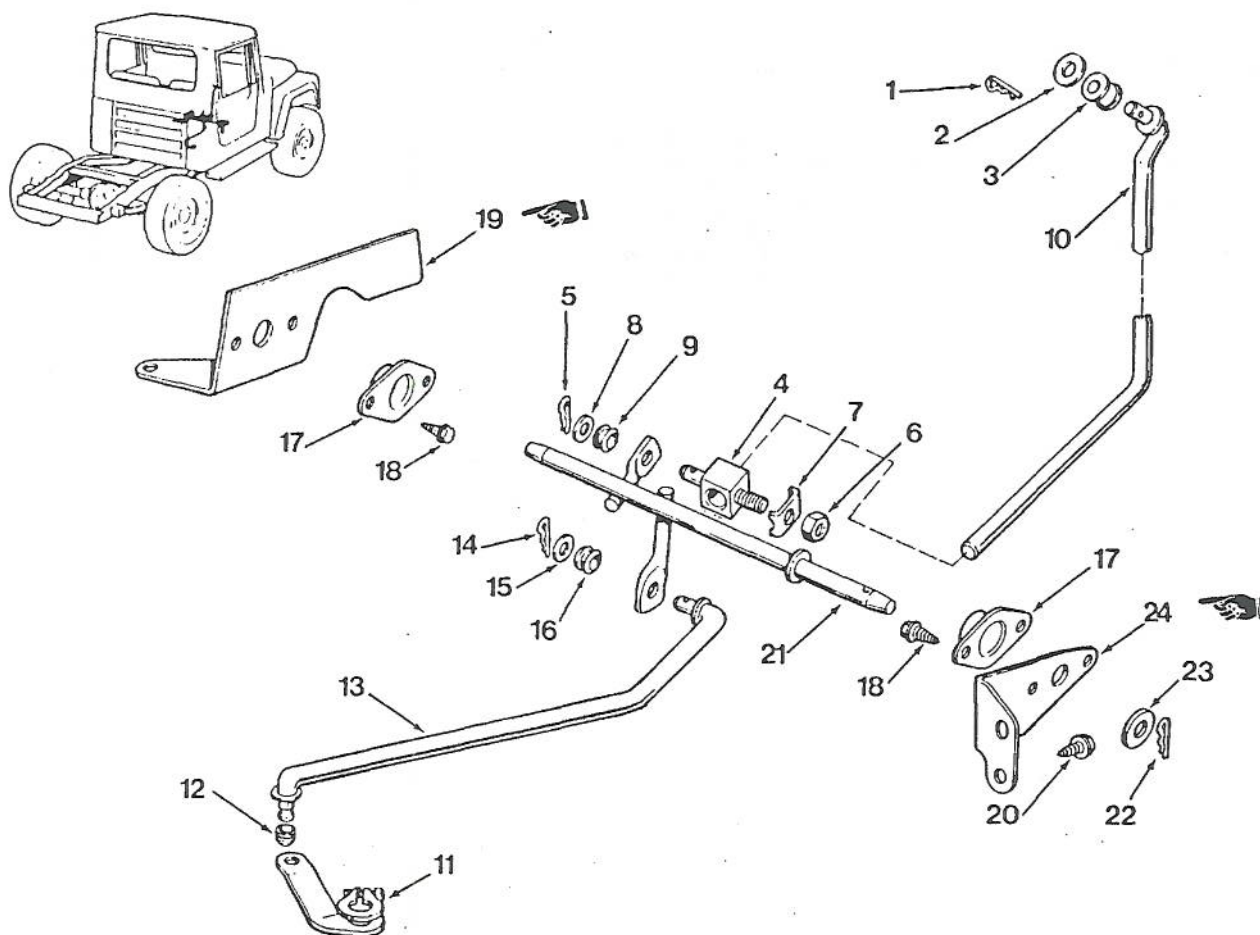


FIGURE 37. AUTOMATIC TRANSMISSION SHIFTING GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
37-	NO NUMBER	92871		AUTOMATIC TRANSMISSION SHIFTING GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	4006486	92871		. PIN, HITCH	1		PAFZZN
-2	4001102	92871		. WASHER, FLAT	1		PAFZZN
-3	3194672	92871		. GROMMET	1		PAFZZN
-4	5360178	92871		. BLOCK, SWIVEL, SHIFT ROD (AP)	1		PAFZZN
-5	4004295	92871		. PIN, HITCH (AP).	1		PAFZZN
-6	69416531	92871		. NUT, SELF-LOCKING, HEX (9416531). (AP)	1		PAFZZN
-7	948180	92871		. LOCK, CLIP (AP).	1		PAFZZN
-8	4001091	92871		. WASHER, FLAT (AP).	1		PAFZZN
-9	3212549	92871		. GROMMET	1		PAFZZN
-10	8992000121	92871		. ROD, SHIFT, COLUMN TO BELLCRANK	1		PAFZZN
-11	5363106	92871		. LEVER, LOWER TRANSMISSION SHIFT.	1		PAFZZN
-12	3238418	92871		. BUSHING, GEAR SELECTOR ROD	1		PAFZZN
-13	8992000119	92871		. ROD, SHIFT, BELL CRANK TO TRANSMISSION	1		PAFZZN
-14	4004295	92871		. PIN, HITCH (AP).	1		PAFZZN
-15	4001091	92871		. WASHER, FLAT (AP).	1		PAFZZN
-16	3212549	92871		. GROMMET	1		PAFZZN
-17	5352589	92871		. BEARING	2		PAFZZN
-18	69426241	92871		. SCREW, CAP, HEX WSHR (9426241). (AP)	4		PAFZZN
-19	5360117	92871		. BRACKET, CONTROL ROD PIVOT	1		PAFZZN


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE DN CODE	SMR CODE
37-20	4001933	92871		SCREW, CAP, HEX HD (AP)	2		PAFZZN
-21	8992000060	92871		BELLCRANK ASSEMBLY, GEAR SELECTOR	1		PAFZZN
-22	4004295	92871		PIN, HITCH (AP)	1		PAFZZN
-23	MS27183-15	96906		WASHER, FLAT (AP)	1		PAFZZN
-24	8992000131	92871		BRACKET, BELLCRANK TO. TRANSMISSION	1		PAFZZN

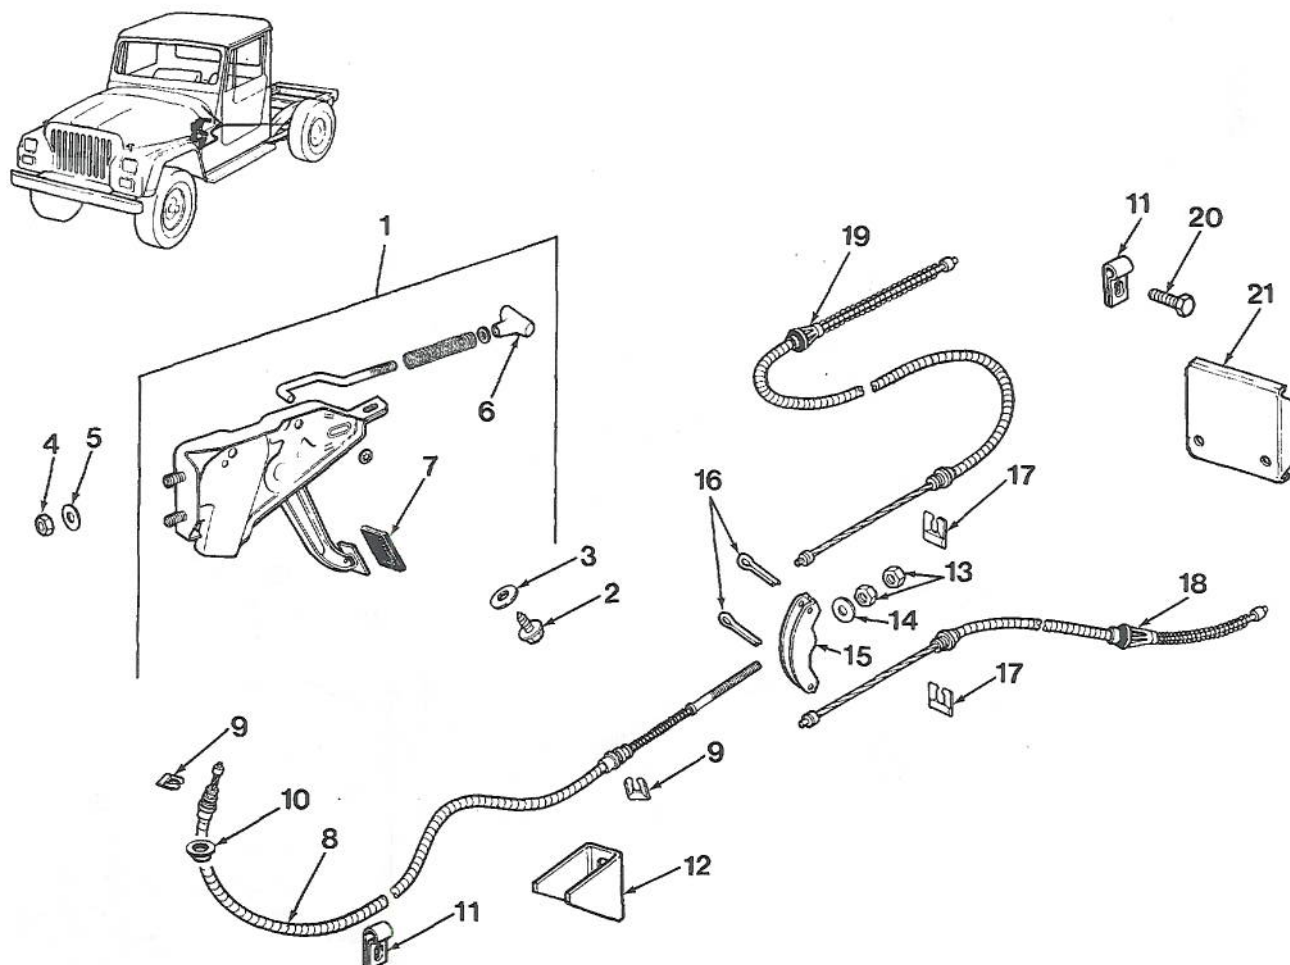

09899B

FIGURE 38. PARKING BRAKE GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
38-	NO NUMBER	92871		PARKING BRAKE GROUP.	REF		
-1	5995424	92871		(SEE FIGURE 2 FOR NHA) BRAKE ASSEMBLY, PARKING, FOOT OPERATED	1		PAFZZN
-2	987145	92871		SCREW AND LOCK WASHER (AP).	1		PAFZZN
-3	Q120392	92871		WASHER, FLAT (120392) (AP)	1		PAFZZN
-4	Q271184	92871		NUT, HEX (271184) (AP)	2		PAFZZN
-5	MS27183-12	96906		WASHER, FLAT (AP).	2		PAFZZN
-6	4487994	92871		HANDLE, RELEASE	1		PAFZZN
-7	3220433	34623		PAD, PEDAL.	1		PAFZZN
-8	5355287	92871		CONTROL ASSEMBLY, PUSH-PULL.	1		PAFZZN
-9	3217581	92871		CLIP, RETAINING.	2		PAFZZN
-10	5351742	92871		GROMMET	1		PAFZZN
-11	140580	72582		CLIP.	1		PAFZZN
-12	8992000100	92871		BRACKET, CABLE	1		PAFZZN
-13	MS35691-13	96906		NUT, PLAIN, HEX	2		PAFZZN
-14	MS27183-13	96906		WASHER, FLAT	1		PAFZZN
-15	3222572	92871		EQUALIZER, CABLE, REAR.	1		PAFZZN
-16	103375	72582		PIN, COTTER.	2		PAFZZN
-17	3217581	92871		CLIP, RETAINING.	2		PAFZZN
-18	8992000062	92871		CABLE ASSEMBLY, REAR, LEFT HAND	1		PAFZZN
-19	8992000050	92871		CABLE ASSEMBLY, REAR, RIGHT HAND.	1		PAFZZN
-20	4004626	92871		SCREW, CAP, HEX HEAD.	5		PAFZZN
-21	8992000112	92871		BRACKET, CABLE	1		PAFZZN

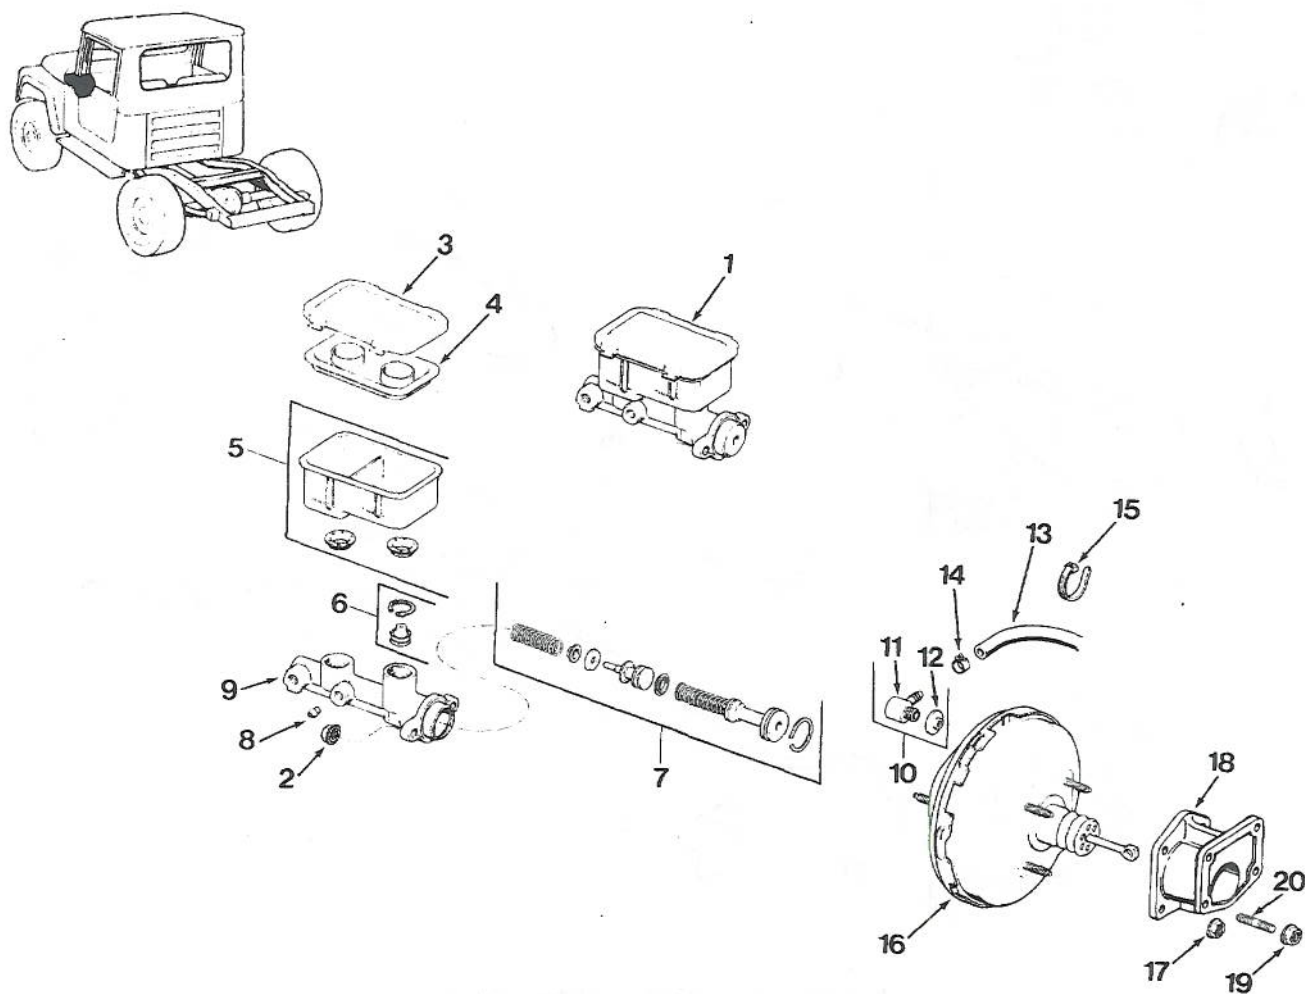


09917B

FIGURE 39. POWER BRAKE BOOSTER AND MASTER CYLINDER GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
39-	NO NUMBER	92871		POWER BRAKE BOOSTER AND MASTER CYLINDER GROUP (PARTS KIT AVAILABLE) (SEE FIGURE 2 FOR NHA)	REF		
-1	18007963	76462		.. CYLINDER ASSEMBLY, MASTER, POWER. (8133316)	1		PAFFFFP
-2	4200301	92871		.. NUT, HEX, FLANGED (AP).	2		PAFZZN
-3	18007969	76462		.. COVER, RESERVOIR (8133319).	1		PAFZZN
-4	18007968	76462		.. DIAPHRAGM, RESERVOIR (8133318).	1		PAFZZN
-5	18007965	76462		.. KIT, RESERVOIR AND GROMMET. (8133321) (K14)	1		PAFZZN
-6	18007978	76462		.. VALVE ASSEMBLY, GTU PACKAGE (8133322)	1		PAFZZN
-7	18007964	76462		.. KIT, REPAIR, MASTER CYLINDER (8133317) (K15)	1		PAFZZN
-8	2622520	76462		.. SEAT, TUBE, MASTER CYLINDER. (8128300)	2		PAFZZN
-9	NO NUMBER	76462		.. BODY, MASTER CYLINDER	1		


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
39-10	18000022	76462		. KIT, VACUUM CHECK VALVE AND.	1		PAFZZN
				. GROMMET (B125991) (K16)			
-11	18000134	76462		. VALVE ASSEMBLY, CHECK, VACUUM.	1		XA
				. (NOT SERVICED SEPARATELY)			
-12	5461808	11862		. GROMMET.	1		XA
-13	8125883	92871		. HOSE, BRAKE, POWER, NONMETALLIC.	1		PAFZZN
-14	3178454	92871		. CLAMP, HOSE (AP)	2		PAFZZN
-15	3223227	92871		. STRAP, RETAINER (AP)	1		PAFZZN
-16	18010091A	76462		. BOOSTER, POWER BRAKE (B134540)	1		PAFZZN
-17	4200301	92871		. NUT, HEX, FLANGED (AP).	4		PAFZZN
-18	5994845	92871		. SPACER, BOOSTER, POWER BRAKE.	1		PAFZZN
-19	4003909	92871		. NUT, HEX, FLANGED, SERRATED (AP)	4		PAFZZN
-20	4004903	92871		. STUD, MOUNTING (AP).	4		PAFZZN

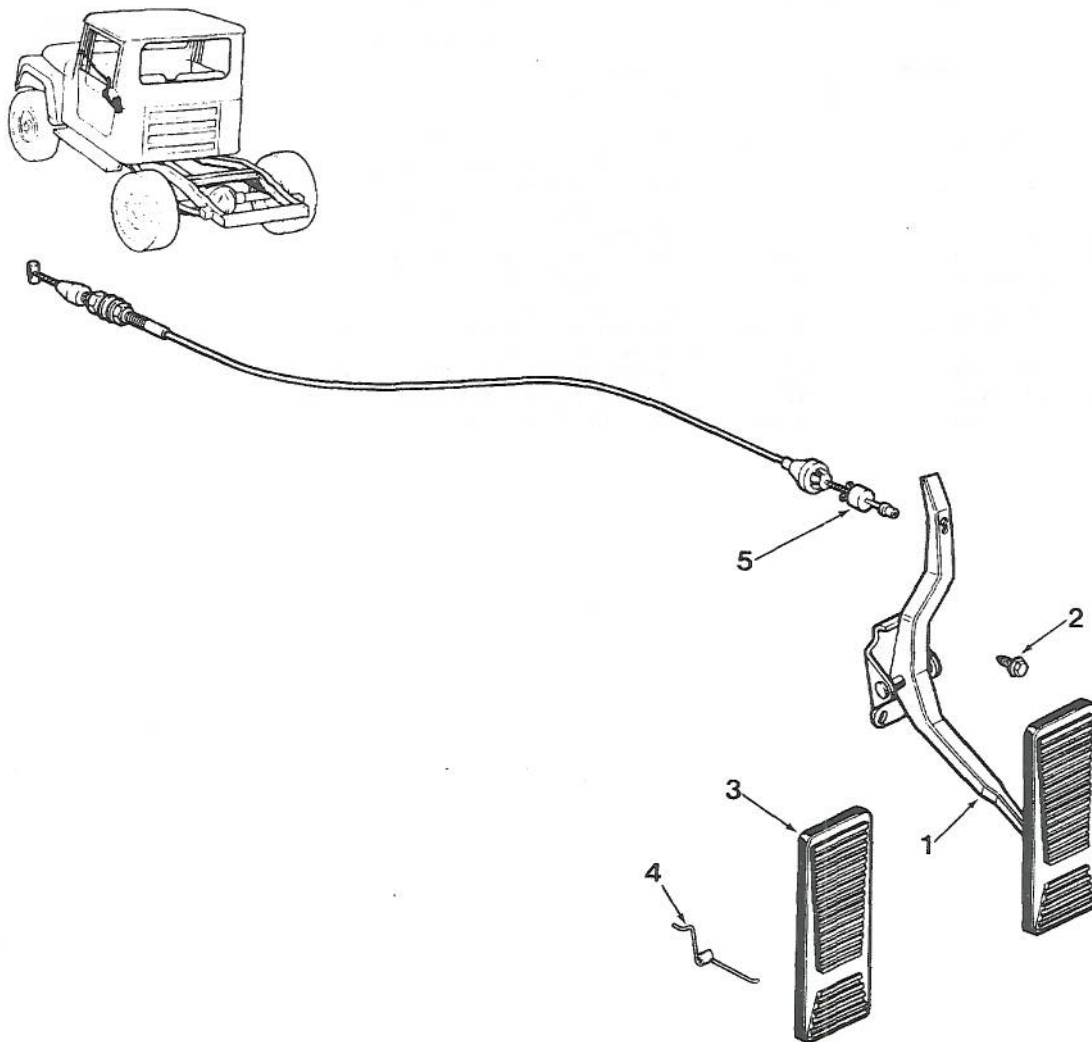

09837B

FIGURE 40. ACCELERATOR PEDAL AND LINKAGE GROUP



FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
40--	NO NUMBER	92871		ACCELERATOR PEDAL AND LINKAGE GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	5357732	92871		PEDAL AND ROD ASSEMBLY, ACCELERATOR	1		PAFZZN
-2	4006455	92871		SCREW AND WASHER (AP)	3		PAFZZN
-3	3193332	92871		PEDAL, ACCELERATOR	1		XA
-4	3193369	92871		SPRING, ACCELERATOR PEDAL CLEVIS	1		XA
-5	5994730	92871		CABLE ASSEMBLY, ACCELERATOR CONTROL	1		PAFZZN

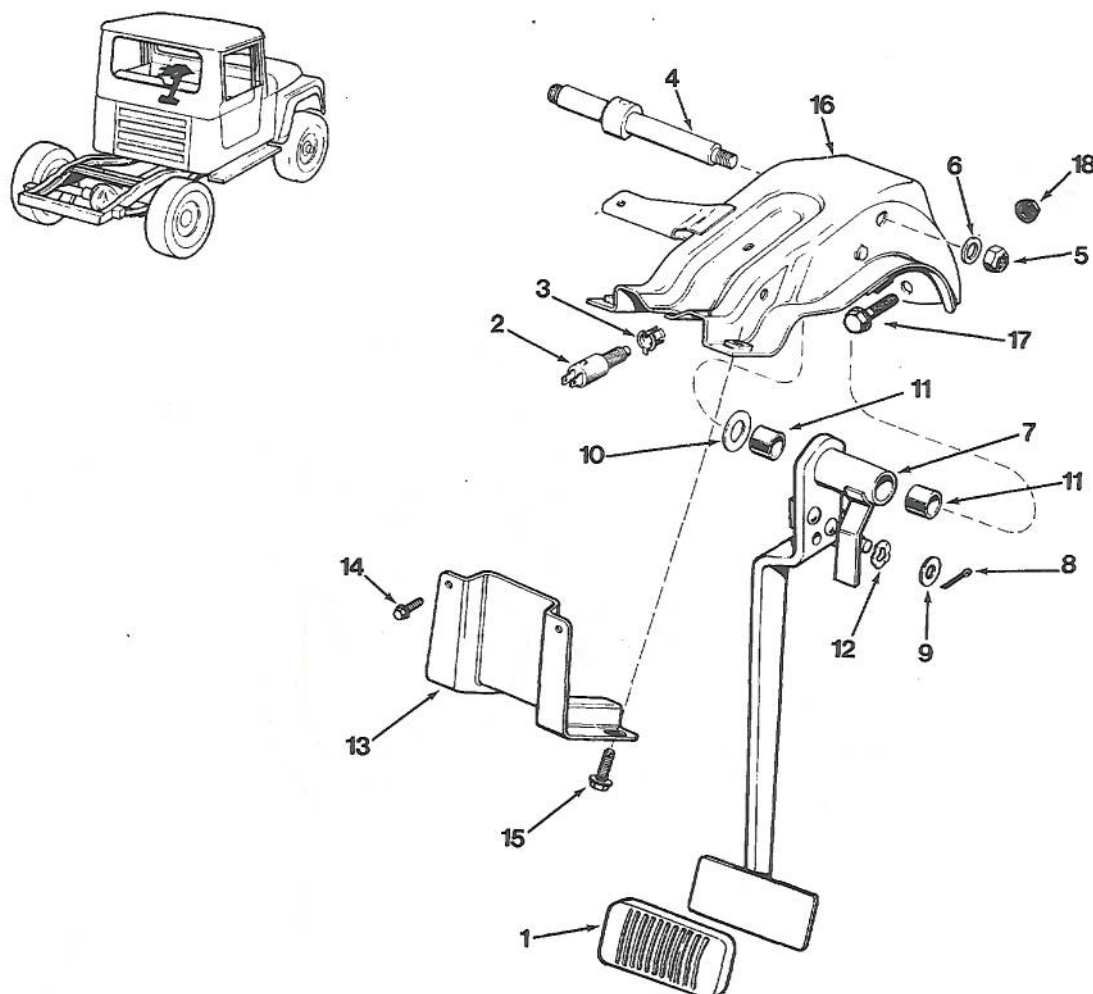

09881B

FIGURE 41. BRAKE PEDAL AND LINKAGE GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
41-	NO NUMBER	92871		BRAKE PEDAL AND LINKAGE GROUP.	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	5363521	92871		COVER, BRAKE PEDAL PAD	1		PAFZZN
-2	3194569	99343		SWITCH, ELECTRICAL	1		PAFZZN
-3	5352622	92871		RETAINER, STOP LIGHT SWITCH.	1		XA
-4	5351803	92871		SHAFT ASSEMBLY, BRAKE.	1		PAFZZN
-5	4004311	92871		NUT, SELF-LOCKING, HEX (AP)	1		PAFZZN
-6	MS27183-18	96906		WASHER, FLAT (AP)	1		PAFZZN
-7	5994358	92871		PEDAL ASSEMBLY, BRAKE.	1		XBFZZ
-8	G121224	92871		PIN, COTTER (121224) (AP)	1		PAFZZN
-9	MS27183-18	96906		WASHER, FLAT (AP)	1		PAFZZN
-10	5351844	92871		WASHER, LOCK (AP)	1		PAFZZN
-11	946177	92871		BEARING, PEDAL	2		PAFZZN
-12	958629	92871		WASHER, LOCK	1		PAFZZN
-13	5453933	92871		BRACKET ASSEMBLY, STABILIZER	1		XBFZZ
-14	4004991	92871		SCREW AND WASHER (AP)	2		PAFZZN
-15	4005665	92871		SCREW, MACHINE (AP)	2		PAFZZN
-16	5994518	92871		BRACKET, DASH TO INSTRUMENT.	1		XBFZZ
				PANEL			
-17	MS90728-63	96906		SCREW, CAP, HEX HD (AP)	2		PAFZZN
-18	4003909	92871		NUT, PLAIN, HEX (AP)	2		PAFZZN

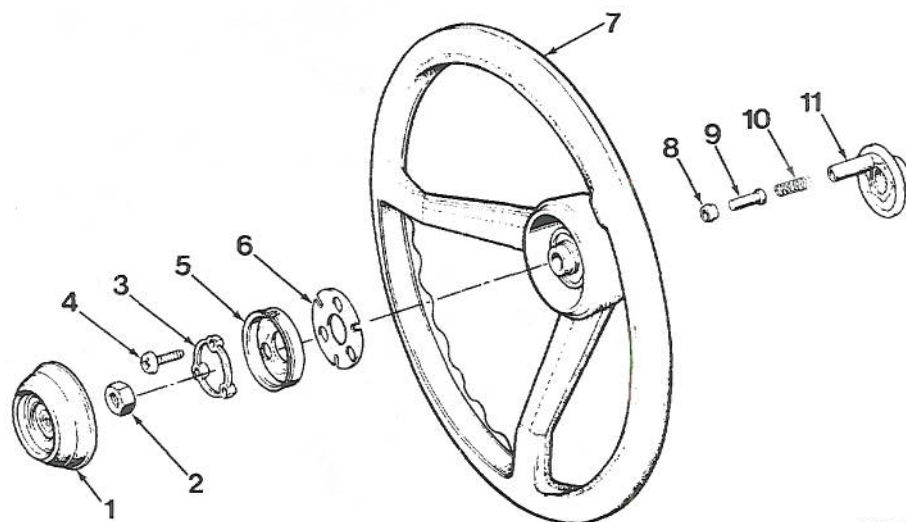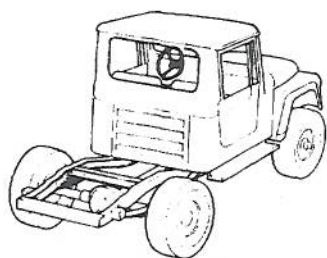

09894B

FIGURE 42. STEERING WHEEL GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
42-	NO NUMBER	92871		STEERING WHEEL GROUP	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	5362568	92871		CAP ASSEMBLY, HORN	1		PAFZZN
-2	4200414	92871		NUT, LOCK	1		PAFZZN
-3	3186964	92871		BUSHING, SPACER	1		PAFZZN
-4	4004167	92871		SCREW, PAN HEAD (AP)	3		PAFZZN
-5	3186967	34623		RECEIVER, CENTER, HORN	1		PAFZZN
-6	3186965	92871		SPRING, BELLEVILLE	1		PAFZZN
-7	5360060	92871		WHEEL, STEERING	1		XBFZZ
-8	3187257	92871		RETAINER, CONTACT	1		PAFZZN
-9	3187249	92871		PIN, CONTACT	1		PAFZZN
-10	3187255	92871		SPRING, CONTACT	1		PAFZZN
-11	4487711	34623		CAM, CONTROL	1		PAFZZN

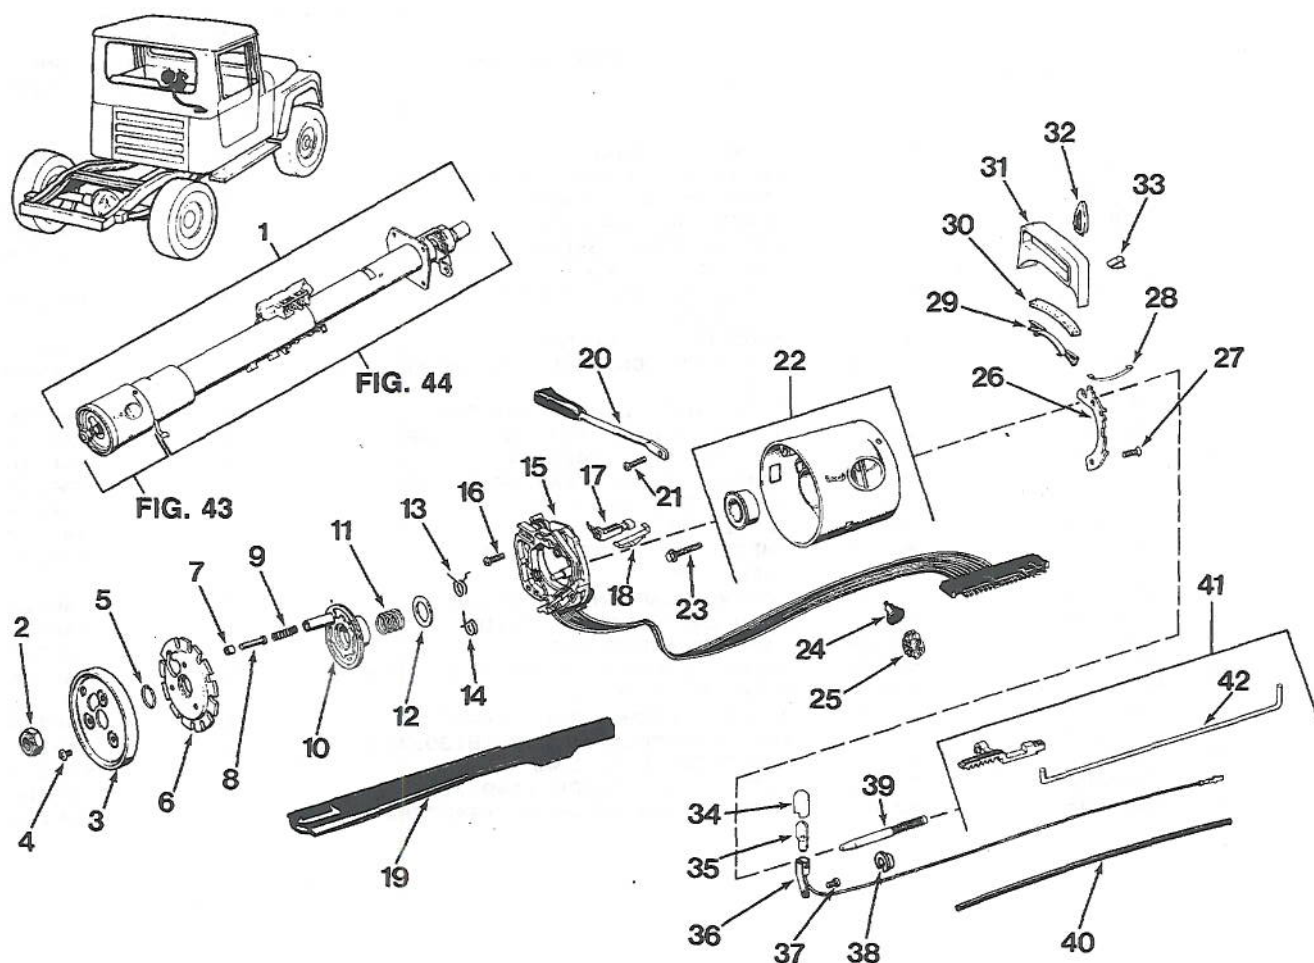

09941B

FIGURE 43. STEERING COLUMN ASSEMBLY AND UPPER HOUSING GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
43-	NO NUMBER	92871		STEERING COLUMN ASSEMBLY AND UPPER HOUSING GROUP (PARTS KIT AVAILABLE) (SEE FIGURE 2 FOR NHA)	REF		
-1	7834355	52788		.. COLUMN ASSEMBLY, STEERING. (5359885)	1		AFFFF
-2	7829221	52788		.. NUT, HEX, LOCK (42000414).	1		PAFZZN
-3	7819738	11862		.. COVER, SHAFT LOCK (3228743)	1		PAFZZN
-4	7809128	52788		.. SCREW, MACHINE (4488301) (AP)	2		PAFZZN
-5	5694191	52788		.. RING, RETAINING (3208377)	2		PAFZZN
-6	7819510	52788		.. LOCK, SHAFT (8127831)	1		PAFZZN
-7	3187257	92871		.. RETAINER, HORN CONTACT.	1		PAFZZN
-8	3187249	92871		.. PIN, HORN CONTACT	1		PAFZZN
-9	3187255	92871		.. SPRING, HORN CONTACT.	1		PAFZZN
-10	7804768	52788		.. CAM, CONTROL (4487711).	1		PAFZZN
-11	7804771	52788		.. SPRING, BEARING, UPPER (4487765)	1		PAFZZN
-12	7800580	52788		.. WASHER, FLAT (3208008).	1		PAFZZN
-13	8129335	92871		.. SPRING, CANCEL, RIGHT, UPPER.	REF		PAFZZN
-14	8129317	92871		.. SPRING, CANCEL, LEFT, LOWER.	REF		PAFZZN
-15	1997985	52788		.. SWITCH ASSEMBLY, TURN SIGNAL. (3229970)	REF		PAFZZN
-16	7808587	52788		.. SCREW, PAN HEAD (4487763) (AP).	3		PAFZZN
-17	3211423	92871		.. SWITCH ASSEMBLY, BUZZER	1		PAFZZN

FIG & INDEX NO	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
43-18	4487713	92871		.. CLIP, RETAINING	1		PAFZZN
-19	7804558	11862		.. PROTECTOR, WIRING (4487741)	1		XBZZ
-20	5362173	34623		.. LEVER, MANUAL CONTROL	1		PAFZZN
-21	4488318	92871		.. SCREW, PAN HEAD (AP)	1		PAFZZN
-22	7811173	52788		.. KIT, HOUSING ASSEMBLY, SERVICE .. (4489046) (K30)	1		PAFZZN
-23	7806867	52788		.. SCREW, HEX HEAD, TAPPING .. (4487761)	4		PAFZZN
-24	3238343	92871		.. KNOB, HAZARD WARNING	1		PAFZZN
-25	7812526	52788		.. ACTUATOR, IGNITION (8120097) .. (K31)	1		PAFZZN
-26	7807551	52788		.. GATE, SHIFT LEVER (4487799)	1		PAFZZN
-27	7830314	11862		.. SCREW, MACHINE (4487801) (AP)	2		PAFZZN
-28	7804410	11862		.. SPRING, FLAT (4487774)	1		PAFZZN
-29	3196505	92871		.. BRACKET, BEZEL, GEAR SELECTOR	1		PAFZZN
-30	3230056	92871		.. SEAL, BEZEL AND DIAL	1		PAFZZN
-31	5362838	92871		.. BEZEL AND DIAL	1		PAFZZN
-32	3215679	92871		.. INDICATOR, POINTER, GEAR .. SELECTOR	1		PAFZZN
-33	3196503	92871		.. SPRING, GEAR AND SELECTOR	1		PAFZZN
-34	3196504	92871		.. HOOD, LAMP, GEAR SELECTOR	1		PAFZZN
-35	1893	08108		.. LAMP, INCANDESCENT	1		PAFZZN
-36	7805546	52788		.. SOCKET ASSEMBLY, LAMP (4487785)	1		PAFZZN
-37	NO NUMBER	92871		.. SCREW, MACHINE (AP)	1		
-38	7805950	52788		.. BEARING, WASHER, THRU (4487777)	1		PAFZZN
-39	7832299	52788		.. BOLT ASSEMBLY, SPRING (8130676)	1		PAFZZN
-40	4487742	92871		.. PROTECTOR, DIAL LAMP	1		PAFZZN
-41	7807282	52788		.. RACK ASSEMBLY, ROD (4487755)	1		PAFZZN
-42	7804536	52788		.. ROD, SWITCH ACTUATOR (4487782)	1		PAFZZN

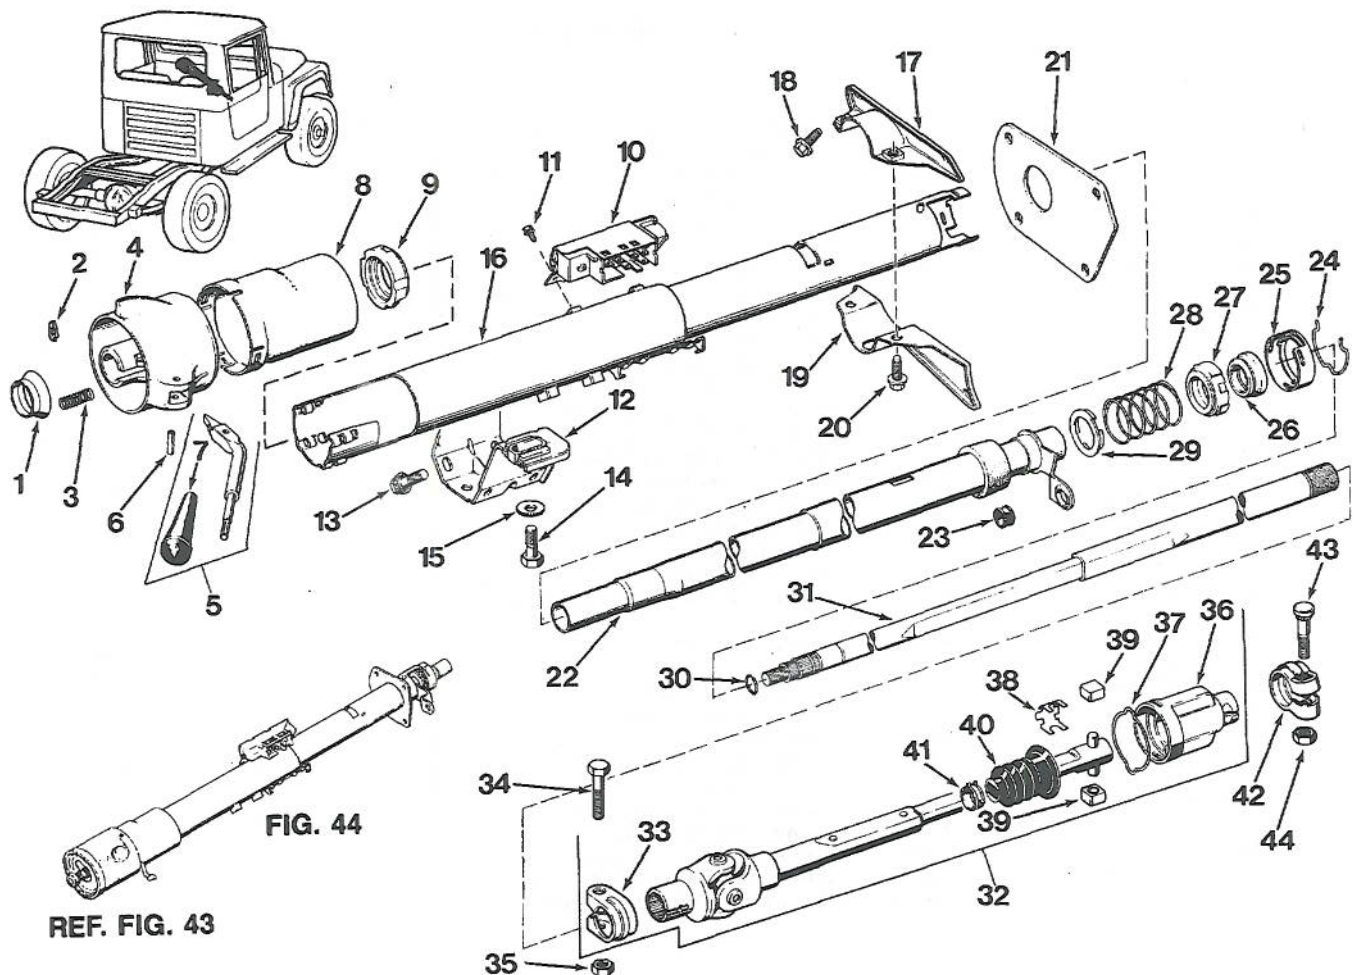


FIG. 44


REF. FIG. 43

09948B

FIGURE 44. STEERING COLUMN LOWER HOUSING AND SHAFTS GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
44-	NO NUMBER	92871		STEERING COLUMN LOWER HOUSING AND SHAFTS GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	7804413	52788		CUP, HOUSING, TURN SIGNAL (4487714)	1		PAFZZN
-2	3215679	92871		INDICATOR, POINTER	1		PAFZZN
-3	7804403	52788		SPRING, LEVEL, UPPER (4487791)	1		PAFZZN
-4	7810761	52788		BOWL, GEARSHIFT LEVER (4489040)	1		XBFZZ
-5	3216464	34623		LEVER, MANUAL CONTROL	1		PAFZZN
-6	4003925	92871		PIN, HINGE (AP)	1		PAFZZN
-7	3216462	92871		KNOB, LEVER	1		PAFZZN
-8	7811342	52788		SHROUD, SHIFT BOWL (3211169)	1		XBFZZ
-9	7827111	11862		BEARING, BOWL, LOWER	1		PAFZZN
-10	8128889	92871		SWITCH ASSEMBLY, IGNITION	REF		PAFZZN
-11	448772	92871		SCREW AND WASHER (AP)	REF		PAFZZN
-12	7811659	92871		BRACKET ASSEMBLY	1		XBFZZ
-13	611502764	92871		SCREW, HEX, WASHER HEAD (11502764) (AP)	4		PAFZZN
-14	69418778	92871		SCREW, CAP, HEX HEAD (9418778) (AP)	2		PAFZZN
-15	6120388	92871		WASHER, FLAT (120388) (AP)	2		PAFZZN

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
44-16	7831729	52788		JACKET ASSEMBLY, STEERING COLUMN (8130179)	1		XBFZZ
-17	3196870	92871		PLATE, UPPER	1		XBFZZ
-18	4004520	92871		SCREW, CAP, HEX HEAD (AP)	4		PAFZZN
-19	3196897	92871		PLATE, LOWER	1		XBFZZ
-20	Q273573	92871		SCREW, CAP, HEX HEAD (273573)	4		PAFZZN
-21	7809615	52788		SEAL, DASH (3196896)	1		XBFZZ
-22	7811667	52788		TUBE ASSEMBLY, SHIFT (4489041)	1		XBFZZ
-23	3194672	92871		GROMMET	1		PAFZZN
-24	7804439	52788		CLIP, RETAINING (4487739)	1		PAFZZN
-25	7804440	52788		RETAINER, BEARING ADAPTER (4487743)	1		PAFZZN
-26	7805700	52788		BEARING ASSEMBLY (4486713)	1		PAFZZN
-27	7805822	52788		ADAPTER, SHIFT, LOWER (4487696)	1		PAFZZN
-28	7810567	52788		SPRING, TUBE RETURN (4489045)	1		PAFZZN
-29	7832112	52788		BEARING, WASHER, THRU (4487779)	1		PAFZZN
-30	5694191	52788		RING, RETAINING (3208377)	2		PAFZZN
-31	7829257	52788		SHAFT ASSEMBLY, STEERING (8128894)	1		XBFZZ
-32	5354934	92871		SHAFT, LOWER	1		AFFFF
-33	3191827	92871		CLAMP, LOWER TO INTERMEDIATE (AP)	1		PAFZZN
-34	3194110	92871		SCREW, CAP, HEX HEAD (AP)	1		PAFZZN
-35	4488431	92871		NUT, HEX	1		PAFZZN
-36	998710	92871		COUPLING, LOWER TO GEAR	1		PAFZZN
-37	4486679	92871		RING, RETAINING	1		PAFZZN
-38	3204878	92871		SPRING, LOWER	1		PAFZZN
-39	3204875	92871		BEARING, LOWER SHAFT TO COUPLING	2		PAFZZN
-40	8132676	92871		SEAL, BOOT, LOWER SHAFT	1		PAFZZN
-41	NO NUMBER	92871		CLAMP, RETAINING	1		PAFZZN
-42	994605	92871		CLAMP, LOWER TO GEAR	1		PAFZZN
-43	994603	92871		SCREW, CAP, HEX HEAD (AP)	1		PAFZZN
-44	G9411783	92871		NUT, HEX, LOCK (9411783) (AP)	1		PAFZZN

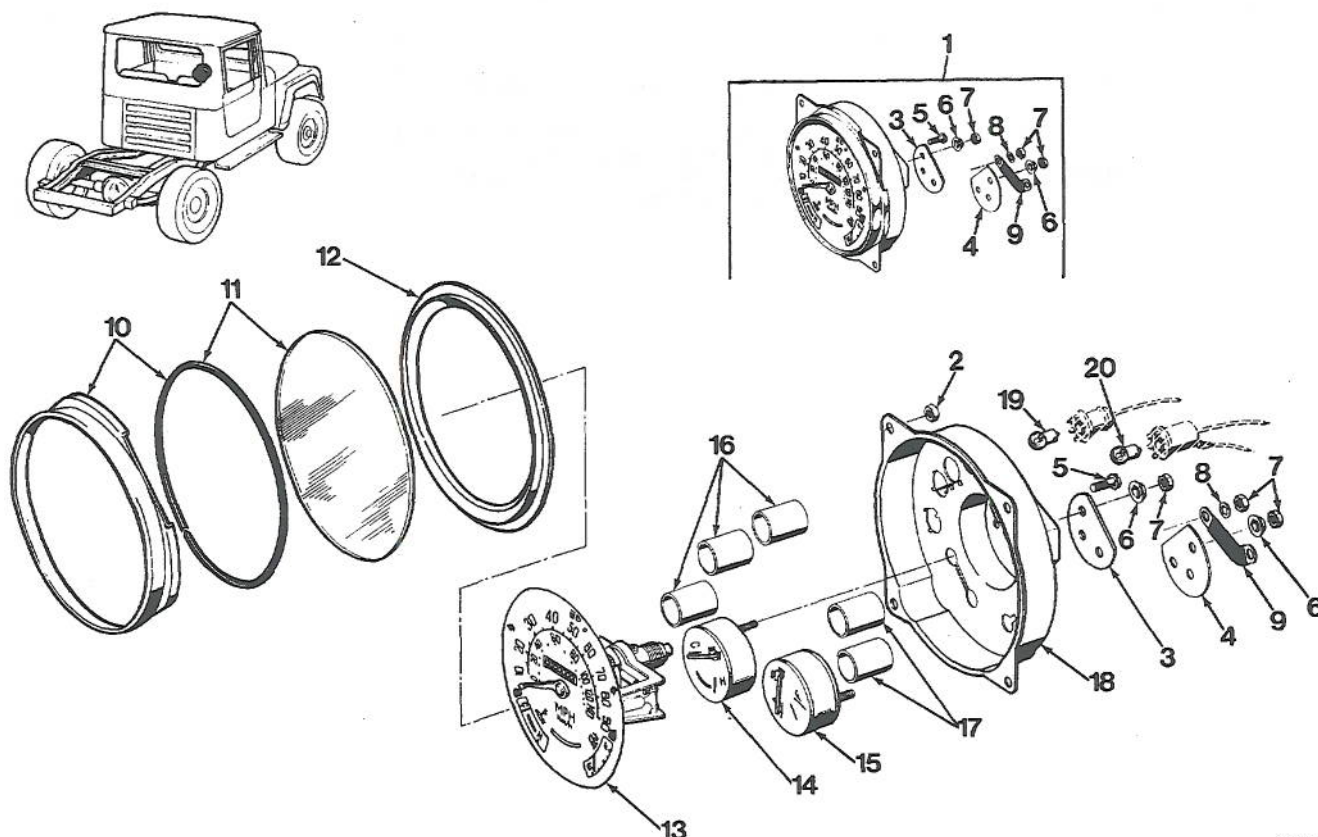


09891B

FIGURE 45. INSTRUMENT CLUSTER GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
45-	NO NUMBER	92871		INSTRUMENT CLUSTER GROUP	REF		
-1	543-XE	57733		(SEE FIGURE 2 FOR NHA) CLUSTER ASSEMBLY, INSTRUMENT	1		AFFFF
-2	69419337	34623		(5761111) NUT, HEX (9419337) (AP).	4		PAFZZN
-3	424470	57733		INSULATOR (NOT SERVICED. SEPARATELY)	1		XA
-4	426460	57733		INSULATOR (NOT SERVICED. SEPARATELY)	1		XA
-5	17745	57733		SCREW, PAN HEAD (803366) (AP)	2		PAFZZN
-6	103856	57733		PALNUT (6144562) (AP).	3		PAFZZN
-7	271169	72582		NUT AND WASHER (271169) (AP)	2		PAFZZN
-8	77008	57733		WASHER, LOCK (NOT SERVICED. SEPARATELY) (AP)	2		XA
-9	6827675	57733		LINK, JUMPER, INSULATED (NOT SERVICED SEPARATELY)	1		XA
-10	424105-2	57733		BEZEL AND GASKET (8123058)	1		PAFZZN
-11	424132	57733		GLASS AND GASKET (913387).	1		PAFZZN
-12	824842	57733		RETAINER ASSEMBLY (913388)	1		PAFZZN
-13	P-550-WW	57733		SPEEDOMETER (8134184).	1		PAFZZN
-14	442902	57733		GAUGE, WATER TEMPERATURE. (8126920)	1		PAFZZN
-15	8126919	34623		INDICATOR, LIQUID	1		PAFZZN
-16	822164	57733		TUBING, PAPER (NOT SERVICED SEPARATELY)	3		XA


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
45-17	827497	57733		.. SHIELD, LIGHT (NOT SERVICED SEPARATELY)	2		XA
-18	0827572	57733		.. CASE AND GLOBE ASSEMBLY (NOT SERVICED SEPARATELY)	1		XA
-19	M131282	34623		. LAMP, INCANDESCENT (131282).	1		PAFZZN
-20	1893	08108		. LAMP, INCANDESCENT	1		PAFZZN

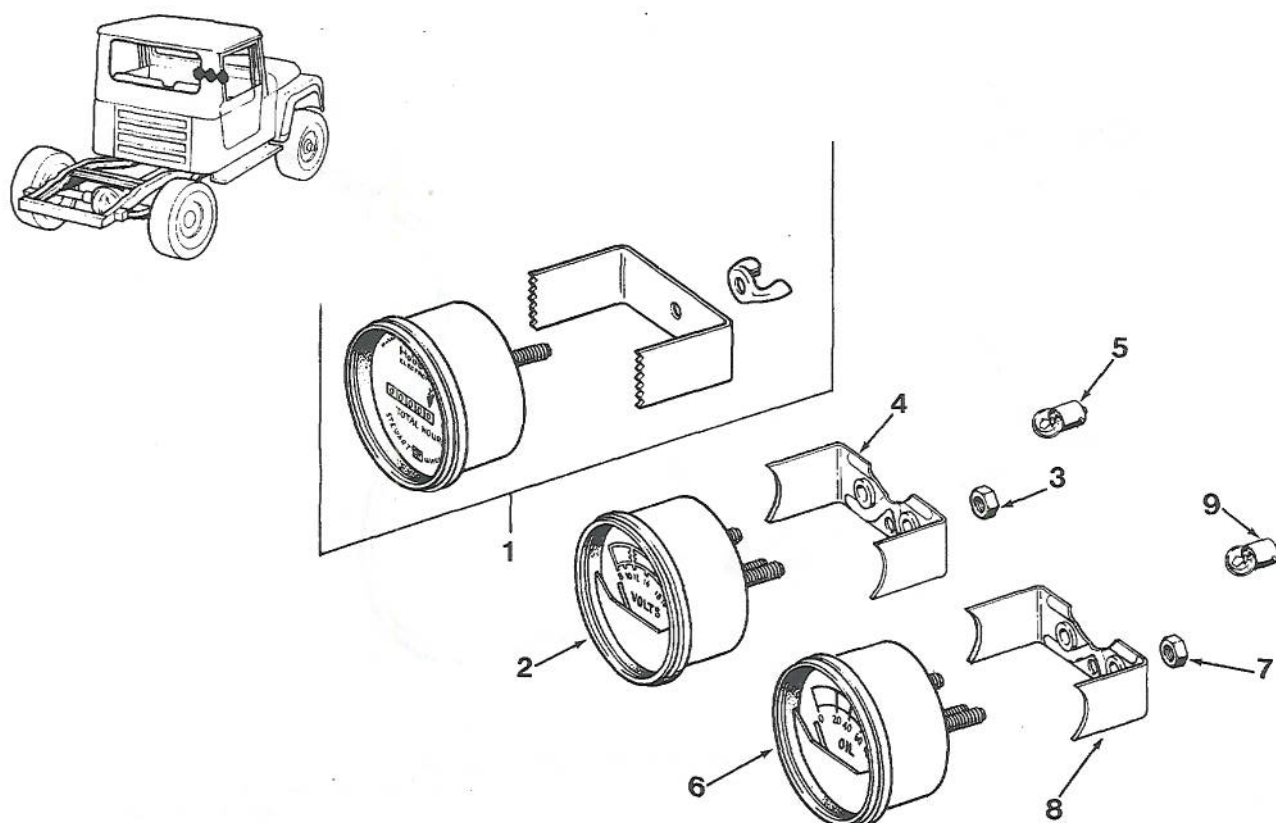

09892B

FIGURE 46. OPTIONAL INSTRUMENTS INCLUDING HOURMETER GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
46-	NO NUMBER	92871		OPTIONAL INSTRUMENTS INCLUDING	REF		
				HOURMETER GROUP			
				(SEE FIGURE 2 FOR NHA)			
-1	8996000110	92871		HOURMETER ASSEMBLY.	1		PAFZZN
-2	5766613	92871		VOLTMETER ASSEMBLY.	1		PAFZZN
-3	271169	72582		NUT AND WASHER (271169) (AP).	2		PAFZZN
-4	5750949	92871		CLAMP AND BUSHING ASSEMBLY.	1		XBFZZ
				(AP)			
-5	0127934	92871		LAMP, INCANDESCENT (127934).	1		PAFZZN
-6	5752366	92871		GAUGE ASSEMBLY, OIL PRESSURE	1		PAFZZN
-7	0271169	92871		NUT AND WASHER (271169) (AP).	2		
-8	5750949	92871		CLAMP AND BUSHING ASSEMBLY.	1		XBFZZ
				(AP)			
-9	0127934	92871		LAMP, INCANDESCENT (127934).	1		PAFZZN

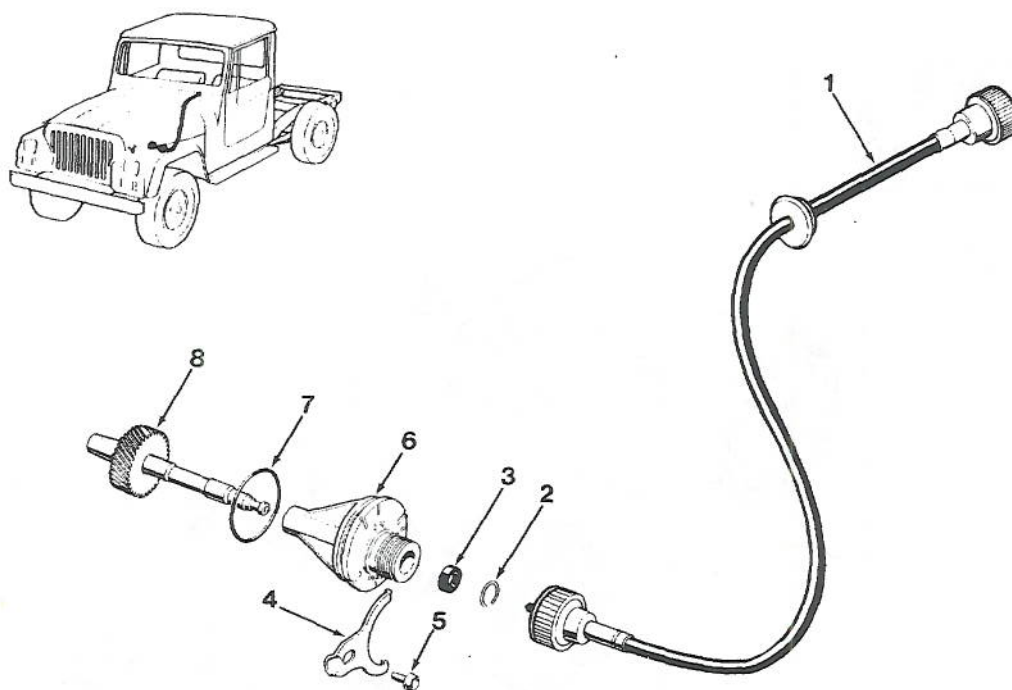

09771A

FIGURE 47. SPEEDOMETER CABLE GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
47-	NO NUMBER	92871		SPEEDOMETER CABLE GROUP.	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	5751959	99343		. SHAFT ASSEMBLY, FLEXIBLE	1		PAFZZN
-2	3212846	92871		. RING, RETAINER, SPEEDOMETER SEAL.	1		PAFZZN
-3	3212847	92871		. SEAL, SPEEDOMETER.	1		PAFZZN
-4	3212844	92871		. CLAMP, PINION, SPEEDOMETER DRIVE.	1		XBFZZ
-5	G273573	92871		. SCREW, CAP, HEX HEAD (273573)	1		PAFZZN
				(AP)			
-6	3212893	92871		. ADAPTER, PINION, SPEEDOMETER.	1		XBFZZ
				DRIVE			
-7	3212845	92871		. RING, SPEEDOMETER.	1		PAFZZN
-8	8992000065	92871		. GEAR, DRIVEN, SPEEDOMETER, 45.	1		XBFZZ
				TEETH			

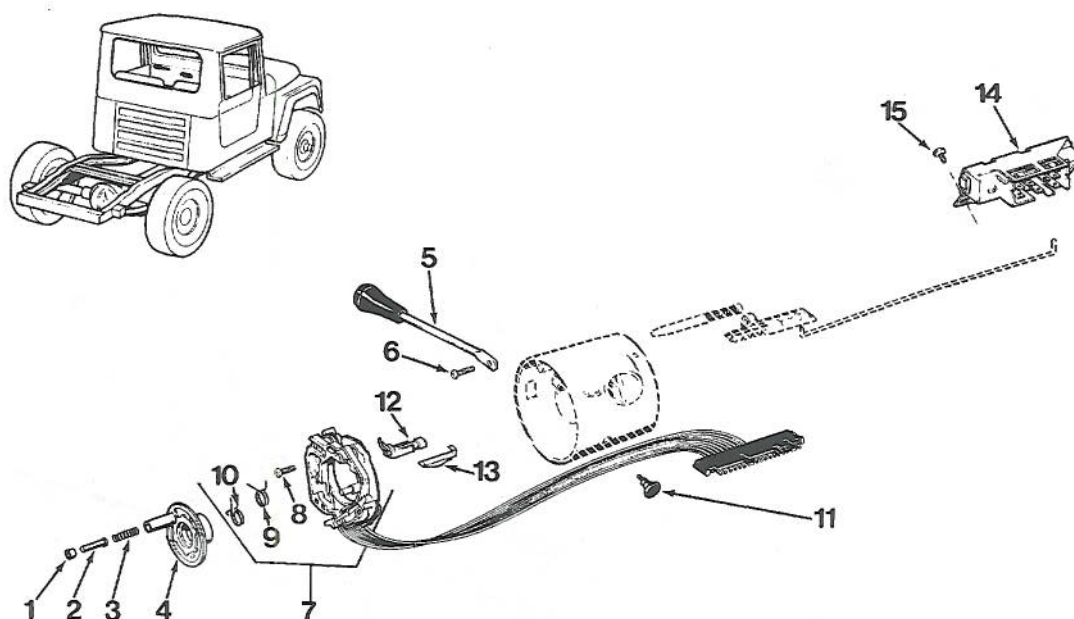

09916A

FIGURE 48. DIRECTIONAL, IGNITION AND HAZARD SWITCHES GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
48-	NO NUMBER	92871		DIRECTIONAL, IGNITION AND HAZARD SWITCHES GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	3187257	92871		RETAINER, CONTACT, HORN BLOWING	REF		PAFZZN
-2	3187249	92871		PIN, CENTER, CONTACT, HORN BLOWING	REF		PAFZZN
-3	3187255	92871		SPRING, CONTACT, HORN BLOWING	REF		PAFZZN
-4	4487816	92871		CAM, CANCELING, DIRECTIONAL SIGNAL SWITCH	1		PAFZZN
-5	5994430	92871		LEVER ASSEMBLY, DIRECTIONAL SIGNAL	1		PAFZZN
-6	4488318	92871		SCREW, LEVER TO SWITCH (AP)	1		PAFZZN
-7	3229970	92871		SWITCH, DIRECTIONAL SIGNAL	1		PAFZZN
-8	4488301	92871		SCREW, SWITCH TO HOUSING (AP)	3		PAFZZN
-9	8129335	92871		SPRING, CANCEL, UPPER, RIGHT TURN	1		PAFZZN
-10	8129317	92871		SPRING, CANCEL, LOWER, LEFT TURN	1		PAFZZN
-11	3238343	92871		KNOB, HAZARD WARNING	REF		PAFZZN
-12	3211423	92871		SWITCH, ALARM, IGNITION KEY	REF		PAFZZN
-13	4487713	92871		CLIP, RETAINING, ALARM SWITCH	REF		PAFZZN
-14	8128889	92871		SWITCH, ENGINE START	1		PAFZZN
-15	4487772	92871		SCREW, RETAINING, IGNITION SWITCH (AP)	1		PAFZZN

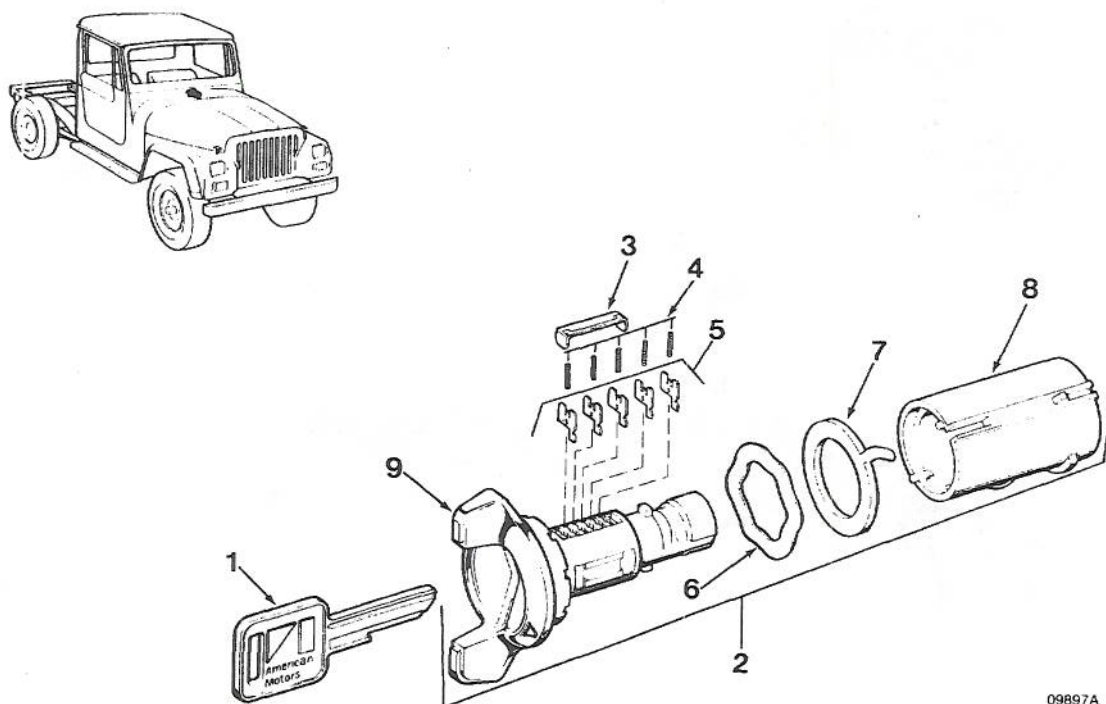

09897A

FIGURE 49. IGNITION SWITCH LOCK CYLINDER GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
49-	NO NUMBER	92871		IGNITION SWITCH LOCK CYLINDER. GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	3641914	42271		KEY, IGNITION SWITCH	1		XA
-2	5750016	92871		LOCK CYLINDER ASSEMBLY, IGNITION	1		PAFZZN
-3	4487675	92871		RETAINER, TUMBLERS	1		XA
-4	4487676	92871		SPRING, TUMBLERS	5		XA
-5	4487670	92871		TUMBLER, NUMBER ONE	1		XA
	4487671	92871		TUMBLER, NUMBER TWO	1		XA
	4487672	92871		TUMBLER, NUMBER THREE	1		XA
	4487673	92871		TUMBLER, NUMBER FOUR	1		XA
	4487674	92871		TUMBLER, NUMBER FIVE	1		XA
-6	4487660	92871		WASHER, WAVE, IGNITION CYLINDER	1		XA
-7	4487659	92871		RING, ANTITHEFT, CYLINDER	1		XA
-8	NO NUMBER	92871		CASE, IGNITION SWITCH (NOT SERVICED SEPARATELY)	1		
-9	NO NUMBER	92871		CYLINDER, IGNITION SWITCH (NOT SERVICED SEPARATELY)	1		


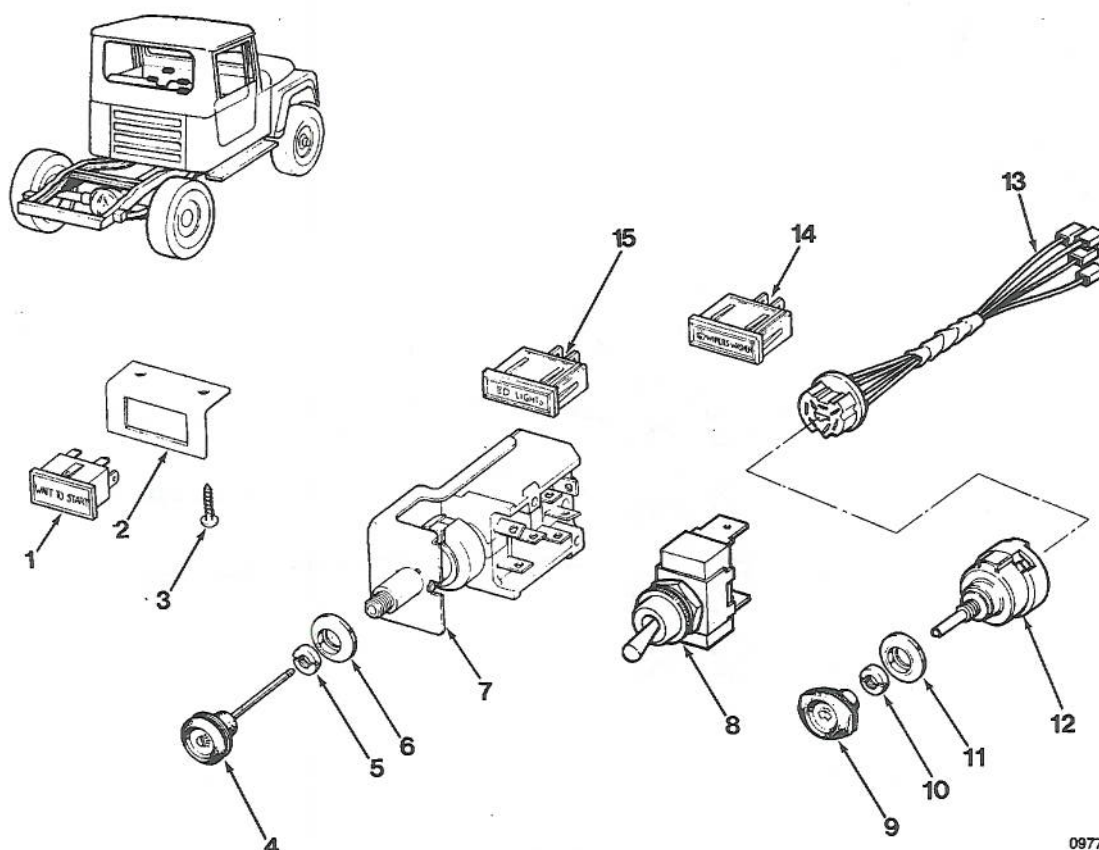


09772B

FIGURE 50. INSTRUMENT PANEL SWITCH GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
50-	NO NUMBER	92871		INSTRUMENT PANEL SWITCH GROUP.	REF		
-1	5995114	92871		LAMP ASSEMBLY, INDICATOR	1		PAFZZN
-2	5995129	92871		BRACKET, MOUNTING, INDICATOR.	1		XBFZZ
-3	8120052	92871		SCREW, MACHINE (AP).	2		PAFZZN
-4	5752810	92871		KNOB AND SHAFT ASSEMBLY, LIGHT	1		PAFZZN
-5	4000056	92871		NUT, ROUND, SPECIAL	1		PAFZZN
-6	987911	92871		BEZEL, SWITCH.	1		PAFZZN
-7	5751098	92871		SWITCH ASSEMBLY, LIGHT	1		PAFZZN
-8	8996000111	92871		SWITCH ASSEMBLY, FLOOD LIGHT	1		PAFZZN
-9	5459189	92871		KNOB ASSEMBLY, FAN AND	1		PAFZZN
				WINDSHIELD WIPER/WASHER			
-10	4000056	92871		NUT, ROUND, SPECIAL	1		PAFZZN
-11	987911	92871		BEZEL, SWITCH.	1		PAFZZN
-12	5758687	92871		SWITCH, WINDSHIELD WIPER	1		PAFZZN
-13	2032403	92871		HARNESS, WIRE.	1		PAFZZN
-14	5752814	92871		WINDOW ASSEMBLY, WINDSHIELD. . . .	1		PAFZZN
				WIPERS, WASHERS, IDENTIFICATION			
-15	5752813	92871		WINDOW ASSEMBLY, LIGHTS.	1		PAFZZN
				IDENTIFICATION			



NOTE: FIGURE 51 AND PARTS
LIST DELETED

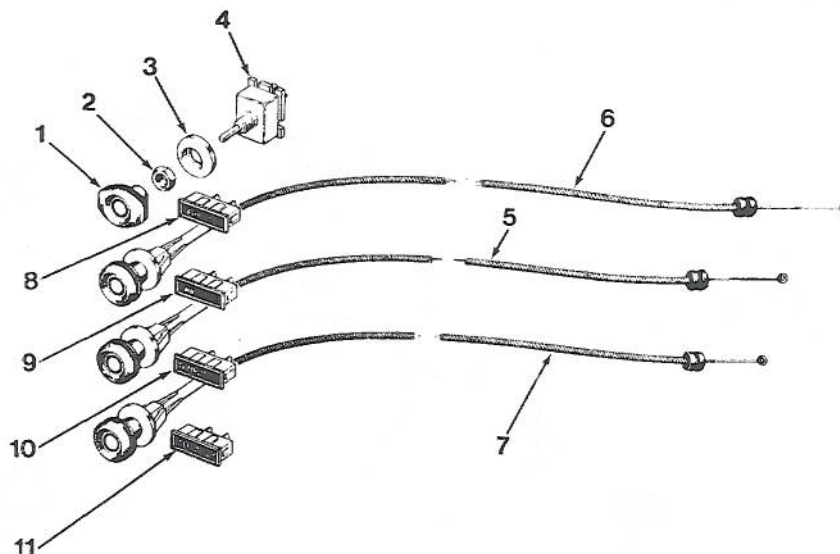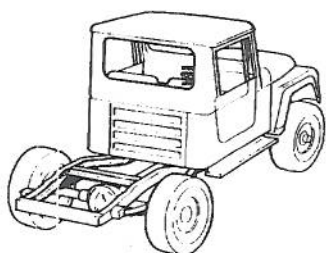

09783B

FIGURE 52. HEATER CONTROLS


FIG. & INDEX NO	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
52-	NO NUMBER	92871		HEATER CONTROLS.	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	5459189	92871		KNOB ASSEMBLY, FAN AND	REF		PAFZZN
				WINDSHIELD WIPER			
-2	4000056	92871		NUT, ROUND, SPECIAL	REF		PAFZZN
-3	987911	92871		BEZEL, SWITCH.	REF		PAFZZN
-4	5462784	92871		SWITCH ASSEMBLY, HEATER FAN.	1		PAFZZN
-5	5463656	34623		CONTROL ASSEMBLY, TEMPERATURE.	1		PAFZZN
				DUCT			
-6	5463657	42271		CONTROL ASSEMBLY, AIR DUCT	1		PAFZZN
-7	5463655	34623		CONTROL ASSEMBLY, DEFROST DUCT	1		PAFZZN
-8	5752818	92871		WINDOW ASSEMBLY, FAN.	1		PAFZZN
				IDENTIFICATION			
-9	5752815	92871		WINDOW ASSEMBLY, AIR.	1		PAFZZN
				IDENTIFICATION			
-10	5752816	92871		WINDOW ASSEMBLY, TEMPERATURE.	1		PAFZZN
				IDENTIFICATION			
-11	5752817	92871		WINDOW ASSEMBLY, DEFROSTER.	1		PAFZZN
				IDENTIFICATION			

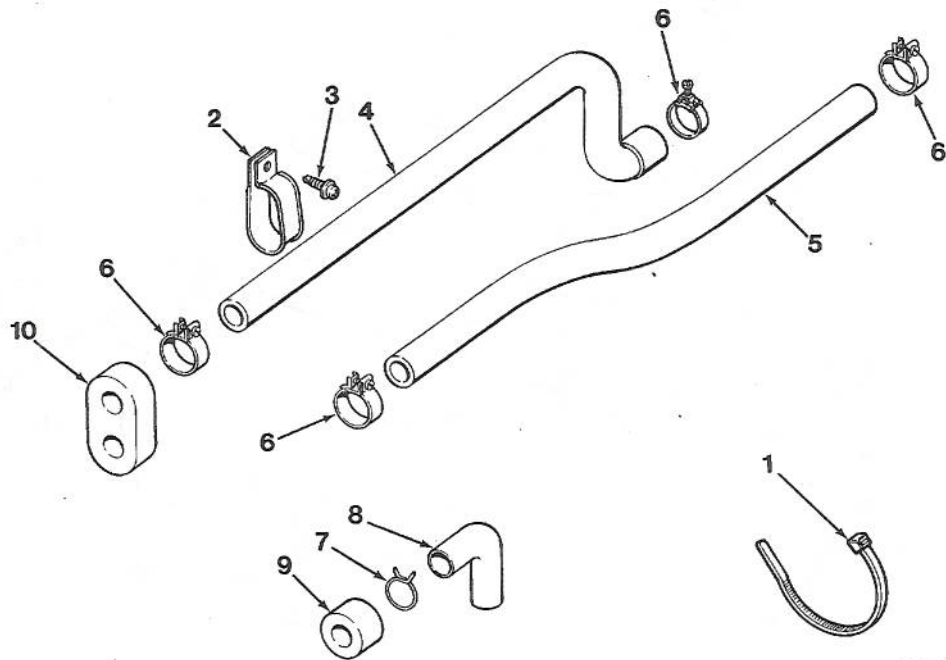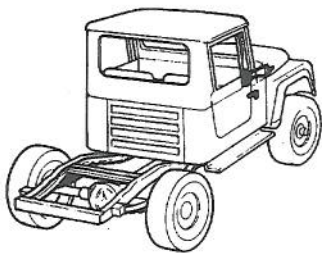

09781B

FIGURE 53. HEATER HOSE GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS USABLE		
					PER ASSY.	ON CODE	SMR CODE
53-	NO NUMBER	92871		HEATER HOSE GROUP. (SEE FIGURE 2 FOR NHA)		REF	
-1	3230270	92871		WRAP, TIE.	1		XBFZZ
-2	5460142	92871		CLIP, CLOSED, NO. 16	2		XBFZZ
-3	974764	92871		SCREW AND WASHER (AP)	1		XBFZZ
-4	3203739	92871		HOSE, HEATER	1		XBFZZ
-5	3203739	92871		HOSE, HDT WATER.	1		XBFZZ
-6	0443632	92871		CLAMP, HOSE (443632) (AP).	4		XBFZZ
-7	0272844	92871		CLAMP, HOSE (272844)	1		XBFZZ
-8	5463814	92871		HOSE, HEATER DRAIN	1		XBFZZ
-9	5462712	92871		SEAL, HEATER DRAIN TO DASH	1		XBFZZ
-10	5462711	92871		SEAL, HEATER CORE TO DASH.	1		XBFZZ

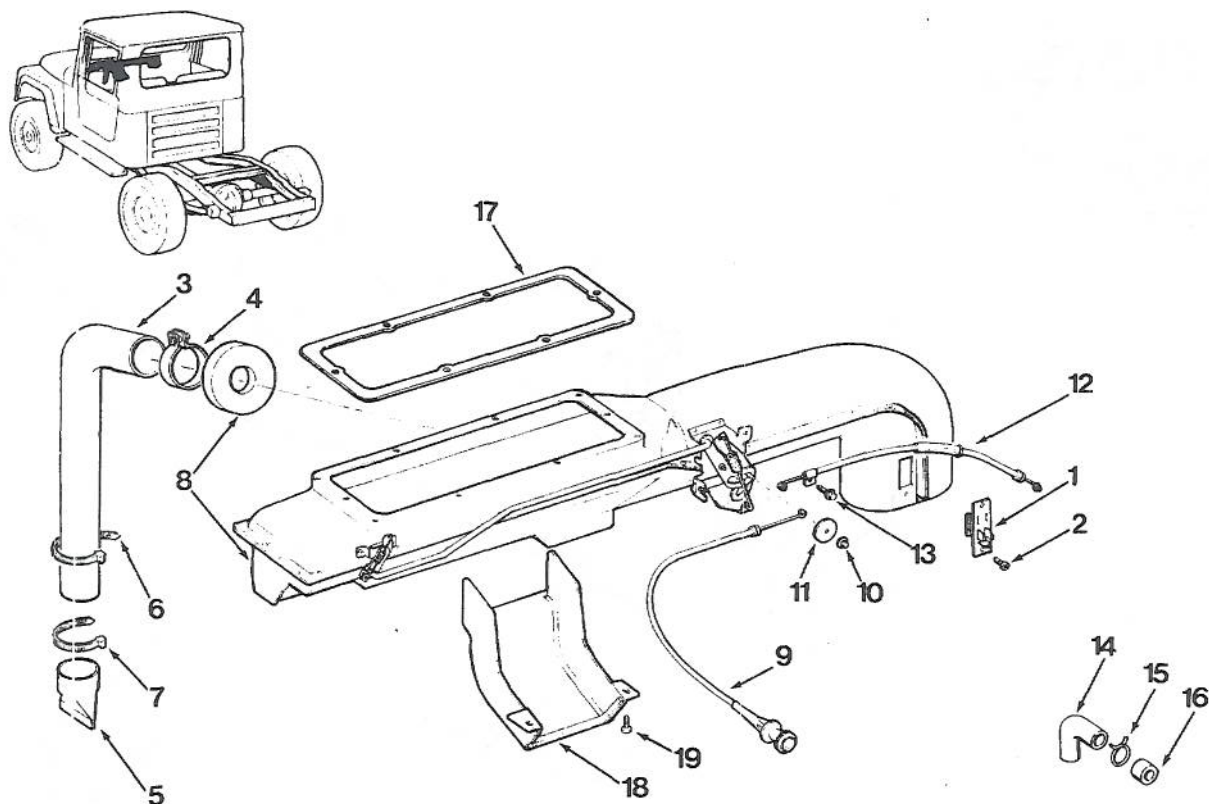

098328

FIGURE 54. FRESH AIR INTAKE GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
54-	NO NUMBER	92871		FRESH AIR INTAKE GROUP	REF		
-1	961042	92871		(SEE FIGURE 2 FOR NHA) RESISTOR (INCLUDED WITH ITEM 8)	1		XBFZZ
-2	4005522	92871		SCREW, MACHINE (INCLUDED WITH ITEM 8) (AP)	2		XBFZZ
-3	5463813	92871		HOSE, DRAIN, AIR DUCT	1		PAFZZN
-4	Q8500-M28S	08484		CLAMP, HOSE (AP)	1		XBFZZ
-5	987079	92871		CAP, DRAIN HOSE	1		PAFZZN
-6	4006101	92871		STRAP (AP)	2		XBFZZ
-7	3223227	92871		STRAP, TIE	1		PAFZZN
-8	5758809	92871		INLET AND VENT ASSEMBLY COMPLETE (INCLUDES ITEMS 1 AND 2)	1		XBFZZ
-9	5463657	42271		CONTROL ASSEMBLY, AIR DUCT	REF		PAFZZN
-10	4005533	92871		NUT, PUSH, CAP (AP)	1		PAFZZN
-11	4005897	92871		WASHER, PLASTIC (AP)	1		PAFZZN
-12	5463658	92871		CABLE, CONTROL, AIR VENT. ASSEMBLY	1		PAFZZN
-13	8120054	92871		SCREW, CAP, HEX HD (AP)	1		XBFZZ
-14	5463814	92871		HOSE, HEATER DRAIN	1		XBFZZ
-15	G272844	92871		CLAMP, VENT HOSE (272844) (AP)	1		XBFZZ
-16	5462712	92871		SEAL, HEATER DRAIN TO DASH	1		XBFZZ
-17	5462700	92871		GASKET, GRILLE TO COWL, TOP	1		XBFZZ
-18	5462731	92871		DEFLECTOR, AIR, LEFT VENT	1		XBFZZ
-19	4005817	92871		SCREW, MACHINE (AP)	3		PAFZZN

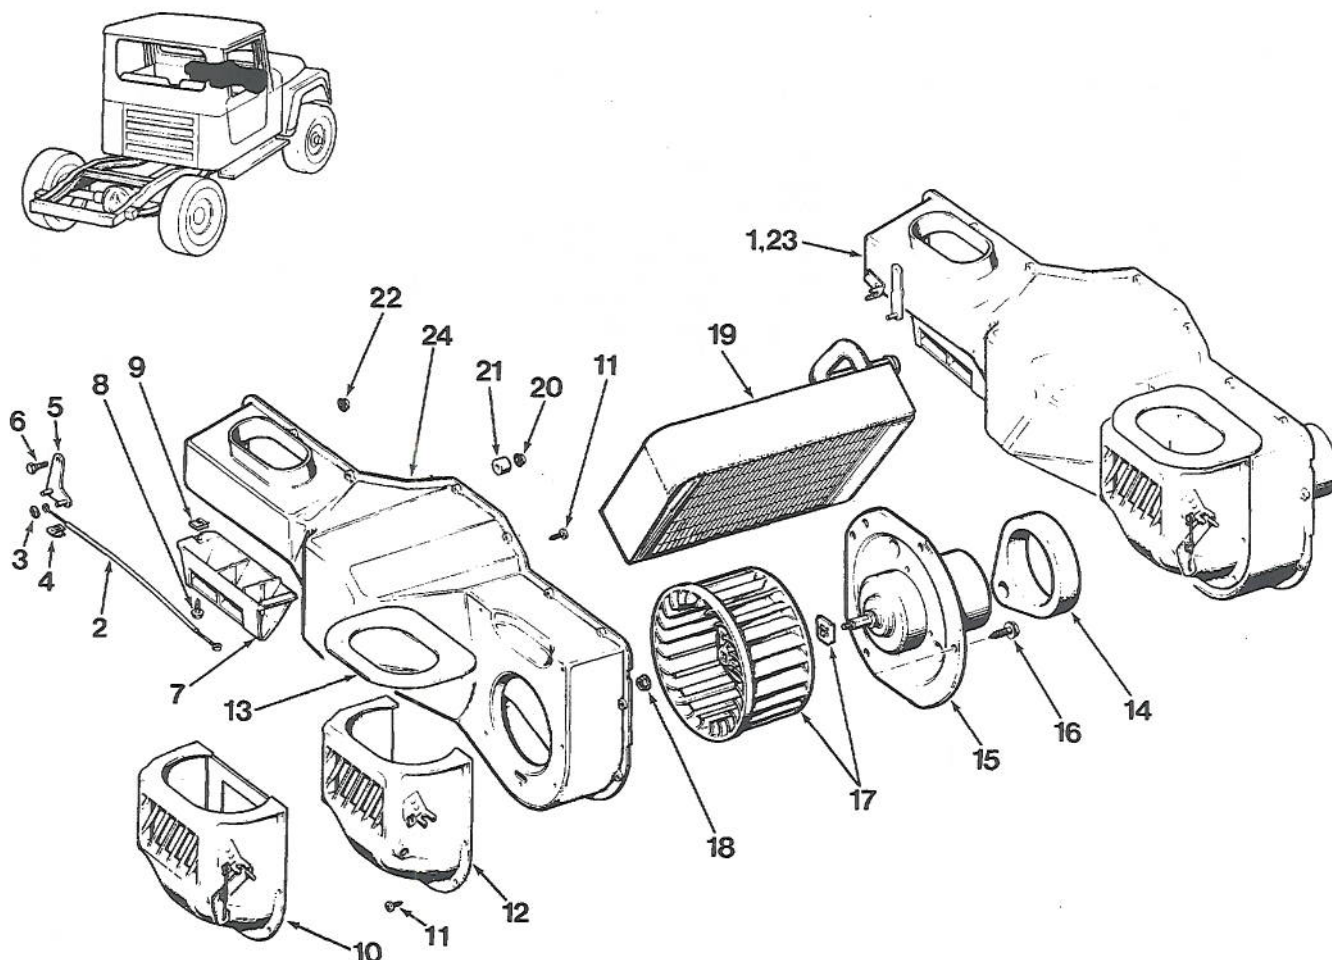


09859B

FIGURE 55. HEATER GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
55--	NO NUMBER	92871		HEATER GROUP	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	5469898	92871		. HEATER ASSEMBLY, COMPLETE.	1		AFFFF
-2	5462343	92871		. CONTROL ASSEMBLY, PUSH-PULL,	1		PAFZZN
				TEMPERATURE			
-3	4001714	92871		. NUT, PUSH ON (AP).	1		XBFZZ
-4	4005844	92871		. CLIP, SPEED (AP)	1		XBFZZ
-5	5462473	92871		. LINK AND PIVOT PIN ASSEMBLY	1		XBFZZ
-6	4005840	92871		. SCREW, CAP, HEX HD (AP)	1		XBFZZ
-7	5461575	92871		. ADAPTER, HEATER OUTLET	1		XBFZZ
-8	8120054	92871		. SCREW, MACHINE (AP).	6		XBFZZ
-9	4005843	92871		. NUT, U, SPRING.	1		XBFZZ
-10	8130000	92871		. INLET CASE ASSEMBLY, HEATER,	1		XBFZZ
				WITH DAMPER ASSEMBLY			
-11	4004566	92871		. SCREW, MACHINE (AP).	22		XBFZZ
-12	5462392	92871		. INLET CASE ASSEMBLY, HEATER,	1		XBFZZ
				LESS DAMPER			
-13	5463794	92871		. SEAL, AIR DUCT COWL TOP TO	1		XBFZZ
				HEATER			
-14	5462710	92871		. SEAL, BLOWER MOTOR AND TERMINAL.	1		XBFZZ
				TO DASH			
-15	5751827	92871		. MOTOR, BLOWER.	1		PAFZZN
-16	8120054	92871		. SCREW, MACHINE (AP).	6		XBFZZ
-17	8122174	92871		. FAN, BLOWER, WITH NUT	1		XBFZZ



FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
55-18	4200306	92871		NUT, PLAIN HEX (AP)	5		XBFZZ
-19	5469877	92871		CORE ASSEMBLY, HEATER	1		PAFZZN
-20	271172	24617		NUT, SELF-LOCKING (AP)	4		PAFZZN
-21	5462713	92871		SPACER, HEATER MOUNTING	4		XBFZZ
-22	271166	11862		NUT, PLAIN, ASSEMBLED WASHER	1		PAFZZN
-23	8129378	92871		HEATER ASSEMBLY, LESS CORE, FAN, MOTOR, MOTOR SUPPORT	1		XBFZZ
-24	5462352	92871		CASE, HEATER (NOT SERVICED SEPARATELY)	1		XA

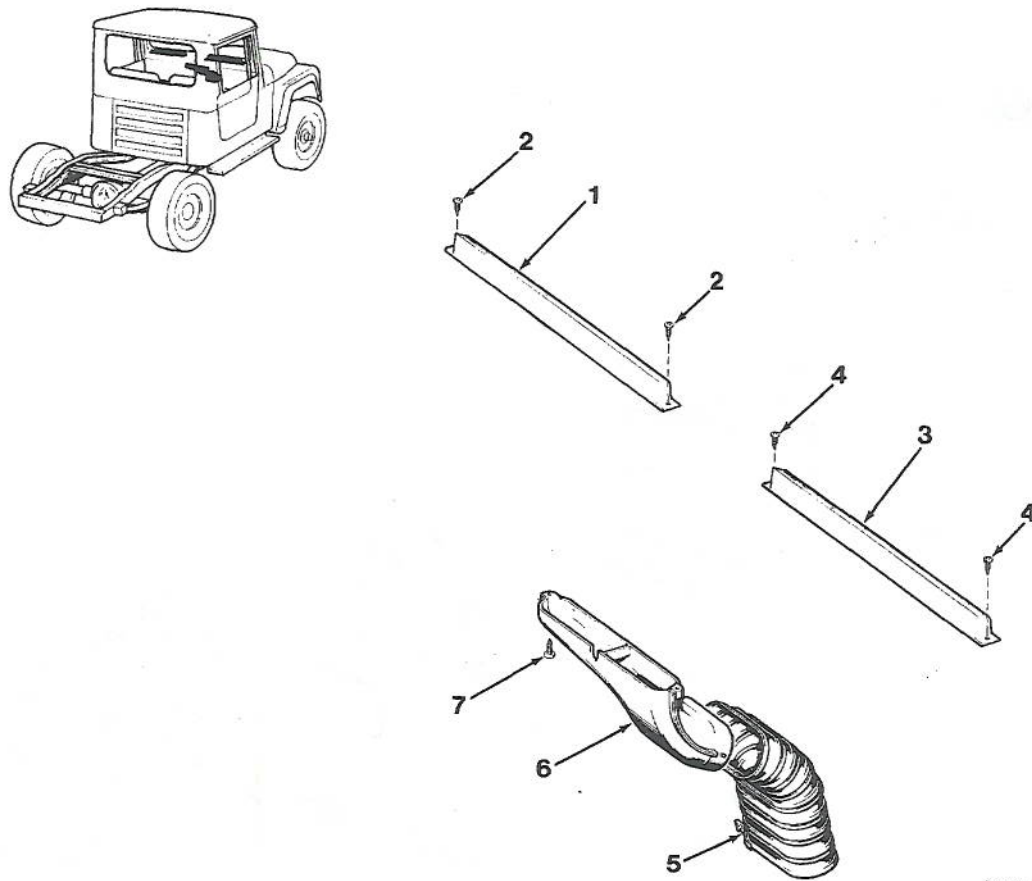

097808

FIGURE 56. DEFROSTER DUCT GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
56-	NO NUMBER	92871		DEFROSTER DUCT GROUP	REF		
-1	5750339	92871		(SEE FIGURE 2 FOR NHA) DEFLECTOR, AIR, WINDSHIELD.	1		PAFZZN
-2	8120052	92871		DEFROSTER, LEFT HAND SCREW, MACHINE (AP).	2		PAFZZN
-3	5750340	92871		DEFLECTOR, AIR, WINDSHIELD.	1		PAFZZN
-4	8120052	92871		DEFROSTER, RIGHT HAND SCREW, MACHINE (AP).	2		PAFZZN
-5	5462328	92871		HOSE, DEFROSTER DUCT	1		PAFZZN
-6	5461591	92871		NOZZLE, WINDSHIELD DEFROSTER	1		PAFZZN
-7	4005835	92871		SCREW, MACHINE (AP).	1		PAFZZN

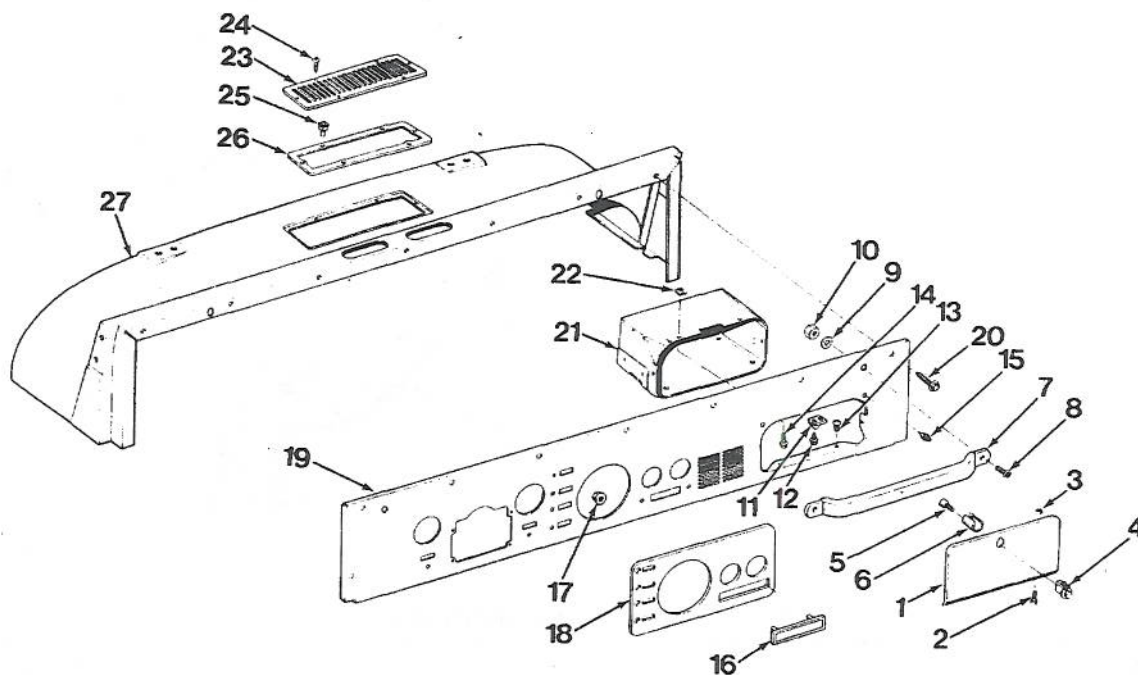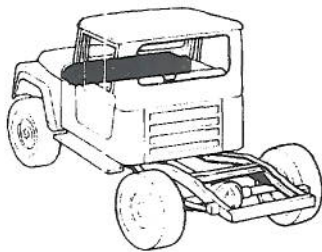


09893B

FIGURE 57. INSTRUMENT PANEL GROUP

FIG. 8 INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
57-	NO NUMBER	92871		INSTRUMENT PANEL GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	5764164	92871		DOOR, GLOVE BOX	1		XBFZZ
-2	6454783	92871		SCREW, TAPPING (454783) (AP)	2		PAFZZN
-3	MS35649-202	96906		NUT, PLAIN, HEX (AP)	2		PAFZZN
-4	5450252	92871		LOCK ASSEMBLY, GLOVE BOX DOOR	1		XBFZZ
-5	6450649	92871		SCREW AND WASHER (450649)	1		XBFZZ
-6	664843	92871		CLAMP, CUP	1		XBFZZ
-7	689311	92871		RAIL, SAFETY	1		XBFZZ
-8	4005600	92871		SCREW, TRUSS HEAD (AP)	2		XBFZZ
-9	664607	92871		WASHER, FLAT, SPECIAL (AP)	2		XBFZZ
-10	6271190	92871		NUT AND WASHER (271190) (AP)	2		XBFZZ
-11	5761531	92871		STRIKER, GLOVE BOX LOCK	1		XBFZZ
-12	6457002	92871		SCREW, PAN HEAD (457002) (AP)	2		PAFZZN
-13	69417333	92871		SCREW AND WASHER (9417333)	2		XBFZZ
-14	8120052	92871		SCREW, PAN HEAD	6		PAFZZN
-15	664836	92871		PLUG, BUMPER	2		XBFZZ
-16	5462707	92871		PLATE, COVER, RADIO	1		XBFZZ
-17	3209575	92871		NUT, HEX, FLANGED	2		XBFZZ
-18	5462709	92871		APPLIQUE, PANEL	1		XBFZZ

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
57-19	5763630	92871		PANEL ASSEMBLY, INSTRUMENT	1		XBFZZ
-20	4004991	92871		SCREW AND WASHER (AP)	12		PAFZZN
-21	5752279	92871		BOX ASSEMBLY, GLOVE	1		XBFZZ
-22	271166	11862		NUT, PLAIN, ASSEMBLED WASHER.	2		PAFZZN
-23	5462438	92871		GRILLE, COWL, TOP	1		XBFZZ
-24	4006403	92871		SCREW, PAN HEAD (AP)	6		XBFZZ
-25	974539	92871		NUT, TOGGLE (AP)	6		XBFZZ
-26	5462700	92871		GASKET, GRILLE	1		XBFZZ
-27	5758706	92871		PANEL ASSEMBLY, COWL	1		XBFZZ

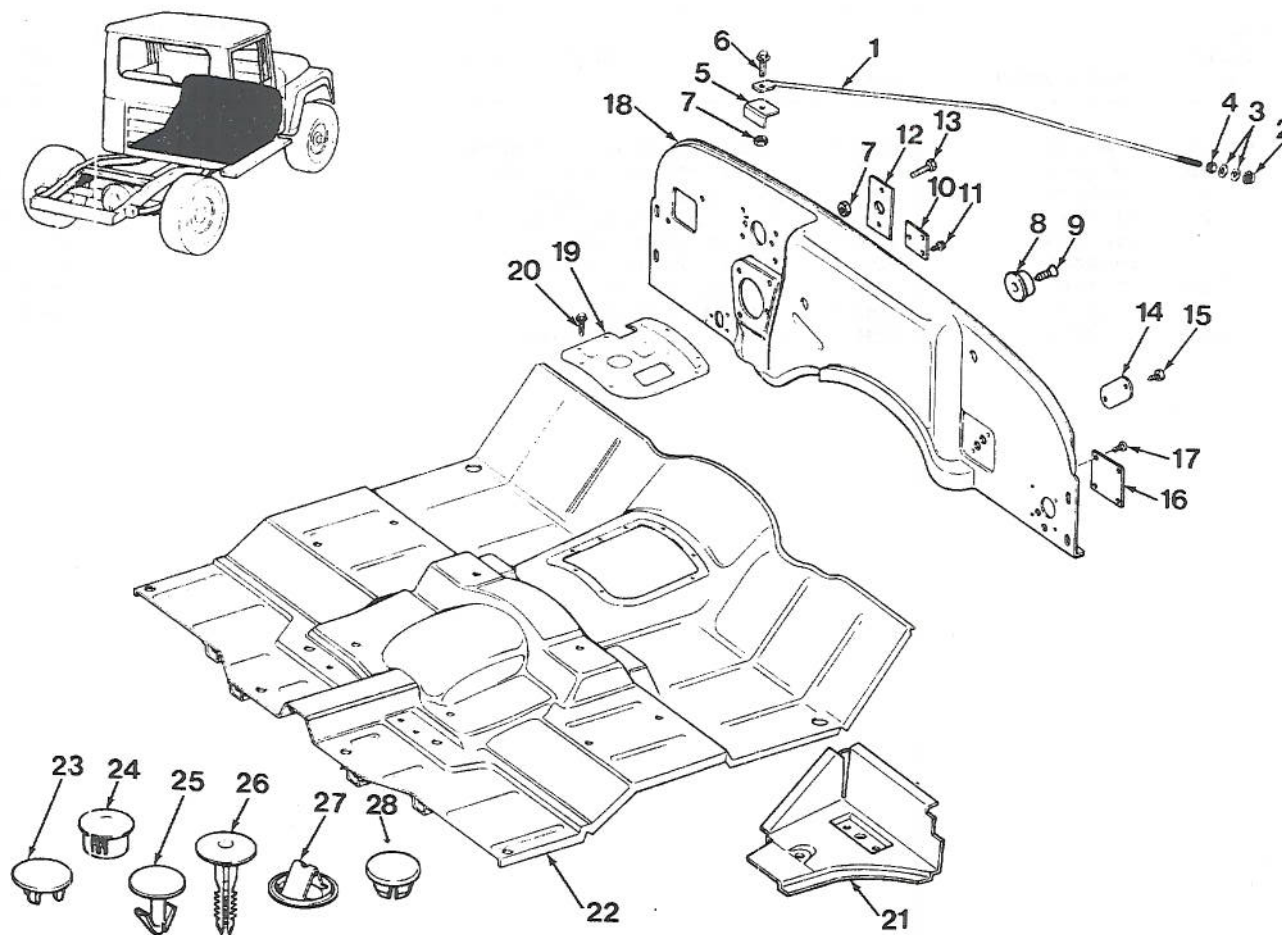


098878

FIGURE 5B. FLOOR PAN, COWL AND DASH PANEL GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
5B-	NO NUMBER	92871		FLOOR PAN, COWL AND DASH PANEL. GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	5994839	92871		TIE ROD, DASH TO AIR DEFLECTOR, LEFT HAND	1		XBFZZ
	5994360	92871		TIE ROD, DASH TO AIR DEFLECTOR, RIGHT HAND	1		XBFZZ
-2	G271190	92871		NUT AND WASHER (271190) (AP).	2		XBFZZ
-3	MS27183-14	96906		WASHER, FLAT (AP).	4		XBFZZ
-4	MS51967-8	96906		NUT, HEX (AP).	2		XBFZZ
-5	987066	92871		BRACKET, TIE ROD	2		XBFZZ
-6	G274474	92871		SCREW AND LOCK WASHER (274474). (AP)	2		XBFZZ
-7	120376	24617		NUT, PLAIN, HEX (AP).	4		PAFZZN
-8	8995000550	92871		PLATE, COVER	1		XBFZZ
-9	G9431948	92871		SCREW, HEX WASHER HEAD (9431948) (AP)	4		XBFZZ
-10	5459147	92871		PLATE, COVER, CLUTCH PUSH ROD	1		XBFZZ
-11	G163210	92871		SCREW, MACHINE (163210) (AP)	3		XBFZZ
-12	5764752	92871		BUMPER, HOOD STABILIZER.	2		XBFZZ
-13	B934201397	92871		SCREW AND WASHER.	2		XBFZZ
-14	5453638	92871		PLATE, COVER, AIR CONDITIONING. HOSE HOLE	1		XBFZZ
-15	4489487	92871		SCREW, PAN HEAD (AP)	2		XBFZZ


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
58-16	5462728	92871		. PLATE, COVER, HEATER BLOWER	1		XBFZZ
				. MOTOR			
-17	974764	92871		. SCREW AND WASHER.	4		XBFZZ
-18	5763510	92871		. PANEL ASSEMBLY, DASH	1		XBFZZ
-19	5751815	92871		. COVER ASSEMBLY, TRANSMISSION	1		XBFZZ
				. ACCESS			
-20	4006444	92871		. SCREW, PAN HEAD (AP)	8		XBFZZ
-21	5994379	92871		. BRACKET ASSEMBLY, BODY HOLD.	1		XBFZZ
				. DOWN LEFT HAND			
	5994380	92871		. BRACKET ASSEMBLY, BODY HOLD.	1		XBFZZ
				. DOWN RIGHT HAND			
-22	8995000566	92871		. PAN ASSEMBLY, FLOOR.	1		XBFZZ
-23	4005695	92871		. PLUG, BUTTON	AR		XBFZZ
-24	4007076	92871		. PLUG, BUTTON, . 56 DIAMETER.	1		XBFZZ
	4007053	92871		. PLUG, BUTTON, . 50 DIAMETER.	2		XBFZZ
	4006481	92871		. PLUG, BUTTON, 1. 20 DIAMETER	1		XBFZZ
-25	4004805	92871		. PLUG, BUTTON, . 375 DIAMETER	4		XBFZZ
-26	4004875	92871		. PLUG, MAT AND CARPET	4		PAFZZN
-27	4007054	92871		. PLUG, BUTTON, 1. 0 DIAMETER.	AR		XBFZZ
-28	4004949	92871		. PLUG, BUTTON	2		PAFZZN

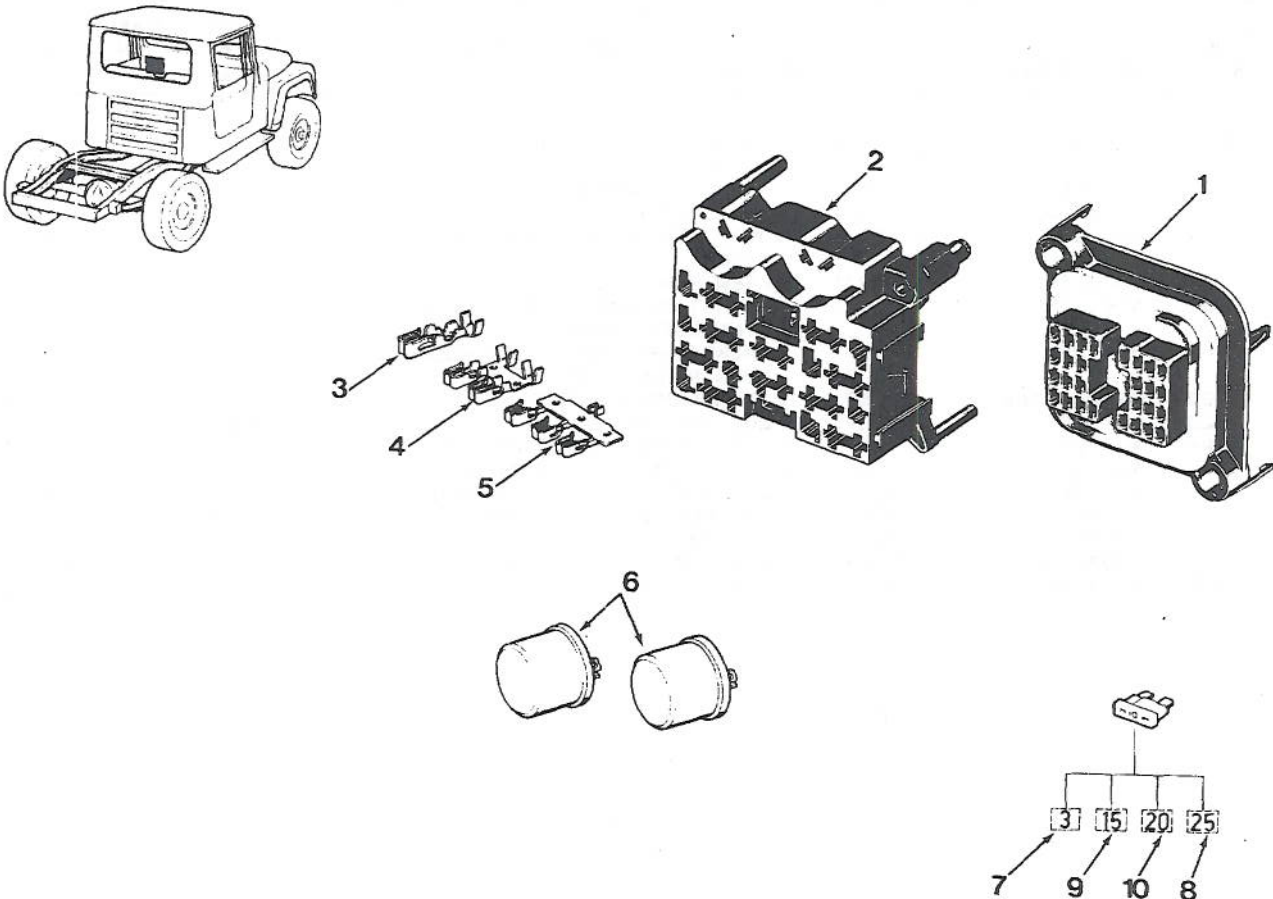

099158

FIGURE 59. FUSE PANEL AND PARTS GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
59-	NO NUMBER	92871		FUSE PANEL AND PARTS GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	3197995	92871		CONNECTOR, BULKHEAD.	1		XBFZZ
-2	4179456	92871		PANEL, FUSE.	1		XBFZZ
-3	3231223	92871		TERMINAL, FUSE PANEL, SINGLE.	11		XBFZZ
-4	3231224	92871		TERMINAL, FUSE PANEL, DOUBLE.	5		XBFZZ
-5	3231225	92871		TERMINAL, FUSE PANEL, TRIPLE.	1		XBFZZ
-6	5452266	92871		FLASHER, RELAY	2		PAFZZN
-7	3231211	92871		FUSE, 3 AMPERE	2		XBFZZ
-8	3231218	92871		FUSE, 25 AMPERE.	1		XBFZZ
-9	3231216	92871		FUSE, 15 AMPERE.	1		XBFZZ
-10	3231217	92871		FUSE, 20 AMPERE.	1		XBFZZ

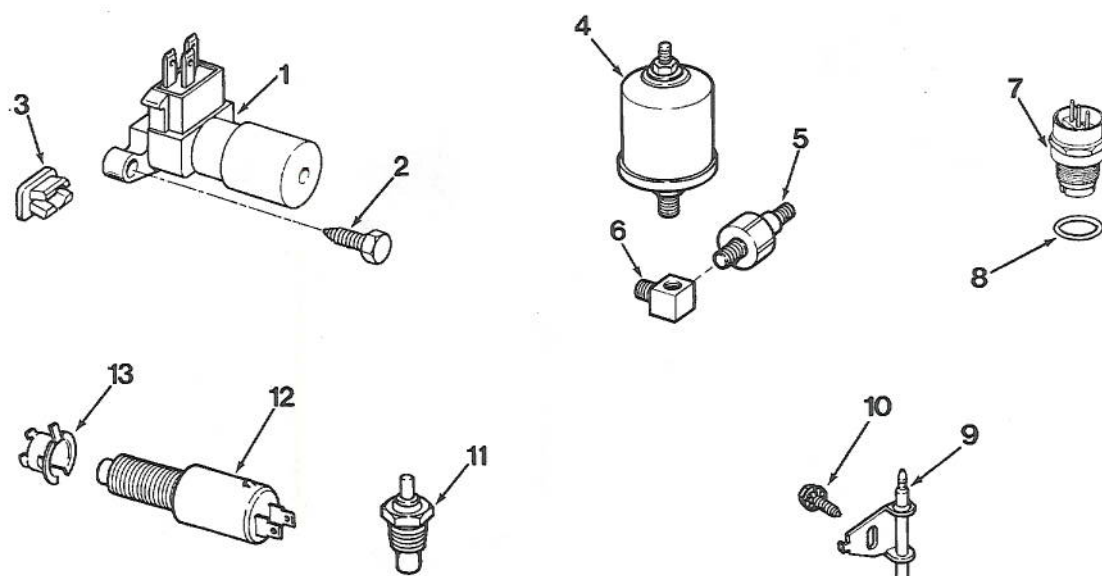

09898A

FIGURE 60. MISCELLANEOUS SWITCHES GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
60-	NO NUMBER	92871		MISCELLANEOUS SWITCHES GROUP	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	5461816	92871		SWITCH, FOOT DIMMER.	1		PAFZZN
-2	69415260	92871		SCREW, CAP, HEX HEAD (9415260). . . .	2		PAFZZN
				(AP)			
-3	4004959	92871		NUT, SNAP (AP)	2		PAFZZN
-4	3212004	34623		TRANSMITTER, PRESSURE.	1		PAFZZN
-5	8135016	92871		SWITCH, OIL PRESSURE	1		PAFZZN
-6	8135018	92871		FITTING, Y	1		PAFZZN
-7	3232844	92871		SWITCH, NEUTRAL SAFETY AND BACK. UP	1		PAFZZN
-8	8121142	92871		GASKET, NEUTRAL SAFETY SWITCH. . . .	1		PAFZZN
-9	3232194	92871		SWITCH ASSEMBLY, PARK BRAKE. . . .	1		PAFZZN
-10	4005559	92871		SCREW AND LOCK WASHER (AP).	1		PAFZZN
-11	3177594	42271		TRANSMITTER, TEMPERATURE	1		PAFZZN
-12	3194569	99343		SWITCH, ELECTRICAL	REF		PAFZZN
-13	5352622	92871		RETAINER, SWITCH (AP).	REF		PAFZZN

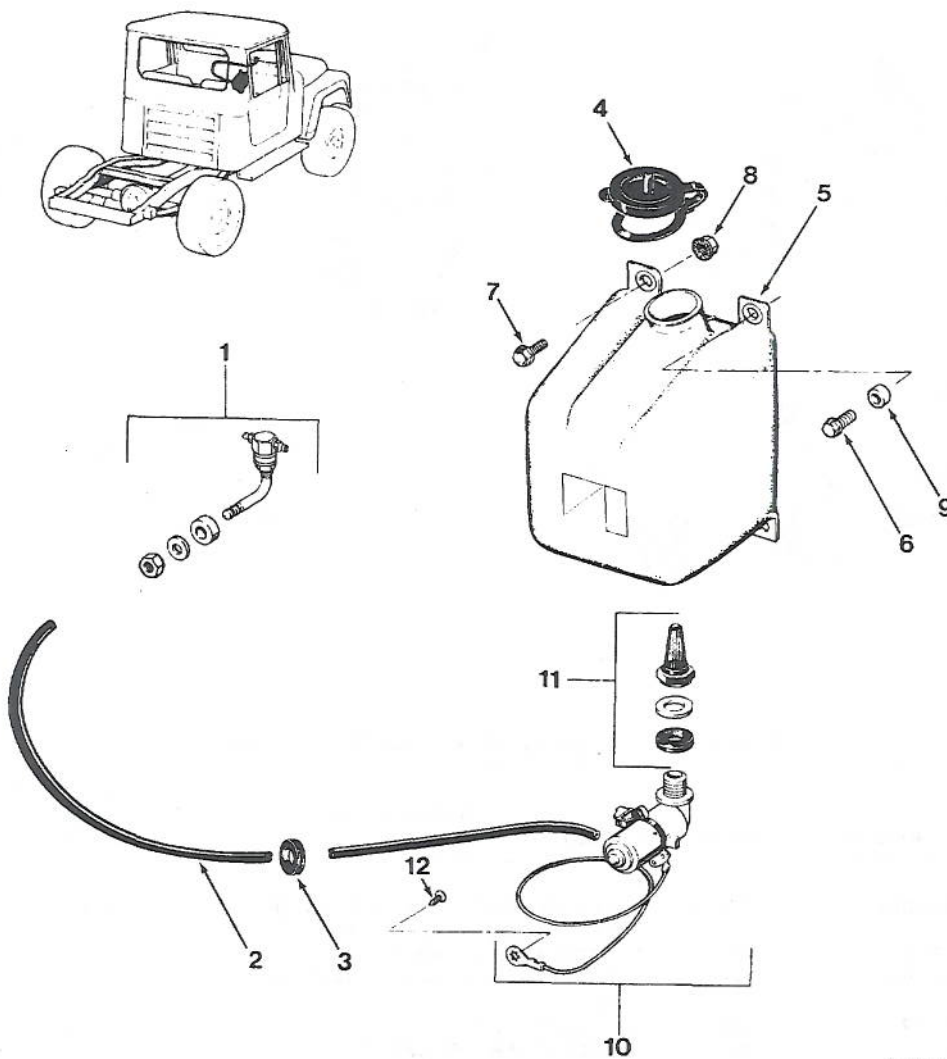

09776B

FIGURE 61. WINDSHIELD WASHER GROUP


FIG. & INDEX NO	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS USABLE		
					PER ASSY.	ON CODE	SMR CODE
61-	NO NUMBER	92871		WINDSHIELD WASHER GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	942794	92871		JET ASSEMBLY, DOUBLE WASHER.	1		PAFZZN
-2	8125811	92871		HOSE, WINDSHIELD WASHER.	1		PAFZZN
-3	3213963	92871		GROMMET, RUBBER.	1		XBFZZ
-4	4489483	92871		CAP, RESERVOIR	1		PAFZZN
-5	8121741	92871		RESERVOIR, WINDSHIELD WASHER	1		XBFZZ
-6	4006907	92871		BOLT, HEX, FLANGED HD (AP).	1		XBFZZ
-7	69432476	92871		SCREW, CAP, HEX HD (9432476). (AP)	2		XBFZZ
-8	271172	24617		NUT, SELF-LOCKING (AP)	3		PAFZZN
-9	4006614	92871		SPACER.	1		XBFZZ
-10	8121404	92871		PUMP ASSEMBLY, WINDSHIELD. WASHER	1		PAFZZN
-11	8121405	92871		FILTER, PUMP, WINDSHIELD WASHER.	1		XA
-12	8120052	92871		SCREW, MACHINE	1		PAFZZN

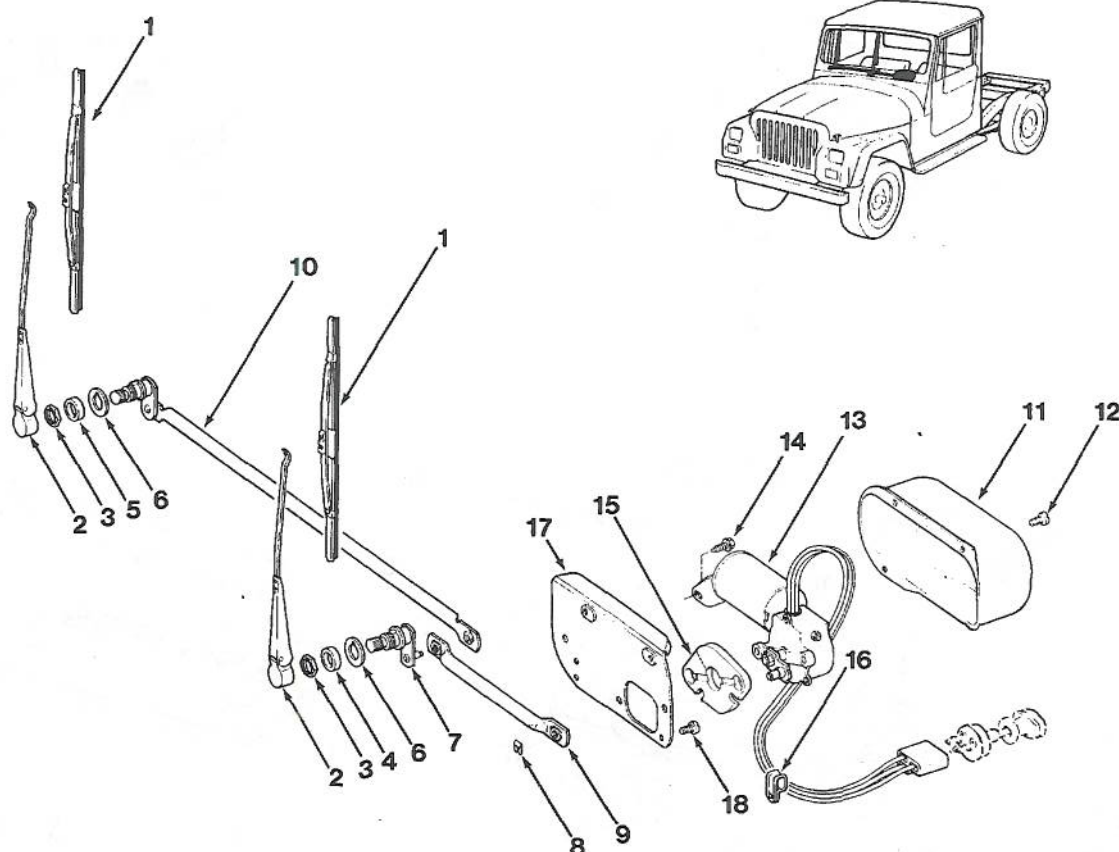

09775B

FIGURE 62. WINDSHIELD WIPER AND MOTOR GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
62-	NO NUMBER	92871		WINDSHIELD WIPER AND MOTOR GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	5762336	92871		BLADE ASSEMBLY, WINDSHIELD WIPER	2		PAFZZN
-2	5762337	92871		ARM ASSEMBLY, WINDSHIELD WIPER, BLACK	2		PAFZZN
-3	4005672	92871		NUT, PLAIN, HEX	2		XBFZZ
-4	5751149	92871		ESCUTCHEON, PIVOT, WINDSHIELD WIPER	1		XBFZZ
-5	5751144	92871		ESCUTCHEON, PIVOT, WINDSHIELD WIPER	1		XBFZZ
-6	5459081	92871		SPACER, OUTER	2		XBFZZ
-7	5453957	34623		LINK, PIVOT, WINDSHIELD	1		XBFZZ
-8	957868	42271		CLIP, SPRING TENSION	1		XBFZZ
-9	5453960	34623		LINK, WINDSHIELD WIPER	1		XBFZZ
-10	5453958	34623		BODY, WINDSHIELD WIPER	1		XBFZZ
-11	5453963	92871		COVER, MOTOR, WINDSHIELD WIPER	1		XBFZZ
-12	4005969	92871		SCREW, MACHINE (AP)	2		PAFZZN
-13	5763696	92871		MOTOR ASSEMBLY, WINDSHIELD WIPER	1		PAFZZN
-14	4005765	92871		SCREW, MACHINE (AP)	3		XBFZZ
-15	5459282	92871		GASKET, MOTOR	1		XBFZZ
-16	4005669	92871		CLAMP, FLAT, CLOSED	1		XBFZZ
-17	5756806	92871		PLATE ASSEMBLY, MOUNTING, MOTOR COVER	1		XBFZZ
-18	4005969	92871		SCREW, MACHINE (AP)	1		PAFZZN

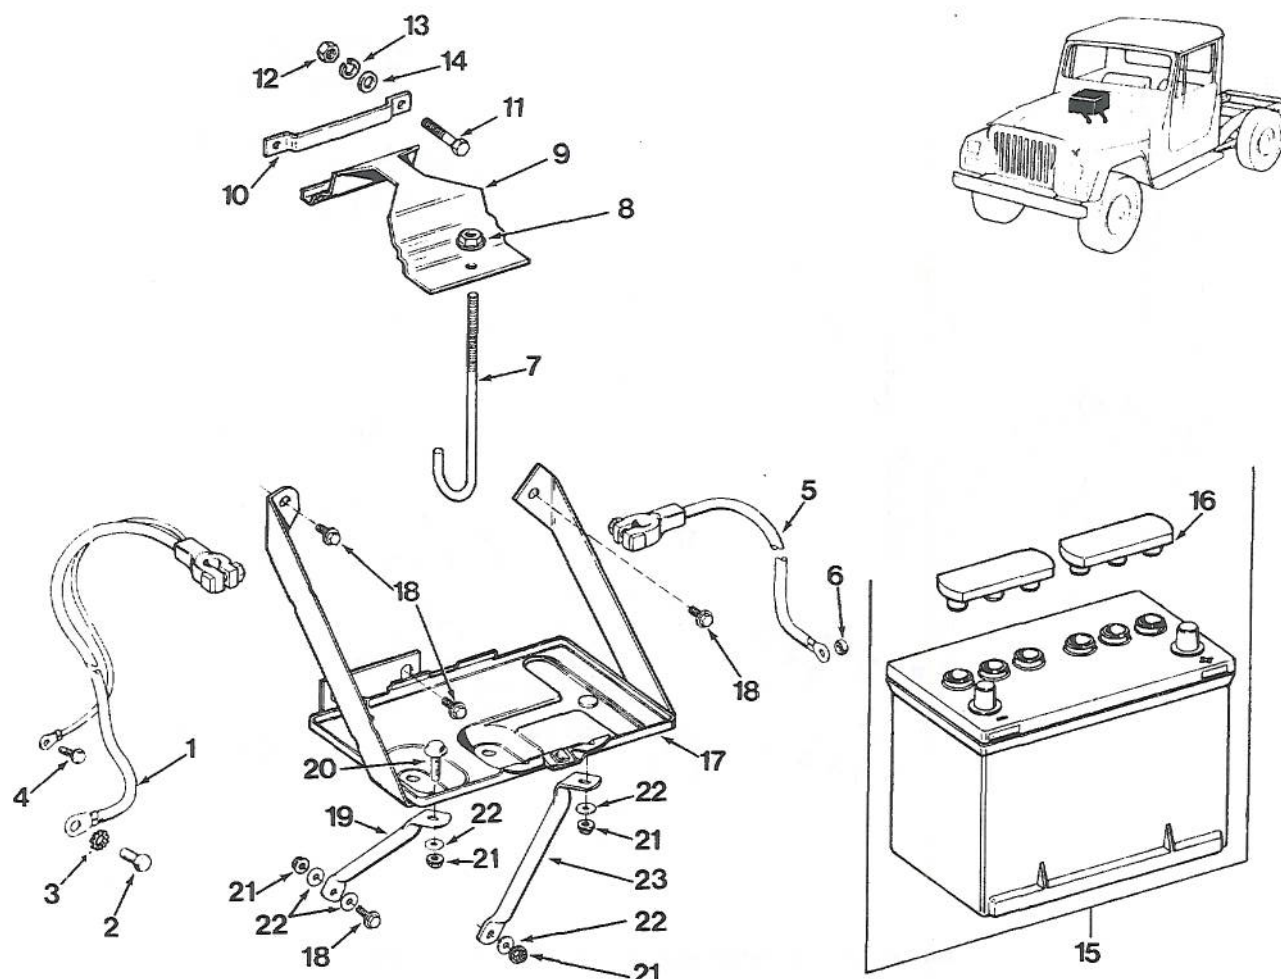


09889B

FIGURE 63. BATTERY AND MOUNTING GROUP

FIG. & INDEX NO	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
63-	NO NUMBER	92871		BATTERY AND MOUNTING GROUP	REF		
-1	5757433	92871		(SEE FIGURE 2 FOR NHA)			
-2	MS90725-32	96906		CABLE ASSEMBLY, GROUND	1		PAFZZN
-3	MS35335-35	96906		BOLT, MACHINE (AP)	1		XBFZZ
				WASHER, LOCK, EXTERNAL TOOTH.	1		XBFZZ
				(AP)			
-4	4004801	92871		SCREW AND LOCK WASHER (AP).	1		XBFZZ
-5	5995441	92871		CABLE ASSEMBLY, POSITIVE	1		PAFZZN
-6	G271187	92871		NUT AND WASHER (271187) (AP).	2		XBFZZ
-7	8051547	92871		BOLT, J, HOLD DOWN.	1		XBFZZ
-8	G273801	92871		NUT, HEX, LOCK (273801)	1		XBFZZ
-9	8051659	92871		BRACKET, HOLD DOWN	1		XBFZZ
-10	8051546	92871		LOOP, FOOTMAN.	1		XBFZZ
-11	G9419004	92871		SCREW, CAP, HEX HEAD (9419004).	2		XBFZZ
				(AP)			
-12	G273801	92871		NUT, HEX (273801) (AP)	2		XBFZZ
-13	MS27183-12	96906		WASHER, FLAT (AP).	2		PAFZZN
-14	4004894	92871		WASHER, FLAT (AP).	2		XBFZZ
-15	8993538	92871		BATTERY ASSEMBLY.	1		XBFZZ
-16	8134122	92871		CAP, BATTERY VENT	2		XBFZZ
-17	5764665	92871		TRAY ASSEMBLY, BATTERY	1		XBFZZ
-18	G273573	92871		SCREW, CAP, HEX HEAD (273573)	4		PAFZZN
				(AP)			


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
63-19	970432	92871		. BRACE, TRAY SUPPORT.	1		XBFZZ
-20	Q180077	92871		. SCREW, CAP, HEX HD (180077) (AP). . .	1		XBFZZ
-21	4004866	92871		. NUT, HEX (AP).	4		XBFZZ
-22	MS27183-12	96906		. WASHER, FLAT (AP).	4		PAFZZN
-23	986491	92871		. BRACE, TRAY SUPPORT.	1		XBFZZ

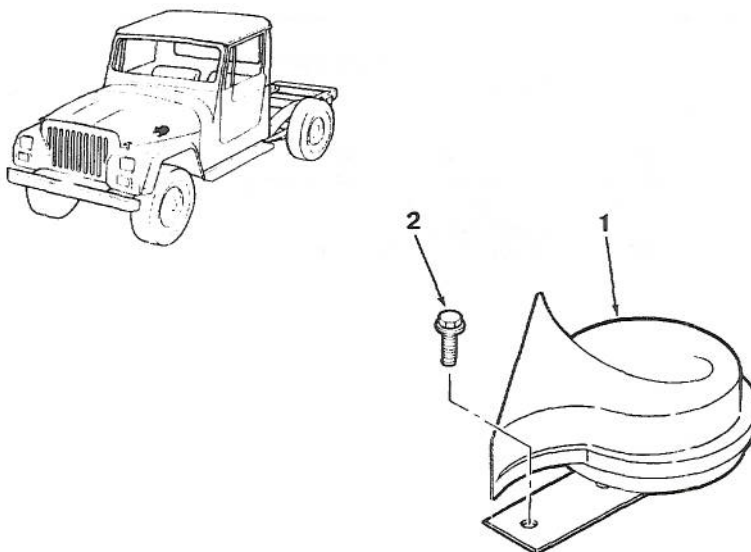

09819B

FIGURE 64. HORN GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
64-	NO NUMBER	92871		HORN GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	5994615	92871		HORN ASSEMBLY, LOW PITCH	1		XBZZ
-2	4004801	92871		SCREW AND WASHER (AP)	1		XBZZ

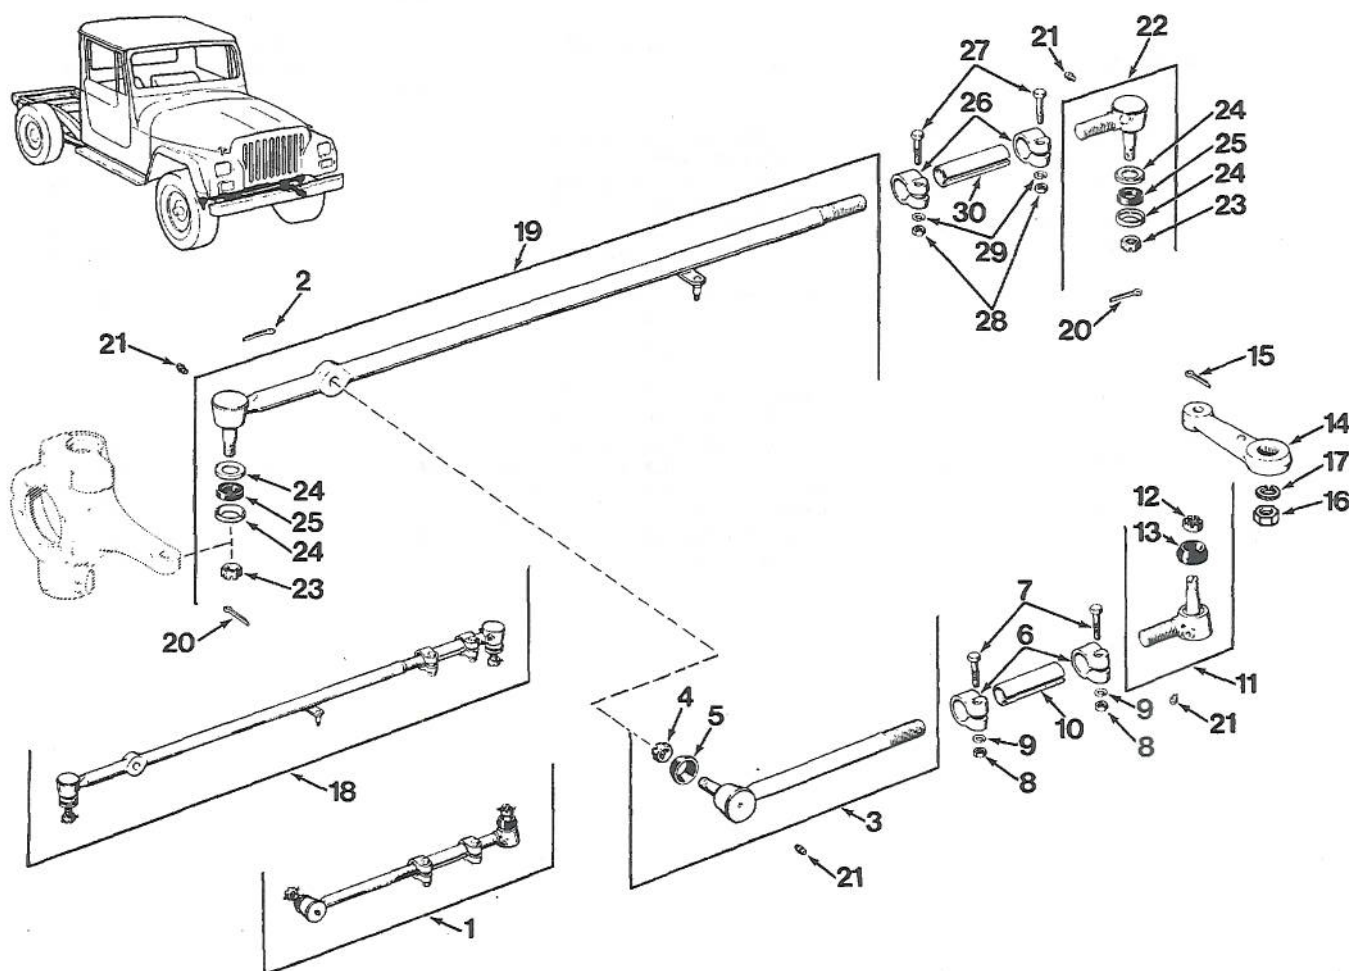


098548

FIGURE 65. STEERING LINKAGE GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
65-	NO NUMBER	92871		STEERING LINKAGE GROUP	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	5352163	92871		. ROD ASSEMBLY, CONNECTING,	1		PAFZZN
-2	Q137190	92871		. PIN, COTTER (137190) (AP).	1		PAFZZN
-3	8123315	92871		. END ASSEMBLY, PITMAN ARM TO	1		XA
				STEERING ARM TIE ROD			
-4	8123318	92871		. NUT, SLOTTED, HEX (AP)	1		XA
-5	8123317	92871		. COVER, DUST, TIE ROD END	1		XA
-6	806746	92871		. CLAMP, TIE ROD ADJUSTING TUBE	2		XA
-7	Q181404	92871		. SCREW, CAP, HEX HD (181404) (AP)	2		XA
-8	Q271505	92871		. NUT, PLAIN, HEX (271505) (AP).	2		XA
-9	MS35338-47	96906		. WASHER, LOCK (AP)	2		XA
-10	8123320	92871		. TUBE, LINKAGE TIE ROD ADJUSTING	1		XA
-11	8123319	92871		. END ASSEMBLY, PITMAN ARM TO	1		XA
				STEERING ARM TIE ROD			
-12	8123318	92871		. NUT, SLOTTED, HEX (AP)	1		XA
-13	8123317	92871		. COVER, DUST, TIE ROD END	1		XA
-14	5352278	92871		. ARM, POWER STEERING.	1		PAFZZN
-15	Q137190	92871		. PIN, COTTER (137190) (AP).	1		PAFZZN
-16	3200501	92871		. NUT, PLAIN, HEX (AP).	1		XBFZZ
-17	MS35338-52	96906		. WASHER, LOCK (AP).	1		XBFZZ


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
65-1B	5352665	92871		ROD ASSEMBLY, STEERING ARM TO	1		PAFZZN
				STEERING ARM TIE			
-19	8124816	92871		END ASSEMBLY, STEERING ARM TO	1		PAFZZN
				STEERING ARM TIE ROD			
-20	MS24665-355	96906		PIN, COTTER (AP)	2		PAFZZN
-21	G271287	92871		FITTING, LUBRICATION (271287)	4		PAFZZN
				(AP)			
-22	8124617	92871		END ASSEMBLY, STEERING ARM TO	1		XA
				STEERING ARM TIE ROD			
-23	8124818	92871		NUT, PLAIN, HEX (AP)	2		XA
-24	8124820	92871		WASHER, FLAT (AP)	4		XA
-25	8124821	92871		COVER, DUST, STEERING ARM TO	2		XA
				STEERING ARM TIE ROD END			
-26	806746	92871		CLAMP, TIE ROD ADJUSTING TUBE	2		XA
-27	G181404	92871		SCREW, CAP, HEX HD (181404) (AP)	2		XA
-28	G271505	92871		NUT, PLAIN, HEX (271505) (AP)	2		XA
-29	G120383	92871		WASHER, LOCK (120383) (AP)	2		XA
-30	8124819	92871		TUBE, STEERING LINKAGE TIE ROD	1		XA
				ADJUSTING			

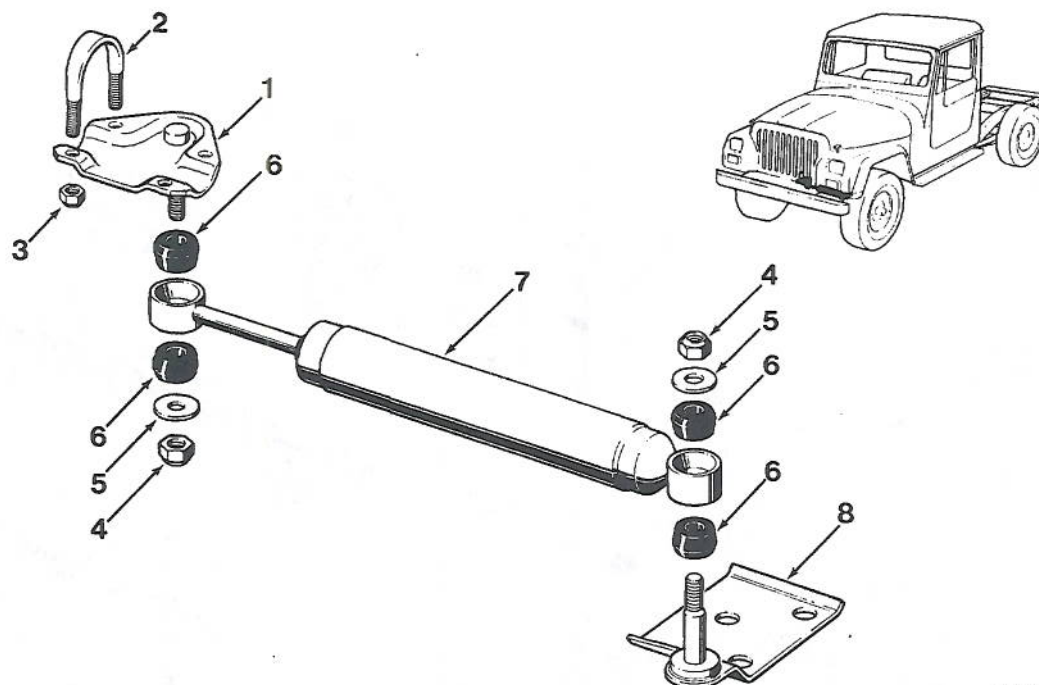

09803A

FIGURE 66. STEERING DAMPER GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
66-	NO NUMBER	92871		STEERING DAMPER GROUP.	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	5353384	92871		. BRACKET ASSEMBLY, STEERING	1		XBFZZ
-2	940121	92871		. DAMPER TIE ROD			
-3	69416531	92871		. BOLT, U (AP)	2		XBFZZ
		92871		. NUT, SELF-LOCKING, HEX (9416531).	4		PAFZZN
				(AP)			
-4	69413215	92871		. NUT, HEX, LOCK (9413215) (AP)	2		XBFZZ
-5	MS27183-17	96906		. WASHER, FLAT (FA12010291) (AP)	2		PAFZZN
-6	HB779	31033		. BUSHING, RUBBER.	4		PAFZZN
-7	16123	31033		. SHOCK ABSORBER, DIRECTIONAL.	1		PAFZZN
-8	5359695	92871		. BRACKET ASSEMBLY, STEERING	1		XBFZZ
				DAMPER			

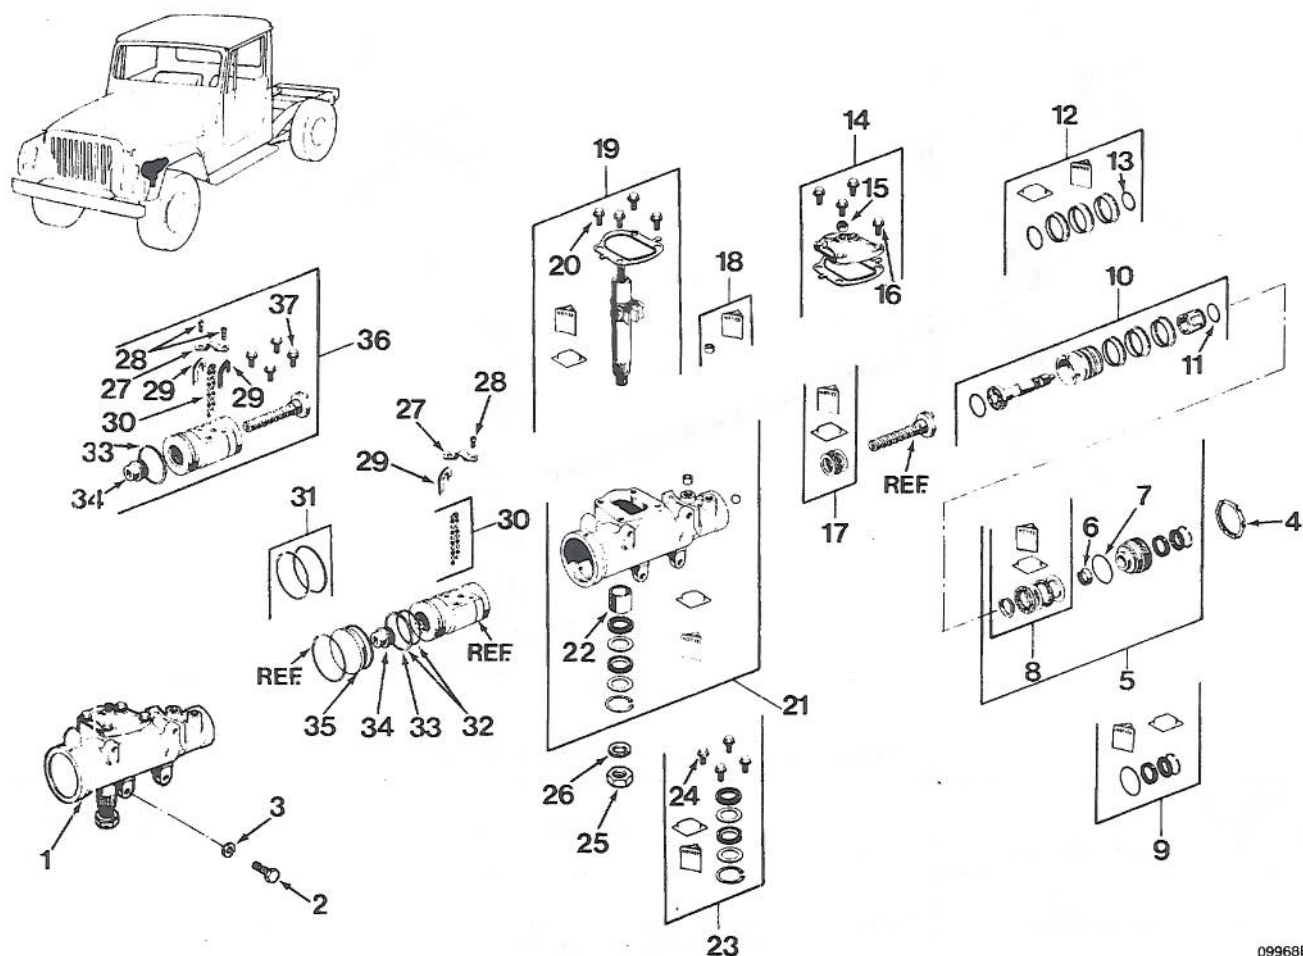


09968B

FIGURE 67. STEERING GEAR COMPONENTS GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
67-	NO NUMBER	92871		STEERING GEAR COMPONENTS GROUP	REF		
				(PARTS KIT AVAILABLE) (SEE FIGURE 2 FOR NHA)			
-1	7839049	52788		. GEAR ASSEMBLY, STEERING, POWER.	1		PAFZZN
				(5363231)			
-12	4005612	92871		. SCREW, CAP, SPECIAL, 4. 50 LONG	1		XA
				(AP)			
	4005613	92871		. SCREW, CAP, SPECIAL, 5. 50 LONG	1		XA
				(AP)			
	G9424069	92871		. SCREW, CAP, HEX HEAD, 1. 25 LONG.	2		XA
				(9424069) (AP)			
-3	4004943	92871		. WASHER, SPECIAL, . 448 DIAMETER.	2		XA
				(AP)			
	4004809	92871		. WASHER, LOCK, . 440 DIAMETER (AP).	2		XA
-4	5690698	52788		. NUT, LOCK, ADJUSTER PLUG	1		XA
				(8128427)			
-5	7817725	52788		. KIT, PLUG ASSEMBLY, ADJUSTER	1		XA
				(8125035) (K32)			
-6	B146X0H	60380		. BEARING, NEEDLE, ROLLER	1		XA
-7	5686527	52788		. SEAL, PLAIN (8126247).	1		XA
-8	4037634	86403		. PARTS KIT, STEERING (K33).	1		XA
-9	7828565	52788		. KIT, SEAL, ADJUSTER PLUG	1		XA
				(3204824) (K34)			


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
67-10	7810897	23862		.. VALVE ASSEMBLY, STEERING GEAR . . . (8121746)	1		
-11	7807845	52788		... SEAL, PLAIN (8126250).	1		XA
-12	5687182	52788		.. PARTS KIT, STEERING (3204833) . . . (K35)	1		XA
-13	7807845	52788		... SEAL, PLAIN (8126250).	1		XA
-14	F102377	44185		.. PARTS KIT, COVER (K36).	1		XA
-15	5687973	52788		... NUT, SELF-LOCKING (3204818).	1		XA
-16	7816516	52788		... BOLT, MACHINE (8124191).	4		XA
-17	7826850	52788		.. BEARING ASSEMBLY (8127645) (K37)	1		XA
-18	7834284	52788		.. KIT, CHECK VALVE (8132538). (K38)	1		XA
-19	7813631	52788		.. SHAFT ASSEMBLY, STEERING. (8122958) (K39)	1		XA
-20	7816516	23862		... SCREW, CAP, HEX HEAD (8124191).	4		XA
-21	7834131	52788		.. KIT, HOUSING ASSEMBLY, GEAR. (8132537) (K40)	1		XA
-22	5697804	52788		... BEARING, ROLLER, NEEDLE (4487154)	1		XA
-23	7826470	11862		.. SEAL, PITMAN SHAFT (8134568). (K41)	1		XA
-24	7816516	52788		... BOLT, MACHINE (8124191).	4		XA
-25	5667628	52788		... NUT, PLAIN, HEX (3200501).	1		XA
-26	MS35338-52	96906		.. WASHER, LOCK.	1		XBFZZ
-27	5686539	52788		.. STRAP, RETAINING (3204812).	1		XA
-28	5696151	52788		.. SCREW AND WASHER (3207057) (AP)	2		XA
-29	5686540	52788		.. GUIDE, BALL RETURN (940707)	2		XA
-30	102263	05415		.. PARTS KIT, STEERING (K42)	1		XA
-31	7817485	52788		.. PARTS KIT, STEERING (8125037) (K43)	1		XA
-32	366773	78640		.. PARTS KIT, STEERING (K44)	1		XA
-33	5689008	52788		.. RING, RACK PISTON (3204814)	1		XA
-34	7817355	52788		.. PLUG, END, RACK-PISTON (8127965)	1		XA
-35	5689010	52788		.. PLUG, HOUSING END (3204820)	1		XA
-36	7829123	52788		.. KIT, RACK-PISTON-NUT (8134372). (K45)	1		XA
-37	7816516	52788		... BOLT, MACHINE (8124191).	4		XA

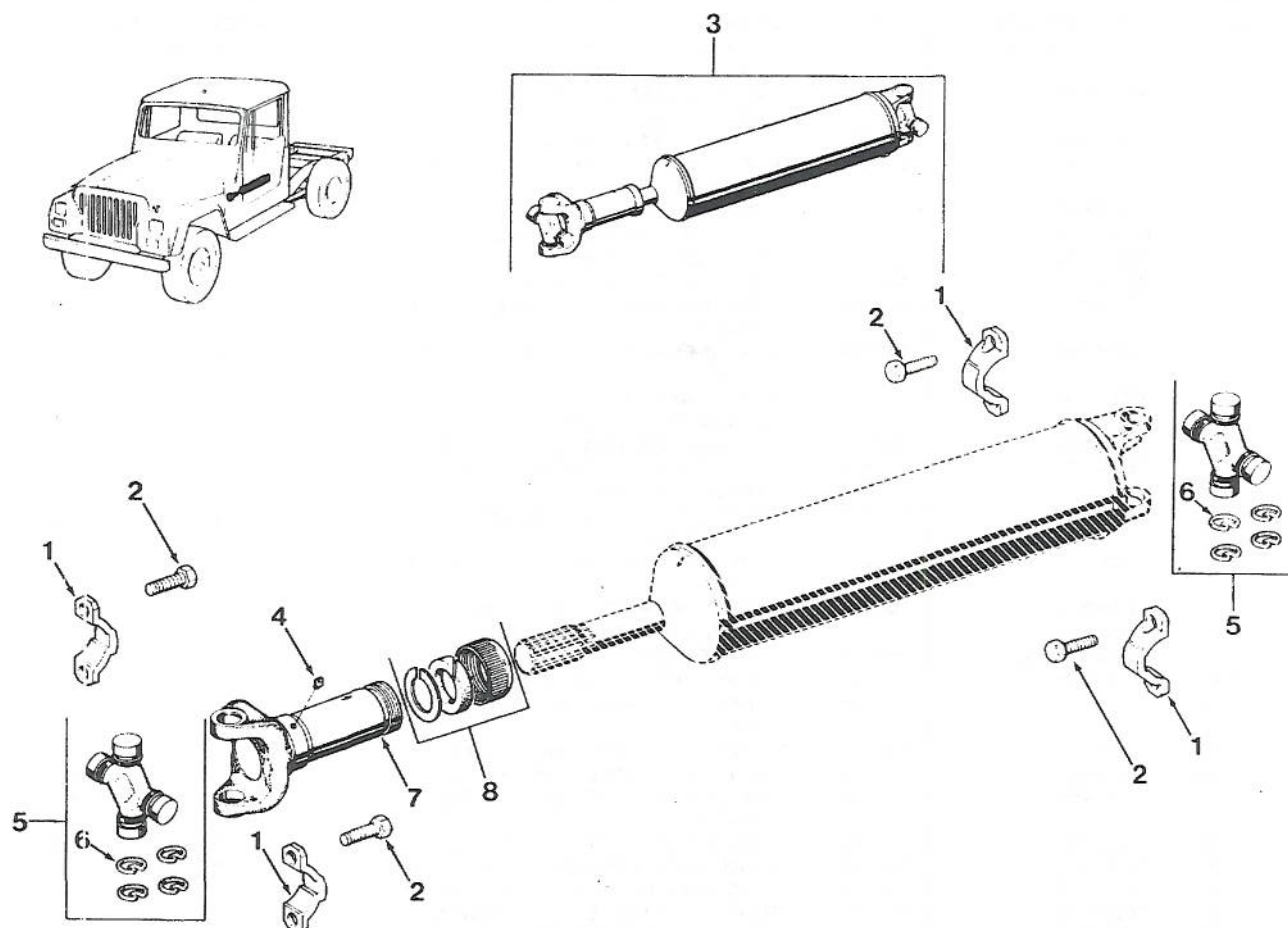

098008

FIGURE 68. REAR PROPELLER SHAFT GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
68-	NO NUMBER	92871		REAR PROPELLER SHAFT GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	3240553	92871		STRAP, BEARING ASSEMBLY.	4		XBFZZ
-2	4006691	92871		SCREW, CAP, HEX HD (AP)	8		XBFZZ
-3	8993000025	92871		SHAFT ASSEMBLY, PROPELLER, REAR	1		PAFZZN
-4	6271287	92871		FITTING, LUBRICATION (271287)	1		PAFZZN
-5	8126614	92871		SPIDER ASSEMBLY, REAR PROPELLER SHAFT	2		PAFZZN
-6	3207886	92871		RING, RETAINING, PROPELLER SHAFT. UNIVERSAL JOINT	AR		XBFZZ
-7	934878	92871		YOKE, REAR PROPELLER SHAFT.	1		XBFZZ
-8	8128447	92871		SEAL KIT, REAR PROPELLER SHAFT.	1		PAFZZN

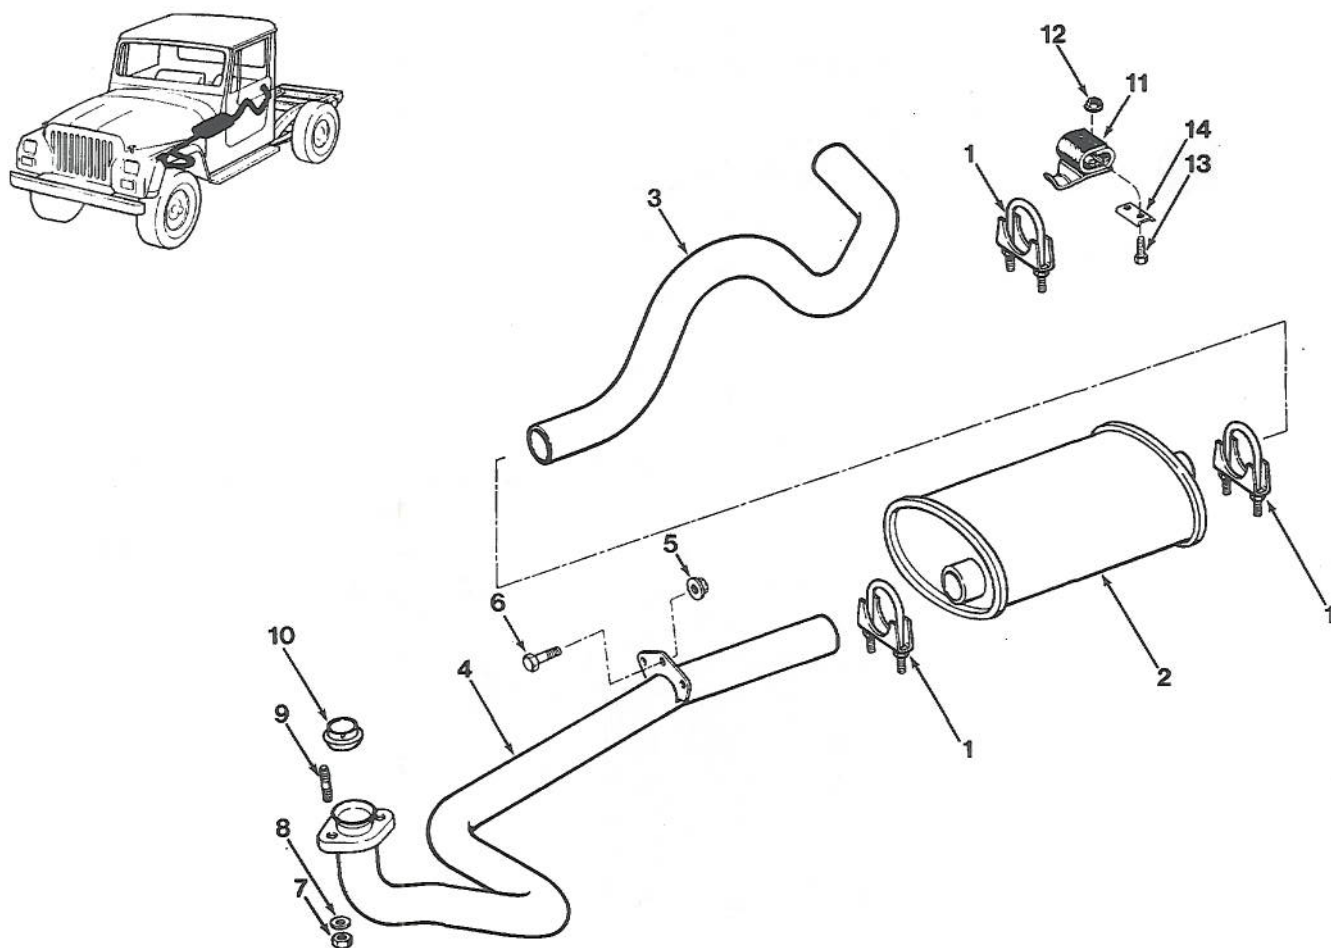

09789B

FIGURE 69. EXHAUST SYSTEM


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
69-	NO NUMBER	92871		EXHAUST SYSTEM	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	8126663	92871		. CLAMP, EXHAUST	3		XBFZZ
-2	5361747	92871		. MUFFLER, EXHAUST	1		PAFZZN
-3	8992000064	92871		. TAILPIPE ASSEMBLY	1		PAFZZN
-4	8992000063	92871		. PIPE ASSEMBLY, EXHAUST, FRONT	1		PAFZZN
-5	4005142	92871		. NUT, HEX, FLANGED (AP)	1		XBFZZ
-6	MS90725-67	96906		. SCREW, CAP, HEX HD (AP)	1		XBFZZ
-7	4200318	92871		. NUT, LOCK, HEX, SPECIAL (AP)	2		XBFZZ
-8	G11500273	92871		. WASHER, FLAT (11500273) (AP)	2		XBFZZ
-9	8134582	92871		. STUD, MOUNTING, EXHAUST PIPE	2		XBFZZ
				(AP)			
-10	5994993	92871		. GASKET, EXHAUST PIPE	1		PAFZZN
-11	5363088	92871		. INSULATOR AND BRACKET	1		PAFZZN
				ASSEMBLY, TAILPIPE			
-12	G9413447	92871		. NUT, SELF-LOCKING, HEX (9413447)	2		XBFZZ
				(AP)			
-13	MS90725-36	96906		. SCREW, CAP, HEX HD (AP)	2		XBFZZ
-14	5358978	92871		. PLATE, REINFORCEMENT	1		XBFZZ

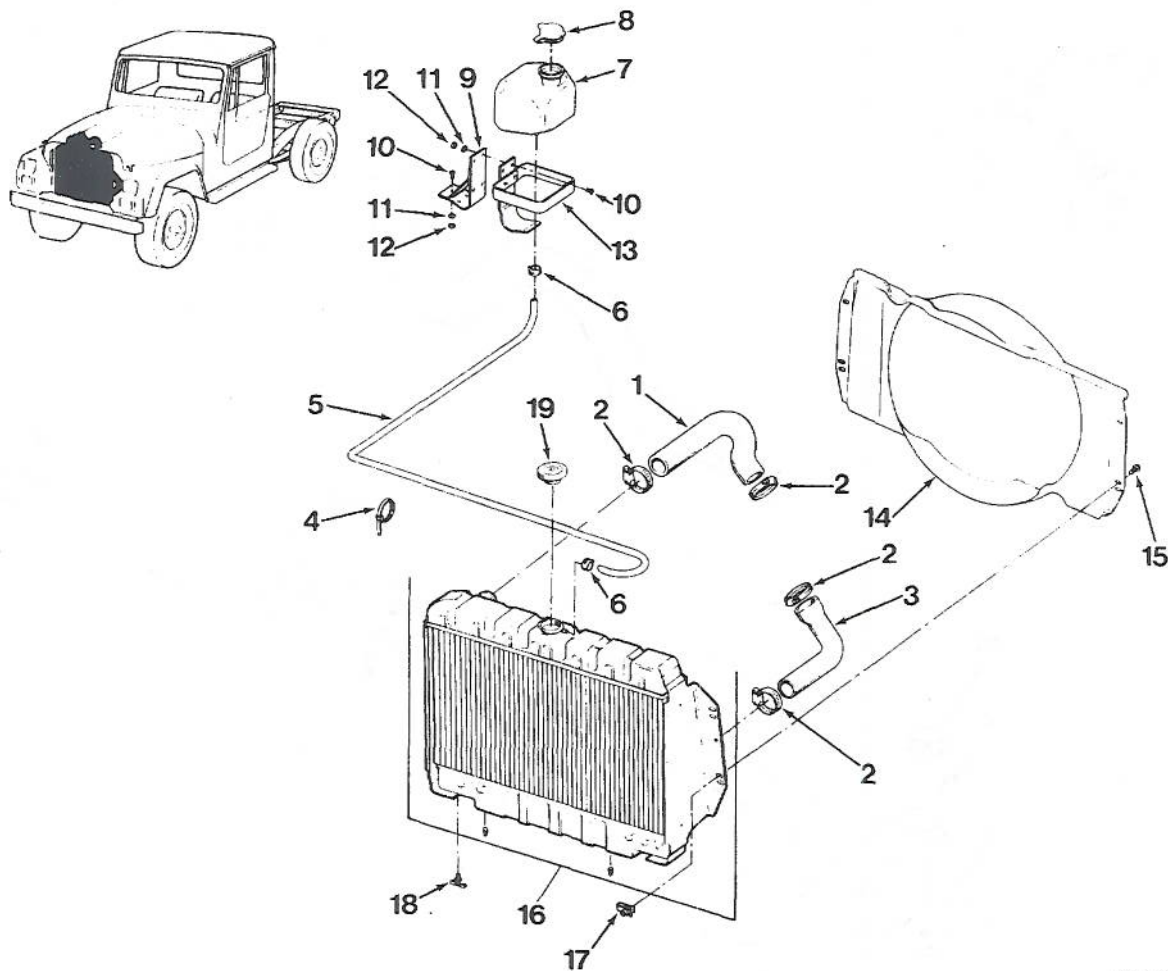

09857B

FIGURE 70. RADIATOR, HOSE AND COOLANT RECOVERY GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
70-	NO NUMBER	92871		RADIATOR, HOSE AND COOLANT. RECOVERY GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	5994605	92871		HOSE, RADIATOR INLET	1		PAFZZN
-2	08500-M285	08484		CLAMP, HOSE (AP)	4		XBFZZ
-3	5994604	92871		HOSE, RADIATOR, LOWER	1		PAFZZN
-4	3223227	92871		STRAP, HOSE, RETAINING	1		PAFZZN
-5	5363169	92871		HOSE, COOLANT RECOVERY	1		XBFZZ
-6	4006502	92871		CLAMP, HOSE (AP)	2		XBFZZ
-7	5900582	92871		RESERVOIR, COOLANT RECOVERY	1		XBFZZ
-8	3220312	92871		CAP, COOLANT RESERVOIR	1		XBFZZ
-9	5994959	92871		BRACKET ASSEMBLY, RESERVOIR	1		XBFZZ
-10	0155937	92871		SCREW, MACHINE (155937) (AP)	7		XBFZZ
-11	09421021	92871		WASHER, LOCK (9421021) (AP)	7		XBFZZ
-12	MS35649-202	76906		NUT, PLAIN, HEX (AP)	7		PAFZZN
-13	5900415	92871		BRACKET, RESERVOIR MOUNT	1		XBFZZ
-14	5994598	92871		SHROUD, RADIATOR	1		XBFZZ
-15	4005095	92871		SCREW AND WASHER (AP)	4		XBFZZ
-16	5995007	92871		RADIATOR ASSEMBLY	1		XBFZZ
-17	4004208	92871		NUT, SPRING, U.	4		XBFZZ
-18	5359274	92871		COCK, DRAIN	1		XBFZZ
-19	5358177	92871		CAP, RADIATOR	1		PAFZZN

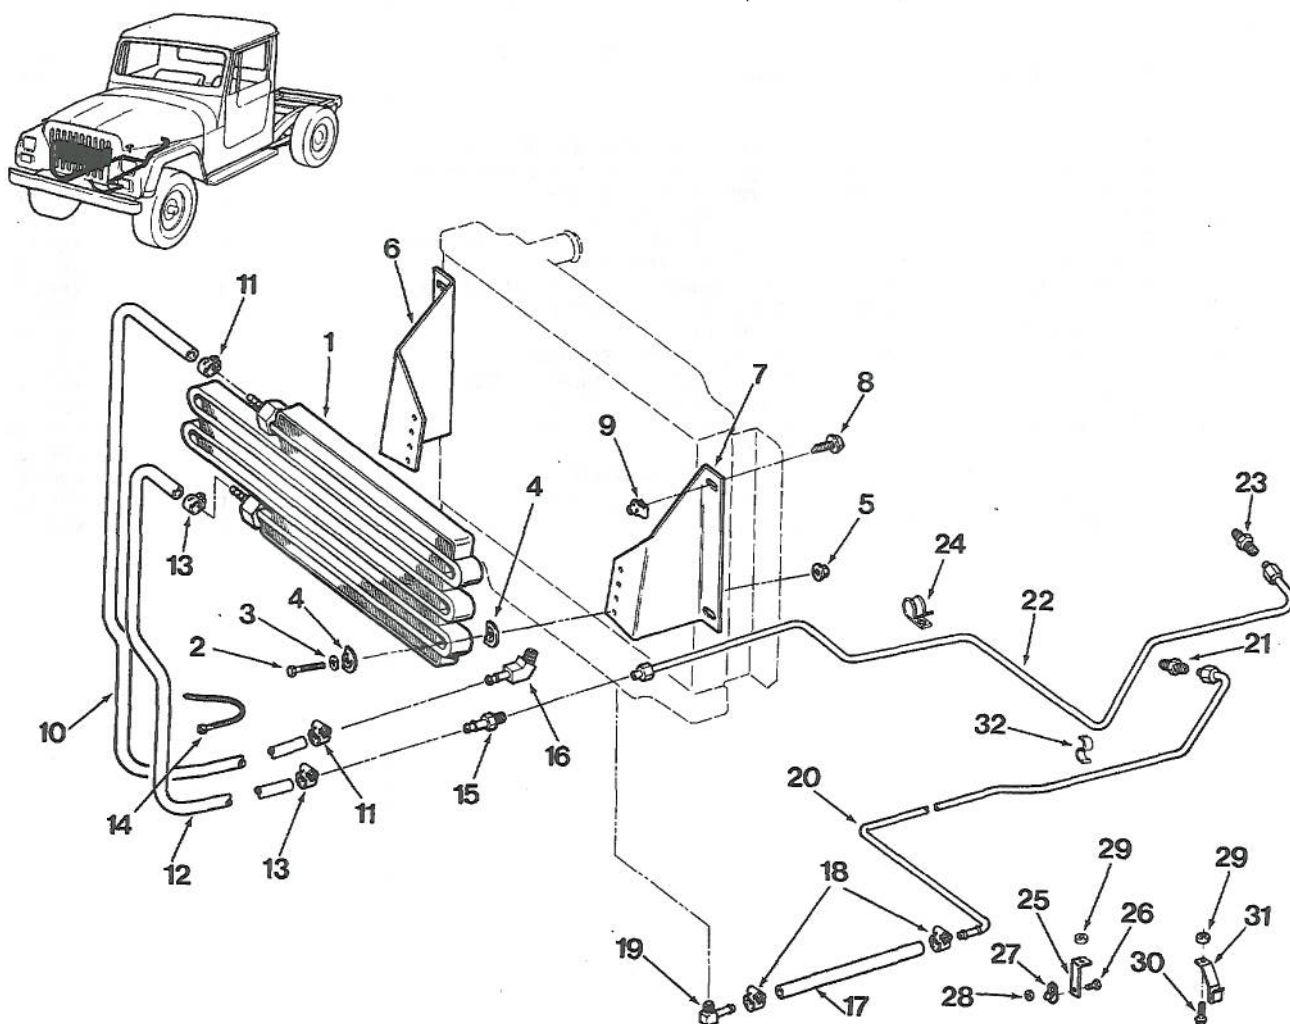

099068

FIGURE 71. TRANSMISSION COOLING LINES GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
71-	NO NUMBER	92871		TRANSMISSION COOLING LINES GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	5361659	92871		COOLER, OIL, AUXILIARY.	1		PBFFFP
-2	MS90728-13	96906		SCREW, CAP, HEX HD (AP)	4		XBFZZ
-3	Q120392	92871		WASHER, FLAT (120392) (AP)	4		PAFZZN
-4	5361822	92871		WASHER, SPECIAL, D (AP)	8		XBFZZ
-5	Q9416918	92871		NUT, PLAIN, EXTENDED (9416918). (AP)	4		XBFZZ
-6	8992000067	92871		BRACKET, OIL COOLER, RIGHT.	1		XBFZZ
-7	8992000055	92871		BRACKET, OIL COOLER, LEFT	1		XBFZZ
-8	4003556	92871		SCREW AND WASHER (AP)	4		PAFZZN
-9	4004208	92871		NUT, U, SPRING (AP)	4		XBFZZ
-10	5361662	92871		HOSE, COOLER TO RADIATOR	1		XBFZZ
-11	4006661	92871		CLAMP, HOSE, .78 DIAMETER (AP).	2		XBFZZ
-12	5361661	92871		HOSE, COOLER TO RETURN	1		XBFZZ
-13	4006661	92871		CLAMP, HOSE, .78 DIAMETER (AP).	2		XBFZZ
-14	3223227	92871		STRAP, WIRING (AP)	2		PAFZZN
-15	4006662	92871		CONNECTOR, HOSE, STRAIGHT	1		XBFZZ

FIG. 3 INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS USABLE		
					PER ASSY.	ON CODE	SMR CODE
71-16	4006664	92871		CONNECTOR, HOSE, 45 DEGREE.	1		XBFZZ
-17	8125814	92871		HOSE, SUPPLY TUBE TO RADIATOR.	1		XBFZZ
-18	4006502	92871		CLAMP, HOSE, .25 DIAMETER (AP).	2		XBFZZ
-19	4007028	92871		ELBOW, 90 DEGREE	1		XBFZZ
-20	8992000052	92871		TUBE ASSEMBLY, COOLING SUPPLY.	1		XBFZZ
-21	MS39158-4	96906		ADAPTER, STRAIGHT, PIPE	1		XBFZZ
-22	8992000051	92871		TUBE ASSEMBLY, COOLING RETURN.	1		XBFZZ
-23	MS39158-4	96906		ADAPTER, STRAIGHT, PIPE	1		XBFZZ
-24	MS21333-40	96906		CLAMP, LOOP.	1		XBFZZ
-25	5994391	92871		BRACKET, TUBE SUPPORT.	1		XBFZZ
-26	G180016	92871		SCREW, CAP, HEX HEAD (180016)	1		XBFZZ
-27	G120522	92871		CLIP, CLOSED (120522).	1		XBFZZ
-28	MS51967-2	96906		NUT, HEX (FA12010378).	1		PAFZZN
-29	941011	92871		SPACER.	2		XBFZZ
-30	4006393	92871		SCREW AND WASHER.	2		XBFZZ
-31	3215925	92871		CLIP, OIL COOLER LINE.	1		XBFZZ
-32	4000021	92871		CLIP, TWO LINE	3		XBFZZ


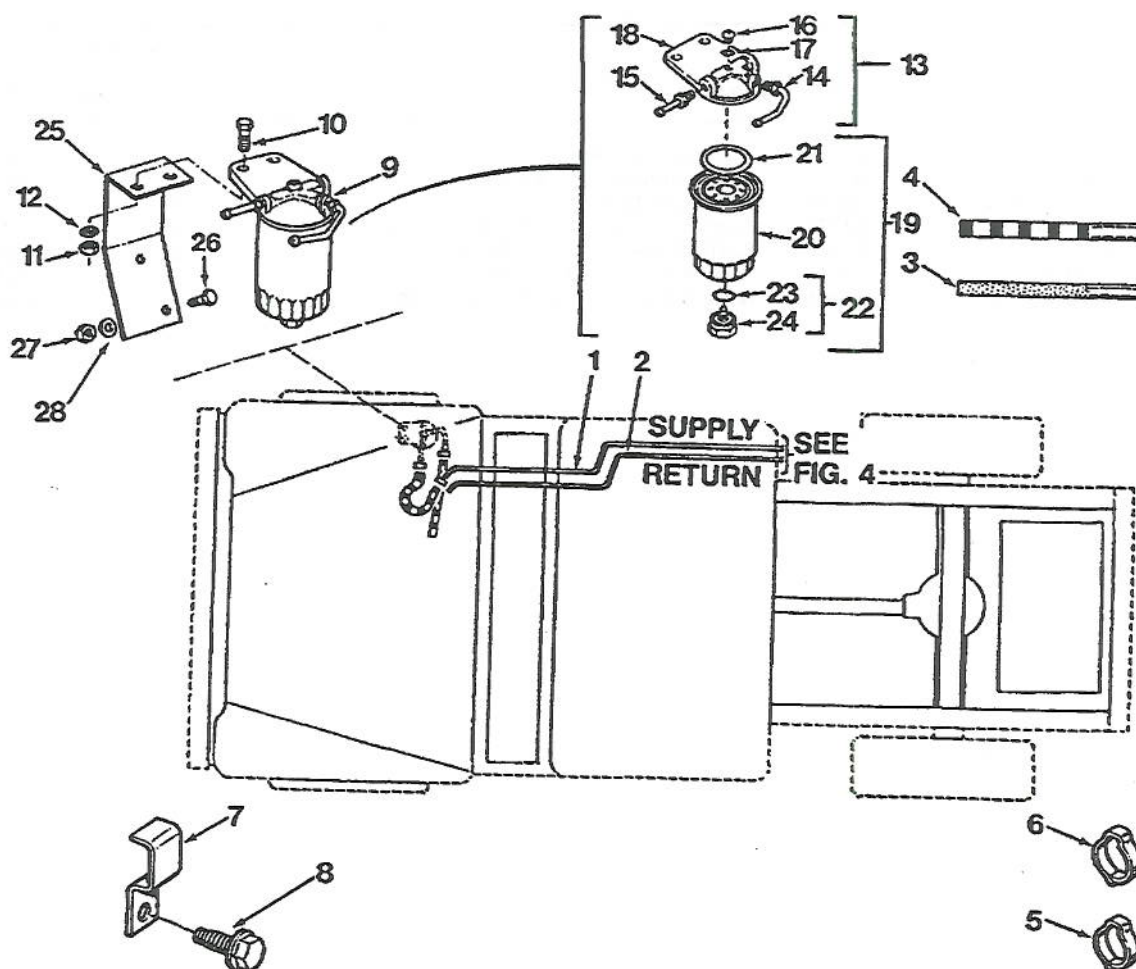


FIGURE 72. FUEL LINES GROUP

066768

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
72-	NO NUMBER	92871		FUEL LINES GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	8992000068	92871		. TUBE, FUEL SUPPLY LINE	1		XBFZZ
-2	8992000059	92871		. TUBE, FUEL RETURN LINE	1		XBFZZ
-3	8125843	92871		. HOSE, FUEL, NONMETALLIC	1		XBFZZ
-4	8125823	92871		. HOSE, FUEL, NONMETALLIC	1		XBFZZ
-5	3227850	92871		. CLAMP, HOSE (AP)	AR		XBFZZ
-6	3227851	92871		. CLAMP, HOSE (AP)	AR		XBFZZ
-7	4004901	92871		. CLIP, BRAKE LINES TO FRAME	AR		XBFZZ
-8	4005063	92871		. SCREW, MACHINE (AP)	AR		XBFZZ
-9	33327-043	S0356		. STRAINER ASSEMBLY, FUEL (8992000110)	1		XBFZZ
-10	MS90725-62	96906		. SCREW, CAP, HEX HD (AP)	2		XBFZZ
-11	G9418738	92871		. NUT, PLAIN, HEX (9418738) (AP)	2		XBFZZ
-12	4003803	92871		. WASHER, LOCK (AP)	2		XBFZZ
-13	33327-011-1100	S0356		. COVER ASSEMBLY	1		XBFZZ
-14	33327-011-6010	S0356		. CONNECTOR ASSEMBLY	1		XBFZZ
-15	33327-011-6020	S0356		. CONNECTOR ASSEMBLY	1		XBFZZ
-16	33327-011-5410	S0356		. SCREW, MACHINE	1		XBFZZ
-17	33327-011-1610	S0356		. PACKING	1		XBFZZ
-18	33327-011-1110	S0356		. COVER	1		XBFZZ
-19	Deleted						
-20	16405-T9003	1GN08		. CARTRIDGE ASSEMBLY	1		XA
-21	16417-T9000	1GN08		. PACKING	1		XA

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
72-22	16413-T9005	S0356		... PLUG ASSEMBLY, DRAIN	1		XA
-23	13352-031-1611	S0356	 PACKING, PREFORMED	1		XA
-24	13352-043-6420	S0356	 PLUG, DRAIN	1		XA
-25	5995454	92871		. BRACKET, FUEL FILTER MOUNTING	1		XBFZZ
-26	MS90725-5	96906		. SCREW, CAP, HEX HEAD (AP)	2		XBFZZ
-27	271172	24617		. NUT, SELF-LOCKING (AP)	2		PAFZZN
-28	MS27183-9	96906		. WASHER, FLAT (FA12010379) (AP)	2		PAFZZN


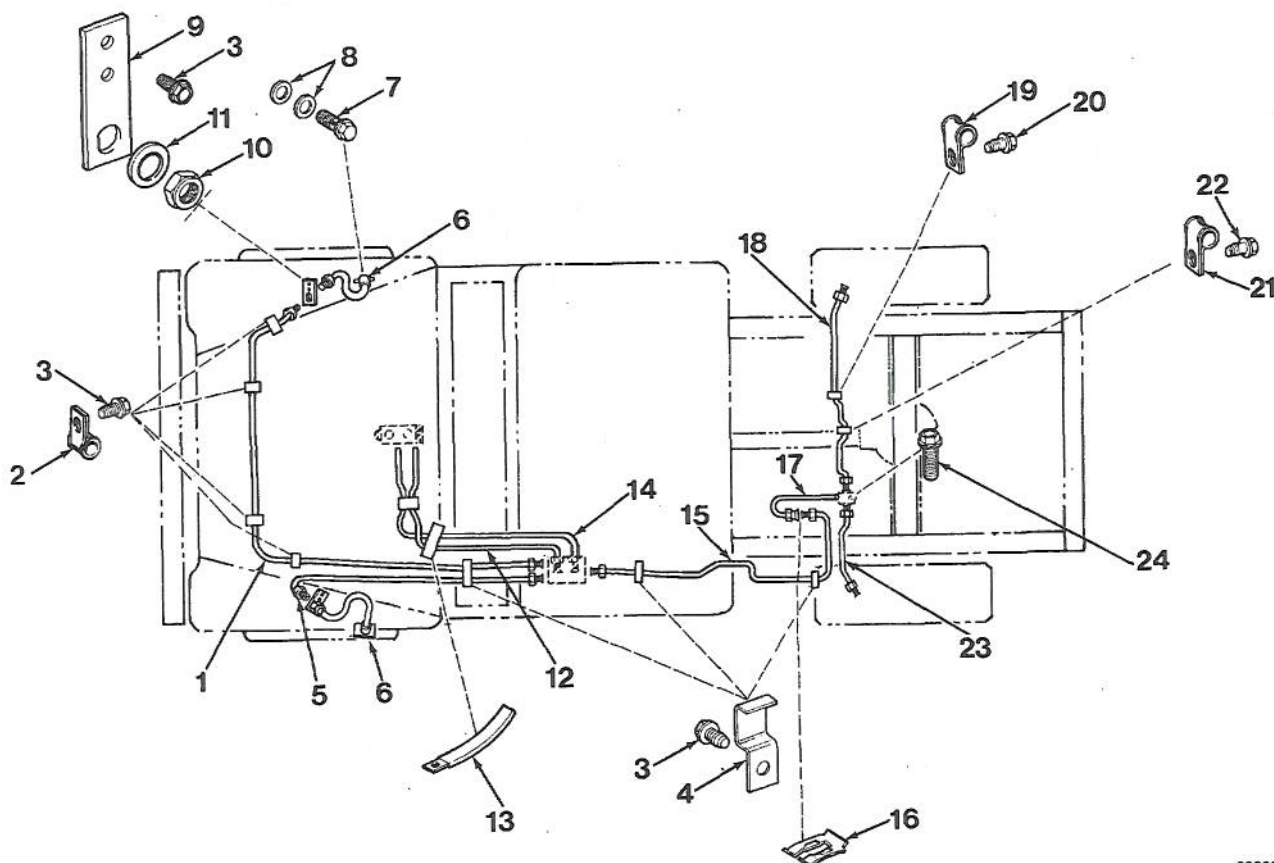


099008

FIGURE 73. BRAKE LINES GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
73-	NO NUMBER	92871		BRAKE LINES GROUP.	REF		
-1	5995228	92871		TUBE ASSEMBLY, BRAKE VALVE TO.	1		XBFZZ
-2	6192107	92871		CLIP, CLOSED (192107) (AP)	4		XBFZZ
-3	4005063	92871		SCREW, CAP, HEX HEAD (AP)	10		XBFZZ
-4	4004901	92871		CLIP, HOLDDOWN	4		XBFZZ
-5	5352184	92871		TUBE ASSEMBLY, BRAKE VALVE TO.	1		XBFZZ
-6	5359322	92871		HOSE ASSEMBLY, BRAKE, FRONT DISC.	2		PAFZZN
-7	4200304	92871		BOLT, HEX HEAD, SPECIAL	2		XBFZZ
-8	4200303	92871		WASHER, FLAT, SPECIAL	4		XBFZZ
-9	5353415	92871		BRACKET, FRONT BRAKE HOSE.	2		XBFZZ
-10	4005338	92871		NUT, HEX, JAM LOCK.	2		XBFZZ
-11	MS27183-21	96906		WASHER, FLAT (FA12010451).	2		PAFZZN
-12	5994278	92871		TUBE ASSEMBLY, BRAKE TO.	1		XBFZZ
-13	4005650	92871		CLIP, STRAP.	1		XBFZZ
-14	5994277	92871		TUBE ASSEMBLY, BRAKE TO.	1		XBFZZ
-15	8992000047	92871		PROPORTIONING VALVE TUBE ASSEMBLY, BRAKE VALVE TO.	1		XBFZZ
-16	637427	92871		REAR AXLE CLIP, RETAINING.	1		XBFZZ
-17	5355076	92871		HOSE ASSEMBLY, BRAKE, FRAME TO.	1		XBFZZ
-18	8992000048	92871		REAR AXLE TUBE ASSEMBLY, BRAKE, REAR AXLE	1		XBFZZ
				RIGHT HAND			


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
73-19	6120522	92871		. CLIP, CLOSED (120522).	1		XBFZZ
-20	4004077	92871		. SCREW, CAP, HEX HEAD (AP)	1		XBFZZ
-21	6179148	92871		. CLIP, CLOSED (179148).	1		XBFZZ
-22	991546	92871		. SCREW, CAP, HEX HEAD (AP)	1		XBFZZ
-23	8992000049	92871		. TUBE ASSEMBLY, BRAKE, REAR AXLE LEFT HAND	1		XBFZZ
-24	4005691	92871		. SCREW, CAP, HEX HEAD.	1		XBFZZ

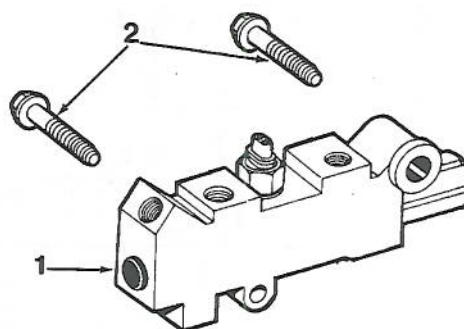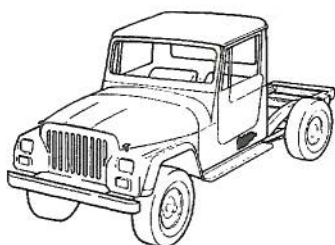

09946A

FIGURE 74. BRAKE PROPORTIONING VALVE GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
74-	NO NUMBER	92871		BRAKE PROPORTIONING VALVE. GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	8992000087	92871		. VALVE, BRAKE PROPORTIONING	1		PAFZZN
-2	4005834	92871		. SCREW, CAP, WASHER HEAD (AF).	2		XBZZ

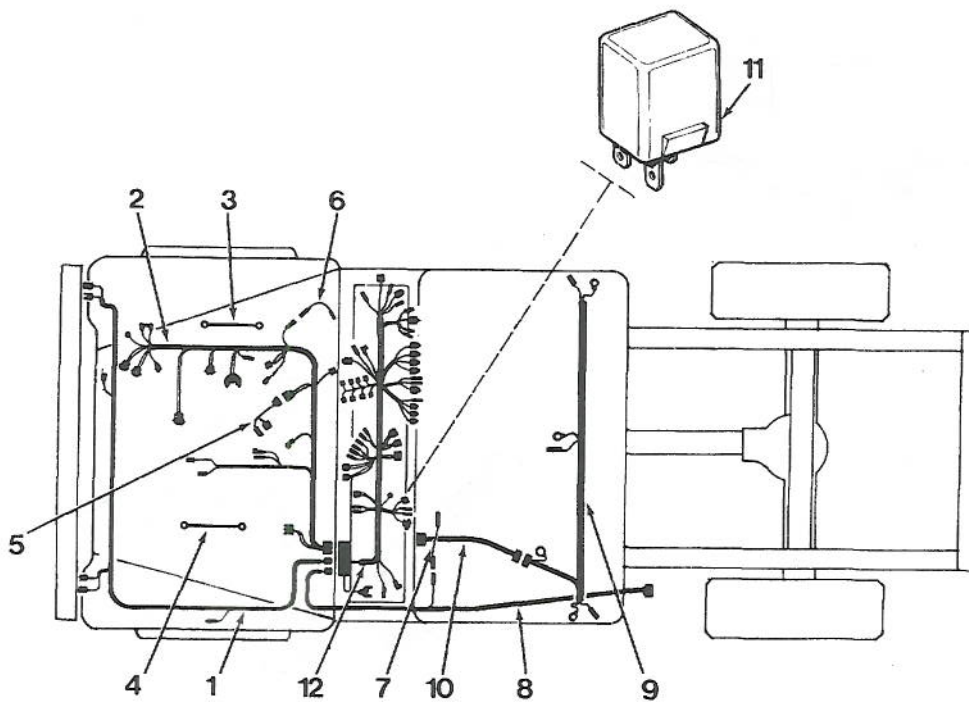

09914A

FIGURE 75. HARNESSES GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
75--	NO NUMBER	92871		HARNESSES GROUP. (SEE FIGURE 2 FOR NHA)	REF		
-1	8996000106	92871		. HARNESS, ENGINE COMPARTMENT.	1		MFFFZ
-2	8996000095	92871		. HARNESS, ENGINE.	1		MFFFZ
-3	5994788	92871		. CABLE ASSEMBLY, SOLENOID AND STARTER	1		MFFFZ
-4	946861	92871		. STRAP, GROUND.	1		MFFFZ
-5	5762381	92871		. HARNESS, NEUTRAL SAFETY AND. BACKUP LAMP	1		MFFFZ
-6	5994666	92871		. CABLE ASSEMBLY, HEATER FEED.	1		MFFFZ
-7	5994402	92871		. HARNESS ASSEMBLY, FUEL TANK. SENDING UNIT	1		MFFFZ
-8	8996000105	92871		. HARNESS, CHASSIS	1		MFFFZ
-9	8996000104	92871		. HARNESS, ROOF LAMPS.	1		MFFFZ
-10	8996000109	92871		. HARNESS, JUMPER, ROOF LAMPS	1		MFFFZ
-11	5764039	92871		. RELAY, HORN.	1		PAFZZN
-12	8996000096	92871		. HARNESS, INSTRUMENT PANEL.	1		MFFFZ

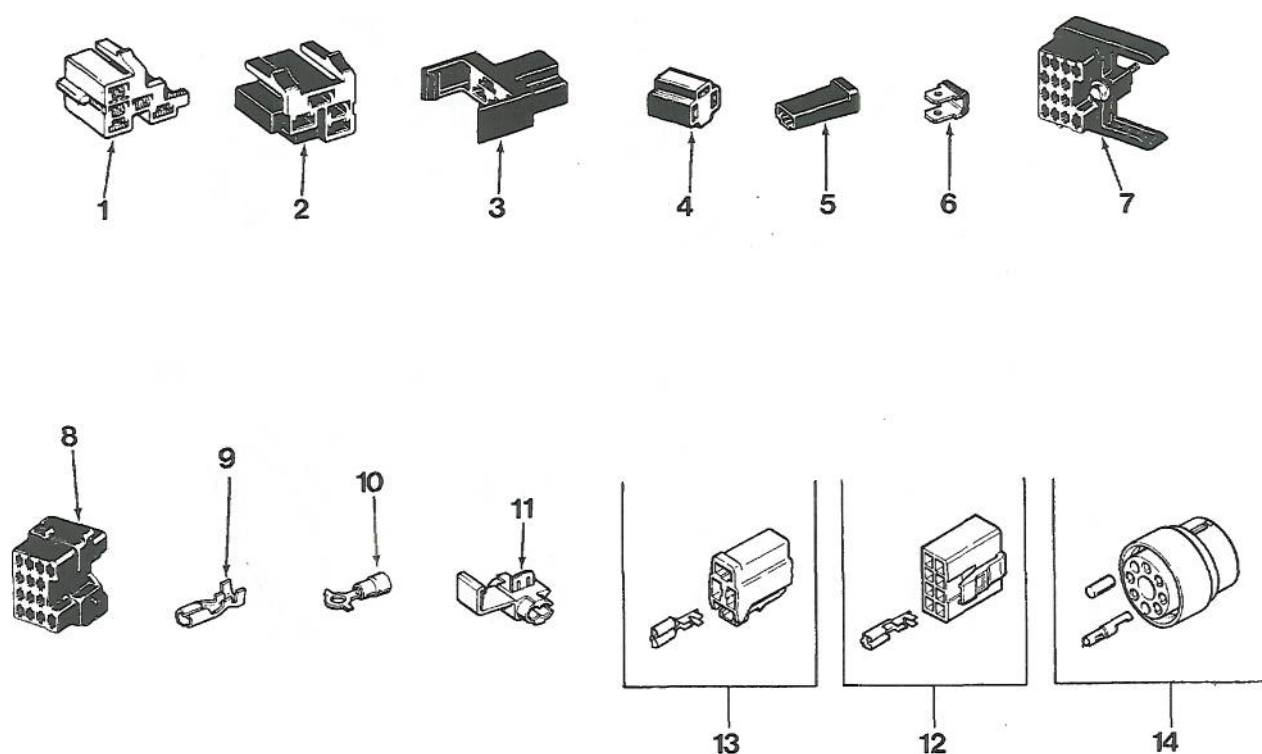

09966B

FIGURE 76. MISCELLANEOUS TERMINALS AND CONNECTORS GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
76-	NO NUMBER	92871		MISCELLANEOUS TERMINALS AND CONNECTORS GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	4488006	92871		CONNECTOR, WIRING.	1		XBFZZ
-2	4177870	92871		CONNECTOR, WIRE.	1		XBFZZ
-3	4177111	92871		CONNECTOR, WIRE, LOCK	1		XBFZZ
-4	998475	92871		CONNECTOR, WIRE.	1		XBFZZ
-5	2962793	11862		CAPACITOR, FIXED, PAPER (932370).	1		XBFZZ
-6	2984503	77060		TERMINAL, U TYPE (3186890)	1		XBFZZ
-7	4179421	92871		CONNECTOR, TERMINAL.	1		XBFZZ
-8	4179420	92871		CONNECTOR, TERMINAL.	1		XBFZZ
-9	925062	92871		TERMINAL, FEMALE	1		XBFZZ
-10	991641	92871		TERMINAL, RING, LOCK.	1		XBFZZ
-11	3186888	92871		CONNECTOR, TERMINAL.	1		XBFZZ
-12	24340-90001	S0356		CONNECTOR ASSEMBLY, RELAY. (8135053)	1		
-13	24341-90000	S0356		CONNECTOR ASSEMBLY, GENERATOR. (8135112)	1		XBFZZ
-14	24342-90000	S0356		CONNECTOR ASSEMBLY, CONTROLLER (8135111)	1		XBFZZ

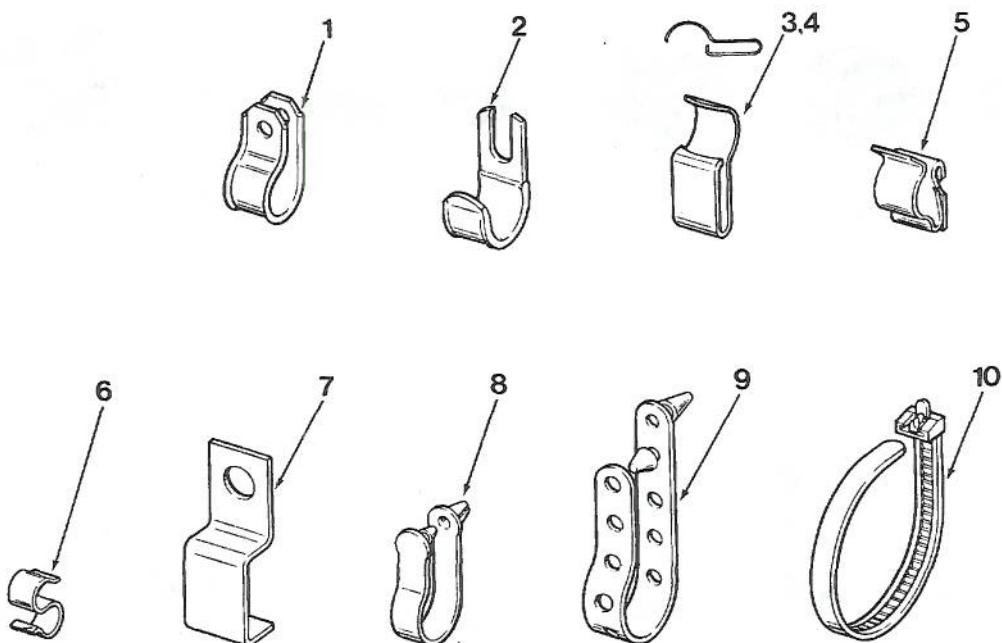


09965A

FIGURE 77. MISCELLANEOUS CLIPS GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
77-	NO NUMBER	92871		MISCELLANEOUS CLIPS GROUP. (SEE FIGURE 2 FOR NHA)	REF		
-1	G140780	92871		CLIP, CLOSED (140780)	1		XBFZZ
-2	5457825	92871		CLAMP, OPEN	1		XBFZZ
-3	5350273	92871		CLIP, SPRING	1		XBFZZ
-4	5454903	92871		CLIP, FLANGE	1		XBFZZ
-5	945201	92871		CLIP, WIRING, FLANGE	1		XBFZZ
-6	4004928	92871		CLIP, S TYPE	1		XBFZZ
-7	4004901	92871		CLIP, CHANNEL	1		XBFZZ
-8	4000306	92871		FASTENER, CABLE	1		XBFZZ
-9	926878	92871		FASTENER, CABLE, ADJUSTABLE	1		XBFZZ
-10	3223227	92871		STRAP, RETAINING	1		PAFZZN


NOTE: FIGURE 78 AND PARTS
LIST DELETED.

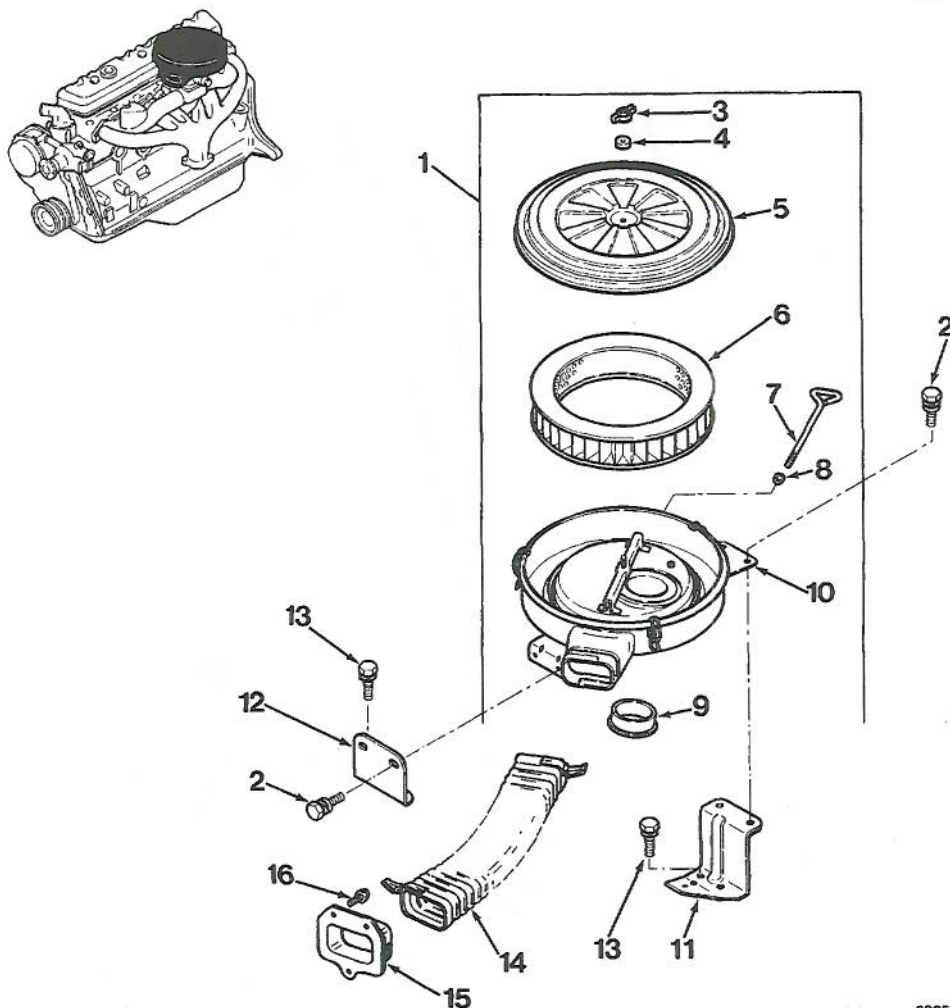

09855B

FIGURE 79. AIR FILTER ASSEMBLY AND DUCT GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
79-	NO NUMBER	92871		AIR FILTER ASSEMBLY AND DUCT GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	16500-90066	S0356		AIR CLEANER ASSEMBLY (8135345)	1		XBFZZ
-2	08363-81626	S0356		SCREW AND WASHER (8135475) (AP)	4		XBFZZ
-3	16551-W7000	S0356		NUT, WING (8135478) (AP)	1		XBFZZ
-4	16568-Y4100	S0356		PACKING, WING NUT (8135479) (AP)	1		XBFZZ
-5	16526-C7800	S0356		COVER ASSEMBLY (NOT SERVICED SEPARATELY)	1		XBFZZ
-6	16546-C7800	S0356		ELEMENT ASSEMBLY (8135346)	1		PAFZZN
-7	16509-99100	S0356		BOLT, BAND (8135348)	1		XBFZZ
-8	16533-62210	S0356		GROMMET, BAND BOLT (8135349)	1		XBFZZ
-9	16548-C0300	S0356		INSULATOR, AIR CLEANER MOUNTING (8135347)	1		XBFZZ
-10	NO NUMBER	92871		BODY, AIR CLEANER (NOT SERVICED SEPARATELY)	1		
-11	16258-C6801	S0356		SUPPORT, REAR (8135476)	1		XBFZZ
-12	16573-90065	S0356		SUPPORT, FRONT (8135477)	1		XBFZZ
-13	08110-81662	S0356		SCREW AND WASHER (8135277)	4		XBFZZ
-14	3242264R	92871		DUCT ASSEMBLY, AIR INTAKE	1		XBFZZ
-15	5463866	92871		ADAPTER, AIR INTAKE	1		XBFZZ
-16	8120052	92871		SCREW, CAP, HEX WASHER HEAD (AP)	3		PAFZZN

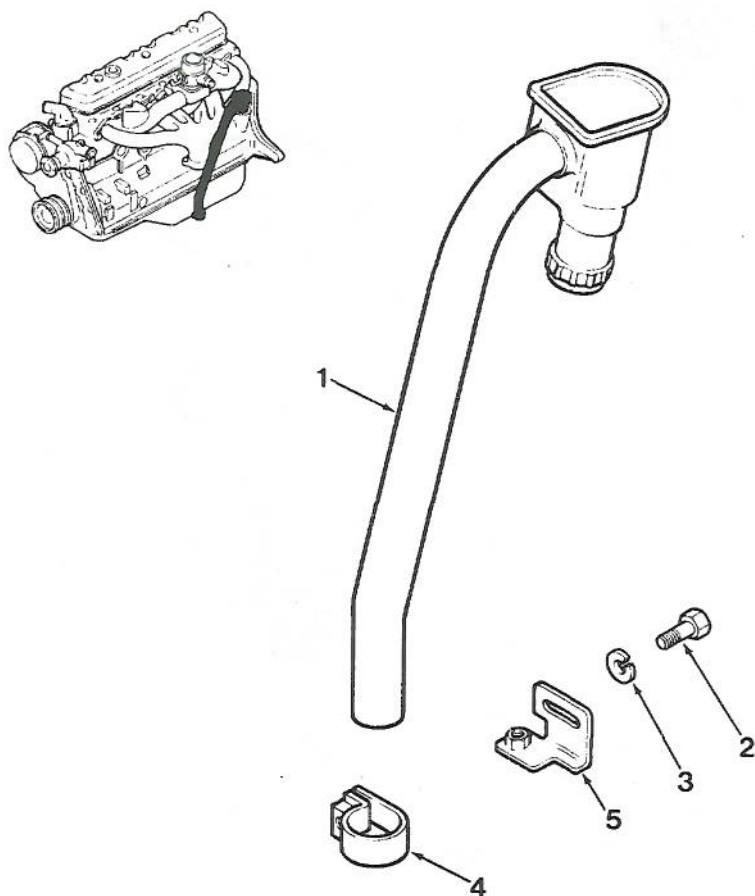

098568

FIGURE 80. POSITIVE CRANKCASE VENTILATION SYSTEM

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
80-	NO NUMBER	92871		POSITIVE CRANKCASE VENTILATION SYSTEM (SEE FIGURE 2 FOR NHA)	REF		
-1	15262-C6800	S0356		BREATHER (8135021).	1		XBFZZ
-2	08110-82010	S0356		SCREW, CAP, HEX HEAD (8135014). (AP)	1		XBFZZ
-3	08915-13810	S0356		WASHER, SPRING (8135276) (AP).	1		XBFZZ
-4	21070-90005	S0356		CLAMP, BREATHER (8135023).	1		XBFZZ
-5	21219-90209	S0356		BRACKET, BREATHER (8135022).	1		XBFZZ

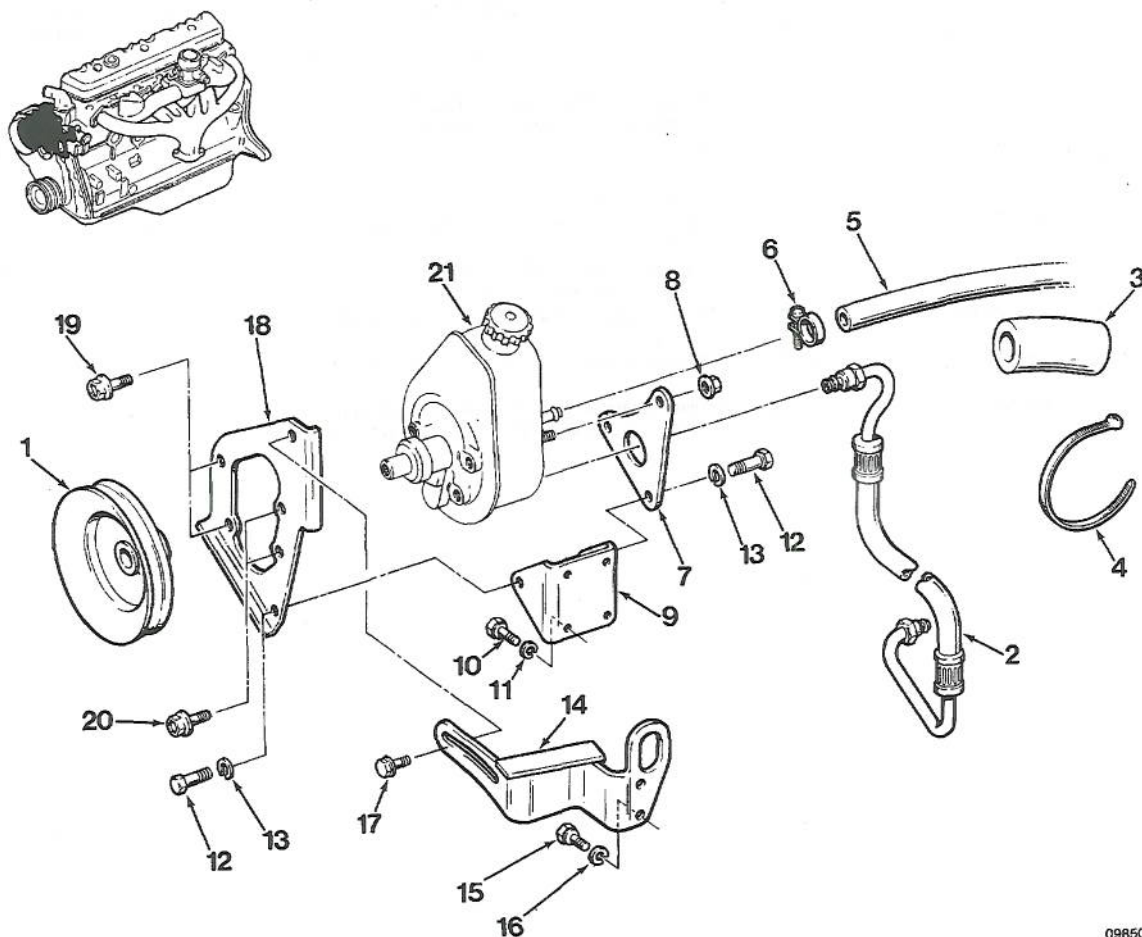


09850B

FIGURE 81. POWER STEERING PUMP MOUNTING GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
81-	NO NUMBER	92871		POWER STEERING PUMP MOUNTING GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	3226937	92871		PULLEY, POWER STEERING PUMP.	1		XBFZZ
-2	5994980	92871		HOSE ASSEMBLY, POWER STEERING PUMP, HIGH PRESSURE	1		PAFZZN
-3	5354540	92871		SLEEVE, GROMMET.	1		XBFZZ
-4	3223227	92871		STRAP, WIRING.	1		PAFZZN
-5	5994977	92871		HOSE ASSEMBLY, POWER STEERING, LOW PRESSURE	1		XBFZZ
-6	3155600	92871		CLAMP, HOSE, POWER STEERING PUMP. RETURN HOSE (AP)	1		XBFZZ
-7	5994907	92871		BRACKET, POWER STEERING PUMP, REAR	1		XBFZZ
-8	G11501850	92871		NUT, PLAIN, EXTENDED (11501850) (AP)	2		XBFZZ
-9	5994885	92871		BRACKET ASSEMBLY, POWER STEERING PUMP	1		XBFZZ
-10	11504336	11862		SCREW, CAP, HEX HD (AP)	4		XBFZZ
-11	G11500221	92871		WASHER, LOCK (11500221) (AP)	4		XBFZZ
-12	MS18154-60	96906		SCREW, CAP, HEX HD (AP)	2		XBFZZ
-13	4003803	92871		WASHER, LOCK (AP)	2		XBFZZ

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
81-14	5994890	92871		BRACKET ASSEMBLY, POWER.	1		XBFZZ
-15	G11501939	92871		STEERING PUMP, ADJUST			
				SCREW, CAP, HEX HD (11501939)	2		XBFZZ
				(AP)			
-16	G11500221	92871		WASHER, LOCK (11500221) (AP)	2		XBFZZ
-17	G9431552	92871		SCREW AND WASHER (9431552)	1		XBFZZ
				(AP)			
-18	5994878	92871		BRACKET ASSEMBLY, POWER.	1		XBFZZ
				STEERING PUMP, FRONT			
-19	G11502606	92871		SCREW, CAP, HEX HD (11502606)	2		XBFZZ
				(AP)			
-20	G11502685	92871		SCREW, CAP, HEX HD (11502685)	2		XBFZZ
				(AP)			
-21	7840045	52788		PUMP, POWER STEERING (3251017)	1		PBFFFFP
				(SEE FIGURE 82 FOR DETAILS)			

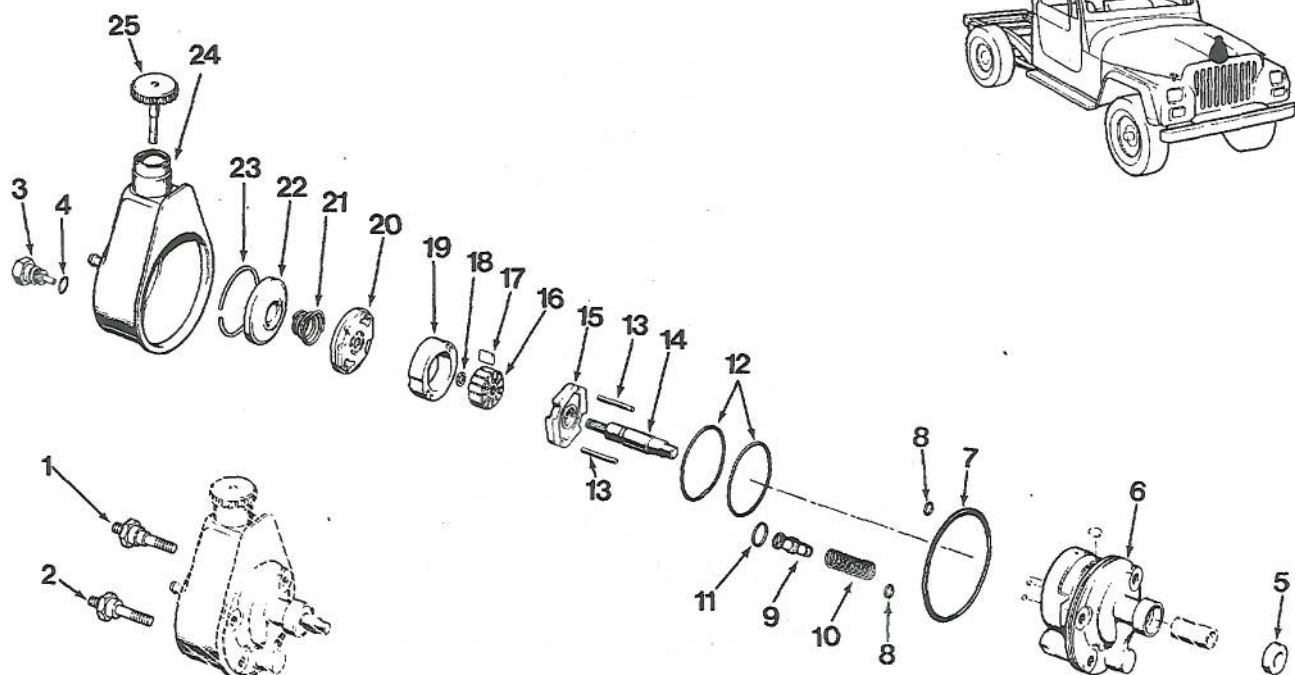


09875B

FIGURE 82. HYDRAULIC POWER STEERING PUMP ASSEMBLY

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
B2-	7840045	52788		PUMP ASSEMBLY, HYDRAULIC, POWER. STEERING (PARTS KIT AVAILABLE) (3251017) (SEE FIGURE 81 FOR NHA)	REF		
-1	7833100	52788		STUD, PUMP MOUNTING (8132474).	1		XBFZZ
-2	7832008	52788		STUD, PUMP MOUNTING (8132475).	1		XBFZZ
-3	7830909	52788		FITTING ASSEMBLY (8132472).	1		XBFZZ
-4	5688035	52788		PACKING, PREFORMED (3209671) (K5)	1		XBFZZ
-5	7808195	52788		SEAL, DRIVE SHAFT (4488330). (K5)	1		XBFZZ
-6	7830236	52788		HOUSING, LIQUID PUMP (8132473).	1		XBFZZ
-7	5688015	52788		PACKING, PREFORMED, O-RING. (3209669) (K5) (K9)	1		XBFZZ
-8	5688109	52788		PACKING, PREFORMED, O-RING. (3209672) (K5) (K9)	2		XBFZZ
-9	7809229	52788		VALVE ASSEMBLY, CONTROL. (8120531)	1		XBFZZ
-10	5688037	11862		SPRING, FLOW CONTROL VALVE. (3209673)	1		XBFZZ
-11	5688049	52788		PACKING, PREFORMED, O-RING. (3209670) (K5) (K9)	1		XBFZZ
-12	7814503	52788		PACKING, PREFORMED, O-RING. (NOT SERVICED SEPARATELY) (K5)	1		XBFZZ
-13	5689357	52788		PIN, DOWEL, PUMP RING (3209660).	2		XBFZZ
-14	7837130	52788		SHAFT, PUMP DRIVE (NOT SERVICED. SEPARATELY) (K7)	1		XBFZZ
-15	7836369	52788		PLATE, THRUST (8983500071).	1		XBFZZ
-16	7839341	52788		ROTOR, PUMP (NOT SERVICED. SEPARATELY) (K8)	1		XBFZZ

FIG & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
82-17	7825561	52788		VANE, PUMP (NOT SERVICED SEPARATELY) (K8)	10		XBFZZ
-18	7837132	52788		RING, SHAFT RETAINING (NOT SERVICED SEPARATELY) (K6) (K7)	1		XBFZZ
	7837132	52788		RING, SHAFT RETAINING (NOT SERVICED SEPARATELY) (K8)	1		XBFZZ
	5689388	52788		RING, SHAFT RETAINING (NOT SERVICED SEPARATELY) (K6)	1		XBFZZ
-19	7825171	52788		RING, PUMP (NOT SERVICED SEPARATELY) (K8)	1		XBFZZ
-20	7839669	52788		PLATE, PRESSURE (8133957)	1		XBFZZ
-21	7839667	52788		SPRING, FLAT (8133958)	1		XBFZZ
-22	5689358	52788		PLATE, END (3209661)	1		XBFZZ
-23	5688014	52788		RING, RETAINING (3209664)	1		XBFZZ
-24	7812784	52788		RESERVOIR ASSEMBLY, HYDRAULIC PUMP (NOT SERVICED SEPARATELY) (K9)	1		XBFZZ
-25	7813194	52788		CAP, FILLER OPENING (8128467)	1		PAFZZN
	5688044	52788		GASKET SET (INCLUDES PARTS LISTED ABOVE DENOTED BY K5) (3209678) (K5)	1		PAFZZN
	7837284	52788		KIT, RING RETAINING (INCLUDES PARTS LISTED ABOVE DENOTED BY K6) (8133827) (K6)	1		PAFZZN
	7837321	52788		KIT, DRIVE SHAFT AND RETAINING RING (INCLUDES PARTS LISTED ABOVE DENOTED BY K7) (8133828) (K7)	1		PAFZZN
	7837322	52788		PARTS KIT, POWER STEERING (INCLUDES PARTS LISTED ABOVE DENOTED BY K8) (8133829) (K8)	1		PAFZZN
	7826744	52788		KIT, HYDRAULIC PUMP RESERVOIR (INCLUDES PARTS LISTED ABOVE DENOTED BY K9) (8127369) (K9)	1		PAFZZN

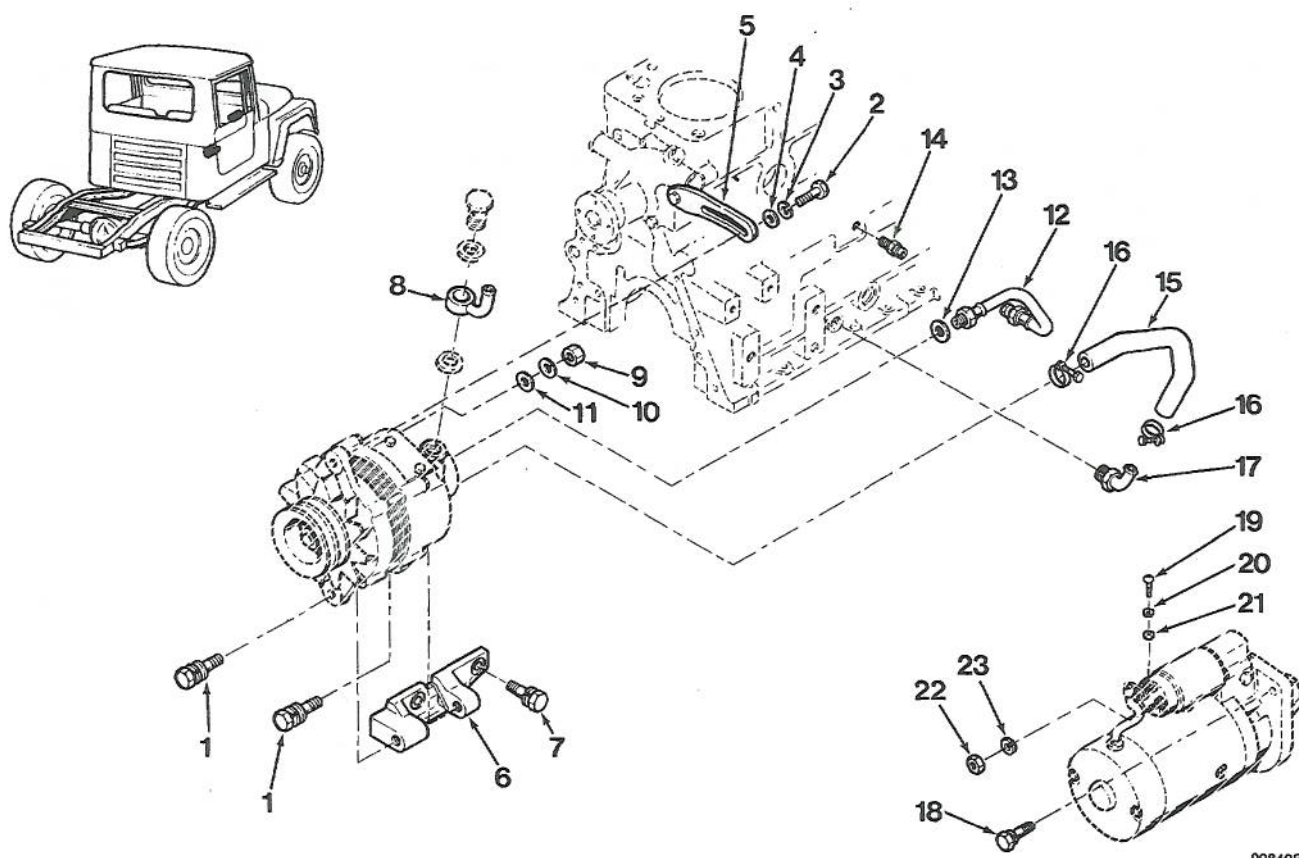


09849B

FIGURE 83. ALTERNATOR, STARTER AND VACUUM PUMP MOUNTING PARTS GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
83-	NO NUMBER	92871		ALTERNATOR, STARTER AND VACUUM. PUMP MOUNTING PARTS GROUP (SEE FIGURE 2 FOR NHA)	REF		
	LR160-9ZF	S4957		ALTERNATOR ASSEMBLY, 60 AMPERES. (SEE FIGURE 84-1) (8996000097)	REF		
-1	08124-03533	S0356		SCREW AND WASHER (8135356). (AP)	2		XBFZZ
-2	13020-90000	S0356		SCREW, CAP, HEX HEAD (8135367). (AP)	1		XBFZZ
-3	08915-13810	S0356		WASHER, SPRING (8135276) (AP).	1		XBFZZ
-4	08915-53810	S0356		WASHER, PLAIN (8135369) (AP).	1		XBFZZ
-5	23174-37600	S0356		BAR, ADJUSTING (8135353).	1		XBFZZ
-6	23168-C6801	S0356		BRACKET, ALTERNATOR MOUNTING (8135354)	1		XBFZZ
-7	08124-03028	S0356		SCREW AND WASHER (8135355). (AP)	2		XBFZZ
-8	14682-90004	S0356		CONNECTOR ASSEMBLY (8135370).	1		XBFZZ
-9	08911-10510	S0356		NUT, HEX (8135358).	1		XBFZZ
-10	08915-13510	S0356		WASHER, SPRING (8135359).	1		XBFZZ
-11	08915-43510	S0356		WASHER, PLAIN (8135360).	1		XBFZZ
-12	14665-Y7500	S0356		TUBE, OIL (8135362).	1		XBFZZ
-13	01351-22104	S0356		GASKET, OIL TUBE (8135365).	1		XBFZZ
-14	11025-61501	S0356		CONNECTOR, OIL TUBE (8135363).	1		XBFZZ
-15	14670-90061	S0356		HOSE, NONMETALLIC (8135364).	1		XBFZZ
-16	08723-12000	S0356		CLAMP, HOSE (8135366).	2		XBFZZ
-17	14671-C0370	S0356		CONNECTOR, HOSE (8135361).	1		XBFZZ
	23300-61504	S0356		MOTOR ASSEMBLY, STARTING (SEE FIGURE 86) (8135170)	REF		PAFFFF

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
83-18	08121-24028	S0356		SCREW AND WASHER (8135115) (AP)	3		XBFZZ
-19	08360-41012	S0356		SCREW, MACHINE (8135172)	1		XBFZZ
-20	08915-13410	S0356		WASHER, SPRING (8135173)	1		XBFZZ
-21	08915-43410	S0356		WASHER, PLAIN (8135174)	1		XBFZZ
-22	08911-30810	S0356		NUT, HEX (8135175)	1		XBFZZ
-23	08915-13810	S0356		WASHER, SPRING (8135276)	1		XBFZZ

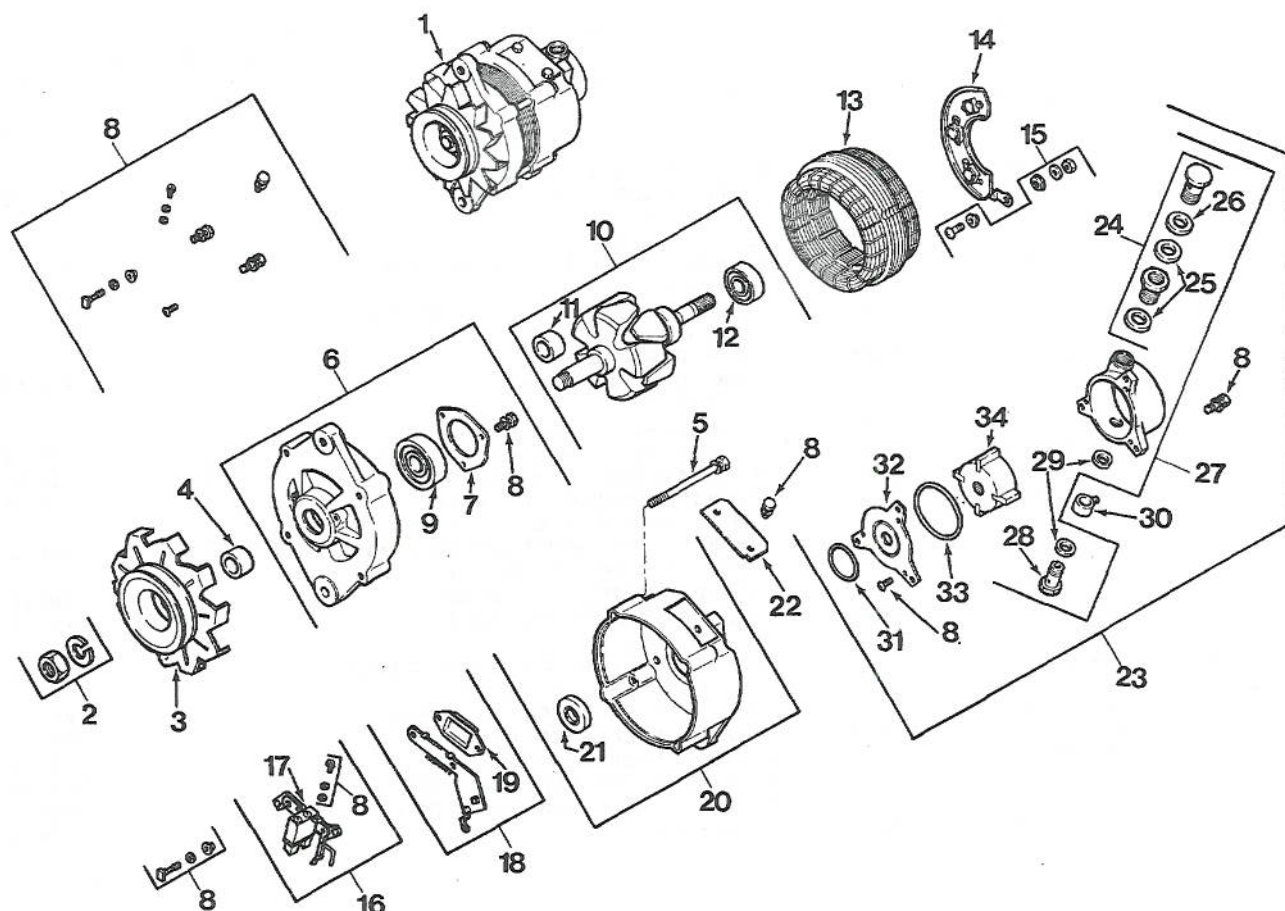

099198

FIGURE 84. ALTERNATOR AND VACUUM PUMP GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
84-	NO NUMBER	92871		ALTERNATOR AND VACUUM PUMP GROUP (PARTS KIT AVAILABLE) (SEE FIGURE 2 FOR NHA)	REF		
-1	LR160-9ZF	S4957		ALTERNATOR ASSEMBLY, 60 AMPERE (8996000097)	1		PAFFFFP
-2	B-495469	S4957		NUT AND WASHER ASSEMBLY, PULLEY (8135340)	1		XA
-3	L160-6500	S4957		PULLEY ASSEMBLY (8983501804)	1		XA
-4	NO NUMBER	92871		SPACER, PULLEY (NOT SERVICED SEPARATELY)	1		XA
-5	L150-18015	S4957		BOLT, THROUGH (8135338)	4		XA
-6	L150-14009	S4957		COVER ASSEMBLY, FRONT (8983501803)	1		XA
-7	L150M-14041	S4957		RETAINER, BEARING (8135335)	1		XA
-8	L150M-18004	S4957		KIT, SCREW (8983501806) (K25)	1		XA
-9	6303BM	S4957		BEARING, BALL, FRONT (8135336)	1		PAFZZN
-10	L160-51001	S4957		ROTOR ASSEMBLY (8983501597)	1		XA
-11	NO NUMBER	92871		SPACER, ROTOR (NOT SERVICED SEPARATELY)	1		
-12	6202E	S4957		BEARING, BALL, REAR (8135199)	1		PAFZZN
-13	L160-32001	S4957		STATOR ASSEMBLY (8983501598)	1		XA
-14	L160-23201	S4957		DIODE ASSEMBLY (8983501802)	1		PAFZZN
	L160-13351	S4957		DIODE (NOT SERVICED SEPARATELY)	3		XA
	TR12-64	S4957		REGULATOR ASSEMBLY, INTEGRATED CIRCUIT (NOT SERVICED SEPARATELY)	1		XA

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
84-15	L150-23105	S4957		BOLT ASSEMBLY (8135344).	1		XA
-16	L150-43301	S4957		HOLDER ASSEMBLY, BRUSH. (8135329)	1		PAFZZN
-17	L150-23251	S4957		BRUSH (8135357)	2		XA
-18	L150-23152	S4957		TERMINAL ASSEMBLY, REGULATOR. (8983501801)	1		XA
-19	L150-3317	S4957		BLOCK, TERMINAL (NOT SERVICED. SEPARATELY)	1		XA
-20	L160-53016	S4957		COVER, REAR (8983501599).	1		XA
-21	L150M-29221	S4957		SEAL, OIL, REAR BEARING (8135339)	1		PAFZZN
-22	L150M-28031	S4957		COVER, REAR COVER (8135331)	1		XA
-23	VP25-99004	S4957		PUMP ASSEMBLY, VACUUM (8135341).	1		PAFZZN
-24	VP25-6947A	S4957		VALVE ASSEMBLY (8135343)	1		XBFZZ
-25	2116-1491A	S4957		PACKING, PREFORMED, 24X18 MILLIMETERS, MIDDLE (8135372)	2		XBFZZ
-26	2116-1511A	S4957		PACKING, PREFORMED, UPPER, 24X12 MILLIMETERS (8135373)	1		XBFZZ
-27	VP25-49201	S4957		FLANGE ASSEMBLY (8135332).	1		XBFZZ
-28	2065-0732	S4957		BOLT, CONNECTOR, DELIVERY (8135371)	1		XBFZZ
-29	2116-1502	S4957		PACKING, PREFORMED, LOWER, 22X16 MILLIMETERS (8135374)	2		XBFZZ
-30	3062-1171	S4957		CONNECTOR, DELIVERY (8135350)	1		XBFZZ
-31	2084-0641	S4957		PACKING, PREFORMED (8135434).	1		XBFZZ
-32	VP25-39401	S4957		PLATE, CENTER (8135351)	1		XBFZZ
-33	2084-0631	S4957		PACKING, PREFORMED (8135342).	1		XBFZZ
-34	VP25-29301	S4957		ROTOR, PUMP, VACUUM (8135352).	1		XBFZZ
	VP25-19103	S4957		VANE, ROTOR	4		XBFZZ



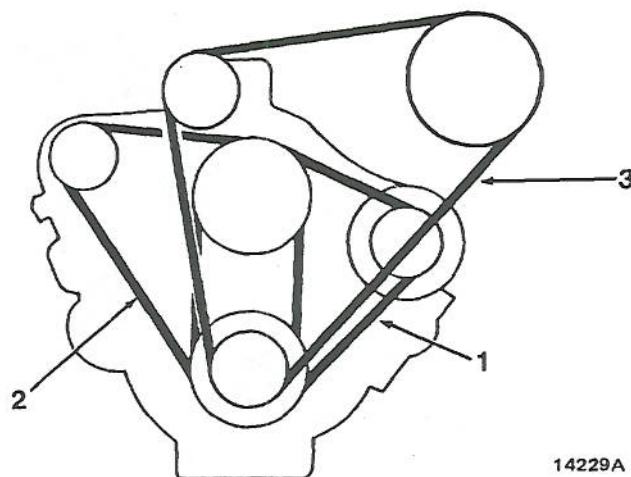


FIGURE B5. BELTS GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM 1234567	DESCRIPTION	UNITS PER ABBY.	USABLE ON CODE	SMR CODE
85-	NO NUMBER	92871	BELTS GROUP. (SEE FIGURE 2 FOR NHA)	REF		
-1	9375 8993000093	24161 92871	. BELT, ALTERNATOR, (REAR). . BELT, ALTERNATOR (WITH AIR COMPRESSOR) (REAR)	1 1		PAFZZN PAFZZN
-2	5994962	92871	. BELT, POWER STEERING PUMP. (FRONT)	1		PAFZZN
-3	8953004019	92871	. BELT, AIR COMPRESSOR (FRONT).	1		PAFZZN

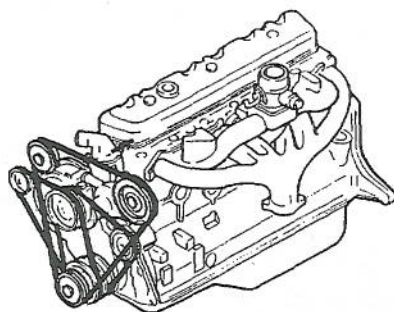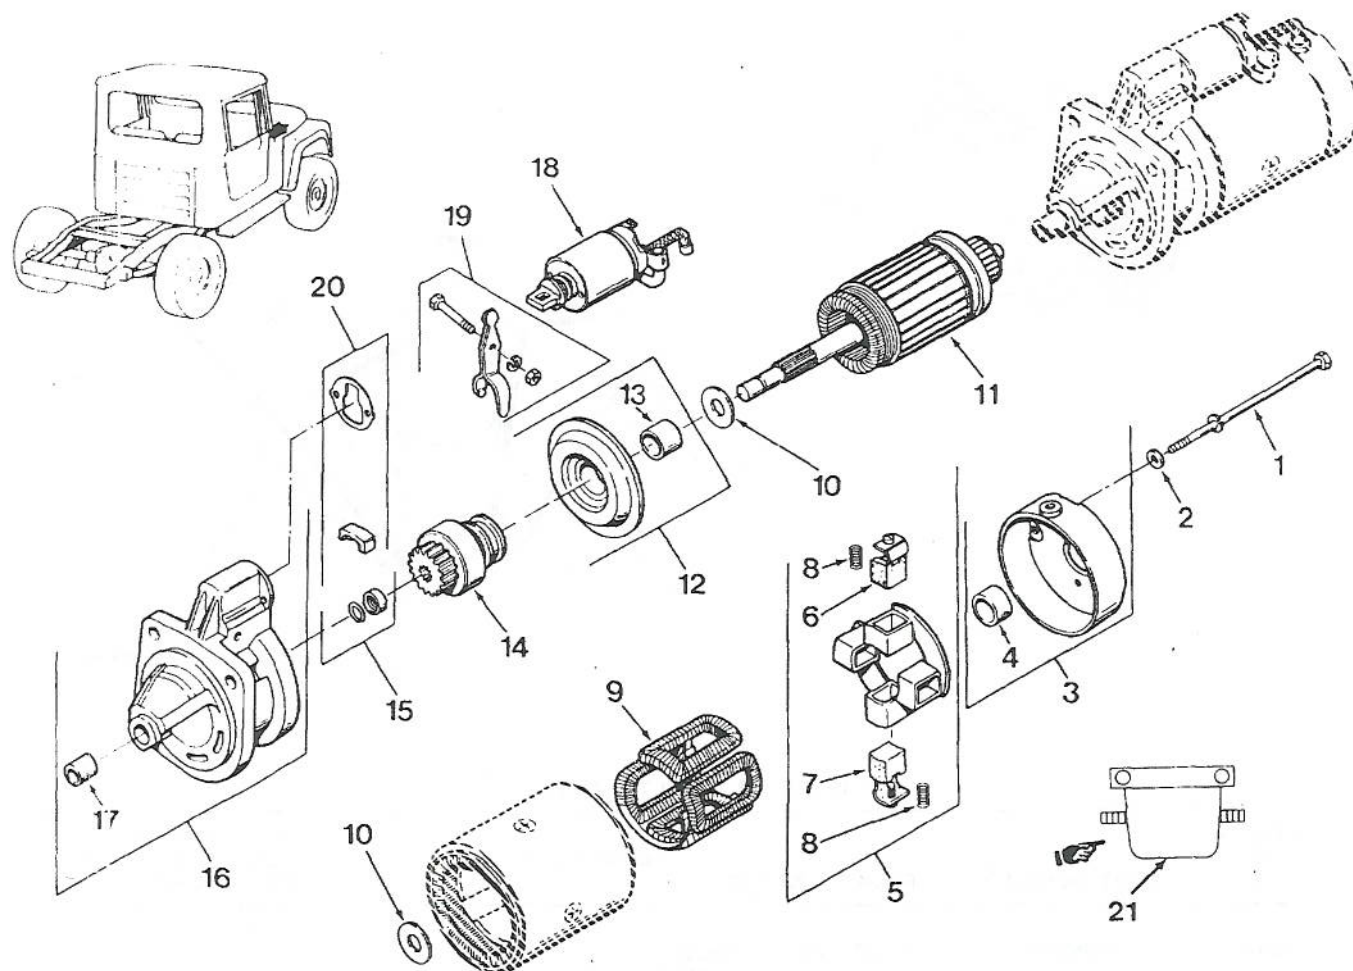

098588

FIGURE 86. STARTING MOTOR ASSEMBLY

FIG. 86 INDEX NO	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
86-	23300-61504	S0356		STARTING MOTOR ASSEMBLY. (8135170) (SEE FIGURE 2 FOR NHA)	REF		PAFFFFP
-1	23340-61501	S0356		BOLT AND WASHER, THROUGH (8135188)	2		XBFZZ
-2	23366-61500	S0356		WASHER, PLAIN (8135189).	2		XBFZZ
-3	23337-61504	S0356		COVER ASSEMBLY, REAR (8135185)	1		XBFZZ
-4	23338-61503	S0356		BUSHING, REAR COVER (8135186)	1		PAFZZN
-5	23330-61503	S0356		HOLDER ASSEMBLY, BRUSH (8135187)	1		PAFZZN
-6	23380-61501	S0356		BRUSH, POSITIVE (8135182)	2		XA
-7	23379-61503	S0356		BRUSH, NEGATIVE (8135183)	2		XA
-8	23333-61503	S0356		SPRING, BRUSH (8135184)	4		XA
-9	23306-61503	S0356		COIL ASSEMBLY, FIELD (8135181)	1		XA
-10	23372-99004	S0356		WASHER KIT, THRUST (8135178)	1		XA
-11	23310-61503	S0356		ARMATURE ASSEMBLY (8135177)	1		XA
-12	23383-61504	S0356		BEARING ASSEMBLY, CENTER (8135190)	1		XBFZZ
-13	23441-37501	S0356		BEARING (8135191).	1		XBFZZ
-14	23313-99111	S0356		PINION ASSEMBLY (8135179)	1		PAFZZN
-15	23369-61503	S0356		STOPPER, PINION (8135180)	1		XBFZZ
-16	23318-61501	S0356		CASE ASSEMBLY, GEAR (8135192)	1		XA
-17	23319-61503	S0356		BUSHING, GEAR CASE (8135193)	1		XBFZZ
-18	23343-61504	S0356		SWITCH ASSEMBLY, MAGNETIC (8135196)	1		PAFZZN
-19	23322-61502	S0356		LEVER, SHIFT (8135195)	1		XBFZZ
-20	23446-61501	S0356		COVER, DUST (8135194)	1		XBFZZ
-21	83504930	92871		RELAY, STARTER	1		PAFZZN


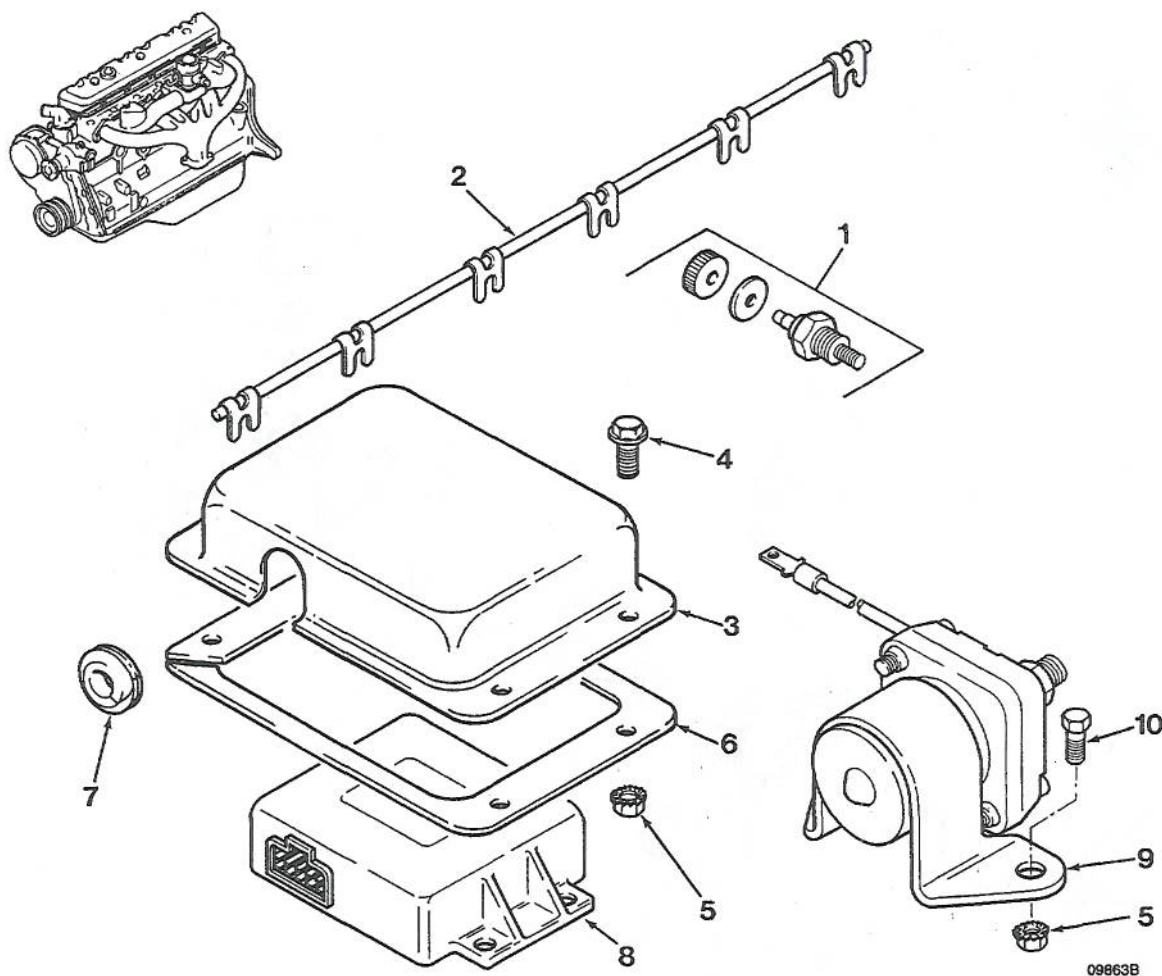


FIGURE 87. DIESEL PREHEATING GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
87-	NO NUMBER	92871		DIESEL PREHEATING GROUP.	REF		
-1	11065-34W00	80356		(SEE FIGURE 2 FOR NHA) . PLUG, GLOW (8135469)	6		PAFZZN
-2	11086-C7800	80356		. CABLE ASSEMBLY, GLOW PLUG. (8135042)	1		PAFZZN
-3	5995139	92871		. COVER, SPLASH, CONTROL.	1		XBFZZ
-4	09421943	11862		. SCREW, CAP, HEX HEAD (9421943). . . . (AP)	4		XBFZZ
-5	09419337	34623		. NUT AND WASHER, HEX (9419337). . . . (AP)	5		PAFZZN
-6	5995141	92871		. GASKET, SPLASH COVER	1		XBFZZ
-7	0117972	92871		. GROMMET, BEVELED (117972).	1		XBFZZ
-8	11067-34W01	80356		. RELAY ASSEMBLY, GLOW (8135108)	1		PBFFFP
-9	25230-J5570	80356		. CONTROLLER, GLOW PLUG (8135107). . . .	1		PAFZZN
-10	0180016	92871		. SCREW, CAP, HEX HEAD (180016)	1		XBFZZ

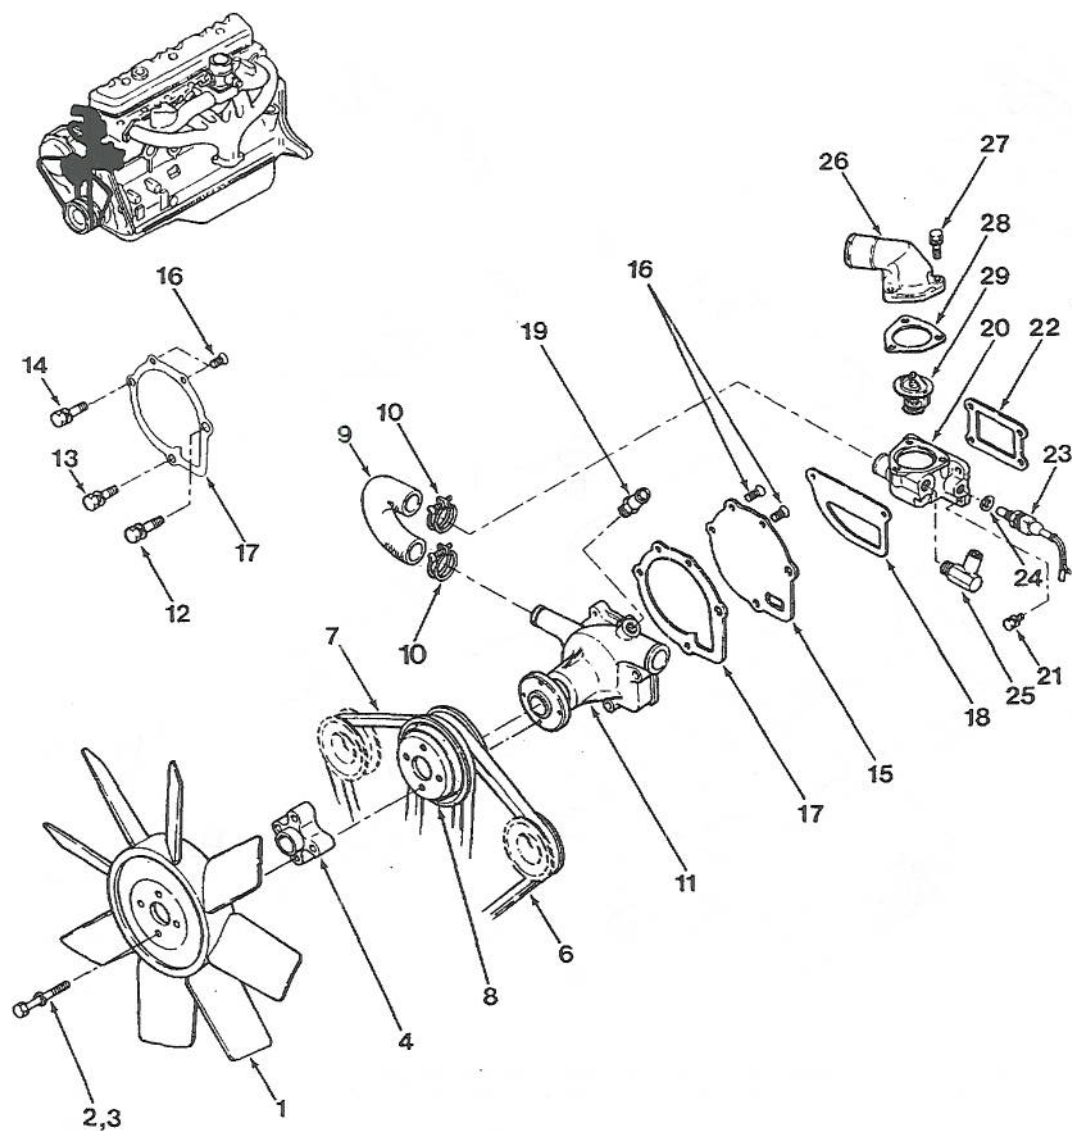


09768B

FIGURE 88. WATER PUMP AND FAN GROUP

FIG. & INDEX NO.	PART NUMBER	CAGE	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
88-	NO NUMBER	92871		WATER PUMP AND FAN GROUP	REF		
				(PARTS KIT AVAILABLE)			
				(SEE FIGURE 2 FOR NHA)			
-1	21060-J5500	S0356		FAN ASSEMBLY (8993000062)	1		XBFZZ
-2	7703001402	92871		SCREW, CAP, HEX HEAD (AP)	4		XBFZZ
-3	7903056008	92871		WASHER, LOCK (AP)	4		XBFZZ
-4	21064-P0300	S0356		SPACER, FAN (8993000063)	1		XBFZZ
-5	DELETED						
-6	8996000092	92871		BELT, ALTERNATOR (FOR 60 AMP	REF		PAFZZN
				ALTERNATOR)			
	8993000093	92871		BELT, ALTERNATOR (FOR 60 AMP.	REF		PAFZZN
				ALTERNATOR WITH AIR			
				COMPRESSOR)			

FIG. & INDEX NO.	PART NUMBER	CAGE	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
88-7	5994962	92871		BELT, PUMP, POWER STEERING.	REF		PAFZZN
-8	21051-90062	S0356		PULLEY, FAN (8135133).	1		XBFZZ
-9	21069-61500	S0356		HOSE, WATER (8135135).	1		PAFZZN
-10	08723-13600	S0356		CLAMP, HOSE (8135136) (AP).	2		XBFZZ
-11	21010-T8200	S0356		PUMP, CENTRIFUGAL (8135138).	1		PAFZZN
-12	08124-06028	S0356		SCREW AND WASHER (8135132). (AP)	1		XBFZZ
-13	08110-85562	S0356		SCREW AND WASHER (8135272). (AP)	1		XBFZZ
-14	08110-84562	S0356		SCREW AND WASHER (8135273). (AP)	1		XBFZZ
-15	21013-61502	S0356		COVER (8135144).	1		XA
-16	08320-61410	S0356		SCREW, MACHINE (8135142) (AP).	2		XA
-17	21014-61503	S0356		GASKET (8135228) (K2).	1		XA
-18	21074-37502	S0356		GASKET (8135227) (K2).	1		XBFZZ
-19	27070-M0200	S0356		CONNECTOR (8135128).	1		XBFZZ
-20	21202-90063	S0356		HOUSING, THERMOSTAT (8135141).	1		PAFZZN
-21	08110-82062	S0356		SCREW AND WASHER (8135270). (AP)	4		XBFZZ
-22	11045-76201	S0356		GASKET (8135229) (K1) (K2).	1		XBFZZ
-23	11023-07000	S0356		SENSOR, THERMOSTAT (8135146).	1		PAFZZN
-24	01351-10124	S0356		GASKET (8135147).	1		XBFZZ
-25	27070-21600	S0356		COUPLING, HOSE (8135145).	1		XBFZZ
-26	11060-C6801	S0356		OUTLET, WATER (8135143).	REF		PAFZZN
-27	08110-83062	S0356		SCREW AND WASHER (8135271). (AP)	REF		XBFZZ
-28	11062-L6000	S0356		GASKET (8135230) (K1) (K2).	REF		PAFZZN
-29	21200-96011	S0356		THERMOSTAT (8135140).	1		PAFZZN
	10103-79129	S0356		KIT, GASKET, ENGINE (INCLUDES. PARTS LISTED ABOVE DENOTED BY K1) (8135231) (K1)	REF		PAFZZN
	10101-79128	S0356		KIT, ENGINE OVERHAUL (INCLUDES. PARTS LISTED ABOVE DENOTED BY K2) (8135200) (K2)	REF		PAFZZN

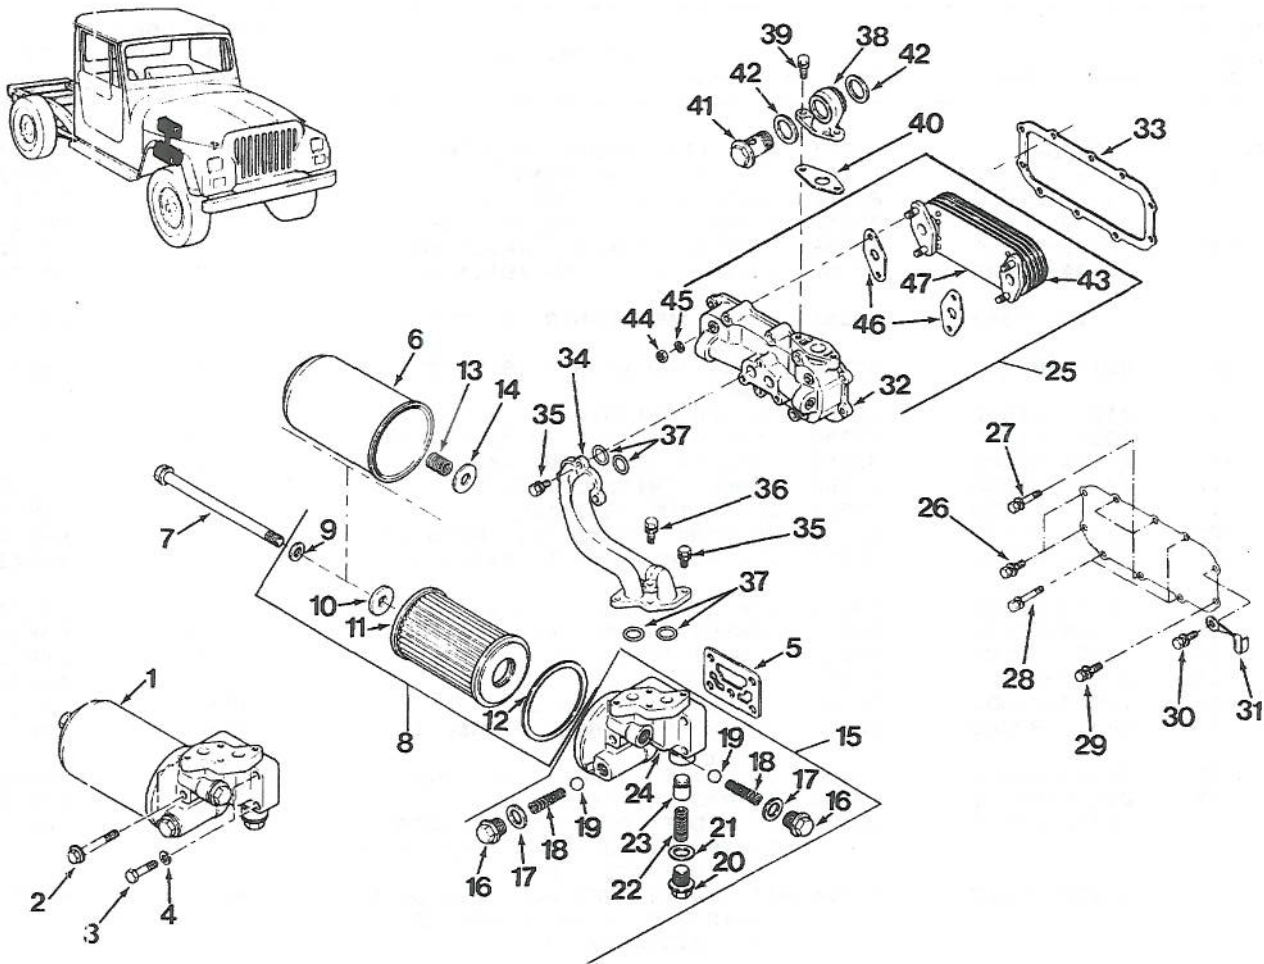

09874B

FIGURE 89. OIL COOLER AND FILTER GROUP

FIG. 8: INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
89--	NO NUMBER	92871		OIL COOLER AND FILTER GROUP.	REF		
-1	15200-C6800	S0356		(SEE FIGURE 2 FOR NHA) .. FILTER ASSEMBLY, FLUID	1		AFFFF
-2	08124-05028	S0356		.. SCREW AND WASHER (8135376).	2		XBFZZ
-3	08124-09510	S0356		.. SCREW, CAP, HEX HEAD (8135377).	2		XBFZZ
-4	08915-14010	S0356		.. WASHER, SPRING (8135057) (AP).	2		XBFZZ
-5	15239-V1700	S0356		.. GASKET, OIL FILTER MOUNTING.	1		XBFZZ
-6	15201-61502	S0356		.. CASE, OIL FILTER ELEMENT.	1		XBFZZ
-7	15213-61502	S0356		.. BOLT, CENTER (8135093) (AP).	1		XBFZZ
-8	15208-61525	S0356		.. KIT, ELEMENT, OIL FILTER	1		PAFZZN
-9	NO NUMBER	S0356		.. SEAL, BOLT, OUTER (NOT SERVICED	1		
-10	NO NUMBER	S0356		.. SEAL, BOLT, INNER (NOT SERVICED	1		
-11	NO NUMBER	S0356		.. ELEMENT, OIL FILTER (NOT	1		
				SERVICED SEPARATELY)			

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
89-12	NO NUMBER	S0356		... PACKING, PREFORMED (NOT SERVICED SEPARATELY)	1		
-13	15224-61501	S0356		... SPRING SET (8135094)	1		XBFZZ
-14	15291-90003	S0356		... RETAINER, SPRING (8135375)	1		XBFZZ
-15	15237-C6800	S0356		... BRACKET ASSEMBLY (NOT SERVICED SEPARATELY)	1		XBFZZ
-16	15303-61503	S0356		... VALVE, PLUG (8135098)	2		XA
-17	15304-61501	S0356		... GASKET, PLUG (8135097)	2		XA
-18	15301-76201	S0356		... SPRING, SHORT VALVE (8135096)	2		XA
-19	15300-76200	S0356		... VALVE, SHORT (8135095)	2		XA
-20	15303-61503	S0356		... VALVE, PLUG (8135098)	1		XA
-21	15304-61501	S0356		... GASKET, PLUG (8135097)	1		XA
-22	15341-61500	S0356		... SPRING, VALVE (8135100)	1		XA
-23	15280-90001	S0356		... VALVE (8135099)	1		XA
-24	NO NUMBER	S0356		... BRACKET (NOT SERVICED SEPARATELY)	1		
-25	21300-C8700	S0356		... COOLER ASSEMBLY, OIL (8983501420)	1		XBFZZ
-26	08110-85562	S0356		... SCREW AND WASHER (8135272) (AP)	3		XBFZZ
-27	08110-82062	S0356		... SCREW AND WASHER (8135270) (AP)	2		XBFZZ
-28	08110-86562	S0356		... SCREW AND WASHER (8135275) (AP)	3		XBFZZ
-29	08110-83062	S0356		... SCREW AND WASHER (8135271) (AP)	1		XBFZZ
-30	08110-82525	S0356		... SCREW AND WASHER (8135380) (AP)	1		XBFZZ
-31	24210-01W05	S0356		... CLIP (8135382)	1		XBFZZ
-32	21300-90066	S0356		... COOLER, OIL (NOT SERVICED SEPARATELY)	1		XBFZZ
-33	21307-61520	S0356		... GASKET, COVER (8135221)	1		XBFZZ
-34	21304-C8700	S0356		... PIPE, OIL COOLER (8983501421)	1		XBFZZ
-35	08110-82062	S0356		... SCREW AND WASHER (8135270) (AP)	5		XBFZZ
-36	08110-82562	S0356		... SCREW AND WASHER (8135381) (AP)	2		XBFZZ
-37	21306-61520	S0356		... RETAINER, OIL SEAL (8135222)	4		XBFZZ
-38	21309-C8700	S0356		... CONNECTOR, OIL COOLER (8983501422)	1		XBFZZ
-39	08110-82062	S0356		... SCREW AND WASHER (8135270) (AP)	2		XBFZZ
-40	21310-90011	S0356		... GASKET, CONNECTOR (8135224)	1		XBFZZ
-41	21320-76200	S0356		... BOLT, CONNECTOR (8983501423)	1		XBFZZ
-42	21331-76201	S0356		... GASKET, BOLT (8135223)	2		XBFZZ
-43	21302-C6801	S0356		... HOUSING, OIL COOLER (8135390)	1		XBFZZ
-44	08911-10810	S0356		... NUT, HEX (8135485) (AP)	4		XBFZZ
-45	08915-13810	S0356		... WASHER, SPRING (8135276) (AP)	4		XBFZZ
-46	21303-61520	S0356		... GASKET, MOUNTING (8135225)	2		XBFZZ
-47	21317-99004	S0356		... ELEMENT, OIL COOLER (8135391)	1		XBFZZ

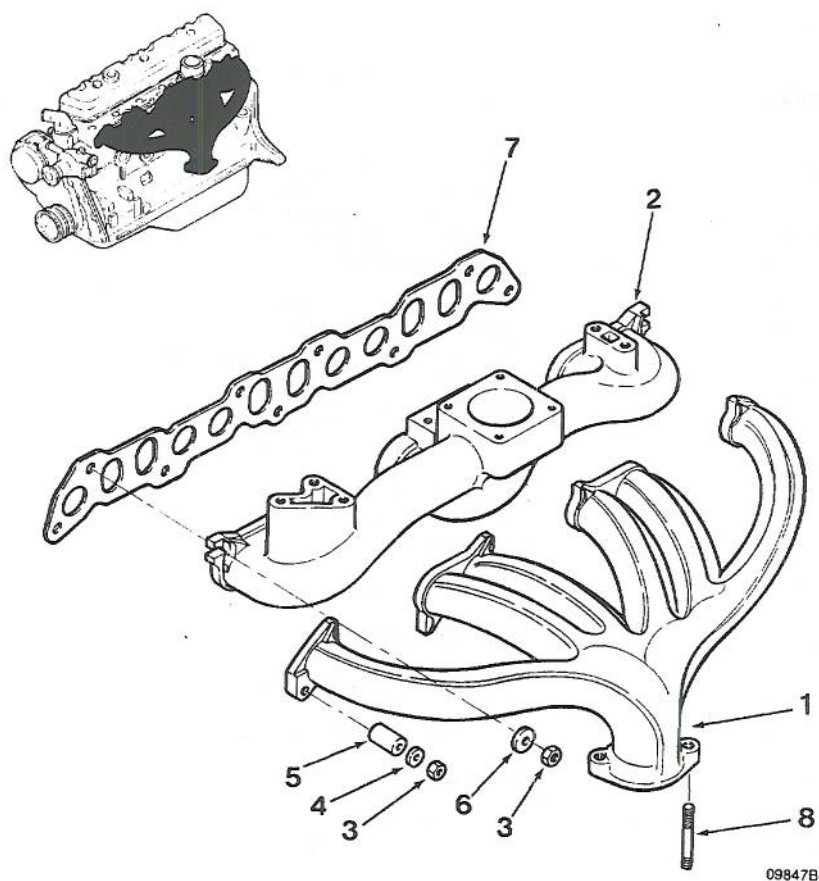


FIGURE 90. INTAKE AND EXHAUST MANIFOLDS GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS USABLE		
					PER ASSY.	ON CODE	SMR CODE
90-	NO NUMBER	92871		INTAKE AND EXHAUST MANIFOLDS GROUP (PARTS KIT AVAILABLE) (SEE FIGURE 2 FOR NHA)	REF		
-1	14004-C6801	S0356		. MANIFOLD, EXHAUST (8135481)	1		PAFZZN
-2	14003-C6800	S0356		. MANIFOLD, INTAKE (8135480)	1		PAFZZN
-3	08911-10810	S0356		. NUT, HEX (8135485) (AP)	9		XBFZZ
-4	08915-13810	S0356		. WASHER, SPRING (8135276) (AP)	3		XBFZZ
-5	14038-90001	S0356		. SPACER (8135484) (AP)	1		XBFZZ
-6	14037-32200	S0356		. WASHER, FLAT (8135483) (AP)	6		XBFZZ
-7	14035-90000	S0356		. GASKET (8135218) (K1) (K2)	1		PAFZZN
-8	08267-03510	S0356		. STUD (8135482)	2		XBFZZ
	10103-Z9129	S0356		KIT, ENGINE GASKET (INCLUDES PARTS LISTED ABOVE DENOTED BY K1) (8135231) (K1)	REF		PAFZZN
	10101-Z9128	S0356		KIT, ENGINE OVERHAUL (INCLUDES PARTS LISTED ABOVE DENOTED BY K2) (8135200) (K2)	REF		PAFZZN



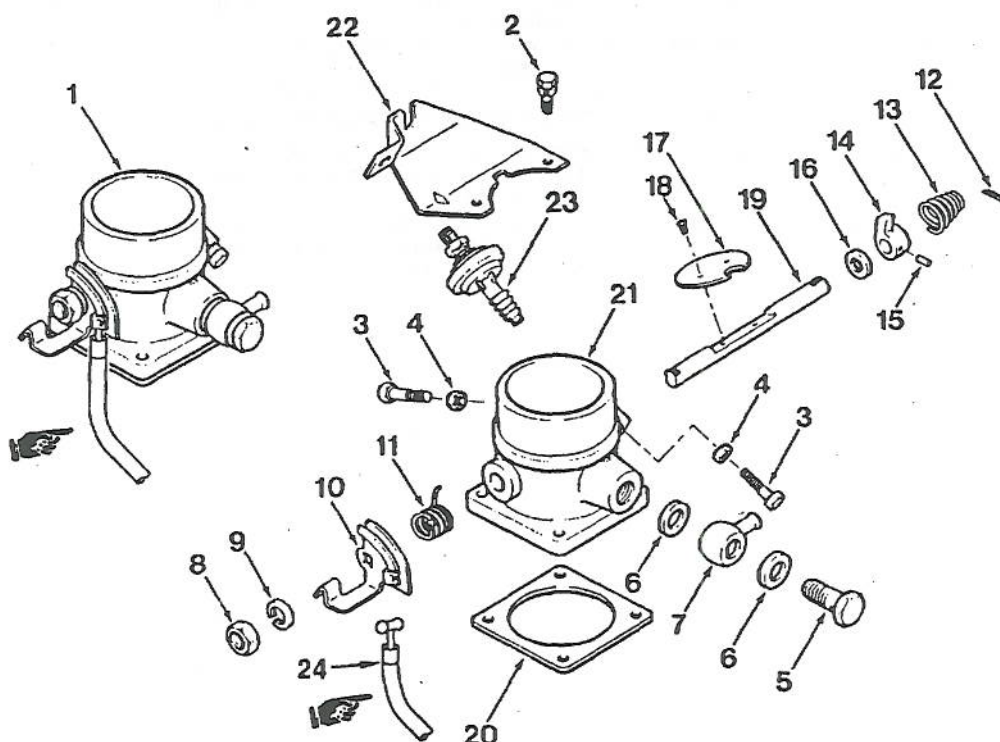


FIGURE 91. VENTURI AND DASHPOT ASSEMBLY GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS USABLE PER ASSY.	ON CODE	SMR CODE
91-	NO NUMBER	92871		VENTURI AND DASHPOT ASSEMBLY GROUP (PARTS KIT AVAILABLE) (SEE FIGURE 2 FOR NHA)	REF		
-1	14325-C6802	S0356		VENTURI ASSEMBLY (8135486).	1		PAFZZN
-2	08360-62514	S0356		SCREW AND WASHER (8135487) (AP)	4		XBFZZ
-3	14333-67000	S0356		SCREW, LEVER STOP (8135493)	2		XA
-4	08911-20610	S0356		NUT, HEX (8135494)	2		XA
-5	14371-37500	S0356		SCREW, PIPE JOINT (8135503)	1		XA
-6	16885-90001	S0356		GASKET (8135504)	2		XA
-7	14349-37701	S0356		JOINT, HOSE (8135505)	1		XA
-8	19256-99002	S0356		NUT, HEX (8135501)	1		XA
-9	16825-90005	S0356		WASHER, SPRING (8135502)	1		XA
-10	14341-C6802	S0356		LEVER, CONTROL (8135500)	1		XA
-11	14348-C6803	S0356		SPRING, LEVER (8135499)	1		XA
-12	19352-90004	S0356		PIN, SPLIT (8135508)	1		XA
-13	14348-C6804	S0356		SPRING (8135507)	1		XA
-14	14332-37500	S0356		STOPPER, VALVE (8135492)	1		XA
-15	14329-37500	S0356		PIN, TAPER (8135506)	1		XA
-16	14345-37500	S0356		SHIM, 1.0 (8135495)	AR		XA

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
91-	14345-37501	S0356	.. SHIM, 2.0 (8135496)	..	AR		XA
	14345-37502	S0356	.. SHIM, 5.0 (8135497)	..	AR		XA
-17	14331-61501	S0356	.. VALVE, VENTURI (8135491)	..	1		XA
-18	14341-J6500	S0356	.. SCREW (8135498) (AP)	..	2		XA
-19	14330-C6800	S0356	.. SHAFT (8135490)	..	1		XA
-20	14327-61500	S0356	.. GASKET, VENTURI (8135216) (K1)	..	1		PAFZZN
			(K2)				
-21	NO NUMBER	S0356	.. HOUSING, VENTURI (NOT SERVICED	..	1		
			SEPARATELY)				
-22	18424-90005	S0356	.. BRACKET, ACCELERATOR WIRE	..	1		XBFZZ
			(8135488)				
-23	14320-Q4000	S0356	.. DASHPOT ASSEMBLY (8135489)	..	1		PAFZZN
-24	53001372	92871	.. CABLE, AUTOMATIC TRANSMISSION	..	1		PAFZZN
	10103-29129	S0356	KIT, ENGINE GASKET (INCLUDES	..	REF		PAFZZN
			PARTS LISTED ABOVE DENOTED BY				
			K1) (8135231) (K1)				
	10101-29128	S0356	KIT, ENGINE OVERHAUL (INCLUDES	..	REF		PAFZZN
			PARTS LISTED ABOVE DENOTED BY				
			K2) (8135200) (K2)				

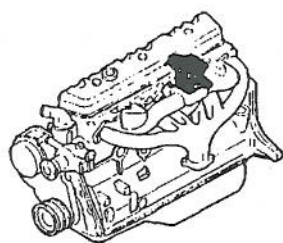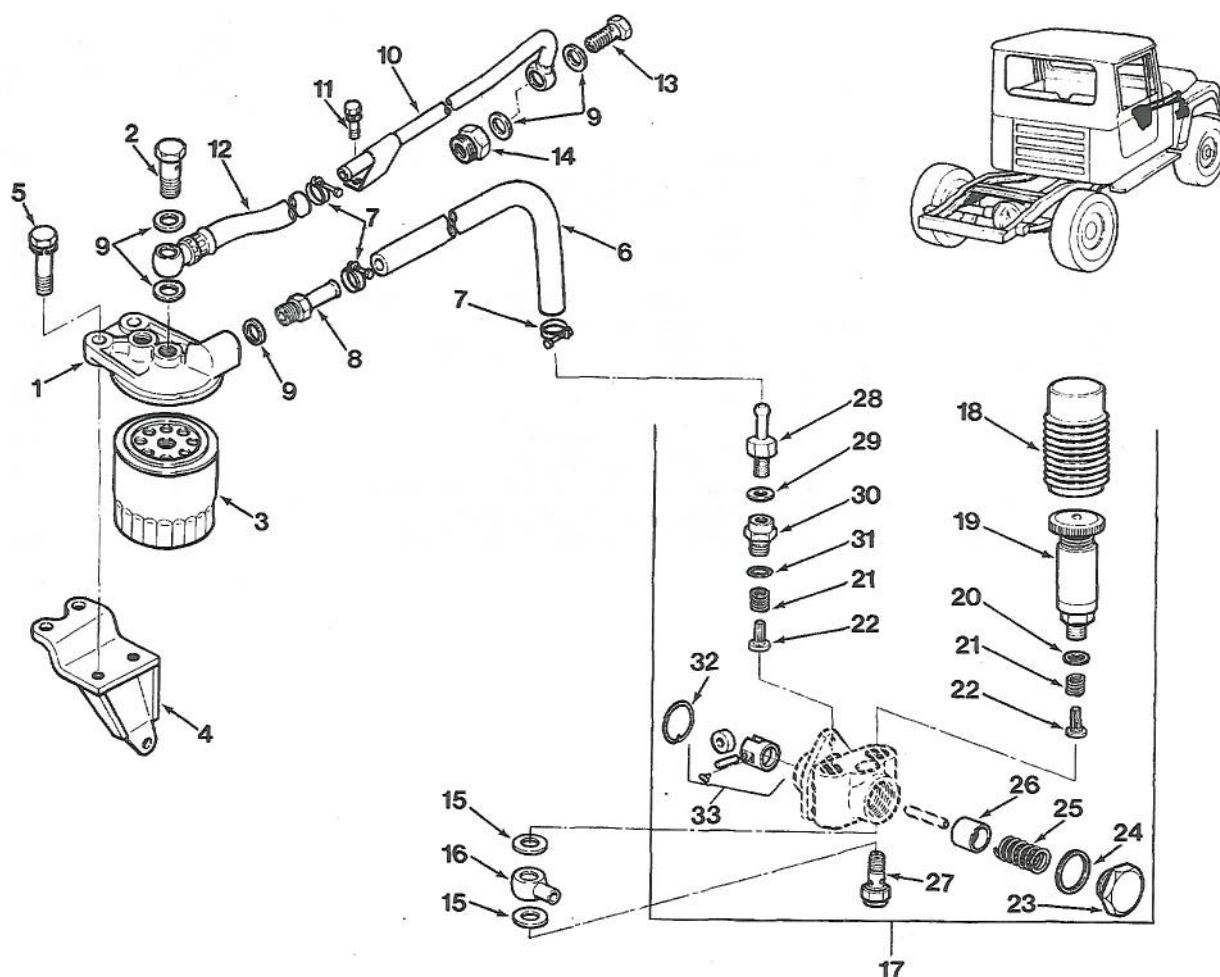


09770B

FIGURE 92. FUEL FILTER AND FUEL PUMP ASSEMBLY GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
92-	NO NUMBER	92871		FUEL FILTER AND FUEL PUMP. ASSEMBLY GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	NO NUMBER	92871		FILTER ASSEMBLY, FUEL.	1		
-2	16442-C6800	S0356		COVER, FUEL FILTER (8135102).	1		XBFZZ
-3	16454-99002	S0356		SCREW, CONNECTOR TO INJECTOR. PUMP (8135103)	1		XBFZZ
-4	16403-Z7000	S0356		CARTRIDGE ASSEMBLY, FUEL FILTER (8135101)	1		PAFZZN
-5	16419-C8700	S0356		BRACKET, FILTER (8983501424)	1		XBFZZ
-6	08114-02562	S0356		SCREW AND WASHER (8135409). (AP)	2		XBFZZ
-7	16817-C6801	S0356		HOSE, FUEL (8135412)	1		XBFZZ
-8	08723-11800	S0356		CLAMP, HOSE (8135411) (AP)	3		XBFZZ
-9	16454-Q4000	S0356		CONNECTOR, HOSE (8135416).	1		XBFZZ
-10	01351-11144	S0356		GASKET (8135454).	5		XBFZZ
-11	16818-C6801	S0356		PIPE, FUEL (8135413)	1		XBFZZ
-12	08360-51026	S0356		SCREW AND WASHER (8135415). (AP)	2		
-13	16819-C6801	S0356		HOSE, FUEL (8135414)	1		XBFZZ
-14	16757-37500	S0356		BOLT, EYE (8135440).	1		XBFZZ
-15	16752-37500	S0356		ADAPTER (8135117)	1		XBFZZ
-16	01351-11144	S0356		GASKET (8135454).	4		XBFZZ
-17	16818-90066	S0356		PIPE, FUEL (8135453)	1		XBFZZ

FIG. 8: INDEX				DESCRIPTION	UNITS		USABLE ON CODE	SMR CODE
NO.	PART NUMBER	FSCM	1234567		PER ASSY.			
92-17	16640-C6801	S0356		PUMP ASSEMBLY, FEED (8135450).	1			PAFZZN
-18	16644-90000	S0356		COVER (8135394).	1			XA
-19	16655-37501	S0356		PUMP, PRIMING (8135406).	1			XA
-20	16659-37500	S0356		WASHER (8135403).	1			XA
-21	16653-37500	S0356		SPRING, CHECK VALVE (8135401).	2			XA
-22	16652-37500	S0356		VALVE, CHECK (8135400).	2			XA
-23	16647-37500	S0356		PLUG, PISTON CHAMBER (8135397).	1			XA
-24	16657-37500	S0356		WASHER (8135398).	1			XA
-25	16646-37500	S0356		SPRING, PISTON (8135396).	1			XA
-26	16645-37501	S0356		PISTON (8135395).	1			XA
-27	16656-37501	S0356		BOLT, EYE (8135407).	1			XA
-28	16754-C6800	S0356		JOINT, HOSE (8135408).	1			XA
-29	16662-37500	S0356		GASKET (8135393).	1			XA
-30	16658-99000	S0356		ADAPTER (8135402).	1			XA
-31	19278-99010	S0356		PACKING, PREFORMED (8135404).	1			XA
-32	16660-37500	S0356		RING, TAPPET (8135405).	1			XA
-33	16648-37502	S0356		TAPPET ASSEMBLY (8135399).	1			XA

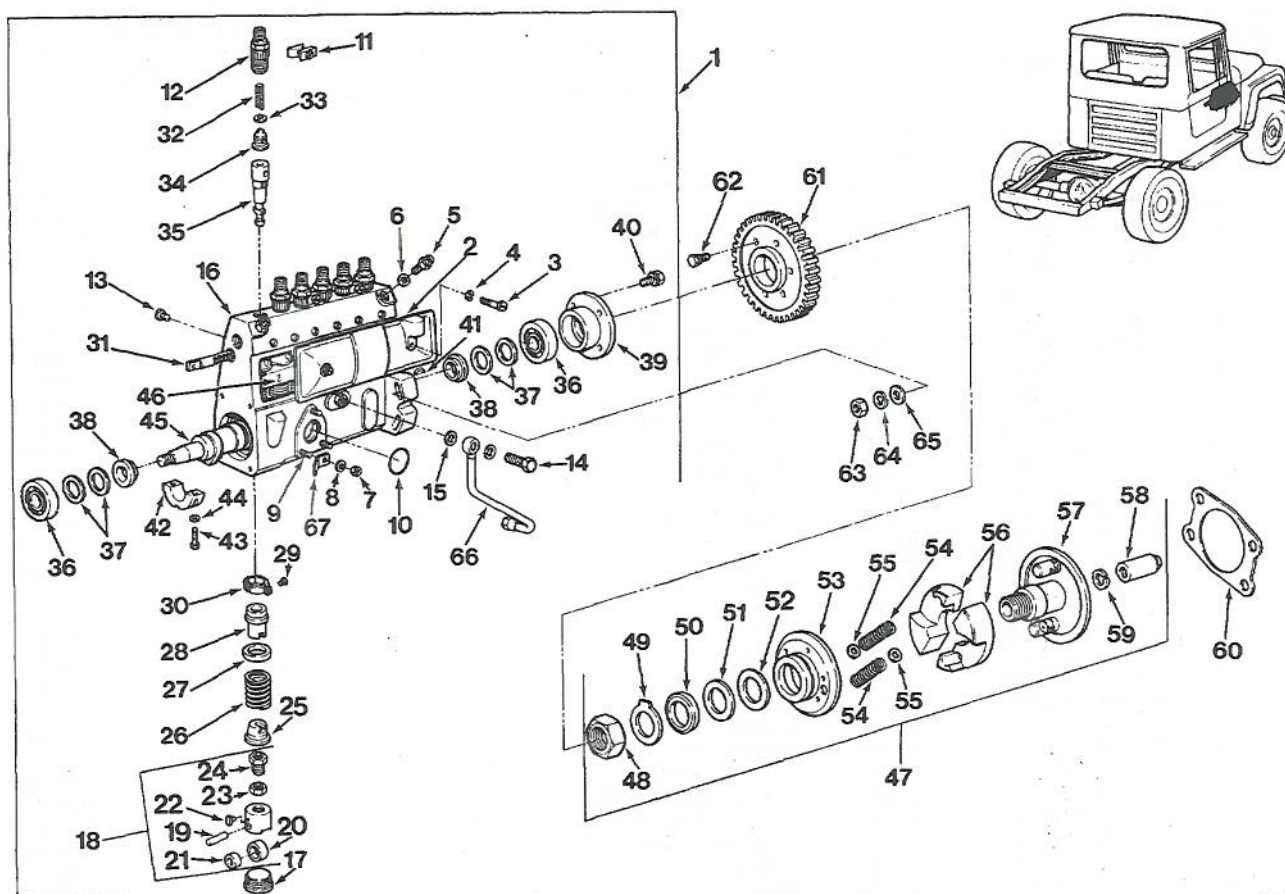


09777B

FIGURE 93. INJECTION PUMP ASSEMBLY

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
93-	16700-90061	S0356		PUMP ASSEMBLY, INJECTION (PARTS KIT AVAILABLE) (8983501186) (SEE FIGURE 2 FOR NHA)	REF		XBFZZ
-1	16703-C6800	S0356		PUMP ASSEMBLY, INJECTION (INTERNAL PARTS) (8135447)	1		PAFDDT
-2	16720-C6800	S0356		COVER, PUMP (8135120)	1		PAFBZN
-3	16723-37503	S0356		SCREW, CAP, HEX HEAD (8135121) (AP)	2		XBF7Z
-4	16716-37500	S0356		GASKET (8135122) (AP)	2		PAFZZN
-5	16711-99000	S0356		BOLT, AIR BLEED (8135118)	2		PAFBZN
-6	16778-99002	S0356		GASKET (8135119)	2		PAFZZN
-7	08911-20610	S0356		NUT, HEX (8135494)	3		XA
-8	16825-90004	S0356		WASHER, SPRING (8135123)	3		PAFZZN
-9	16729-37500	S0356		STUD (8135091)	3		PAFZZN
-10	19278-99014	S0356		PACKING, PREFORMED (8135125)	1		PAFZZN
-11	16761-99002	S0356		PLATE, CLAMP (8135127)	3		PAFBZN
-12	16778-37500	S0356		HOLDER, DELIVERY (8135126)	6		PAFBZN
-13	16726-37500	S0356		SCREW, RACK STOP (8135439)	1		PAFZZN
-14	16757-37500	S0356		BOLT, EYE (8135440)	1		XBF7Z
-15	16778-99001	S0356		GASKET (8135446)	2		PAFZZN
-16	16710-76203	S0356		HOUSING ASSEMBLY	1		PAFFFP
-17	16714-37501	S0356		PLUG	6		PAFZZN
-18	16745-95000	S0356		TAPPET ASSEMBLY	6		PAFBZN
-19	16748-37500	S0356		PIN	1		XBFZZ
-20	16741-99004	S0356		ROLLER	1		XBF7Z
-21	16743-99003	S0356		BUSHING	1		XBFZZ
-22	16759-37500	S0356		GUIDE	1		XBFZZ

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
93-23	16751-37500	S0356	...	NUT, HEX	1		XBFZZ
-24	16750-37500	S0356	...	BOLT, TAPPET	1		XBFZZ
-25	16772-37500	S0356	...	SEAT, SPRING	6		PAFBZN
-26	16770-C6800	S0356	...	SPRING, PLUNGER	6		PAFZZN
-27	16769-37500	S0356	...	SEAT, SPRING	6		PAFZZN
-28	16776-37500	S0356	...	SLEEVE, CONTROL	6		PAFBZN
-29	16768-37500	S0356	...	SCREW	6		XBFZZ
-30	16767-37500	S0356	...	PINION	6		PAFBZN
-31	16727-99006	S0356	...	RACK, CONTROL	1		PAFBZN
-32	16776-29000	S0356	...	SPRING	6		PAFBZN
-33	16777-37500	S0356	...	GASKET	6		PAFZZN
-34	16773-37500	S0356	...	VALVE, DELIVERY	6		PAFBZN
-35	16760-99003	S0356	...	PLUNGER ASSEMBLY	6		PAFBZN
-36	16739-99001	S0356	...	BEARING	AR		PAFBZN
	16739-37500	S0356	...	BEARING	AR		PAFBZN
-37	16741-37500	S0356	...	SHIM, 0.1	AR		PAFZZN
	16741-37501	S0356	...	SHIM, 0.12	AR		PAFZZN
	16741-37502	S0356	...	SHIM, 0.14	AR		PAFZZN
	16741-37503	S0356	...	SHIM, 0.16	AR		PAFZZN
	16741-37504	S0356	...	SHIM, 0.18	AR		PAFZZN
	16741-37505	S0356	...	SHIM, 0.5	AR		PAFZZN
	16741-37506	S0356	...	SHIM, 0.3	AR		PAFZZN
	16741-37507	S0356	...	SHIM, 0.7	AR		PAFZZN
	16741-37508	S0356	...	SHIM, 1.0	AR		PAFZZN
-38	16740-37500	S0356	...	RING	AR		PAFZZN
-39	16744-29001	S0356	...	COVER	1		PAFBZN
-40	16754-37501	S0356	...	SCREW, CAP, HEX HEAD (AP)	4		XBFZZ
-41	16742-37501	S0356	...	KEY, WOODRUFF	1		XBFZZ
-42	16754-61501	S0356	...	BUSHING, CENTER	1		PAFBZN
-43	16791-61500	S0356	...	SCREW, CAP, HEX HEAD (AP)	2		XBFZZ
-44	16792-61500	S0356	...	GASKET (AP)	2		PAFZZN
-45	16738-C6800	S0356	...	CAMSHAFT	1		PAFBZN
-46	16725-C6800	S0356	...	PLATE	1		PAFBZN
-47	16810-C6800	S0356	...	TIMER ASSEMBLY (8135449)	1		PAFFFFP
-48	16829-37500	S0356	...	NUT, HEX	1		XBFZZ
-49	16828-37500	S0356	...	PLATE, LOCK	1		PAFBZN
-50	16827-99000	S0356	...	WASHER, FLAT	1		XBFZZ
-51	16826-99000	S0356	...	SHIM, 0.12	AR		PAFZZN
	16826-99001	S0356	...	SHIM, 0.14	AR		PAFZZN
	16826-99002	S0356	...	SHIM, 0.16	AR		PAFZZN
	16826-99003	S0356	...	SHIM, 0.18	AR		PAFZZN
	16826-99004	S0356	...	SHIM, 0.50	AR		PAFZZN
	16826-99005	S0356	...	SHIM, 0.20	AR		PAFZZN
	16826-99006	S0356	...	SHIM, 0.30	AR		PAFZZN
	16826-99007	S0356	...	SHIM, 0.10	AR		PAFZZN
-52	16825-99000	S0356	...	WASHER, FLAT	1		XBFZZ
-53	16811-99000	S0356	...	FLANGE	1		PAFZZN
-54	16821-C6800	S0356	...	SPRING	2		PAFBZN
-55	16822-37500	S0356	...	SHIM, 0.1	AR		PAFZZN
	16822-37501	S0356	...	SHIM, 0.3	AR		PAFZZN
	16822-37502	S0356	...	SHIM, 0.5	AR		PAFZZN
	16822-37503	S0356	...	SHIM, 0.2	AR		PAFZZN
	16822-37504	S0356	...	SHIM, 0.6	AR		PAFZZN
	16822-37505	S0356	...	SHIM, 1.0	AR		PAFZZN
-56	16823-C6800	S0356	...	FLYWEIGHT	2		PAFBZN
-57	16824-C6800	S0356	...	HOLDER, FLYWEIGHT	1		PAFBZN
-58	16831-37500	S0356	...	NUT, TIMER ASSEMBLY (8135522)	1		PAFZZN
-59	16830-37500	S0356	...	WASHER, SPRING (8135523)	1		XBFZZ
-60	16701-37504	S0356	...	GASKET, INJECTION PUMP (8135226) (K2)	1		PAFZZN
-61	13052-37500	S0356	...	GEAR, DRIVE (8135451)	1		PAFBZN
-62	08110-61210	S0356	...	SCREW, CAP, HEX HEAD (8135452)	6		XBFZZ
-63	08911-14010	S0356	...	NUT, HEX (8135427)	4		XBFZZ
-64	08915-14010	S0356	...	WASHER, SPRING (8135057)	4		XBFZZ
-65	08915-44010	S0356	...	WASHER, PLAIN (8135429)	4		XBFZZ
-66	13108-C6800	S0356	...	TUBE, OIL (8135430)	1		PAFBZN
-67	16643-C6800	S0356	...	CLAMP (8135383)	1		PAFZZN

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS USABLE		
					PER ASSY.	ON CODE	SMR CODE
93-	10101-29128	50356		KIT, ENGINE OVERHAUL (INCLUDES PARTS LISTED ABOVE DENOTED BY K2) (8135200) (K2)	REF		PAFZZN

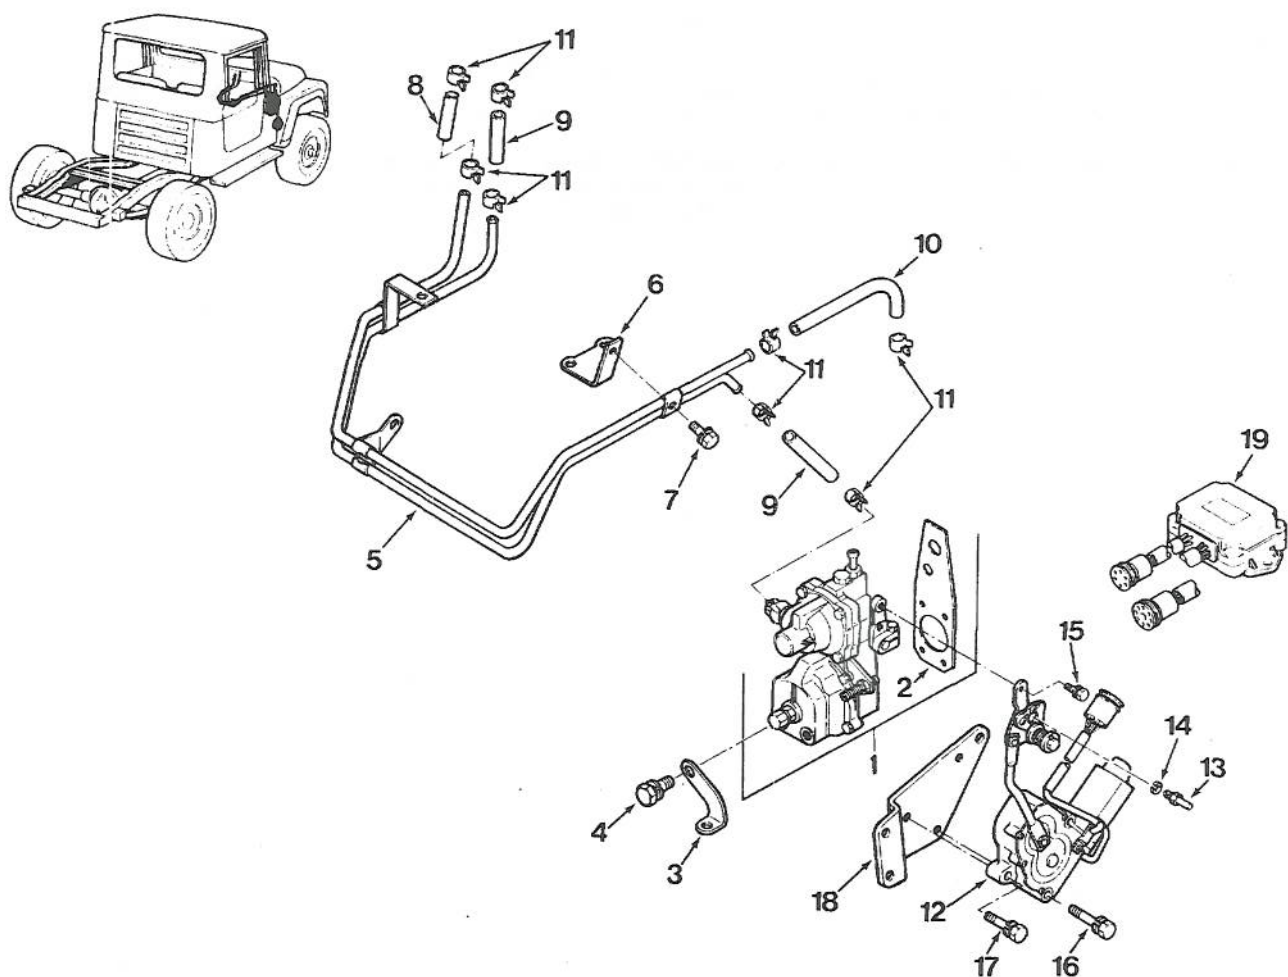


09784B

FIGURE 94. GOVERNOR ASSEMBLY INSTALLATION

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
94-	NO NUMBER	92871		GOVERNOR ASSEMBLY INSTALLATION (SEE FIGURE 2 FOR NHA)	REF		
-1	19200-90019	S0356		GOVERNOR ASSEMBLY (8135448) (SEE FIGURE 95 FOR DETAILS)	1		PAFFFP
-2	19389-99007	S0356		GASKET (8135153)	1		PAFZZN
-3	16813-C6801	S0356		SUPPORT, INJECTION PUMP (8135431)	1		PAFBZN
-4	08114-02062	S0356		SCREW AND WASHER (8135428) (AP)	1		XBFZZ
-5	19820-C7802	S0356		TUBE, GOVERNOR (8135392)	1		PAFZZN
-6	19823-C6801	S0356		BRACKET, TUBE (8135389)	1		MFFFZ
-7	08110-83062	S0356		SCREW AND WASHER (8135271) (AP)	1		XBFZZ
-8	11032-C6803	S0356		HOSE, NONMETALLIC (8135387)	1		XBFZZ
-9	11032-C6801	S0356		HOSE, NONMETALLIC (8135378)	2		XBFZZ
-10	11032-C6802	S0356		HOSE, NONMETALLIC (8135379)	1		XBFZZ
-11	21383-Z5000	S0356		CLIP, HOSE (FOR ITEMS 8, 9, AND 10) (8135385) (AP)	8		XBFZZ
-12	19811-90001	S0356		CONTROLLER, INJECTION PUMP (8135432)	1		PAFBZN
-13	19813-31W01	S0356		BOLT, CONTROLLER (8135458) (AP)	1		XBFZZ
-14	08915-13610	S0356		WASHER, SPRING (8135463) (AP)	1		XBFZZ
-15	08363-61214	S0356		SCREW AND WASHER (8135462) (AP)	1		XBFZZ

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE DN CODE	SMR CODE
94-16	08110-84562	S0356		. SCREW AND WASHER (8135273). (AP)	2		XBFZZ
-17	08110-83062	S0356		. SCREW AND WASHER (8135271). (AP)	1		XBFZZ
-18	19816-C6802	S0356		. BRACKET, CONTROLLER (8135460).	1		PAFBZN
-19	19850-31W02	S0356		. RELAY ASSEMBLY, CONTROLLER, INJECTION PUMP (8135106)	1		PAFBZN

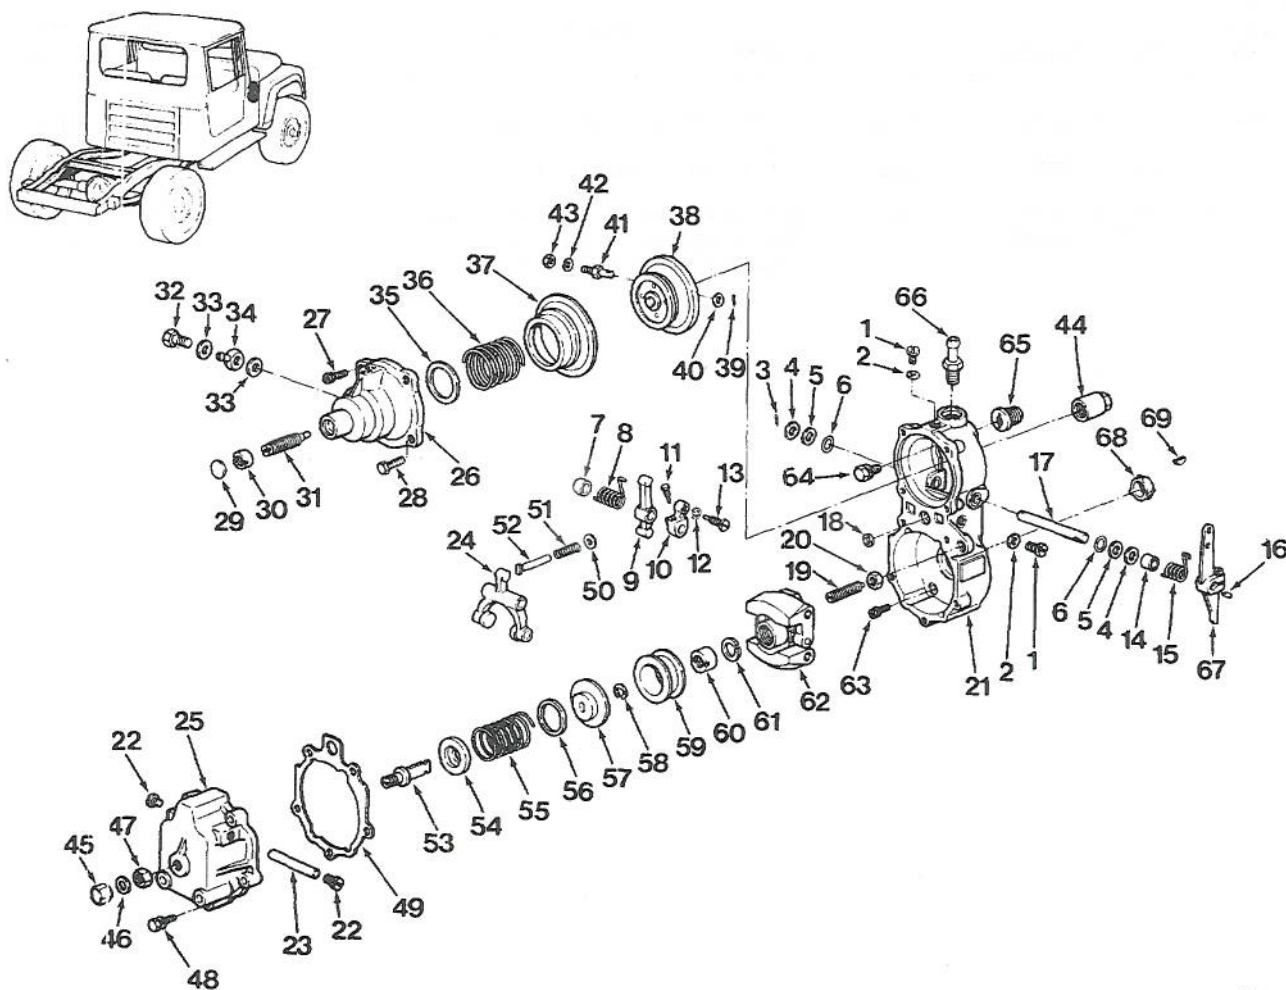


09851B

FIGURE 95. GOVERNOR ASSEMBLY

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
95-	19200-90019	S0356		GOVERNOR ASSEMBLY (8135448).	REF		
				(SEE FIGURE 94 FOR NHA)			
-1	19201-90705	S0356		HOUSING ASSEMBLY, GOVERNOR	1		PAFBZN
	19220-37500	S0356		PLUG, GOVERNOR HOUSING.	2		PAFZZN
-2	19211-37500	S0356		GASKET, PLUG, GOVERNOR HOUSING	2		PAFZZN
				(8135444)			
-3	19235-61500	S0356		PIN, SPLIT, GOVERNOR HOUSING	1		PAFZZN
				(8135456)			
-4	19212-37500	S0356		WASHER, GOVERNOR HOUSING.	AR		XBFZZ
				(8135445)			
	19212-37501	S0356		WASHER, GOVERNOR HOUSING.	AR		XBFZZ
				(8135455)			
-5	19215-37500	S0356		WASHER, GOVERNOR HOUSING.	2		XBFZZ
				(8135441)			
-6	19218-37500	S0356		PACKING, PREFORMED, GOVERNOR	2		PAFZZN
				HOUSING (8135442)			
-7	19294-95000	S0356		BUSHING, GOVERNOR HOUSING	1		PAFBZN
				(8135457)			
-8	19205-99000	S0356		SPRING, GOVERNOR HOUSING.	1		PAFZZN
-9	19203-99000	S0356		LEVER, GOVERNOR HOUSING	1		PAFBZN

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
95-10	19203-99001	S0356	..	LEVER, GOVERNOR HOUSING	1		PAFBZN
-11	19206-99001	S0356	..	BOLT, LEVER, GOVERNOR HOUSING.	1		PAFBZN
-12	16755-37500	S0356	..	WASHER, SPRING, LEVER, GOVERNOR HOUSING	1		PAFZZN
-13	19206-99006	S0356	..	SCREW, LEVER, GOVERNOR HOUSING	1		PAFZZN
-14	19294-95000	S0356	..	BUSHING, GOVERNOR HOUSING (8135457)	1		PAFBZN
-15	19221-76200	S0356	..	SPRING, SHAFT, GOVERNOR HOUSING. (8135433)	1		PAFZZN
-16	19265-37500	S0356	..	KEY, WOODRUFF, SHAFT, GOVERNOR. HOUSING (8135459)	1		PAFZZN
-17	19206-76200	S0356	..	SHAFT, GOVERNOR HOUSING	1		PAFBZN
-18	19388-99003	S0356	..	SEAL, OIL, GOVERNOR HOUSING. (8135161)	1		PAFZZN
-19	19208-99000	S0356	..	CAPSULE, SPRING SCREW, GOVERNOR. HOUSING (8135461)	1		PAFZZN
-20	19133-99004	S0356	..	NUT, CAPSULE, GOVERNOR HOUSING (8135464)	1		PAFZZN
-21	NO NUMBER	92871	..	HOUSING, GOVERNOR	1		
-22	19217-99000	S0356	..	COVER ASSEMBLY, GOVERNOR	1		PAFBZN
-23	19219-99002	S0356	..	SCREW, COVER ASSEMBLY (8135158)	2		PAFZZN
-24	19204-99004	S0356	..	PIN, COVER ASSEMBLY	1		PAFZZN
-25	19203-99002	S0356	..	FORK, COVER ASSEMBLY.	1		PAFBZN
-26	NO NUMBER	92871	..	COVER	1		
-27	19243-J2001	S0356	..	COVER	1		PAFBZN
-28	19245-37503	S0356	..	SCREW, CAP, HEX HEAD (8135169). (AP)	3		XBFZZ
-29	19245-37503	S0356	..	SCREW, CAP, HEX HEAD (8135169). (AP)	1		XBFZZ
-30	19268-86000	S0356	..	PLUG, COVER (8135166).	1		PAFZZN
-31	19248-37500	S0356	..	NUT, COVER (8135167)	1		XBFZZ
-32	19247-37500	S0356	..	CAPSULE, SPRING SCREW (8135168).	1		PAFZZN
-33	16757-76201	S0356	..	BOLT, EYE, COVER (8135164).	1		PAFZZN
-34	16885-90001	S0356	..	GASKET, EYE BOLT (8135504)	2		XA
-35	14349-J2001	S0356	..	JOINT, HOSE, COVER (8135159).	1		PAFZZN
-36	19241-37500	S0356	..	SHIM, 0.5, COVER.	AR		PAFZZN
-37	19241-37501	S0356	..	SHIM, 1.0, COVER.	AR		PAFZZN
-38	19241-37502	S0356	..	SHIM, 1.5, COVER.	AR		PAFZZN
-39	19241-37503	S0356	..	SHIM, 2.0, COVER.	AR		PAFZZN
-40	19241-37504	S0356	..	SHIM, 0.2, COVER.	AR		PAFZZN
-41	19241-37505	S0356	..	SHIM, 0.3, COVER.	AR		PAFZZN
-42	19241-37506	S0356	..	SHIM, 2.5, COVER.	AR		PAFZZN
-43	19241-37507	S0356	..	SHIM, 3.0, COVER.	AR		PAFZZN
-44	19240-C6800	S0356	..	SPRING, GOVERNOR	1		PAFZZN
-45	19244-C6800	S0356	..	STOPPER, COVER	1		PAFZZN
-46	19225-99003	S0356	..	DIAPHRAGM, COVER (8135509)	1		PAFZZN
-47	19235-61500	S0356	..	PIN, SPLIT, COVER (8135456)	1		PAFZZN
-48	19234-37500	S0356	..	WASHER, DIAPHRAGM (8135149).	1		PAFZZN
-49	19231-96000	S0356	..	SCREW, DIAPHRAGM (8135124)	1		PAFZZN
-50	19232-61500	S0356	..	WASHER, SPRING (8135160)	1		PAFZZN
-51	19256-90000	S0356	..	NUT, HEX (8135155)	1		XBFZZ
-52	19261-99005	S0356	..	CAP, COVER (8135150)	1		PAFZZN
-53	19290-C6800	S0356	..	NUT, CAP, COVER ASSEMBLY. (8135511)	1		PAFZZN
-54	16719-90000	S0356	..	GASKET, CAP NUT (8135510).	1		PAFZZN
-55	19387-99000	S0356	..	NUT, HEX, COVER ASSEMBLY. (8135152)	1		PAFZZN
-56	19382-76200	S0356	..	SCREW, CAP, HEX HEAD (8135512).	5		PAFZZN
-57	19135-99000	S0356	..	GASKET, COVER ASSEMBLY MOUNTING. (8135154)	1		PAFZZN
-58	19215-99001	S0356	..	WASHER, PUSH ROD	1		PAFZZN
-59	19281-99001	S0356	..	SPRING, PUSH ROD	1		PAFZZN
-60	19276-J2000	S0356	..	ROD, PUSH, 48.5	AR		PAFBZN
-61	19276-J2001	S0356	..	ROD, PUSH, 49.5	AR		PAFBZN
-62	19276-J2002	S0356	..	ROD, PUSH, 50.5	AR		PAFBZN
-63	19276-J2003	S0356	..	ROD, PUSH, 48	AR		PAFBZN
-64	19276-J2004	S0356	..	ROD, PUSH, 50	AR		PAFBZN
-65	19251-99001	S0356	..	ROD, PUSH, 49	AR		PAFBZN
-66	19276-J2005	S0356	..	ROD, PUSH, 51	AR		PAFBZN

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
95-	19276-J2006	S0356		ROD, PUSH, 51.5	AR		PAFBZN
	19276-J2007	S0356		ROD, PUSH, 52	AR		PAFBZN
-53	19230-99002	S0356		SCREW, FLYWEIGHT	1		PAFBZN
-54	19227-99001	S0356		SEAT, SPRING, FLYWEIGHT	1		PAFBZN
-55	19277-Y7504	S0356		SPRING, GOVERNOR	AR		PAFBZN
-56	16826-99008	S0356		SHIM, GOVERNOR	AR		PAFZZN
	16826-99009	S0356		SHIM, GOVERNOR	AR		PAFZZN
-57	19227-99000	S0356		SEAT, SPRING, GOVERNOR	1		PAFZZN
-58	14352-61500	S0356		RING, RETAINING, GOVERNOR	1		PAFZZN
-59	19363-99004	S0356		SLEEVE, GOVERNOR	1		PAFZZN
-60	19235-90002	S0356		NUT, FLYWEIGHT	1		XBFZZ
-61	16874-90001	S0356		WASHER, SPRING, FLYWEIGHT	1		PAFZZN
-62	19312-J2001	S0356		FLYWEIGHT ASSEMBLY	1		PAFBZN
-63	19287-99005	S0356		SCREW, CAP, HEX HEAD (8135157)	4		XBFZZ
-64	19259-76200	S0356		SCREW, CAP, HEX HEAD (8135156)	1		XBFZZ
-65	19258-37500	S0356		ADAPTER, GOVERNOR HOUSING (8135465)	1		PAFZZN
-66	19262-37502	S0356		JOINT, HOSE (8135165)	1		XBFZZ
-67	19250-99002	S0356		LEVER, GOVERNOR HOUSING (8135151)	1		PAFBZN
-68	19363-99003	S0356		IMPELLER, GOVERNOR HOUSING (8135163)	1		PAFBZN
-69	16742-37500	S0356		KEY, WOODRUFF (8135162)	1		XBFZZ

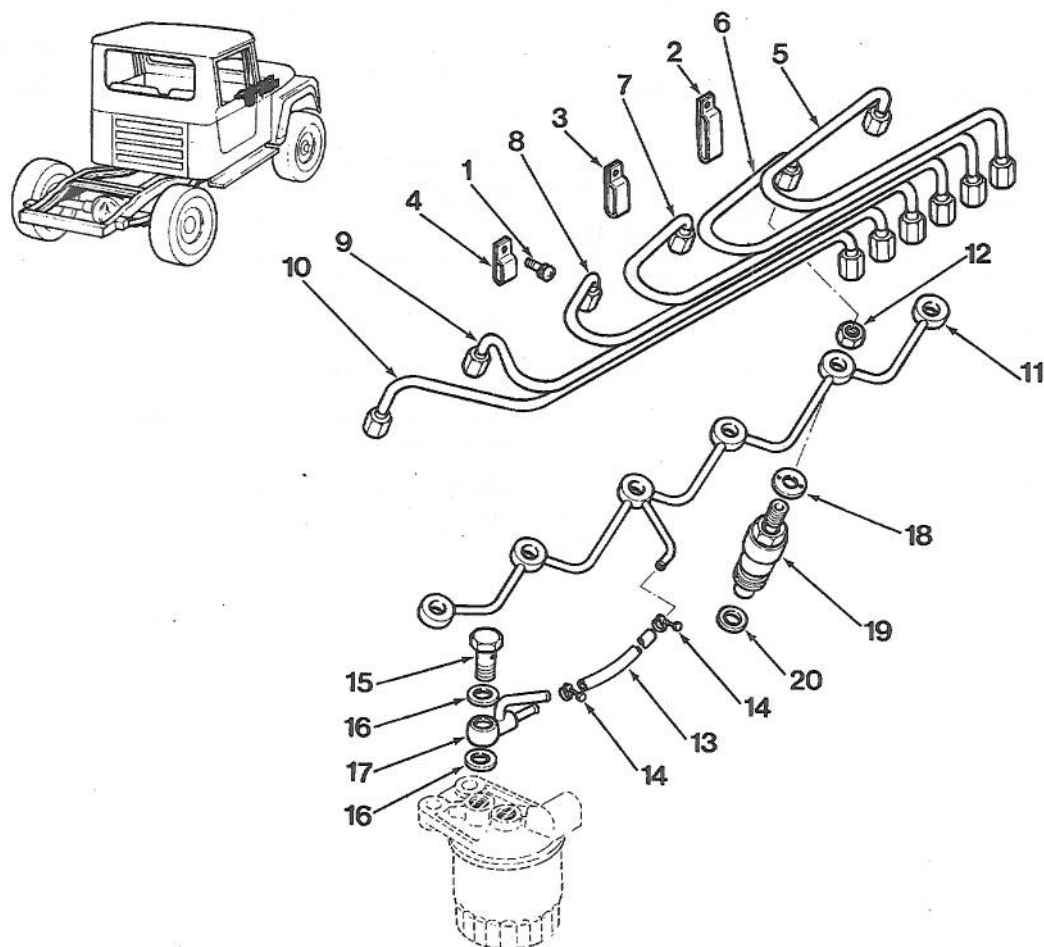


09853B

FIGURE 96. INJECTION NOZZLES AND TUBES GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
96-	NO NUMBER	92871		INJECTOR NOZZLES AND TUBES REF GROUP (PARTS KIT AVAILABLE) (SEE FIGURE 2 FOR NHA)			
-1	08360-51014	S0356		SCREW, MACHINE (8135297)	3		XBFZZ
-2	16686-37501	S0356		SUPPORT, TUBE (8135294)	1		PAFBZN
-3	16688-37501	S0356		SUPPORT, TUBE (8135295)	1		PAFBZN
-4	16689-61501	S0356		SUPPORT, TUBE (8135296)	1		PAFBZN
-5	16680-61500	S0356		TUBE, INJECTION, NUMBER 1 (8135288)	1		PAFBZN
-6	16681-61500	S0356		TUBE, INJECTION, NUMBER 2 (8135289)	1		PAFBZN
-7	16682-61500	S0356		TUBE, INJECTION, NUMBER 3 (8135290)	1		PAFBZN
-8	16683-61500	S0356		TUBE, INJECTION, NUMBER 4 (8135291)	1		PAFBZN
-9	16684-61500	S0356		TUBE, INJECTION, NUMBER 5 (8135292)	1		PAFBZN
-10	16685-61500	S0356		TUBE, INJECTION, NUMBER 6 (8135293)	1		PAFBZN
-11	16671-C7800	S0356		TUBE, SPILL (8135287)	1		PAFBZN
-12	16627-J5570	S0356		NUT, HEX, SPILL TUBE (8135420) (AP)	6		XBFZZ
-13	08740-11011	S0356		HOSE, FUEL (8135421)	1		XBFZZ
-14	08723-11200	S0356		CLAMP, HOSE (8135422) (AP)	2		XBFZZ


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
96-15	16413-31W00	S0356		VALVE, OVER FLOW FROM INJECTOR . . .	1		PAFZZN
				SPILL TUBE (8135104)			
-16	01351-11144	S0356		GASKET, SPILL CONNECTOR.	2		XBFZZ
				(8135454)			
-17	16678-C7800	S0356		CONNECTOR, SPILL (8135302)	1		PAFZZN
-18	16635-J5570	S0356		GASKET, SPILL TUBE (8135438)	6		PAFZZN
				(K1) (K2)			
-19	16600-36W00	S0356		NOZZLE AND HOLDER ASSEMBLY.	6		PAFBZN
				(8135300)			
-20	16635-J2000	S0356		GASKET, NOZZLE (8135207) (K1).	6		PAFZZN
				(K2)			
	10103-Z9129	S0356		KIT, ENGINE GASKET (INCLUDES.	REF		PAFZZN
				PARTS LISTED ABOVE DENOTED BY			
				K1) (8135231) (K1)			
	10101-Z9128	S0356		KIT, ENGINE OVERHAUL (INCLUDES.	REF		PAFZZN
				PARTS LISTED ABOVE DENOTED BY			
				K2) (8135200) (K2)			

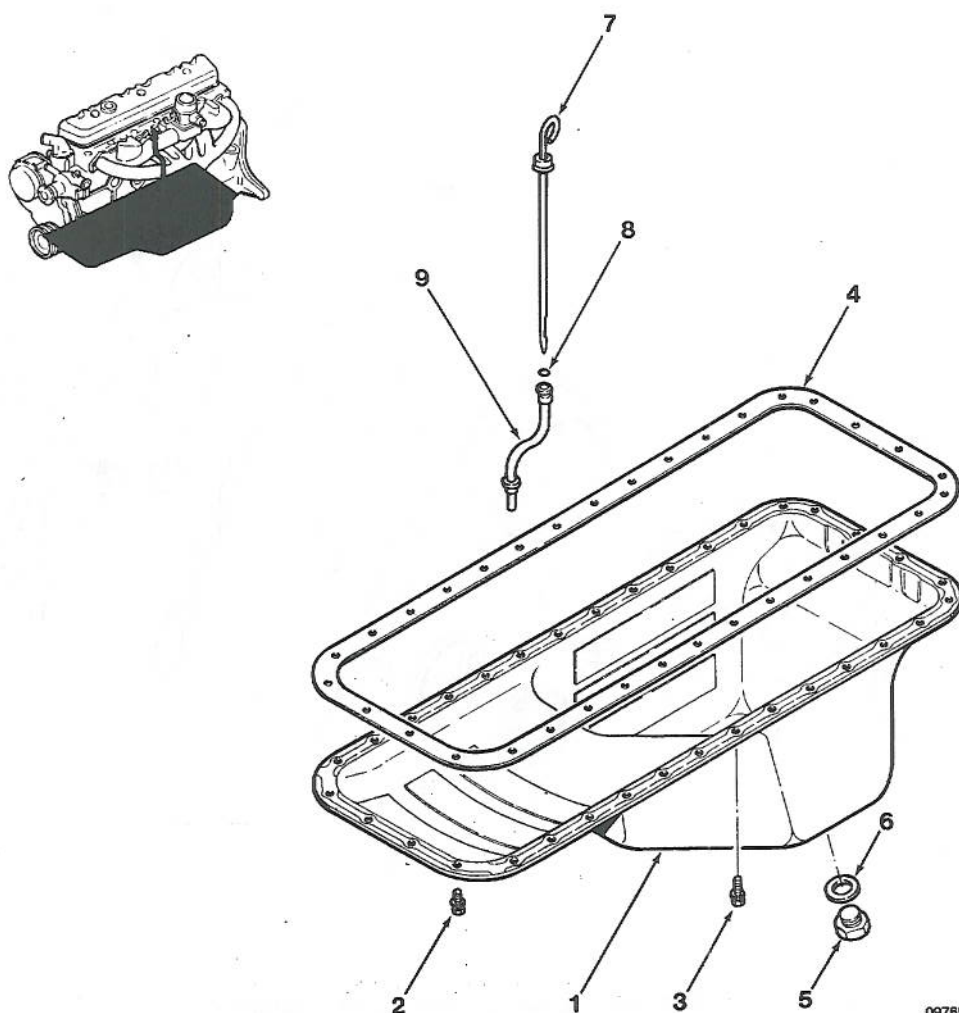

097658

FIGURE 97. ENGINE OIL PAN GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
97-	NO NUMBER	92871		ENGINE OIL PAN GROUP (PARTS KIT AVAILABLE) (SEE FIGURE 2 FOR NHA)	REF		
-1	11110-90070	S0356		PAN ASSEMBLY, OIL (8135278).	1		PAFBZN
-2	08120-61228	S0356		SCREW AND WASHER (8135280). (AP)	33		XBZZ
-3	08120-62528	S0356		SCREW AND WASHER (8135283). (AP)	1		
-4	11121-61502	S0356		GASKET, OIL PAN (8135213) (K2).	1		PAFZZN
-5	11128-69200	S0356		PLUG, DRAIN (8135279).	1		PAFZZN
-6	11026-61000	S0356		WASHER, DRAIN PLUG (8135212). (K2)	1		PAFZZN
-7	15140-C6800	S0356		GAUGE, LIQUID INDICATOR. (8135281)	1		PAFZZN
-8	15147-37500	S0356		RING, RUBBER (8135214) (K2).	1		PAFZZN
-9	15150-90002	S0356		GUIDE ASSEMBLY (8135282).	1		PAFZZN
	10101-Z9128	S0356		KIT, ENGINE OVERHAUL (INCLUDES PARTS LISTED ABOVE DENOTED BY K2) (8135200) (K2)	REF		PAFZZN

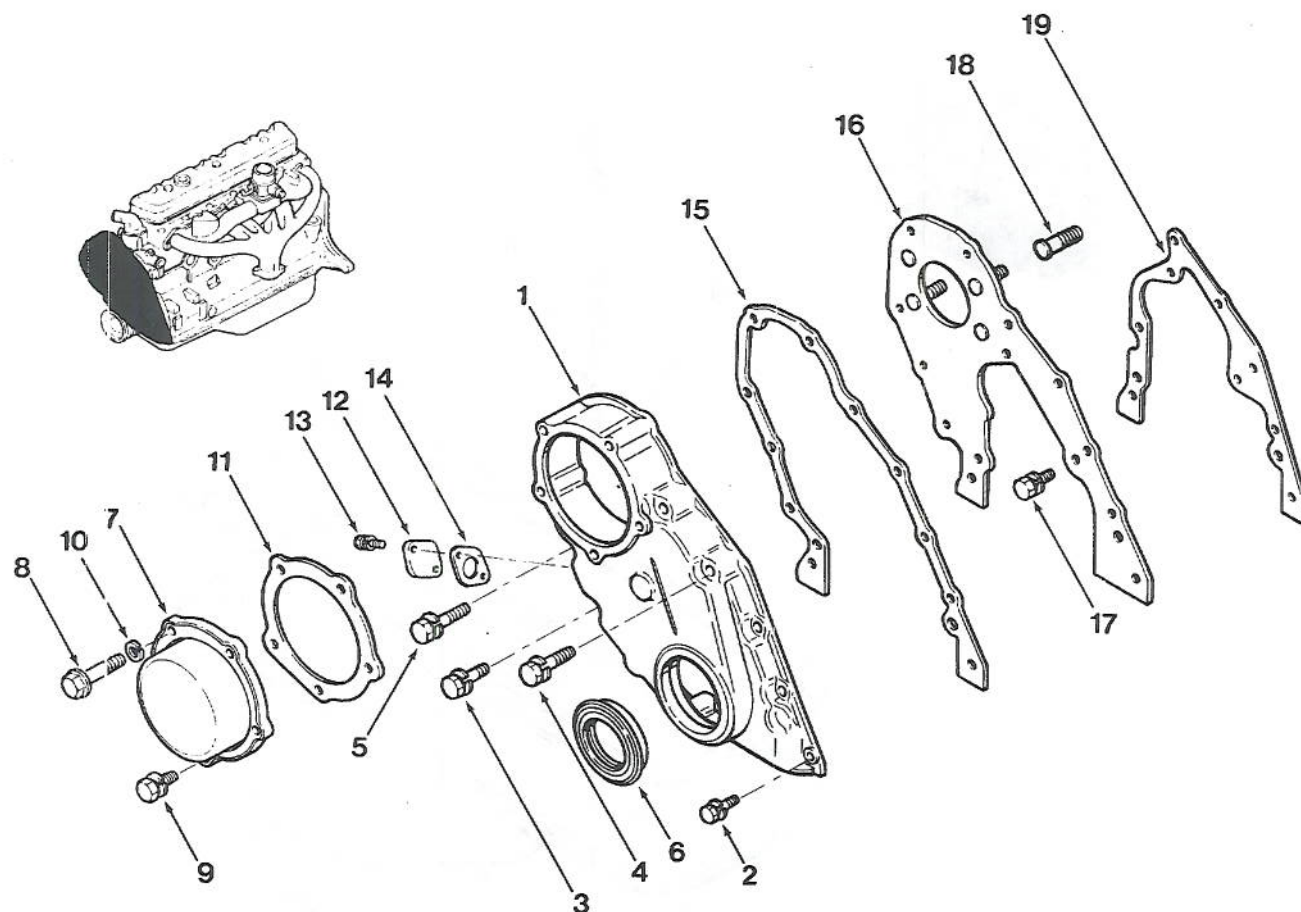


09827B

FIGURE 9B. ENGINE FRONT COVER GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
98-	NO NUMBER	92871		ENGINE FRONT COVER GROUP	REF		
				(PARTS KIT AVAILABLE)			
				(SEE FIGURE 2 FOR NHA)			
-1	13034-Y7503	S0356		. CASE, TIMING GEAR (8135267)	1		PAFBZN
-2	08110-83062	S0356		. SCREW AND WASHER (8135271)	4		XBFZZ
				(AP)			
-3	08110-82062	S0356		. SCREW AND WASHER (8135270)	1		XBFZZ
				(AP)			
-4	08110-85562	S0356		. SCREW AND WASHER (8135272)	2		XBFZZ
				(AP)			
-5	08110-84562	S0356		. SCREW AND WASHER (8135273)	1		XBFZZ
				(AP)			
-6	13043-76200	S0356		. SEAL, OIL (8135208) (K2)	1		PAFZZN
-7	13036-34W00	S0356		. COVER, TIMING GEAR (8135274)	1		PAFBZN
-8	08110-86562	S0356		. SCREW AND WASHER (8135275)	3		XBFZZ
				(AP)			
-9	08110-81662	S0356		. SCREW AND WASHER (8135277)	2		XBFZZ
				(AP)			
-10	08915-13810	S0356		. WASHER, SPRING (8135276) (AP)	3		XBFZZ
-11	13044-Y5201	S0356		. GASKET, COVER (8135211) (K2)	1		PAFZZN
-12	13036-J2001	S0356		. COVER (8135471)	1		MFFFZ
-13	08110-61262	S0356		. SCREW AND WASHER (8135472)	2		XBFZZ
				(AP)			
-14	13044-J2001	S0356		. GASKET (8135437) (K2)	1		PAFZZN
-15	13041-Y5201	S0356		. GASKET (8135210) (K2)	1		PAFZZN
-16	13031-90004	S0356		. PLATE ASSEMBLY (8135268)	1		PAFBZN

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS USABLE		
					PER ASSY.	ON CODE	SMR CODE
98-17	08110-82062	S0356		SCREW AND WASHER (8135270). (AP)	3		XBFZZ
-18	16702-37501	S0356		SCREW, INJECTOR PUMP (8135269)	4		XBFZZ
-19	13037-90002	S0356		GASKET, FRONT PLATE (8135209). (K2)	1		PAFZZN
	10101-Z9128	S0356		KIT, ENGINE OVERHAUL (INCLUDES. PARTS LISTED ABOVE DENOTED BY K2) (8135200) (K2)	REF		PAFZZN

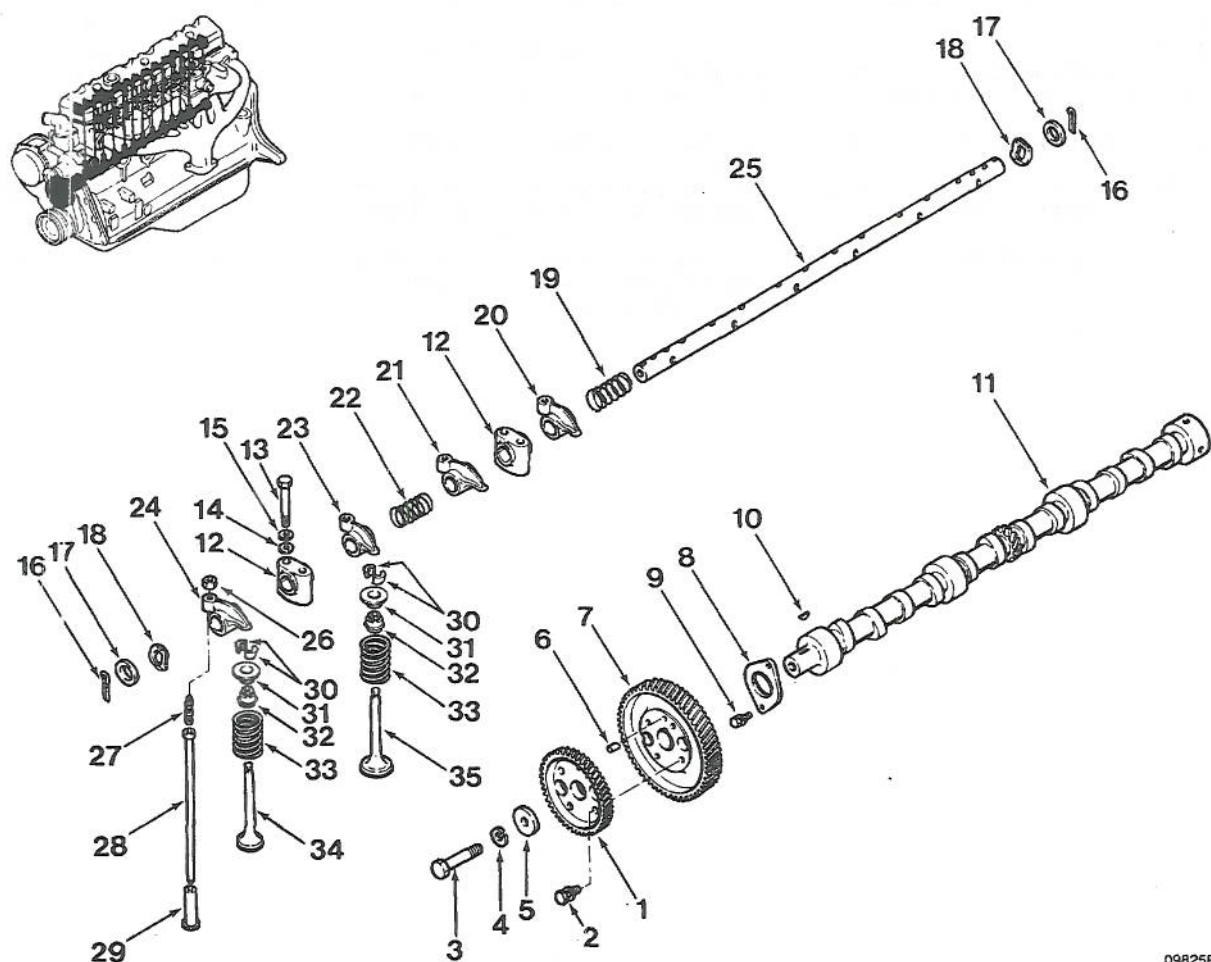


09825B

FIGURE 99. CAMSHAFT AND VALVE TRAIN GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
99-	NO NUMBER	92871		CAMSHAFT AND VALVE TRAIN GROUP	REF		
				(PARTS KIT AVAILABLE)			
				(SEE FIGURE 2 FOR NHA)			
-1	13014-37500	S0356		GEAR, IDLER (8135052).	1		PAFBZN
-2	08110-82062	S0356		SCREW AND WASHER (8135270).	4		XBFZZ
				(AP)			
-3	08131-06510	S0356		SCREW, CAP, HEX HEAD (8135058).	1		XBFZZ
				(AP)			
-4	08915-14010	S0356		WASHER, SPRING (8135057) (AP).	1		XBFZZ
-5	13030-37500	S0356		WASHER, PLAIN (8135056) (AP).	1		XBFZZ
-6	01522-05104	S0356		PIN, STRAIGHT (8135001).	1		PAFZZN
-7	13024-37502	S0356		GEAR, CAMSHAFT (8135051).	1		PAFBZN
-8	13010-90002	S0356		PLATE, LOCATING (8135049).	1		PAFBZN
-9	08110-61662	S0356		SCREW AND WASHER (8135050).	2		XBFZZ
				(AP)			
-10	00926-41600	S0356		KEY, WOODRUFF (8135055).	1		XBFZZ
-11	13001-90109	S0356		CAMSHAFT (8135048).	1		PAFBZN
-12	13222-37504	S0356		BRACKET, ROCKER (8135062).	6		PAFBZN
-13	13224-76200	S0356		SCREW, CAP, HEX HEAD (8135074).	12		PAFZZN
				(AP)			
-14	08915-43810	S0356		WASHER, PLAIN (8135075) (AP).	12		XBFZZ
-15	08915-13810	S0356		WASHER, SPRING (8135276) (AP).	12		XBFZZ
-16	08921-32510	S0356		PIN, SPLIT (8135069).	2		PAFZZN
-17	13289-58000	S0356		WASHER, ROCKER (8135068).	2		PAFZZN

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
99-18	13255-58000	S0356		SPRING, OUTSIDE (8135067)	2		PAFZZN
-19	13256-58000	S0356		SPRING, INSIDE (8135071)	2		PAFZZN
-20	13285-37503	S0356		ROCKER, VALVE D (8135066)	3		PAFBZN
-21	13284-37503	S0356		ROCKER, VALVE C (8135065)	3		PAFBZN
-22	13256-18010	S0356		SPRING, INSIDE (8135070)	3		PAFZZN
-23	13258-37503	S0356		ROCKER, VALVE B (8135064)	3		PAFBZN
-24	13257-37503	S0356		ROCKER, VALVE A (8135063)	3		PAFBZN
-25	13252-61502	S0356		SHAFT, ROCKER (8135061)	1		PAFBZN
-26	13288-37500	S0356		NUT, HEX (8135073)	12		PAFZZN
-27	13287-37501	S0356		SCREW, ADJUSTING (8135072)	12		PAFZZN
-28	13238-37502	S0356		ROD, PUSH (8135060)	12		PAFBZN
-29	13231-78201	S0356		LIFTER, VALVE (8135059)	12		PAFBZN
-30	13208-Y1400	S0356		COLLAR, SPLIT (8135088)	24		PAFZZN
-31	13209-37501	S0356		RETAINER (8135087)	12		PAFZZN
-32	13207-C8700	S0356		SEAL, VALVE STEM, STANDARD SIZE (8135084) (K1) (K2)	12		PAFZZN
	13207-C8701	S0356		SEAL, VALVE STEM, OVERSIZE, 0.2. MILLIMETER (8135085)	12		PAFZZN
	13207-C8702	S0356		SEAL, VALVE STEM, OVERSIZE 0.4. MILLIMETER (8135086)	12		XA
-33	13203-T7200	S0356		SPRING, VALVE (8135083)	12		PAFZZN
-34	13202-C8700	S0356		VALVE, EXHAUST, STANDARD SIZE (8135080)	6		PAFZZN
	13202-C8701	S0356		VALVE, EXHAUST, OVERSIZE 0.2. MILLIMETER (8135081)	6		PAFBZN
	13202-C8702	S0356		VALVE, EXHAUST, OVERSIZE 0.4. MILLIMETER (8135082)	6		XA
-35	13201-Y5200	S0356		VALVE, INLET, STANDARD SIZE (8135077)	6		PAFBZN
	13201-Y5201	S0356		VALVE, INLET, OVERSIZE 0.2. MILLIMETER (8135078)	6		PAFBZN
	13201-Y5202	S0356		VALVE, INLET, OVERSIZE 0.4. MILLIMETER (8135079)	6		XA
	10103-Z9129	S0356		KIT, ENGINE GASKET (INCLUDES PARTS LISTED ABOVE DENOTED BY K1) (8135231) (K1)	REF		PAFZZN

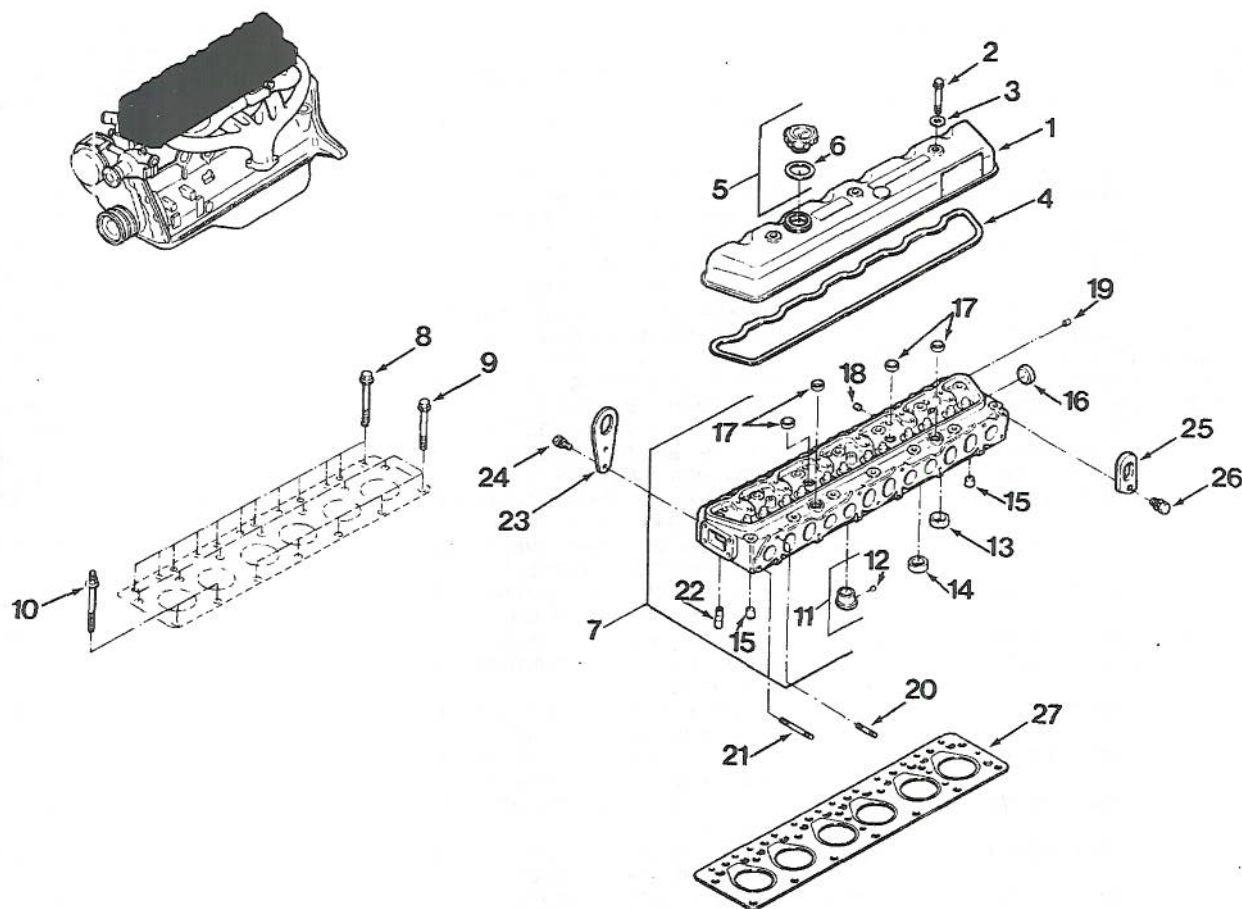

09816B

FIGURE 100. ROCKER COVER AND CYLINDER HEAD GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
100-	NO NUMBER	92871		ROCKER COVER AND CYLINDER HEAD GROUP (PARTS KIT AVAILABLE) (SEE FIGURE 2 FOR NHA)	REF		
-1	13265-C6800	S0356		COVER, ROCKER (8135043)	1		PAFBZN
-2	13240-37502	S0356		SCREW, CAP, HEX HEAD (8135044) (AP)	3		XBFFZ
-3	15266-C6800	S0356		WASHER, SEALING (8135435) (K1) (K2)	3		PAFZZN
-4	13270-C6800	S0356		GASKET (8135205) (K1) (K2)	1		PAFZZN
-5	15255-W1100	S0356		CAP ASSEMBLY, OIL FILLER (8135046)	1		PAFZZN
-6	15270-78500	S0356		GASKET, OIL FILLER CAP (8135436) (K2)	1		PAFZZN
-7	11041-C6800	S0356		HEAD, DIESEL CYLINDER (8135027)	1		PAFFFFP
-8	11056-37502	S0356		SCREW, CYLINDER HEAD (8135040) (AP)	12		PAFZZN
-9	11059-76201	S0356		SCREW, CYLINDER HEAD (8135041) (AP)	12		PAFZZN
-10	11056-T3400	S0356		STUD, CYLINDER HEAD (8135470) (AP)	2		PAFZZN
-11	11076-76203	S0356		CHAMBER, CYLINDER HEAD (8135028)	6		PAFBZN
-12	11075-37501	S0356		DOWEL (8135047)	6		PAFZZN
-13	13215-Y5200	S0356		SEAT, VALVE, EXHAUST, STANDARD SIZE (8135032)	6		PAFZZN
	13215-Y5201	S0356		SEAT, VALVE, EXHAUST, OVERSIZE 0.2 MILLIMETER (8135033)	6		PAFZZN

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
100-	13215-Y5202	S0356		SEAT, VALVE, EXHAUST, OVERSIZE. 0.4 MILLIMETER (8135034)	6		XA
-14	13214-Y5200	S0356		SEAT, VALVE, INTAKE (8135035)	6		PAFZZN
-15	11050-76200	S0356		PLUG, TAPER (8135031)	2		XB
-16	01648-00084	S0356		PLUG, WELCH (8135002)	1		PAFZZN
-17	11019-76200	S0356		PLUG, WELCH (8135029)	4		PAFZZN
-18	00933-20650	S0356		PLUG, BLIND (8135010)	6		XB
-19	00933-20650	S0356		PLUG, BLIND (8135010)	2		PAFZZN
-20	01151-01004	S0356		STUD (8135037)	8		PAFZZN
-21	14018-90016	S0356		STUD (8135045)	1		PAFZZN
-22	11052-76203	S0356		PIPE, PUSH ROD (8135036)	12		PAFZZN
-23	10005-04000	S0356		SLINGER (8135038)	1		PAFZZN
-24	08120-82028	S0356		SCREW AND WASHER (8135285) (AP)	2		XBZZ
-25	10006-37500	S0356		SLINGER (8135039)	1		PAFZZN
-26	08124-02028	S0356		SCREW AND WASHER (8135030) (AP)	1		XBZZ
-27	11044-61514	S0356		GASKET, HEAD (8135204) (K1) (K2)	1		PAFZZN
	10103-Z9129	S0356		KIT, ENGINE GASKET (INCLUDES PARTS LISTED ABOVE DENOTED BY K1) (8135231) (K1)	REF		PAFZZN
	10101-Z9128	S0356		KIT, ENGINE OVERHAUL (INCLUDES PARTS LISTED ABOVE DENOTED BY K2) (8135200) (K2)	REF		PAFZZN


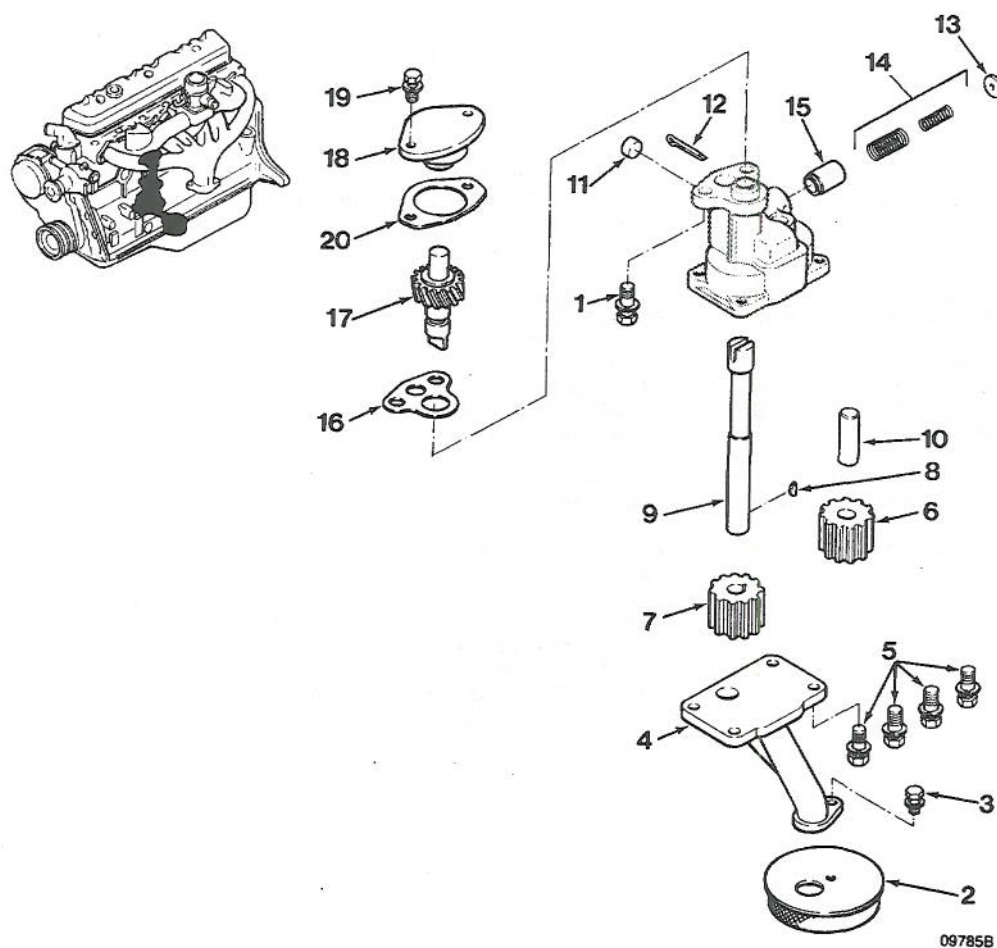


FIGURE 101. OIL PUMP GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS USABLE PER ASSY.	ON CODE	SMR CODE
101-	NO NUMBER	92871		OIL PUMP GROUP (PARTS KIT. REF (SEE FIGURE 2 FOR NHA)			
-1	15010-90065 08120-82028	S0356 S0356		. PUMP ASSEMBLY, OIL (8135286) SCREW AND WASHER (8135285).	1 2		PAFFFP XBFZZ
-2	15050-J5301	S0356		. STRAINER ASSEMBLY (8135309).	1		PAFBZN
-3	08120-61662	S0356		. SCREW AND WASHER (8135308) (AP)	1		XBFZZ
-4	15015-90010	S0356		. COVER (8135307).	1		PAFBZN
-5	08120-88062	S0356		. SCREW AND WASHER (8135306) (AP)	4		XBFZZ
-6	15023-61503	S0356		. GEAR, DRIVEN (8135305).	1		PAFBZN
-7	15021-61503	S0356		. GEAR, DRIVE (8135474)	1		PAFBZN
-8	00926-31300	S0356		. KEY, WOODRUFF (8135304)	1		XBFZZ
-9	15027-C6800	S0356		. SHAFT, DRIVE (8135303).	1		PAFBZN
-10	15028-61502	S0356		. SHAFT, DRIVEN GEAR (8135473).	1		PAFBZN
-11	15199-04000	S0356		. PLUG, BLIND (8135314).	1		PAFZZN
-12	00921-43510	S0356		. PIN, COTTER (8135313)	1		XBFZZ
-13	15136-37500	S0356		. WASHER, FLAT (8135312).	1		XBFZZ
-14	15133-37500	S0356		. SPRING SET (8135311)	1		PAFZZN
-15	15132-37501	S0356		. VALVE (8135310).	1		PAFZZN
-16	15066-90007	S0356		. GASKET, OIL PUMP (8135215) (K2).	1		PAFZZN
-17	15040-90003	S0356		. SPINDLE ASSEMBLY (8135024).	1		PAFBZN
-18	22178-90004	S0356		. SUPPORT, SPINDLE (8135025)	1		PAFBZN


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS USABLE		SMR CODE
					PER ASSY.	ON CODE	
101-19	08120-61628	S0356		SCREW AND WASHER (8135026)	2		XBFZZ
				(AP)			
-20	22179-90001	S0356		GASKET, SUPPORT (PARTS KIT	1		PAFZZN
				AVAILABLE) (8135203) (K2)			
	10101-29128	S0356		KIT, ENGINE OVERHAUL (INCLUDES	REF		PAFZZN
				PARTS LISTED ABOVE DENOTED BY			
				K2) (8135200) (K2)			

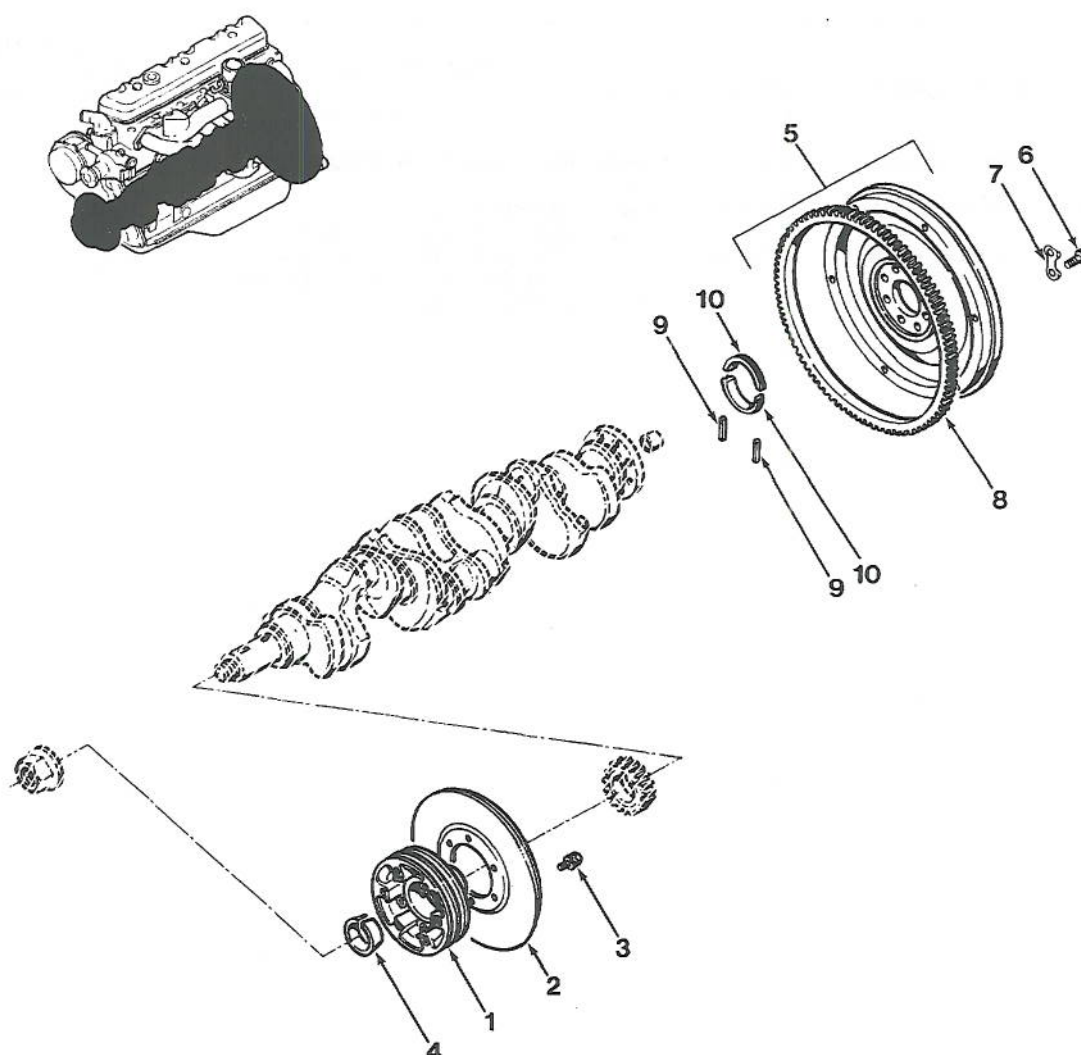

09766B

FIGURE 102. CRANKSHAFT PULLEY AND FLYWHEEL GROUP

FIG. & INDEX NO.	PART NUMBER	CAGE	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
102--	NO NUMBER	S0356		CRANKSHAFT PULLEY AND FLYWHEEL . . . REF GROUP (PARTS KIT AVAILABLE) (SEE FIGURE 2 FOR NHA)			
-1	12305-90060	S0356		PULLEY, CRANKSHAFT (LESS AIR COMPRESSOR) (8135315)	1		PAFBZN
	12305-90300	S0356		PULLEY, CRANKSHAFT (WITH AIR COMPRESSOR) (8993000072)	1		PAFBZN
-2	12306-61503	S0356		DAMPER, CRANKSHAFT (8135318)	1		PAFBZN
-3	08120-81628	S0356		SCREW AND WASHER (8135319). (AP)	6		XBFZZ
-4	12307-61501	S0356		BUSHING, CONE (8135316).	1		PAFBZN
-5	12310-90167	S0356		FLYWHEEL ASSEMBLY (8993000033).	1		PAFBZN
-6	12316-76200	S0356		SCREW, CAP, HEX HEAD, FLYWHEEL (8135324) (AP)	8		PAFZZN
-7	12314-61500	S0356		PLATE, LOCK (8135325) (AP)	4		PAFZZN
-8	12312-61500	S0356		GEAR, RING (8135321).	1		PAFZZN
-9	12289-14600	S0356		SEAL, OIL, BEARING CAP (8135201). (K2)	2		PAFZZN
-10	12279-76200	S0356		SEAL, OIL, BEARING CAP (8135202). (K2)	2		PAFZZN
	10101-Z9128	S0356		KIT, ENGINE OVERHAUL (INCLUDES. PARTS LISTED ABOVE DENOTED BY K2) (8135200) (K2)	REF		PAFZZN

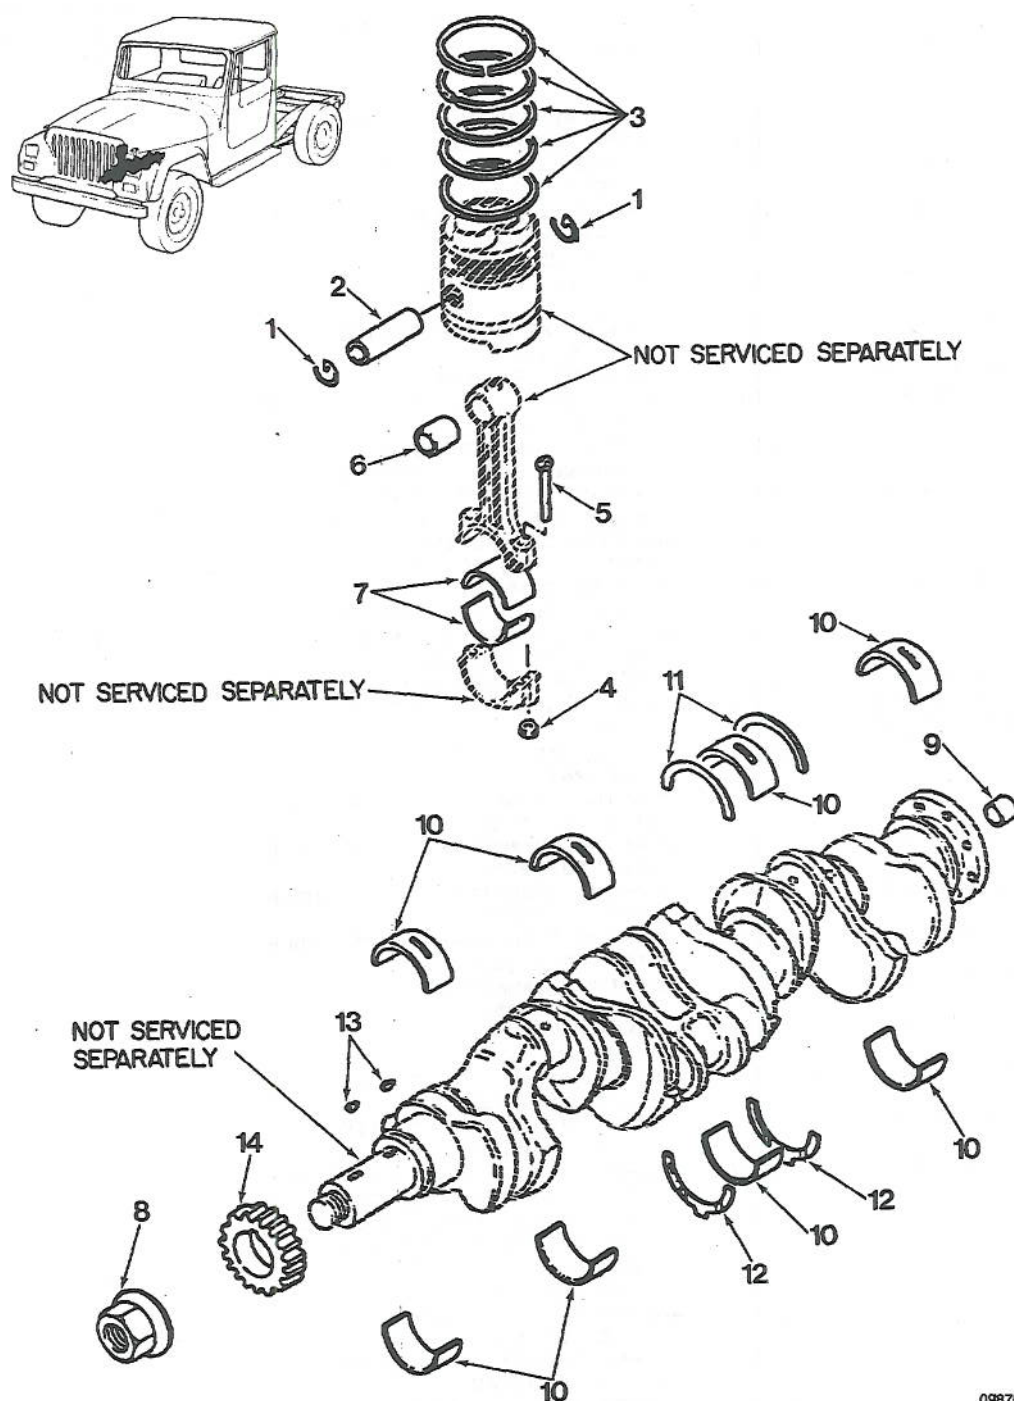


09870B

FIGURE 103. PISTON, CONNECTING ROD AND CRANKSHAFT GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
103-	NO NUMBER	S0356		PISTON, CONNECTING ROD AND. CRANKSHAFT GROUP (SEE FIGURE 2 FOR NHA)	REF		
	12010-J5312	S0356		PISTON SET (8135233).	6		PAFBZN

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
103-1	12032-37500	S0356		.. RING, RETAINING (8135241)	2		PAFZZN
-2	12024-37501	S0356		.. PIN, PISTON (8135240)	1		PAFZZN
	NO NUMBER	S0356		.. PISTON (NOT SERVICED SEPARATELY)	1		
-3	12033-J2204	S0356		.. RING SET, 6 CYLINDER (8135239)	1		PAFZZN
	12100-37502	S0356		.. ROD ASSEMBLY, CONNECTING (8135235)	6		PAFBZN
-4	12113-37501	S0356		.. NUT, HEX, CONNECTING ROD (8135238)	2		PAFZZN
-5	12109-37502	S0356		.. SCREW, CAP, CONNECTING ROD (8135237)	2		PAFZZN
-6	12030-37500	S0356		.. BUSHING (8135236)	1		PAFZZN
	NO NUMBER	S0356		.. ROD, CONNECTING (NOT SERVICED SEPARATELY)	1		
-7	12117-Y5200	S0356		.. BEARING, CONNECTING ROD, STANDARD SIZE (8135242)	2		PAFZZN
	12117-Y5201	S0356		.. BEARING, CONNECTING ROD, UNDERSIZE 0.25 (8135243)	2		PAFZZN
	12117-Y5202	S0356		.. BEARING, CONNECTING ROD, UNDERSIZE 0.50 (8135244)	2		PAFZZN
	12117-Y5203	S0356		.. BEARING, CONNECTING ROD, UNDERSIZE 0.75 (8135245)	2		PAFZZN
	12117-Y5204	S0356		.. BEARING, CONNECTING ROD, UNDERSIZE 1.0 (8135246)	2		PAFZZN
	12200-90063	S0356		.. CRANKSHAFT ASSEMBLY (8135247)	1		PAFFFFP
-8	12309-61503	S0356		.. NUT, CRANKSHAFT (8135249)	1		PAFZZN
-9	32202-90004	S0356		.. BUSHING (8135248)	1		PAFZZN
	NO NUMBER	S0356		.. CRANKSHAFT (NOT SERVICED SEPARATELY)	1		
-10	12207-61506	S0356		.. BEARING, CRANKSHAFT, STANDARD SIZE (8135250)	1		PAFZZN
	12209-61506	S0356		.. BEARING, CRANKSHAFT, 0.25 UNDER SIZE (8135251)	1		PAFZZN
	12210-61506	S0356		.. BEARING, CRANKSHAFT, 0.50 UNDER SIZE (8135252)	1		PAFZZN
	12211-61506	S0356		.. BEARING, CRANKSHAFT, 0.75 UNDER SIZE (8135253)	1		XBFZZ
	12212-61506	S0356		.. BEARING, CRANKSHAFT, 1.0 UNDER SIZE (8135254)	1		XBFZZ
-11	12281-37502	S0356		.. WASHER, THRUST, UPPER, SIZE A. 2.325 (8135255)	2		PAFZZN
	12281-37503	S0356		.. WASHER, THRUST, UPPER, SIZE B. 2.350 (8135256)	2		PAFZZN
	12281-37504	S0356		.. WASHER, THRUST, UPPER, SIZE C. 2.375 (8135257)	2		PAFZZN
	12318-37502	S0356		.. WASHER, THRUST, UPPER, OVERSIZE, 0.2 MILLIMETER (8135258)	2		PAFZZN
	12320-37502	S0356		.. WASHER, THRUST, UPPER, OVERSIZE, 0.40 MILLIMETER (8135259)	2		PAFZZN
-12	12280-37503	S0356		.. WASHER, THRUST, LOWER, SIZE A. 2.325 (8135260)	2		PAFZZN
	12280-37504	S0356		.. WASHER, THRUST, LOWER, SIZE B. 2.350 (8135261)	2		PAFZZN
	12280-37505	S0356		.. WASHER, THRUST, LOWER, SIZE C. 2.375 (8135262)	2		PAFZZN
	12319-37503	S0356		.. WASHER, THRUST, LOWER, OVERSIZE, 0.20 MILLIMETER (8135263)	2		PAFZZN
	12321-37503	S0356		.. WASHER, THRUST, LOWER, OVERSIZE, 0.40 MILLIMETER (8135264)	2		PAFZZN
-13	12205-76200	S0356		.. KEY, WOODRUFF (8135265)	2		PAFZZN
-14	13021-37501	S0356		.. GEAR, CRANKSHAFT (8135266)	1		PAFZZN

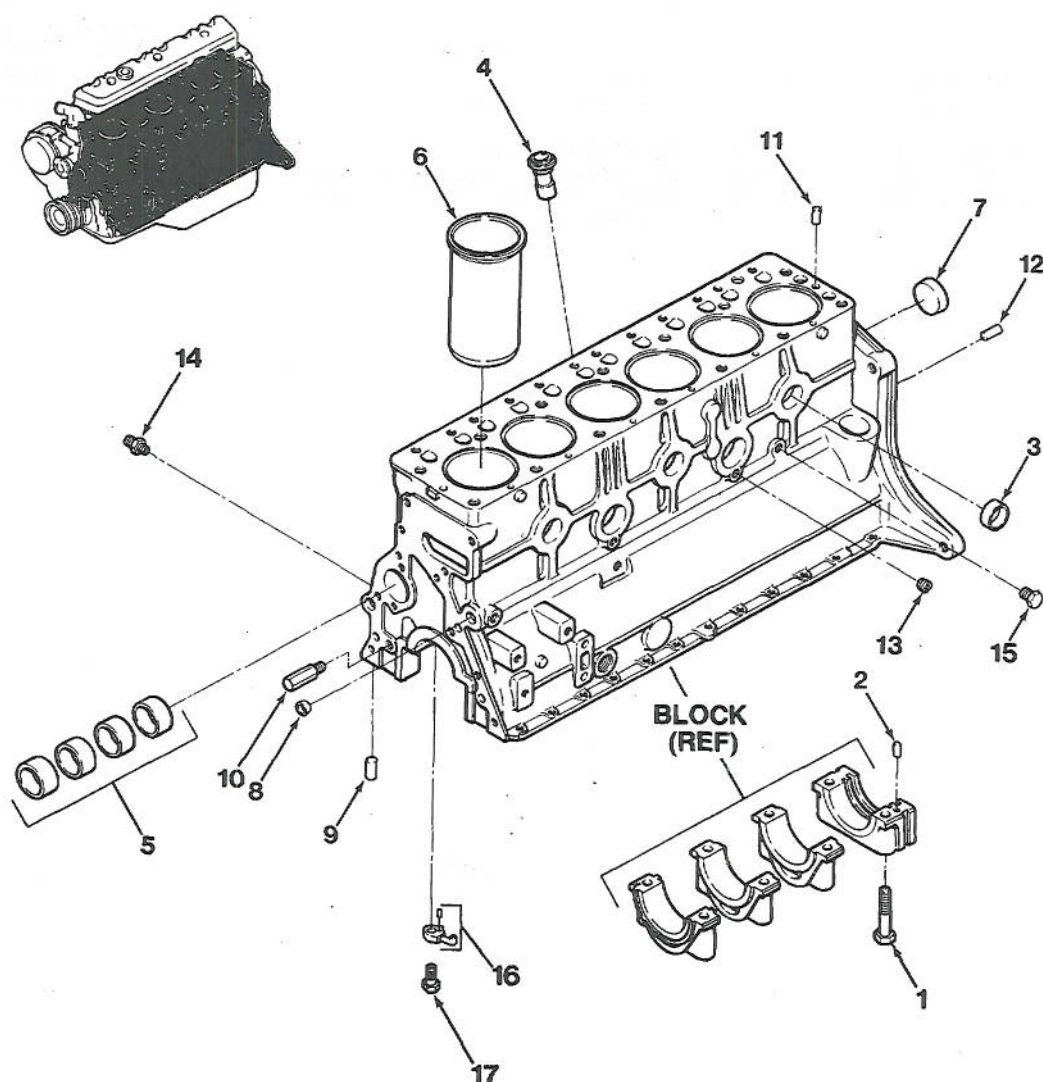


09764B

FIGURE 104. ENGINE BLOCK GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
104-	NO NUMBER	S0356		ENGINE BLOCK GROUP	REF		
	11009-C6801	S0356		(SEE FIGURE 2 FOR NHA)			
-1	12293-37501	S0356		. BLOCK, ENGINE (8135000).	1		PAFFFP
		S0356		. . SCREW, CAP, HEX HEAD, BEARING CAP	8		PAFZZN
-2	01522-05104	S0356		. . PIN, STRAIGHT (8135001)	1		PAFZZN
-3	01648-00084	S0356		. . PLUG, WELCH (8135002)	9		PAFZZN
-4	15042-90001	S0356		. . BUSHING, OIL PUMP (8135004)	1		PAFZZN
-5	13002-90010	S0356		. . BUSHING SET, CAMSHAFT (8135005)	1		PAFZZN
-6	11012-76201	S0356		. . LINER, CYLINDER (8135006)	6		PAFBZN
-7	11019-90002	S0356		. . PLUG, WELCH (8135011)	1		XBFZZ
-8	00933-11800	S0356		. . PLUG, WELCH (8135009)	4		XBFZZ
-9	00933-20650	S0356		. . PLUG, BLIND (8135010)	1		PAFZZN
-10	13081-76201	S0356		. . JET, OIL (8135012)	1		PAFZZN
-11	00929-51400	S0356		. . PIN, STRAIGHT (8135008)	2		PAFZZN
-12	30412-P5100	S0356		. . DOWEL, CYLINDER (8135007)	4		PAFZZN
-13	01642-02114	S0356		. . PLUG, SCREW (8135013)	5		PAFZZN
-14	08712-14205	S0356		. . CONNECTOR, STRAIGHT (8135017)	1		PAFZZN

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
104-15	08931-30410	S0356		PLUG (8135015).	1		PAFZZN
-16	12121-Y5201	S0356		JET ASSEMBLY, OIL (8135019).	6		PAFZZN
-17	12123-Z5000	S0356		SCREW ASSEMBLY, CAP, HEX HEAD (8135020)	6		XBZZ

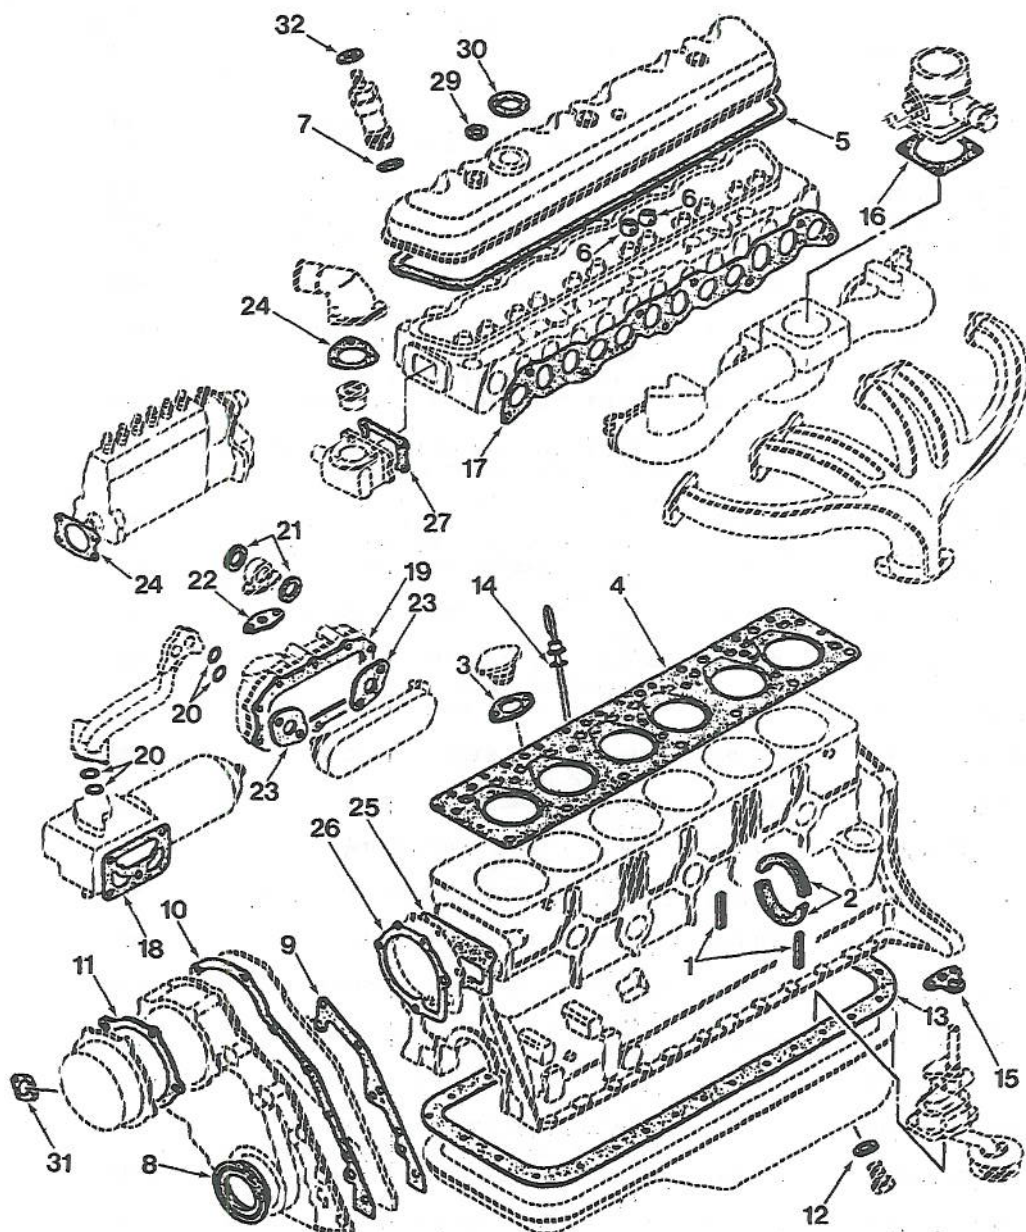



NOTE: THIS ILLUSTRATION AND PARTS LIST FOR REFERENCE ONLY TO SHOW LOCATION OF KIT PARTS.

097988

FIGURE 105. ENGINE OVERHAUL KIT

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS USABLE PER ASSY.	ON CODE	SMR CODE
105-	10101-29128	S0356		OVERHAUL KIT, ENGINE (8135200). (SEE FIGURE 2 FOR NHA)	REF		
-1	12289-14600	S0356		SEAL, OIL, BEARING CAP (8135201). (K2)	REF		
-2	12279-76200	S0356		SEAL, OIL, BEARING CAP (8135202). (K2)	REF		
-3	22179-90001	S0356		GASKET, SUPPORT (8135203) (K2)	REF		

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS USABLE		
					PER ASSY.	ON CODE	SMR CODE
105-4	11044-61514	S0356		GASKET, HEAD (8135204) (K2)	REF		
-5	13270-C6800	S0356		GASKET, ROCKER COVER (8135205) (K2)	REF		
-6	13207-C8700	S0356		SEAL, VALVE STEM (8135084) (K2)	REF		
-7	16635-J2000	S0356		GASKET, NOZZLE (8135207) (K2)	REF		
-8	13043-76200	S0356		SEAL, OIL, FRONT COVER (8135208) (K2)	REF		
-9	13037-90002	S0356		GASKET, FRONT PLATE (8135209) (K2)	REF		
-10	13041-Y5201	S0356		GASKET, FRONT COVER (8135210) (K2)	REF		
-11	13044-Y5201	S0356		GASKET, COVER (8135211) (K2)	REF		
-12	11026-61000	S0356		GASKET, DRAIN PLUG (8135212) (K2)	REF		
-13	11121-61502	S0356		GASKET, OIL PAN (8135213) (K2)	REF		
-14	15147-37500	S0356		RING, GAUGE GUIDE, RUBBER (8135214) (K2)	REF		
-15	15066-90007	S0356		GASKET, OIL PUMP (8135215) (K2)	REF		
-16	14327-61500	S0356		GASKET, VENTURI (8135216) (K2)	REF		
-17	14035-90000	S0356		GASKET, EXHAUST MANIFOLD (8135218) (K2)	REF		
-18	15239-V1700	S0356		GASKET, OIL FILTER (8135220) (K2)	REF		
-19	21307-61520	S0356		GASKET, OIL COOLER HOUSING (8135221) (K2)	REF		
-20	21306-61520	S0356		RING, OIL PIPE RUBBER (8135222) (K2)	REF		
-21	21331-76201	S0356		GASKET, HEAD SIDE CONNECTOR (8135223) (K2)	REF		
-22	21310-90011	S0356		GASKET, CONNECTOR (8135224) (K2)	REF		
-23	21303-61520	S0356		GASKET, OIL COOLER ELEMENT (8135225) (K2)	REF		
-24	16701-37504	S0356		GASKET, INJECTOR PUMP (8135226) (K2)	REF		
-25	21074-37502	S0356		GASKET, WATER PUMP COVER (8135227) (K2)	REF		
-26	21014-61503	S0356		GASKET, WATER PUMP HOUSING (8135228) (K2)	REF		
-27	11045-76201	S0356		GASKET, THERMOSTAT HOUSING (8135229) (K2)	REF		
-28	11062-L6000	S0356		GASKET, WATER OUTLET (8135230) (K2)	REF		
-29	15266-C6800	S0356		PACKING, PREFORMED, O-RING, ROCKER COVER (8135435) (K2)	REF		
-30	15270-78500	S0356		GASKET, FILLER CAP (8135436) (K2)	REF		
-31	13044-J2001	S0356		GASKET, FRONT COVER SIDE (8135437) (K2)	REF		
-32	16635-J5570	S0356		GASKET, SPILL TUBE (8135438) (K2)	REF		

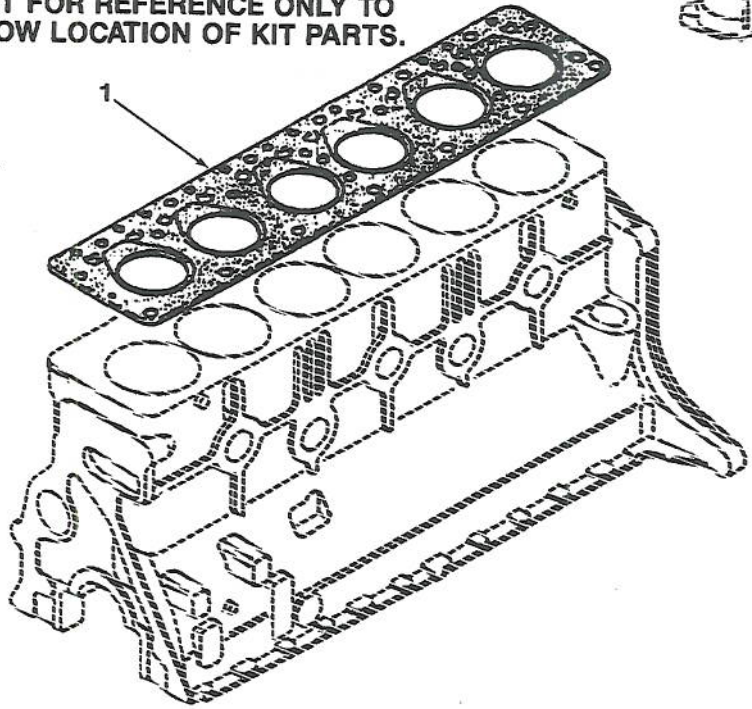
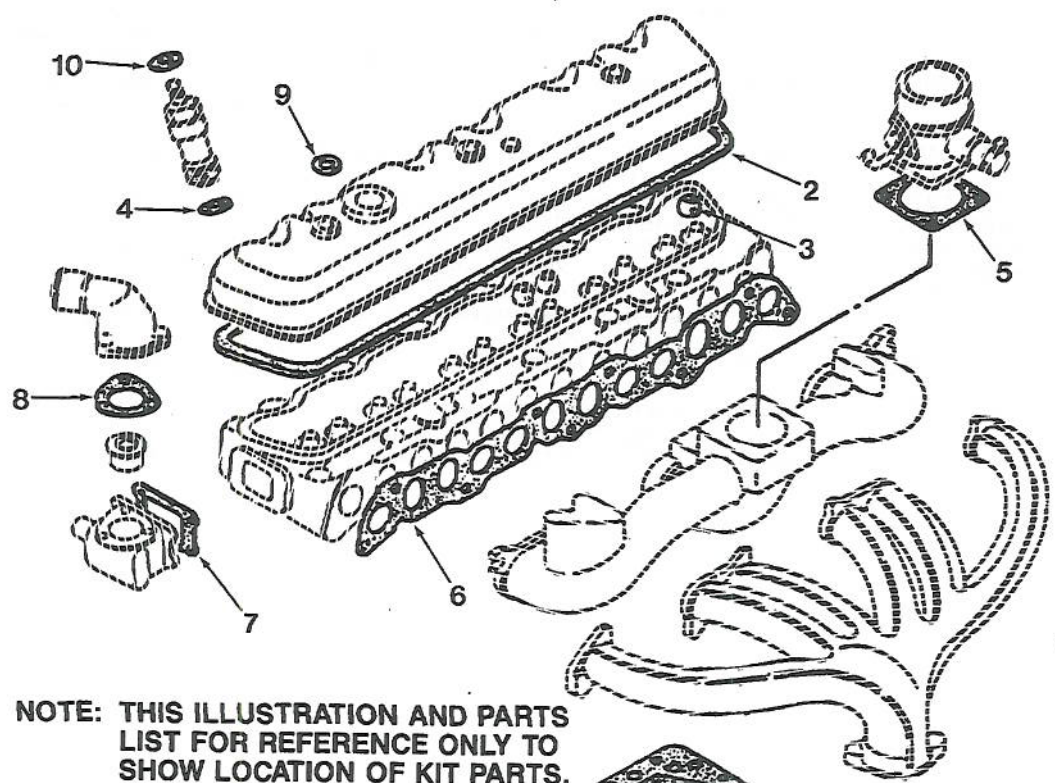


09799B

FIGURE 106. ENGINE GASKET KIT

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
106-	10103-29129	S0356		GASKET KIT, ENGINE (8135231).	REF		
-1	11044-61514	S0356		. GASKET, HEAD (8135204) (K1).	REF		


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS	USABLE	SMR CODE
					PER ASSY.	ON CODE	
106-2	13270-C6800	S0356		GASKET, ROCKER COVER (8135205) (K1)	REF		
-3	13207-C8700	S0356		SEAL, VALVE STEM (8135084) (K1)	REF		
-4	16635-J2000	S0356		GASKET, NOZZLE (8135207) (K1)	REF		
-5	14327-61500	S0356		GASKET, VENTURI (8135216) (K1)	REF		
-6	14035-90000	S0356		GASKET, EXHAUST MANIFOLD (8135218) (K1)	REF		
-7	11045-76201	S0356		GASKET, THERMOSTAT HOUSING (8135229) (K1)	REF		
-8	11062-L6000	S0356		GASKET, WATER OUTLET (8135230) (K1)	REF		
-9	15266-C6800	S0356		PACKING, PREFORMED, O-RING, ROCKER COVER (8135435) (K1)	REF		
-10	16635-J5570	S0356		GASKET, SPILL TUBE (8135438) (K1)	REF		

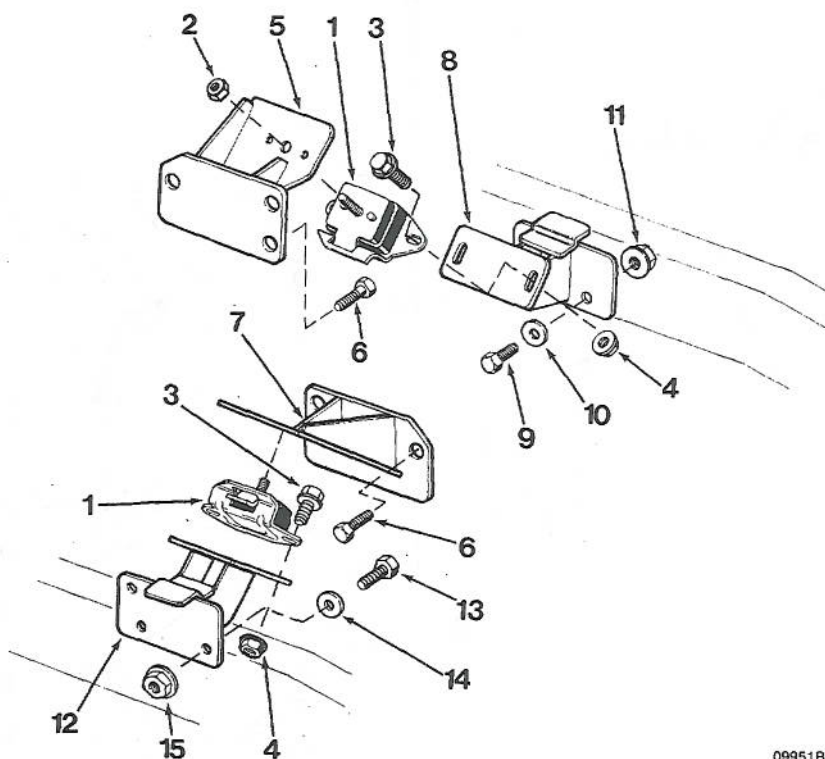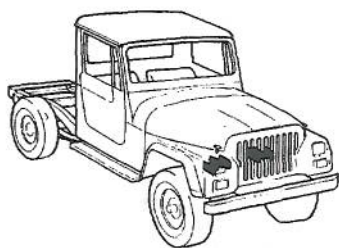

09951B

FIGURE 107. FRONT ENGINE MOUNTS GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234967	DESCRIPTION	UNITS USABLE PER ASSY.	ON CODE	SMR CODE
107-	NO NUMBER	92871		FRONT ENGINE MOUNTS GROUP.	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	8128488	92871		. PAD, MOUNTING.	2		PAFZZN
-2	4003975	92871		. NUT, HEX, LOCKING (AP).	2		XBFZZ
-3	6273773	92871		. BOLT, SELF-LOCKING (273773).	2		XBFZZ
				(AP)			
-4	4003909	92871		. NUT, HEX, FLANGED (AP).	2		PAFZZN
-5	11232-90000	80356		. BRACKET, MOUNTING, LEFT HAND.	1		XBFZZ
				(8135466)			
-6	08121-22528	80356		. SCREW AND WASHER (8135468).	3		XBFZZ
				(AP)			
-7	11233-90002	80356		. BRACKET, MOUNTING, RIGHT HAND	1		XBFZZ
				(8135467)			
-8	8135529	92871		. MOUNT ASSEMBLY, FRONT, LEFT HAND.	1		XBFZZ
-9	4005665	92871		. SCREW, CAP, HEX HEAD, 1 INCH LONG.	4		PAFZZN
				(AP)			
	69421204	92871		. SCREW, CAP, HEX HEAD, 3 INCH LONG.	4		XBFZZ
				(9421204) (AP)			
-10	69419871	92871		. WASHER, LOCK (9419871) (AP).	4		XBFZZ
-11	4003909	92871		. NUT, HEX, FLANGED (AP).	4		PAFZZN
-12	8135600	92871		. MOUNT ASSEMBLY, FRONT, RIGHT.	1		XBFZZ
				HAND			
-13	4005665	92871		. SCREW, CAP, HEX HEAD, 1 INCH LONG.	4		PAFZZN
				(AP)			
	69421204	92871		. SCREW, CAP, HEX HEAD, 3 INCH LONG.	4		XBFZZ
				(9421204) (AP)			
-14	69419871	92871		. WASHER, LOCK (9419871) (AP).	4		XBFZZ
-15	4003909	92871		. NUT, HEX, FLANGED (AP).	4		PAFZZN

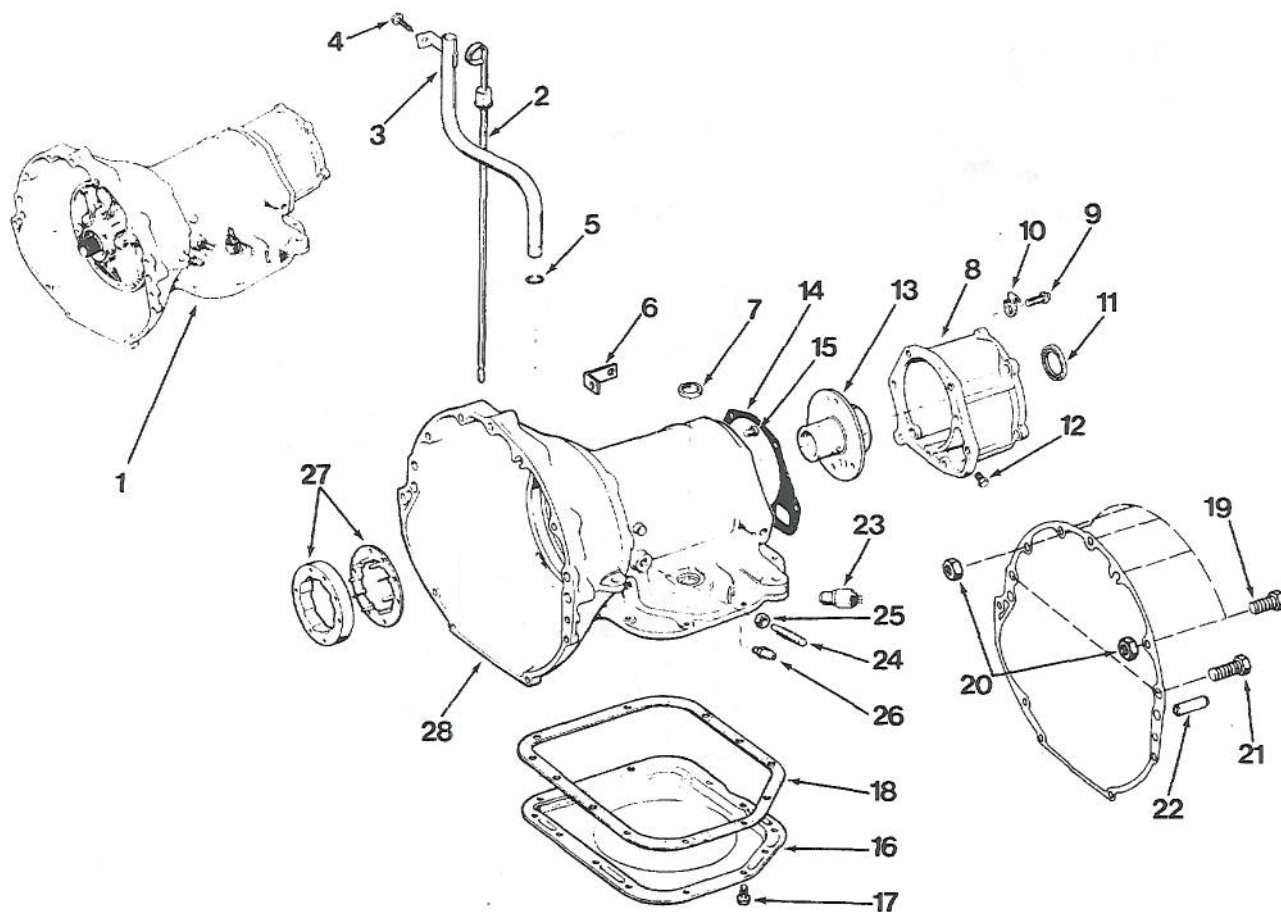


099498

FIGURE 108. TRANSMISSION ASSEMBLY AND CASE ASSEMBLY GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
108-	NO NUMBER	92871		TRANSMISSION ASSEMBLY AND CASE REF			
				ASSEMBLY GROUP (PARTS KIT AVAILABLE)			
				(SEE FIGURE 2 FOR NHA)			
-1	3836058	86403		TRANSMISSION ASSEMBLY, MODEL 1		PBFFFP	
				A727 (8993000026)			
-2	5363757	92871		GAGE ROD, DIPSTICK 1		XBFZZ	
-3	8993000048	92871		TUBE, OIL FILLER 1		XBFZZ	
-4	89426241	92871		SCREW, CAP, HEX WSHR (9426241). 1		PAFZZN	
				(AP)			
-5	940298	92871		PACKING, PREFORMED, TUBE, OIL 1		XBFZZ	
				FILLER			
-6	5994391	92871		BRACKET, CLIP, VENT LINE. 1		XBFZZ	
-7	3878447	86403		SEAL, SHAFT, MANUAL VALVE 1		XBFZZ	
				(8128797) (K3)			
-8	4269957	86403		ADAPTER, XMSN (8134761). 1		XBFZZ	
-9	6030849	86403		SCREW AND WASHER (8132505). 6		XBFZZ	
				(AP)			
-10	8121160	92871		CLIP, WIRING 1		XBFZZ	
-11	4269958	86403		SEAL, ADAPTER (8134680) (K3) 1		XBFZZ	
-12	6028095	93334		PLUG, PIPE (8120840) 1		XBFZZ	
-13	2466882	86403		SUPPORT, OUTPUT SHAFT (8120842). 1		XBFZZ	
-14	2466954	93334		GASKET, EXTENSION (8120979). 1		XBFZZ	
				(K3)			


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
108-15	6028095	93334		PLUG, PIPE (8120840)	1		XBFZZ
-16	4058997	86403		PAN, TRANSMISSION OIL (8128965)	1		XBFZZ
-17	6023355	93334		SCREW AND WASHER (8121145)	14		XBFZZ
				(AP)			
-18	2644324	93334		GASKET, TRANSMISSION PAN	1		PAFZZN
				(8120984) (K3)			
-19	4001885	92871		SCREW, CAP, HEX HEAD	5		XBFZZ
-20	0219422	92871		NUT, HEX, THICK (219422)	2		XBFZZ
-21	4004370	92871		SCREW, CAP, HEX HEAD	2		XBFZZ
-22	0141281	92871		PIN, DOWEL (141281)	2		XBFZZ
-23	3232844	92871		SWITCH, NEUTRAL SAFETY	REF		PAFZZN
				(SEE FIGURE 60-7)			
-24	2400389	93334		SCREW, ADJUSTING, KICKDOWN BAND	1		XBFZZ
				(8121086)			
-25	MS35691-37	96906		NUT, PLAIN, HEX	1		XBFZZ
-26	6031621	86403		CONNECTOR, OIL COOLER TUBE	2		XBFZZ
				(8132511)			
-27	8122438	92871		KIT, CLUTCH OVERRUNNING (K29)	1		XBFZZ
-28	4058527	86403		CASE, TRANSMISSION (8983501544)	1		XA
	8134763	92871		KIT, TRANSMISSION OVERHAUL	1		PAFZZN
				(INCLUDES PARTS LISTED ABOVE DENOTED BY K3) (K3)			

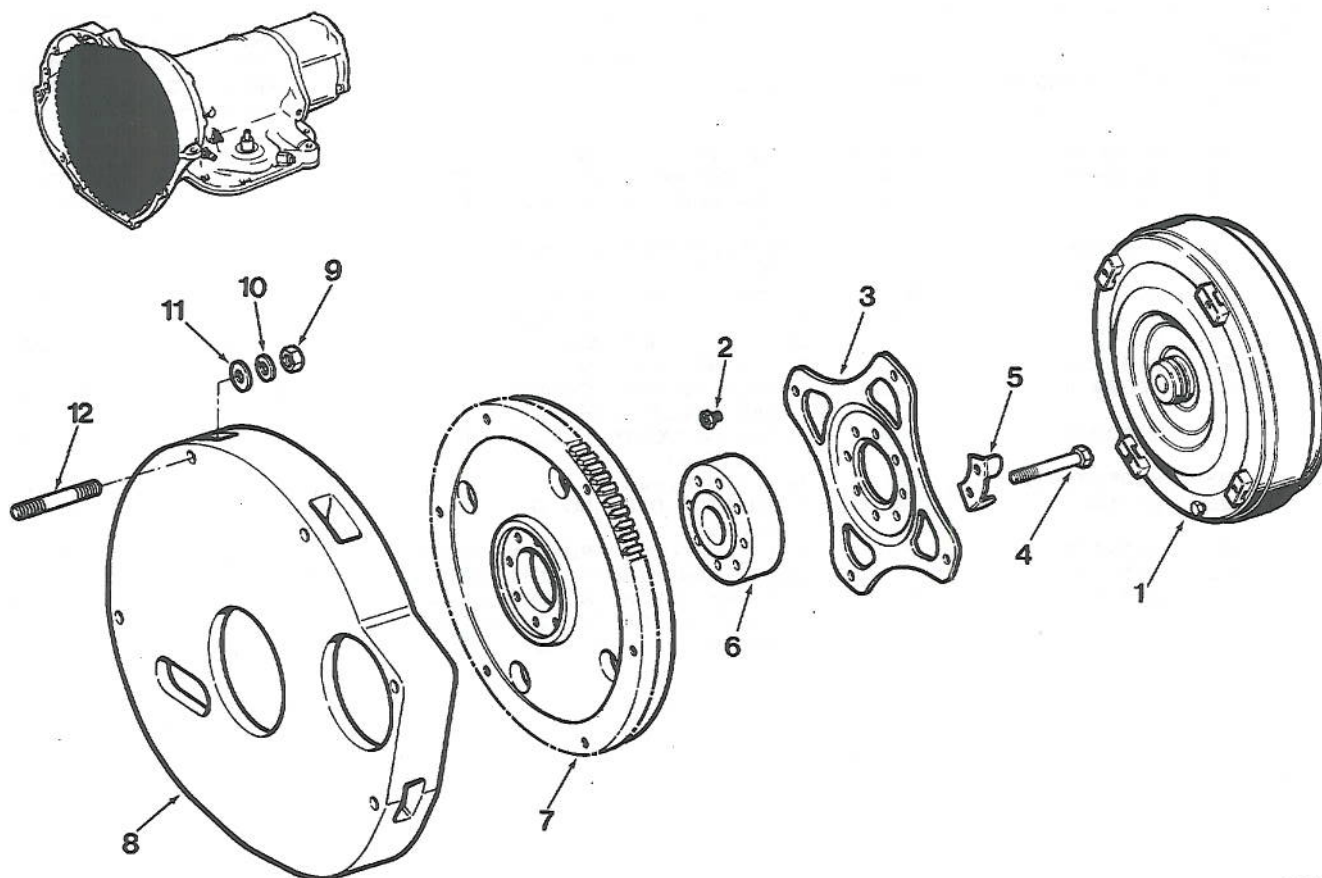

099049

FIGURE 109. TORQUE CONVERTER GROUP


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
109-	NO NUMBER	92871		TORQUE CONVERTER GROUP	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	8993000042	92871		CONVERTER, TORQUE.	1		PBFFFFP
-2	3214097	92871		BOLT, DRIVE PLATE TO CONVERTOR	4		XBFZZ
				(AP)			
-3	8993000035	92871		PLATE, DRIVE	1		XBFZZ
-4	8993000040	92871		BOLT, DRIVE PLATE TO FLYWHEEL.	8		XBFZZ
				(AP)			
-5	8993000041	92871		PLATE, LOCK, FLYWHEEL BOLT (AP)	4		XBFZZ
-6	8993000032	92871		ADAPTER, FLYWHEEL.	1		XBFZZ
-7	12310-90167	80356		FLYWHEEL ASSEMBLY (SEE FIGURE	REF		PAFBZN
				102-5) (8993000033)			
-8	8993000034	92871		HOUSING, FLYWHEEL.	1		XBFZZ
-9	8993000037	92871		NUT, HEX (AP).	4		XBFZZ
-10	8993000038	92871		WASHER, LOCK (AP).	4		XBFZZ
-11	8993000039	92871		WASHER, FLAT (AP).	4		XBFZZ
-12	8993000036	92871		STUD, MOUNTING (AP).	4		XBFZZ

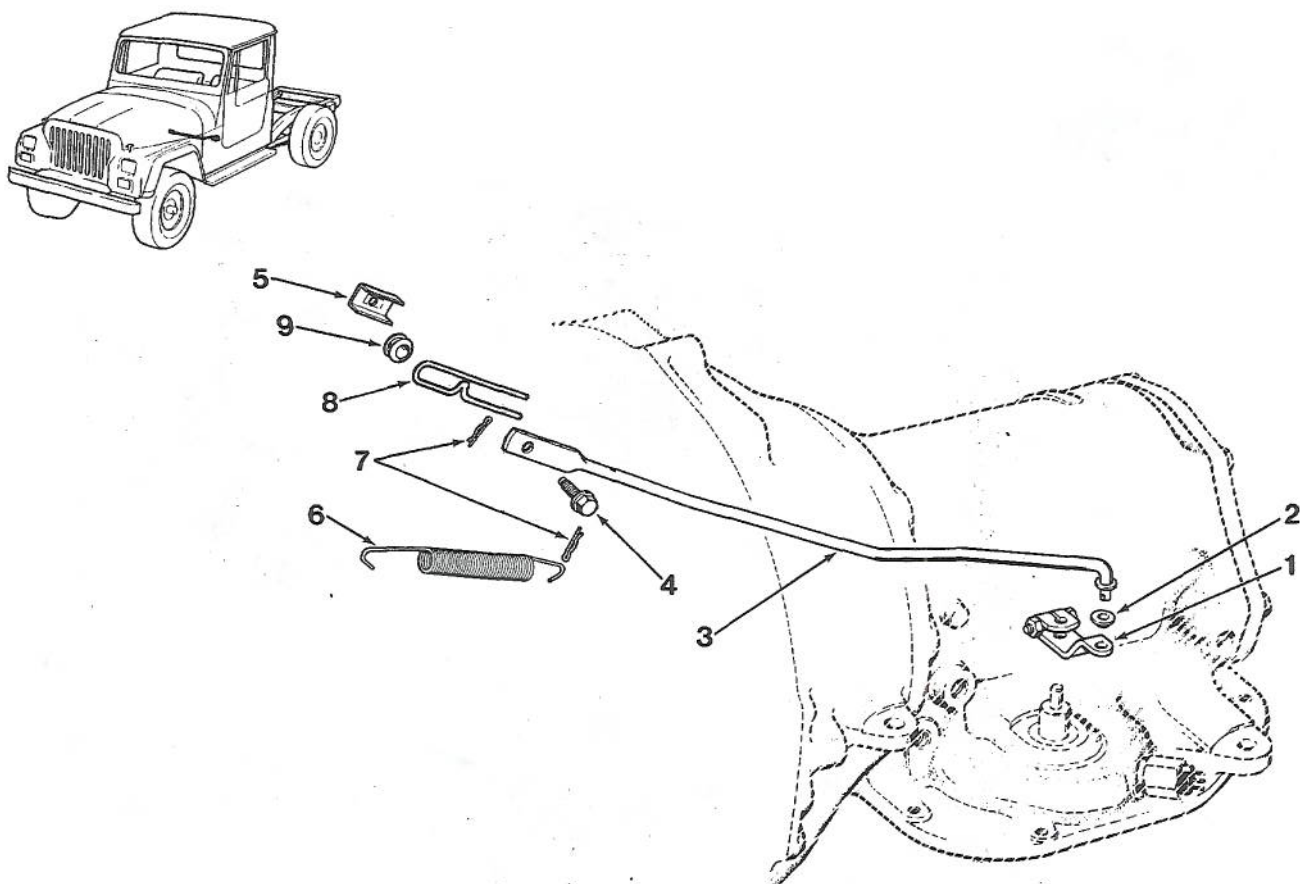

09834B

FIGURE 110. THROTTLE VALVE LINKAGE GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
110-	NO NUMBER	92871		THROTTLE VALVE LINKAGE GROUP	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	3220677	92871		LEVER ASSEMBLY, TRANSMISSION	1		XBFZZ
				THROTTLE CONTROL			
-2	3220125	92871		BUSHING, SNAP IN	1		XBFZZ
-3	3239820	92871		ROD, TRANSMISSION VALVE CONTROL	1		XBFZZ
-4	4004507	92871		SCREW AND WASHER (AP)	1		XBFZZ
-5	3217200	92871		CLAMP, TRANSMISSION VALVE	1		XBFZZ
				CONTROL ROD (AP)			
-6	3196286	92871		SPRING, RETURN	1		XBFZZ
-7	4004295	92871		PIN, HITCH	2		PAFZZN
-8	3222405	92871		LINK, ADJUSTING, TRANSMISSION	1		XBFZZ
				VALVE CONTROL			
-9	3223656	92871		SPACER, TRANSMISSION VALVE	1		XBFZZ
				CONTROL LINK			


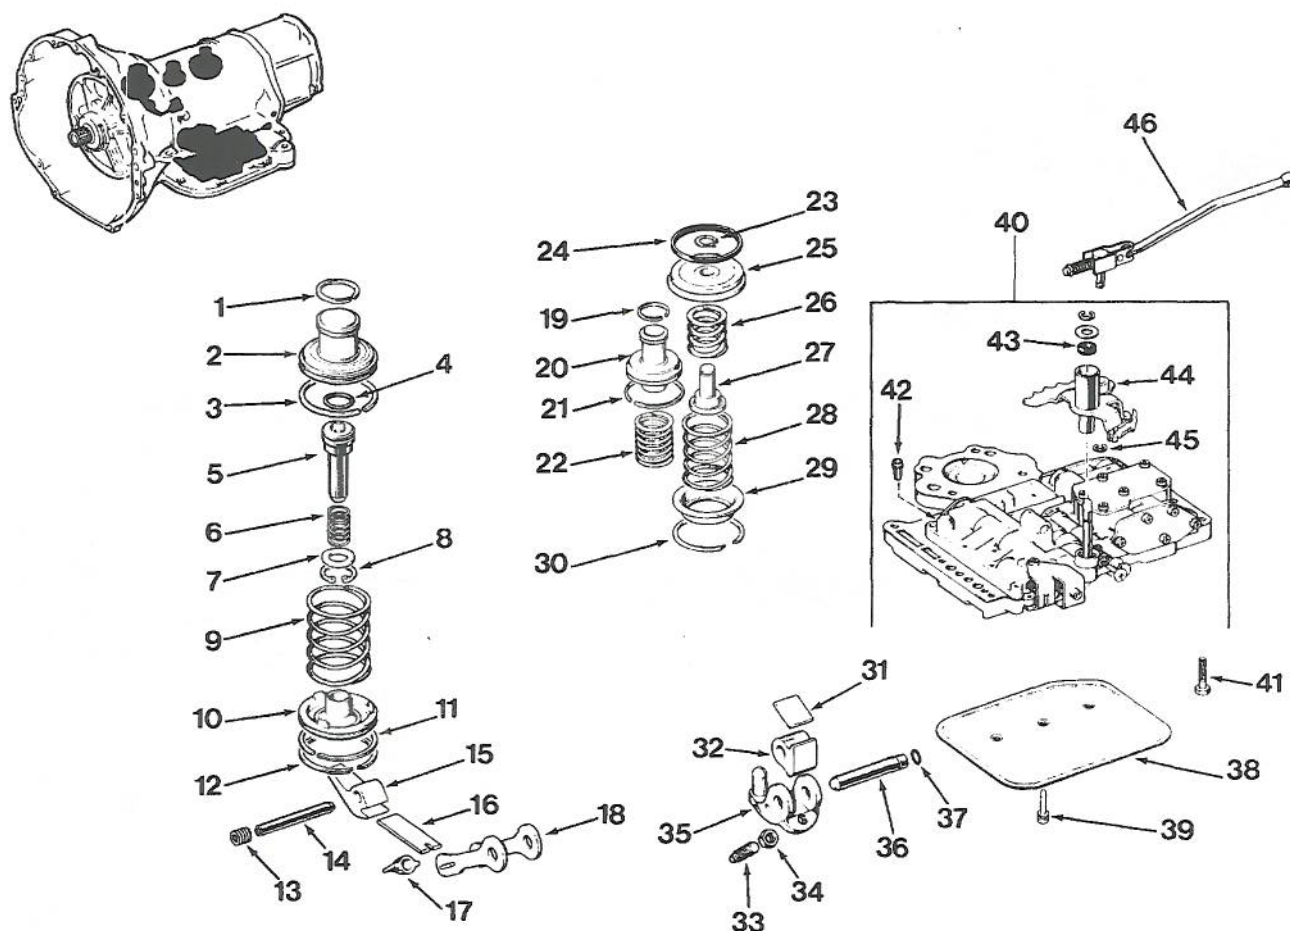


09969B

FIGURE 111. SERVO AND VALVE BODY GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
111-	NO NUMBER	92871		SERVO AND VALVE BODY GROUP	REF		
				(PARTS KIT AVAILABLE)			
				(SEE FIGURE 2 FOR NHA)			
-1	2124851	93334		SEAL, RING, SMALL (8120987) (K3)	1		XBFZZ
-2	3410440	86403		PISTON, SERVO, KICKDOWN	1		XBFZZ
				(8121094)			
-3	1942123	93334		SEAL, RING, METAL (8120988) (K3)	1		XBFZZ
-4	6028864	86403		SEAL, PISTON, INNER (8124870)	1		XBFZZ
				(K3)			
-5	3410445	86403		PISTON ASSEMBLY, SERVO, INNER	1		XBFZZ
				(8121095)			
-6	3410444	86403		SPRING, PISTON, INNER (8121096)	1		XBFZZ
-7	3410437	86403		RETAINER, PISTON, INNER	1		XBFZZ
				(8121097)			
-8	6024336	86403		RING, RETAINING, PISTON, INNER	1		XBFZZ
				(8121050) (K4)			
-9	3410518	86403		SPRING, PISTON, OUTER (8121101)	1		XBFZZ
-10	3410441	86403		GUIDE, SERVO, KICKDOWN (8121107)	1		XBFZZ
-11	1942123	93334		SEAL, RING, METAL (8120988) (K3)	1		XBFZZ
-12	1942130	93334		RING, RETAINING, GUIDE (8121055)	1		XBFZZ
-13	6028873	86403		PLUG, LEVER, SHAFT (8121104)	1		XBFZZ
-14	1942132	93334		SHAFT, LEVER, BAND, KICKDOWN	1		XBFZZ
				(8121109)			
-15	2204952	93334		PAWL, KICKDOWN BAND (8121090)	1		XBFZZ
-16	2124848	93334		STRUT, KICKDOWN BAND (8121103)	1		XBFZZ

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
111-17	3743338	86403		ANCHOR, BAND, KICKDOWN (8124775)	1		XBFZZ
-18	2204820	93334		LINK ASSEMBLY, REVERSE BAND. (8121120)	1		XBFZZ
-19	1941831	93334		SEAL, RING, SMALL, ACCUMULATOR PISTON (8120981) (K3)	1		XBFZZ
-20	3410908	93334		PISTON, ACCUMULATOR (8121054)	1		XBFZZ
-21	1315158	86403		SEAL, RING, LARGE, ACCUMULATOR PISTON (8120982) (K3)	1		XBFZZ
-22	3515079	86403		SPRING, LOWER, ACCUMULATOR. (8121141)	1		XBFZZ
-23	6027153	86403		RING, RETAINING, PLUG, REVERSE SERVO (8121174) (K4)	1		XBFZZ
-24	4058741	86403		SEAL, PISTON, REVERSE SERVO (8129044) (K3)	1		XBFZZ
-25	2801281	86403		PISTON, REVERSE SERVO (8121181)	1		XBFZZ
-26	3743580	86403		SPRING, CUSHION, REVERSE SERVO. (8124581)	1		XBFZZ
-27	3743353	86403		PLUG, PISTON, REVERSE SERVO (8124497)	1		XBFZZ
-28	2801241	93334		SPRING, PISTON, REVERSE SERVO (8121173)	1		XBFZZ
-29	1942150	93334		RETAINER, PISTON, REVERSE SERVO (8121171)	1		XBFZZ
-30	1942130	93334		RING, RETAINING, RETAINER, REVERSE SERVO PISTON (8121055)	1		XBFZZ
-31	2204823	93334		STRUT, REVERSE BAND (8121122)	1		XBFZZ
-32	2892233	93334		LEVER, SHORT, REVERSE BAND. (8121191)	1		XBFZZ
-33	1942141	93334		SCREW, ADJUSTING, REVERSE BAND. (8121189)	1		XBFZZ
-34	0272121	92871		NUT, LOCK, ADJUSTING SCREW. (272121)	1		XBFZZ
-35	1942137	93334		LEVER ASSEMBLY, REVERSE BAND (8121194)	1		XBFZZ
-36	2124857	93334		SHAFT, LEVER, REVERSE BAND. (8121184)	1		XBFZZ
-37	6030910	86403		PACKING, PREFORMED, SHAFT (8120990) (K3)	1		XBFZZ
-38	3515996	86403		FILTER ASSEMBLY, TRANSMISSION. OIL (8123042) (K3)	1		PAFZZN
-39	6030895	86403		SCREW AND WASHER (8126893). (AP)	AR		XBFZZ
-40	4202631	86403		BODY ASSEMBLY, VALVE AND TRANSFER PLATE (8983501550)	1		XBFZZ
-41	0179798	92871		SCREW, CAP, HEX HEAD (179798). (AP)	10		XBFZZ
-42	3878313	86403		SCREEN, REGULATOR VALVE (8124863)	1		XBFZZ
-43	2466548	93334		SEAL, SHAFT, THROTTLE LEVER. (8124862) (K3)	1		XBFZZ
-44	3515387	86403		LEVER ASSEMBLY, MANUAL VALVE. (8133578)	1		XBFZZ
-45	1626749	86403		RING, RETAINING, ROD (8121239) (K4)	1		XBFZZ
-46	2466894	86403		ROD ASSEMBLY, PARKING SPRAG. (8121164)	1		XBFZZ
	8134763	92871		KIT, TRANSMISSION OVERHAUL. (INCLUDES PARTS LISTED ABOVE DENOTED BY K3) (K3)	REF		PAFZZN
	8130351	92871		KIT, RING SET (INCLUDES PARTS LISTED ABOVE DENOTED BY K4) (K4)	REF		PAFZZN

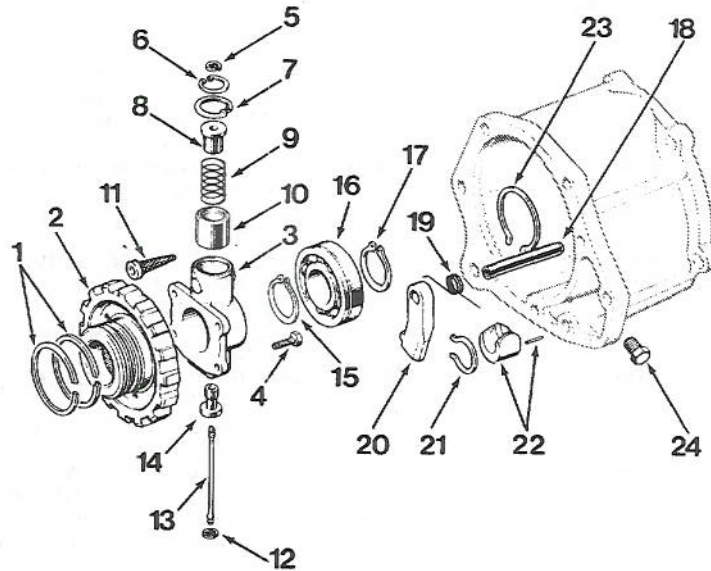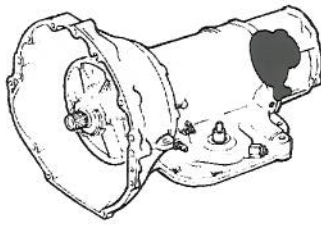


09944B

FIGURE 112. GOVERNOR CONTROL GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
112-	NO NUMBER	92871		GOVERNOR CONTROL GROUP (PARTS.	REF		
				KIT AVAILABLE)			
				(SEE FIGURE 2 FOR NHA)			
-1	1942109	93334		SEAL, RING, GOVERNOR SUPPORT.	2		XBFZZ
				(8120976) (K3)			
-2	3743517	86403		SUPPORT, GOVERNOR (8124498).	1		XBFZZ
-3	4130894	86403		BODY, WEIGHT, GOVERNOR.	1		XBFZZ
				(8983501549)			
-4	6031613	86403		SCREW, CAP, HEX HEAD (8133781).	4		XBFZZ
				(AP)			
-5	8121059	92871		RING, RETAINING (K4)	1		XBFZZ
-6	1636464	93334		RING, RETAINING, WEIGHT, INNER	1		XBFZZ
				(8121058) (K4)			
-7	6025031	86403		RING, RETAINING, WEIGHT, OUTER	1		XBFZZ
				(8130335) (K4)			
-8	4058756	86403		WEIGHT, INNER (8983501547)	1		XBFZZ
-9	4058757	86403		SPRING, WEIGHT (8983501546).	1		XBFZZ
-10	4130853	86403		WEIGHT, OUTER (8983501548)	1		XBFZZ
-11	3743519	86403		FILTER, GOVERNOR (8124464) (K3).	1		XBFZZ
-12	8121059	92871		RING, RETAINING (K4)	1		XBFZZ
-13	1556082	93334		SHAFT, VALVE, GOVERNOR (8121150).	1		XBFZZ
-14	3515479	86403		VALVE, TRANSMISSION GOVERNOR	1		XBFZZ
				(8121149)			
-15	6022817	93334		RING, RETAINING, BODY, GOVERNOR.	1		XBFZZ
				(8121057)			
-16	3515451	86403		DRUM, REVERSE (8121078).	1		XBFZZ
-17	6025570	86403		RING, RETAINING, BEARING, OUTPUT	2		XBFZZ
				SHAFT (8121064)			
-18	2466892	93334		SHAFT, PARKING SPRAG (8121159)	1		XBFZZ
-19	2466909	93334		SPRING, PARKING SPRAG (8121158).	1		XBFZZ
-20	2801157	93334		SPRAG, PARKING (8121157)	1		XBFZZ

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
112-21	2538034	86403		RING, RETAINING, PLUG, REACTION. (B121063) (K4)	1		XBFZZ
-22	2538042	86403		PLUG ASSEMBLY, REACTION, PARKING. SPRAG (B121185)	1		XBFZZ
-23	8121062	92871		RING, RETAINING, OUTPUT BEARING	1		XBFZZ
-24	6028095	93334		PLUG, PIPE (B120840)	1		XBFZZ
	8130351	92871		PARTS KIT, SEAL REPLACEMENT. (INCLUDES PARTS LISTED ABOVE DENOTED BY K4) (K4)	1		PAFZZN
	8134763	92871		KIT, TRANSMISSION OVERHAUL (INCLUDES PARTS LISTED ABOVE DENOTED BY K3) (K3)	REF		PAFZZN

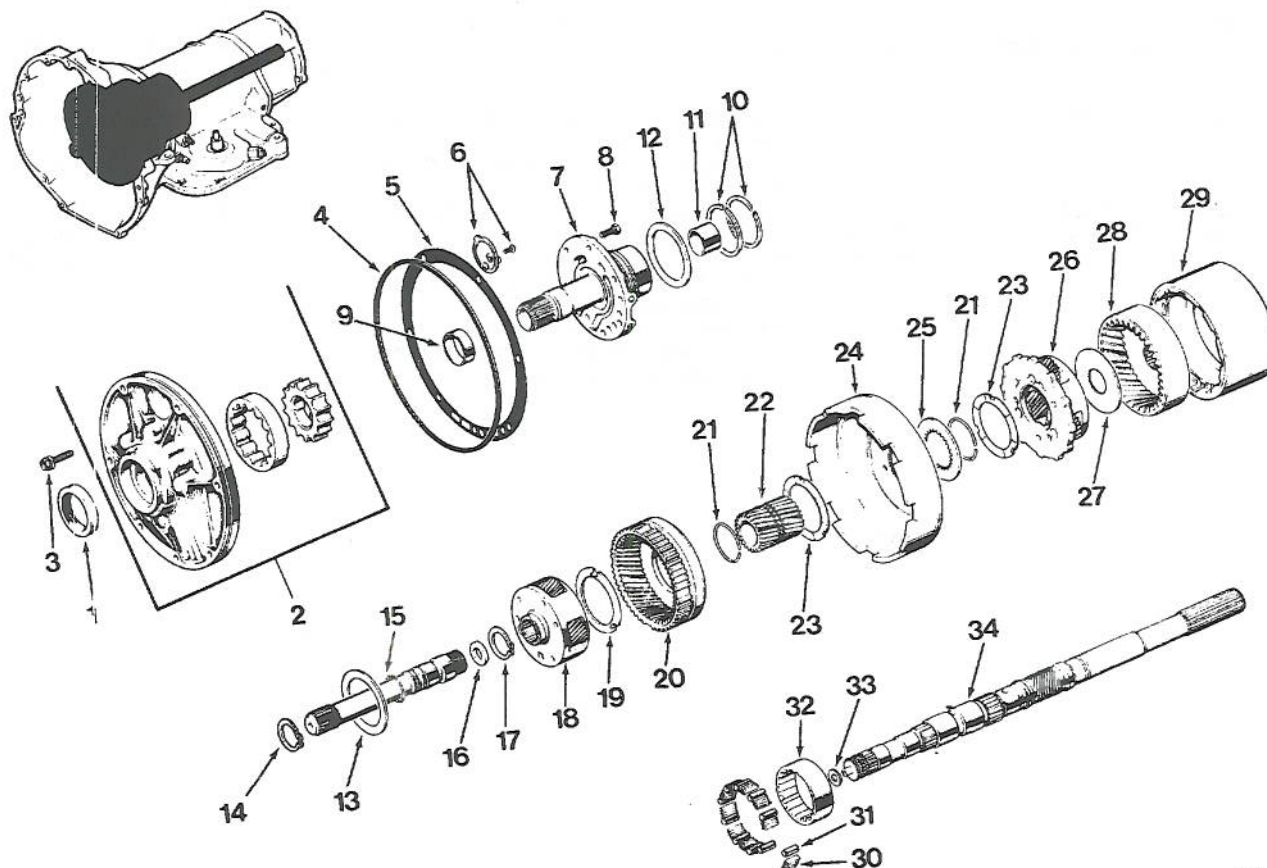


099428

FIGURE 113. GEARS AND SHAFTS GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
113-	NO NUMBER	92871		GEARS AND SHAFTS GROUP (PARTS KIT AVAILABLE) (SEE FIGURE 2 FOR NHA)	REF		
-1	3515137	12204		SEAL, HUB, IMPELLER (8124869) (K3)	1		XBFZZ
-2	4130193	86403		HOUSING ASSEMBLY, OIL PUMP (8132482)	1		XBFZZ
-3	6023943	93334		SCREW, CAP, HEX HD (8120871) (AP)	7		XBFZZ
-4	1942021	93334		SEAL, HOUSING, OIL PUMP (8120859) (K3)	1		XBFZZ
-5	4028377	93334		GASKET, HOUSING (8126898) (K3)	1		XBFZZ
-6	342007	86403		BAFFLE PACKAGE, PUMP HOUSING (8120857)	1		XBFZZ
-7	4058929	86403		SUPPORT ASSEMBLY, REACTION SHAFT (8128973)	1		XBFZZ
-8	6179815	92871		SCREW, CAP, HEX HEAD (179815)	6		XBFZZ
-9	2466324	93334		BUSHING, HOUSING (8120855)	1		XBFZZ
-10	3743689	86403		RING, SEAL, SUPPORT (8120867) (K3)	2		XBFZZ
-11	2801348	93334		BUSHING, SHAFT, REACTION (8120865)	1		XBFZZ
-12	2204622	93334		WASHER, THRUST, FRONT, .061-.063 (8120898)	AR		XBFZZ
	2204623	93334		WASHER, THRUST, FRONT, .084-.086 (8120899)	AR		XBFZZ

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
113-	2400284	93334		WASHER, THRUST, FRONT, . 102-. 104 (8120900)	AR		XB FZZ
-13	8120878	92871		WASHER, THRUST, FRONT CLUTCH. REAR	1		XB FZZ
-14	2124872	86403		RING, RETAINING (8120908).	1		XB FZZ
-15	4058665	86403		SHAFT ASSEMBLY, INPUT (8128977).	1		XB FZZ
-16	3681688	86403		WASHER, THRUST, OUTPUT SHAFT. (8128983)	1		XB FZZ
-17	6022818	86403		RING, RETAINING, . 048 (8120914).	AR		XB FZZ
	6024311	93334		RING, RETAINING, . 055 (8121005).	AR		XB FZZ
	6024312	93334		RING, RETAINING, . 062 (8121009).	AR		XB FZZ
-18	3836059	86403		CARRIER ASSEMBLY, FRONT. PLANETARY (8126905)	1		XB FZZ
-19	1942081	93334		WASHER, THRUST, CARRIER (8121072)	2		XB FZZ
-20	2892656	93334		GEAR ASSEMBLY, FRONT ANNULUS (8121015)	1		XB FZZ
-21	1736521	93334		RING, LOCK, SUN GEAR (8121028).	2		XB FZZ
-22	2801311	93334		GEAR ASSEMBLY, SUN (8121285).	1		XB FZZ
-23	1942081	86403		WASHER, THRUST, SUN GEAR. (8121072)	1		XB FZZ
-24	2400662	93334		SHELL, DRIVING (8121026).	1		XB FZZ
-25	1942080	93334		PLATE, THRUST (8121027).	1		XB FZZ
-26	2466539	93334		CARRIER ASSEMBLY, REAR (8121070)	1		XB FZZ
-27	2400580	92871		PLATE, THRUST, REAR ANNULUS (8121076)	1		XB FZZ
-28	2538185	86403		GEAR ASSEMBLY, REAR ANNULUS. (8121075)	1		XB FZZ
-29	8121080	92871		DRUM, REVERSE.	1		XB FZZ
-30	1942187	86403		SPRING, OVERRUNNING CLUTCH ROLLER (8120846)	12		XB FZZ
-31	3743068	86403		ROLLER, OVERRUNNING CLUTCH (8120848)	12		XB FZZ
-32	8120850	92871		RACE, OVERRUNNING CLUTCH	1		XB FZZ
-33	8128983	92871		WASHER, THRUST, OUTPUT SHAFT.	1		XB FZZ
-34	4130543	86403		SHAFT, OUTPUT (8132491).	1		XB FZZ
	8134763	92871		KIT, TRANSMISSION OVERHAUL. (INCLUDES PARTS LISTED ABOVE DENOTED BY K3) (K3)	REF		PA FZZN

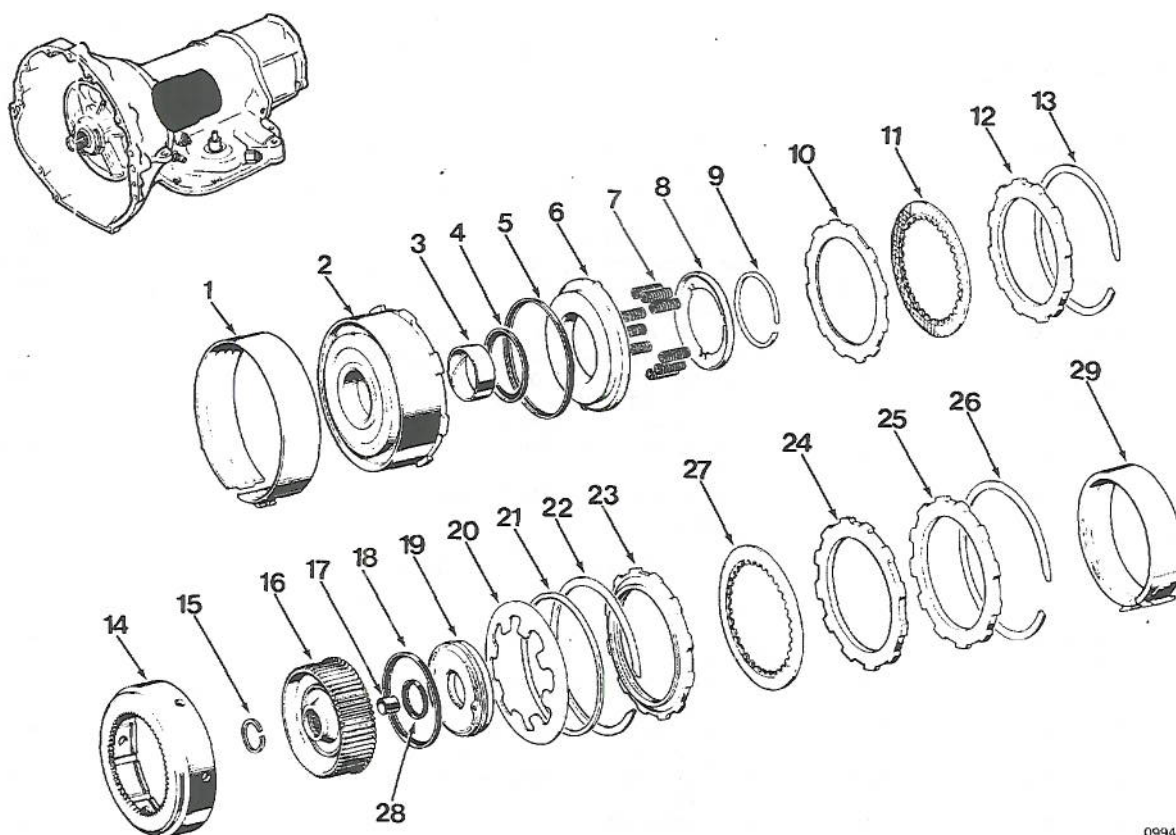


099438

FIGURE 114. CLUTCHES GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE	SMR CODE
114-	NO NUMBER	92871		CLUTCHES GROUP (PARTS KIT. AVAILABLE) (SEE FIGURE 2 FOR NHA)	REF		
-1	3681105	86403		DAND ASSEMBLY, KICKDOWN. (8123277)	1		XBFZZ
-2	4058648	93334		RETAINER ASSEMBLY, FRONT CLUTCH. (8128769)	1		XBFZZ
-3	4058647	86403		BUSHING, RETAINER, FRONT CLUTCH (8128770)	1		XBFZZ
-4	8120882	92871		SEAL, INNER, PISTON, FRONT CLUTCH (K3)	1		XBFZZ
-5	8120884	92871		SEAL, OUTER, PISTON, FRONT CLUTCH (K3)	1		XBFZZ
-6	8120880	92871		PISTON, FRONT CLUTCH	1		XBFZZ
-7	8120966	92871		SPRING, PISTON, FRONT CLUTCH.	9		XBFZZ
-8	8120886	92871		RETAINER, SPRING	1		XBFZZ
-9	8120888	92871		RING, RETAINING	1		XBFZZ
-10	2124826	93334		DISK, CLUTCH (8120891)	4		XBFZZ
-11	2801167	93334		DISK, CLUTCH (8120889)	4		XBFZZ
-12	2801961	93334		DISK, CLUTCH (8120933)	1		XBFZZ
-13	3410570	93334		RING, RETAINING (8120895)	1		XBFZZ
-14	3743622	86403		RETAINER, REAR CLUTCH (8124733)	1		XBFZZ
-15	4058443	86403		RING, SEAL, RETAINER, REAR CLUTCH. (8128782) (K3)	1		XBFZZ
-16	8128980	92871		RETAINER, PISTON, REAR CLUTCH	1		XBFZZ
-17	3681709	86403		BUSHING, INPUT SHAFT (8123200)	1		XBFZZ
-18	2124835	93334		SEAL, PISTON, OUTER, REAR CLUTCH (8120718) (K3)	1		XBFZZ

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS USABLE		
					PER ASSY.	ON CODE	SMR CODE
115-18	13728	76760		.. GEAR, SPUR (8130873).	1		XA
-19	13903	76760		.. BOLT (8130874) (AP).	6		XA
-20	16101	86403		.. PLUG, SHIFT LIMITER .. (8983501433)	1		XA
-21	99780	76760		.. GASKET (8130830)	1		XA
-22	13684	86403		.. CASE, FRONT HALF (8130867).	1		XA
-23	4006681	92871		.. NUT AND WASHER	6		XA
-24	15053	86403		.. STUD, CASE ADAPTER (8130805). .. (AP)	6		XA
-25	61570	76760		.. BOLT (8133641)	1		XA
-26	93433	76760		.. SPRING, POPPET (8130856).	1		XA
-27	15181	76760		.. PLUNGER, POPPET (8130855)	1		XA
-28	4269149	86403		.. SEALANT (8993317).	AR		XA

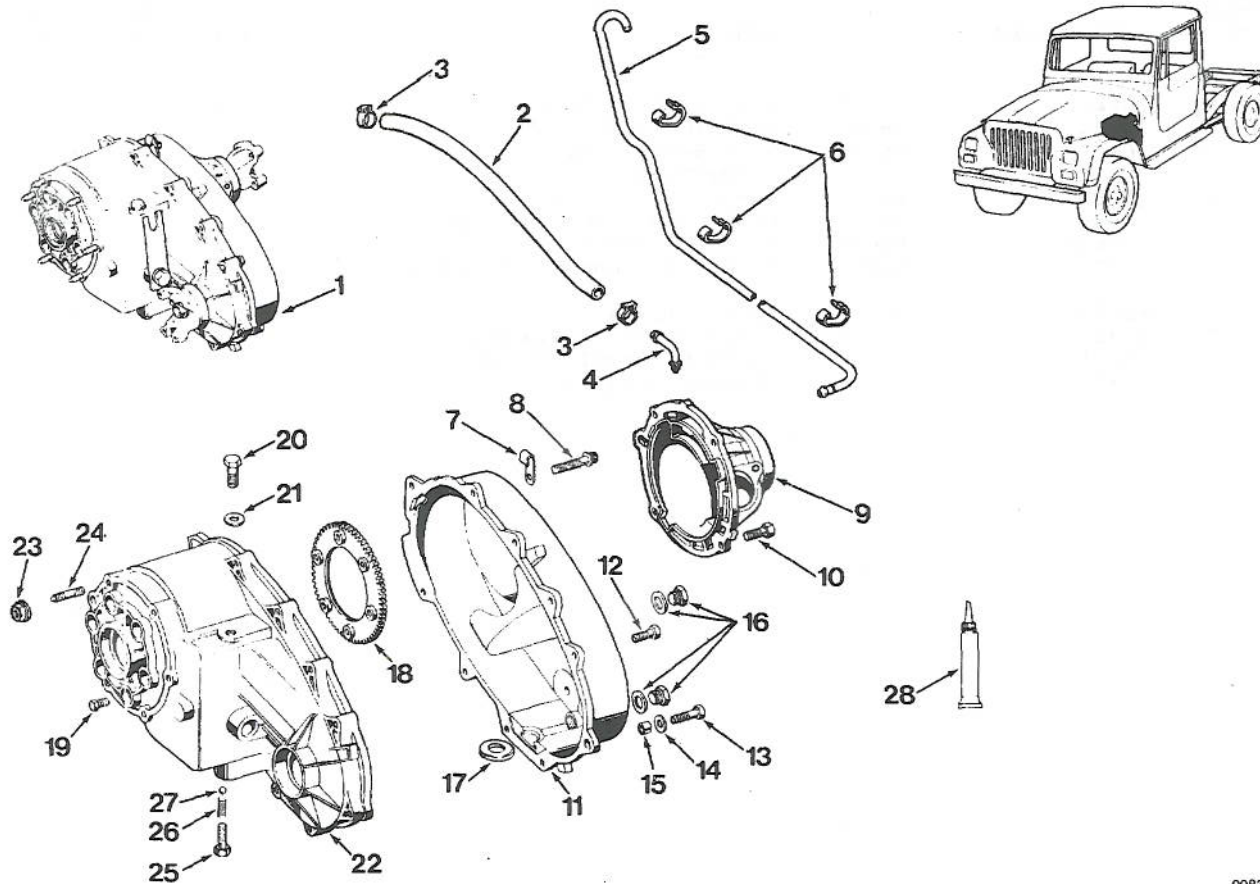


098368

FIGURE 115. TRANSFER CASE ASSEMBLY AND TRANSFER CASE HOUSING GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
115-	NO NUMBER	92871		TRANSFER CASE ASSEMBLY AND	REF		
				TRANSFER CASE HOUSING GROUP			
				(SEE FIGURE 2 FOR NHA)			
-1	8993000029	92871		CASE ASSEMBLY, TRANSFER, MODEL	1		AFFFF
				20B			
-2	8125823	92871		HOSE, HYDRAULIC.	1		XBFFZ
-3	4006047	92871		CLAMP, HOSE (AP)	2		XA
-4	8130985	92871		TUBE, TRANSFER CASE VENT	1		XA
-5	5363389	92871		LINE, VENT, TRANSFER CASE	1		XA
-6	3137319	92871		CLIP, CLOSED (AP)	3		XA
-7	8130980	92871		BRACKET, VENT LINE CLIP.	1		XA
-8	15107	86403		BOLT, FLANGE (8130979) (AP).	1		XA
-9	13692	86403		RETAINER, REAR BEARING.	1		XA
				(8130983)			
-10	4210617	86403		BOLT, CASE HALF (8130984) (AP).	4		XA
-11	16100	86403		CASE, REAR HALF (8983501432).	1		XA
-12	61573	86403		BOLT, RETAINER (8130984) (AP)	6		XA
-13	61575	86403		BOLT, DOWEL (8130825) (AP).	2		XA
-14	MS27183-14	96906		WASHER, FLAT (AP)	2		XBFFZ
-15	13627	76760		DOWEL, CASE ALIGNMENT (8130872)	2		XA
				(AP)			
-16	15054	86403		PLUG AND GASKET ASSEMBLY	2		XA
				(8130824)			
-17	95472	86403		MAGNET, CHIP COLLECTOR.	1		XA
				(8130823)			

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
115-18	13728	76760	..	GEAR, SPUR (8130873)	1		XA
-19	13903	76760	..	BOLT (8130874) (AP)	6		XA
-20	16101	86403	..	PLUG, SHIFT LIMITER (8983501433)	1		XA
-21	99780	76760	..	GASKET (8130830)	1		XA
-22	13684	86403	..	CASE, FRONT HALF (8130867)	1		XA
-23	4006681	92871	..	NUT AND WASHER	6		XA
-24	15053	86403	..	STUD, CASE ADAPTER (8130805) (AP)	6		XA
-25	61570	76760	..	BOLT (8133641)	1		XA
-26	93433	76760	..	SPRING, POPPET (8130856)	1		XA
-27	15181	76760	..	PLUNGER, POPPET (8130855)	1		XA
-28	4269149	86403	..	SEALANT (8993317)	AR		XA

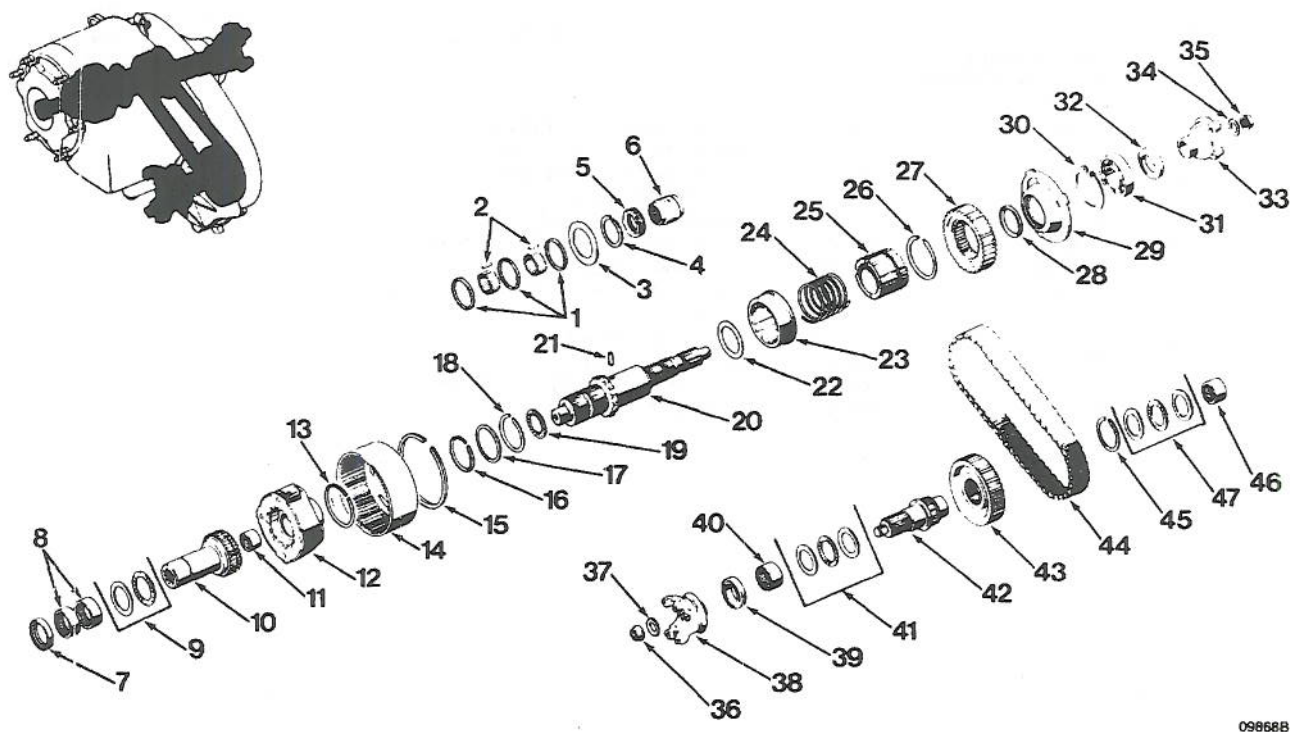


09868B

FIGURE 116. TRANSFER CASE GEARS AND SHAFTS

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
116-	NO NUMBER	92871		GEARS AND SHAFTS, TRANSFER CASE	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	13747	86403		. SPACER, ROLLER (8130971)	3		XA
-2	89323	76760		. ROLLER (8130972)	120		XA
-3	15835	86403		. WASHER, THRUST (8134130)	1		XA
-4	13749	76760		. RING, RETAINING (8130974)	1		XA
-5	11801	76760		. GEAR SET, SPUR (8130826)	1		XA
-6	13774	86403		. GEAR, SPEEDOMETER (8130827)	1		XA
-7	13672	86403		. SEAL, OIL, INPUT (8130870)	1		XA
-8	13967	76760		. BEARING, INPUT (8130868)	2		XA
-9	13702	76760		. RETAINER AND ROLLER (8130875)	1		XA
-10	13786	86403		. GEAR ASSEMBLY, INPUT (8130877)	1		XA
-11	13969	76760		. BEARING, ROLLER (8130878)	1		XA
-12	4329198	86403		. GEAR ASSEMBLY, PLANETARY,	1		XA
				COMPLETE (8983501429)			
-13	15207	76760		. RING, RETAINING (8983501431)	1		XA
-14	15506	86403		. HUB ASSEMBLY, ANNULUS AND	1		XA
				CLUTCH (8983500259)			
-15	13863	86403		. RING, RETAINING (8134454)	1		XA
-16	15207	76760		. RING, RETAINING (8983501431)	1		XA
-17	15247	86403		. WASHER, THRUST (8983500258)	1		XA
-18	11446	76760		. RING, RETAINING (8130866)	1		XA
-19	13885	86403		. RETAINER AND ROLLER (8130879)	1		XA
-20	16098	86403		. MAINSHAFT ASSEMBLY	1		XA
				(8983510093)			
-21	15836	86403		. PIN, WASHER RETAINER	1		XA
				(8983510095) (AP)			
-22	16424	86403		. WASHER, THRUST (8130967)	1		XA
-23	15904	86403		. GEAR, MODE CLUTCH (8983510094)	1		XA
-24	15811	86403		. SPRING, MODE SHIFT (8983501437)	1		XA
-25	15477	86403		. CARRIER, SPROCKET (8130969)	1		XA
-26	13738	86403		. RING, SPROCKET STOP (8130970)	1		XA
-27	15306	86403		. SPROCKET, WHEEL (8130968)	1		XA



FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
116-28	13759	86403		. PACKING ASSEMBLY (8130982).	1		XA
-29	13758	86403		. HOUSING, PUMP (8130981).	1		XA
-30	15158	86403		. RING, RETAINING (8134411).	1		XA
-31	FFB171	81348		. BEARING, MAINSHAFT, REAR. (8130807)	1		XA
-32	13905	76760		. SEAL, OIL, REAR OUTPUT (8130808).	1		XA
-33	13775	86403		. YOKE, REAR OUTPUT (8130817).	1		XA
-34	11689	76760		. WASHER, LOCK, YOKE, REAR. (8130815)	1		XA
-35	13368	76760		. NUT, YOKE (8130816).	1		XA
-36	13368	76760		. NUT, YOKE (8130816).	1		XA
-37	11689	86403		. WASHER, YOKE (8130815).	1		XA
-38	13776	76760		. YOKE AND SLINGER ASSEMBLY. (8130818)	1		XA
-39	13905	76760		. SEAL, OIL, REAR OUTPUT (8130808).	1		XA
-40	865168R91	29930		. BEARING, FRONT OUTPUT (8130869).	1		XA
-41	13753	86403		. BEARING, THRUST (8130819).	1		XA
-42	15333	86403		. SHAFT, FRONT OUTPUT (8130976).	1		XA
-43	15307	76760		. SPROCKET, WHEEL (8130975).	1		XA
-44	13798	86403		. CHAIN (8130977).	1		XA
-45	13068	76760		. RING, RETAINING (8130802).	1		XA
-46	J-2416	60380		. BEARING (8130836).	1		XA
-47	13753	86403		. BEARING, THRUST (8130819).	1		XA

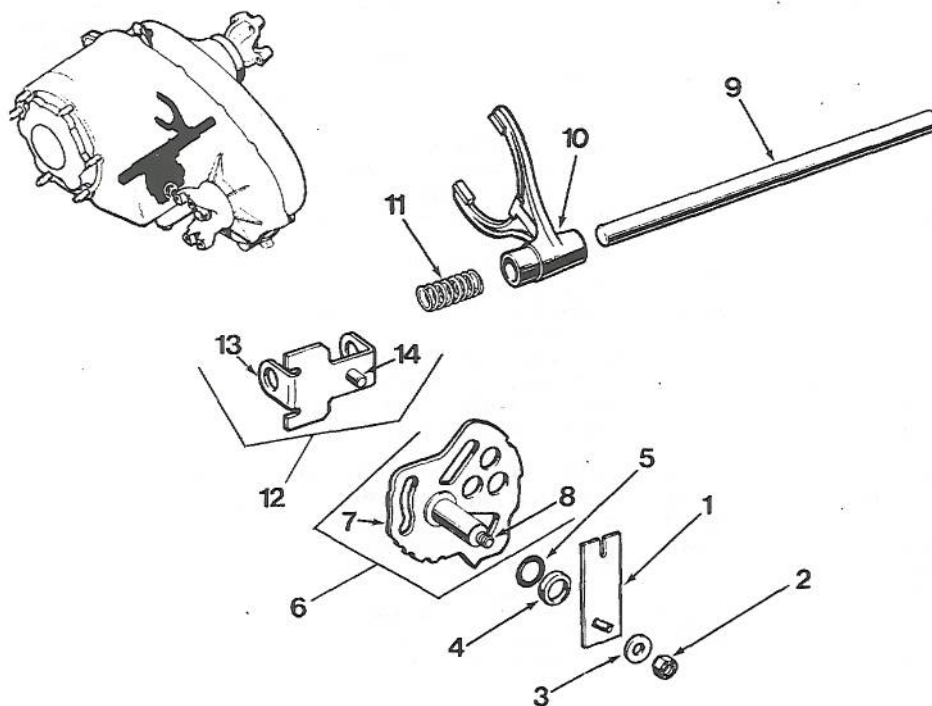

09879A

FIGURE 117. TRANSFER CASE SHIFT FORKS GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
117-	NO NUMBER	92871		TRANSFER CASE SHIFT FORKS. GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	8992000108	92871		PLATE, FOUR WHEEL DRIVE, LOCK	1	XA	
-2	MS21044N6	96906		NUT, SELF-LOCKING (8130813). (AP)	1	XA	
-3	MS27183-14	96906		WASHER, FLAT (AP).	1	XB FZZ	
-4	14037958	11862		RETAINER, PACKING, PREFORMED. (8130853)	1	XA	
-5	13725	76760		PACKING, PREFORMED (8130854)	1	XA	
-6	16096	76760		SECTOR AND SHAFT ASSEMBLY, SHIFT (8983501430)	1	XA	
-7	16097	76760		SHIFTER, FORK (NOT SERVICED SEPARATELY)	1	XA	
-E	13724	76760		SHAFT, SHOULDERED (NOT SERVICED SEPARATELY)	1	XA	
-9	13727	76760		RAIL, SHIFT (8130822).	1	XA	
-10	13735	76760		FORK, MODE (8130851)	1	XA	
-11	13736	76760		SPRING, RAIL (8130876)	1	XA	
-12	13733	76760		BRACKET AND PIN ASSEMBLY. (8130821)	1	XA	
-13	13734	76760		BRACKET, MODE FORK (NOT SERVICED SEPARATELY)	1	XA	
-14	13985	76760		PIN, BRACKET (NOT SERVICED SEPARATELY)	1	XA	

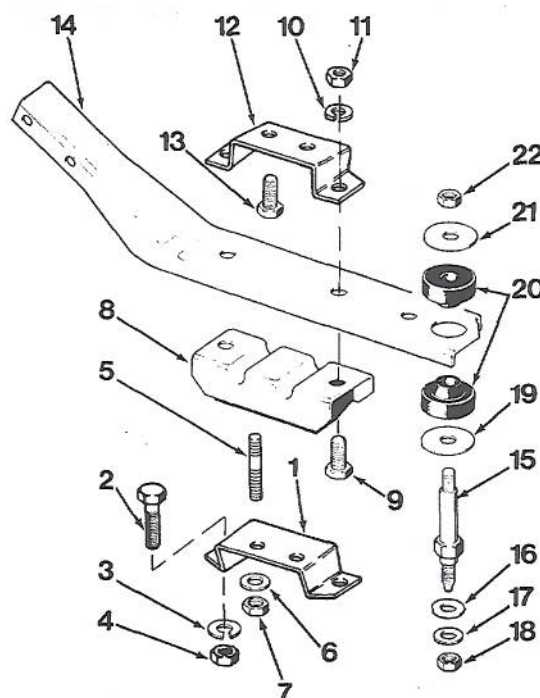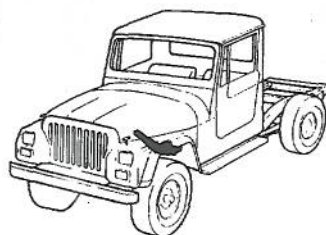

09950B

FIGURE 118. REAR ENGINE MOUNTS GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
118-	NO NUMBER	92871		REAR ENGINE MOUNTS GROUP	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	5568191	92871		SUPPORT, TRANSMISSION, MOUNT.	1		XBFZZ
	5994441	92871		SUPPORT, INSULATOR MOUNT	1		
-2	MS18154-60	96906		SCREW, CAP, HEX HEAD (AP)	4		XBFZZ
-3	MS35338-46	96906		WASHER, LOCK (AP)	4		XBFZZ
-4	MS51967-8	96906		NUT, HEX (AP)	4		XBFZZ
-5	4004819	92871		STUD, MOUNTING (AP)	2		XBFZZ
-6	4001120	92871		WASHER, FLAT (AP)	2		XBFZZ
-7	Q9413215	92871		NUT, HEX, LOCK (9413215) (AP)	2		XBFZZ
-8	1370910	34623		INSULATOR, ENGINE, REAR	1		PAFZZN
-9	4006112	92871		SCREW, CAP, HEX HEAD (AP)	2		XBFZZ
-10	MS35338-47	96906		WASHER, LOCK (AP)	2		XA
-11	MS51967-11	96906		NUT, PLAIN, HEX (AP)	2		XBFZZ
-12	8992000042	92871		BRACKET, TRANSMISSION TO	1		XBFZZ
				INSULATOR			
-13	4006112	92871		SCREW, CAP, HEX HEAD (AP)	2		XBFZZ
-14	5994020	92871		BRACKET, INSULATOR TO.	1		XBFZZ
				TRANSMISSION			
-15	5358879	92871		STUD, INSULATOR (AP)	1		XBFZZ
-16	4001134	92871		WASHER, FLAT (AP)	1		XBFZZ
-17	4001104	92871		WASHER, FLAT (AP)	2		XBFZZ
-18	Q9411783	92871		NUT, HEX, LOCK (9411783) (AP)	1		PAFZZN

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
118-19	941399	92871		WASHER, FLAT (AP).	2		XBFZZ
-20	945266	34623		INSULATOR, MOUNT	2		PAFZZN
-21	945269	92871		WASHER, FLAT	1		XBFZZ
-22	9411783	92871		NUT, HEX, LOCK (9411783).	1		PAFZZN

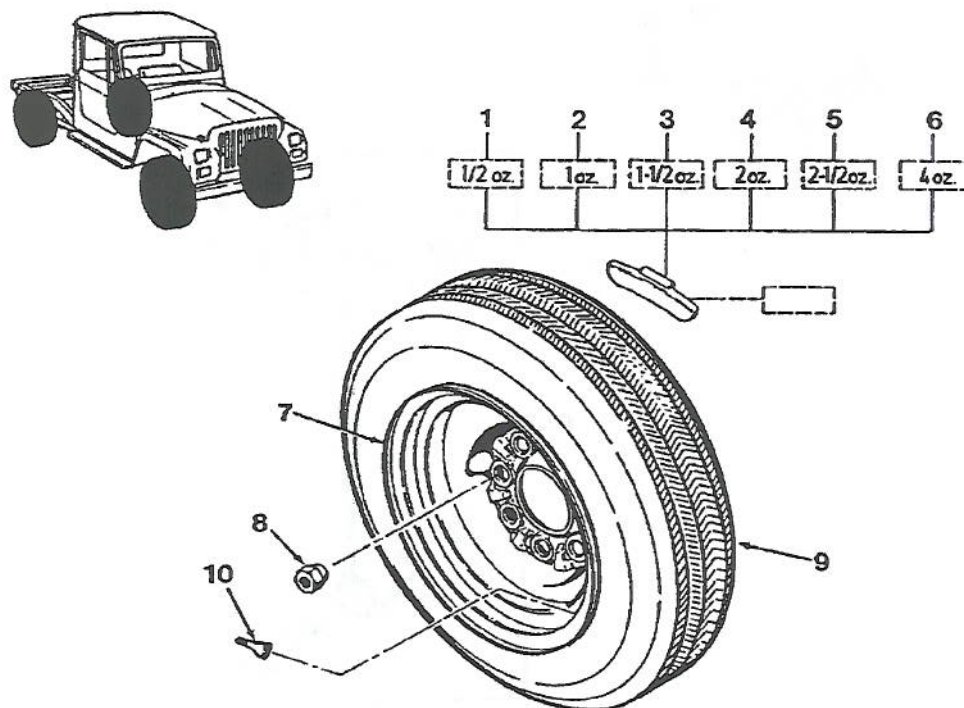


Figure 119. Tire, Wheel and Weights Group

FIGURE & INDEX/ SHEET NO.	PART NUMBER	CAGE	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE	SMR CODE
119-	NO NUMBER	92871		TIRE, WHEEL AND WEIGHTS GROUP..... (SEE FIGURE 2 FOR NHA)	REF		
-1	3165949	92871		. WEIGHT, WHEEL, 1/2 OUNCE	AR		XBFZZ
-2	3131615	92871		. WEIGHT, WHEEL, 1 OUNCE	AR		XBFZZ
-3	3165783	92871		. WEIGHT, WHEEL, 1-1/2 OUNCES	AR		XBFZZ
-4	3123943	92871		. WEIGHT, WHEEL, 2 OUNCES.....	AR		XBFZZ
-5	3165784	92871		. WEIGHT, WHEEL, 2-1/2 OUNCES	AR		XBFZZ
-6	5356329	92871		. WEIGHT, WHEEL, BALANCE, 4 OUNCES	AR		XBFZZ
-7	8992000066	92871		. WHEEL ASSEMBLY, 16.5 BY 6.75	4		XBFZZ
-8	4004836	92871		. NUT, PLAIN, HEX (AP).....	32		XBFZZ
-9	8.75X16.5, 10 PLY	03481		. TIRE, TUBELESS.....	4		XBFZZ
-10	5352882	92871		. VALVE ASSEMBLY, TUBELESS TIRE	4		XBFZZ


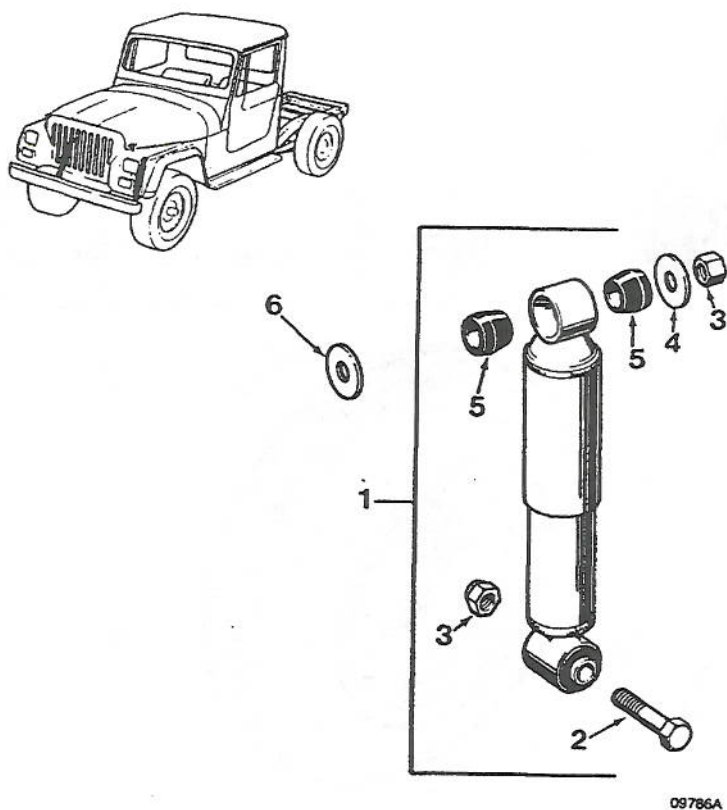


FIGURE 120. FRONT SHOCK ABSORBER GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
120-	NO NUMBER	92871		FRONT SHOCK ABSORBER GROUP	REF		
				(SEE FIGURE 2 FOR MHA)			
-1	8134629	92871		ABSORBER ASSEMBLY, SHOCK, FRONT, . . .	2		PAFZZN
				HEAVY DUTY			
-2	MS90726-117	96906		.. SCREW, CAP, HEX HD	2		XBFFZ
-3	4004311	92871		.. NUT, SELF-LOCKING, HEX	4		PAFZZN
-4	4488495	92871		.. WASHER, FLAT.	2		XBFFZ
-5	H81779	31033		.. BUSHING.	4		PAFZZN
-6	MS27183-21	96906		.. WASHER, FLAT (FA12010451).	2		PAFZZN

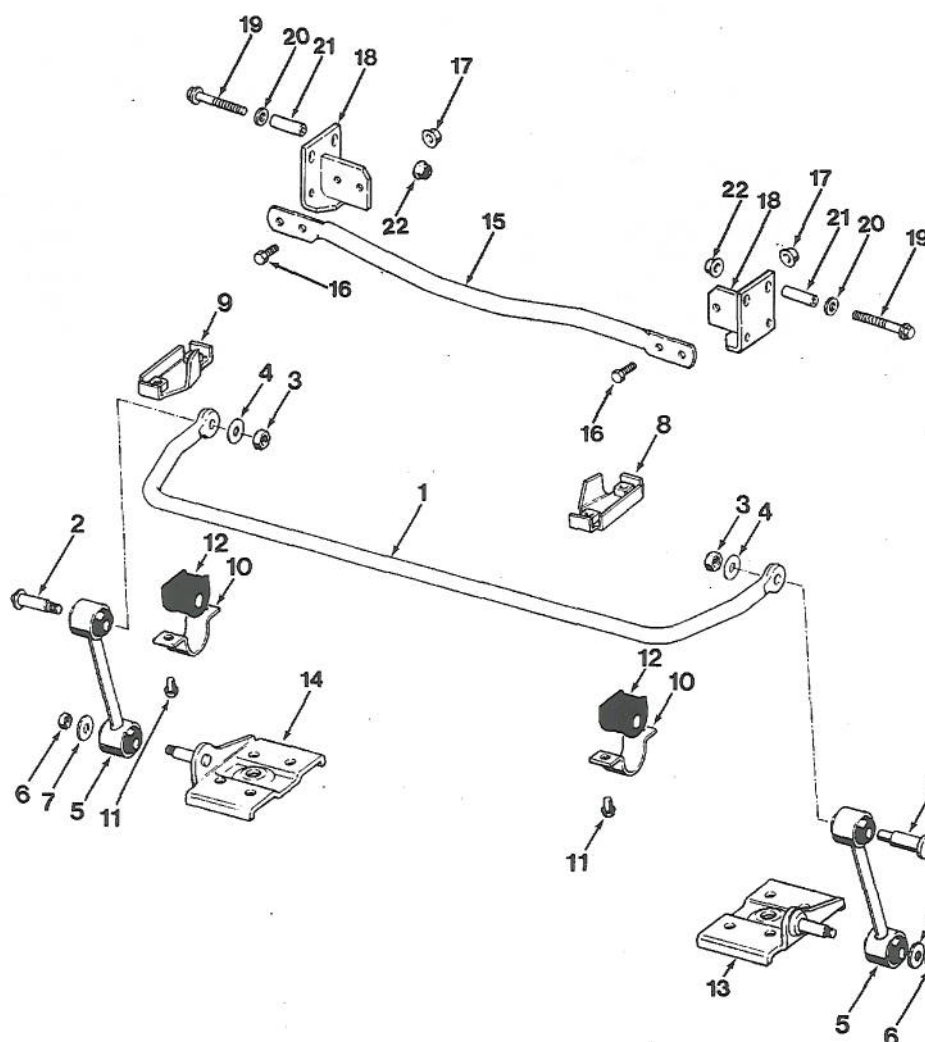


098028

FIGURE 121. FRONT STABILIZER BAR GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
121-	NO NUMBER	92871		FRONT STABILIZER BAR GROUP	REF		
-1	5355593	92871		. BAR, STABILIZER, FRONT.	1		XBFZZ
-2	5352787	92871		. PIN, STABILIZER BAR CONNECTING	2		XBFZZ
-3	69421085	92871		. NUT, PLAIN HEX (9421085) (AP).	2		XBFZZ
-4	5350644	92871		. WASHER, LOCK (AP).	2		XBFZZ
-5	5355594	92871		. LINK ASSEMBLY, CONNECTING,	2		XBFZZ
-6	NAS1409A7	80205		. NUT, SELF-LOCKING, HEX (AP).	2		XBFZZ
-7	MS27183-17	96906		. WASHER, FLAT (FA12010291) (AP).	2		PAFZZN
-8	5355596	92871		. BRACKET ASSEMBLY, SUPPORT.	1		XBFZZ
-9	5355597	92871		. BRACKET ASSEMBLY, SUPPORT.	1		XBFZZ
-10	5352703	92871		. BRACKET, STABILIZER BAR.	2		XBFZZ
-11	6274902	92871		. SCREW, MACHINE (274902) (AP).	4		XBFZZ
-12	5355315	92871		. BUSHING, STABILIZER BAR.	2		XBFZZ
-13	5359584	92871		. BRACKET ASSEMBLY, STABILIZER	1		XBFZZ
				SHAFT AND SPRING			


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
121-14	5359585	92871		BRACKET ASSEMBLY, STABILIZER SHAFT AND SPRING	1		XBFZZ
-15	8992000008	92871		BAR, TIE	1		XBFZZ
-16	MS90725-62	96906		SCREW, CAP, HEX HD (AP)	4		XBFZZ
-17	4006445	92871		NUT, FLANGED, HEX (AP)	4		XBFZZ
-18	8992000009	92871		BRACKET, TIE BAR	2		XBFZZ
-19	4006864	92871		SCREW, MACHINE (AP)	6		XBFZZ
-20	4003926	92871		WASHER, FLAT, PLAIN (AP)	6		XBFZZ
-21	8992000010	92871		TUBE, SPACER, TIE BAR (AP)	4		XBFZZ
-22	4006445	92871		NUT, FLANGED, HEX	4		XBFZZ

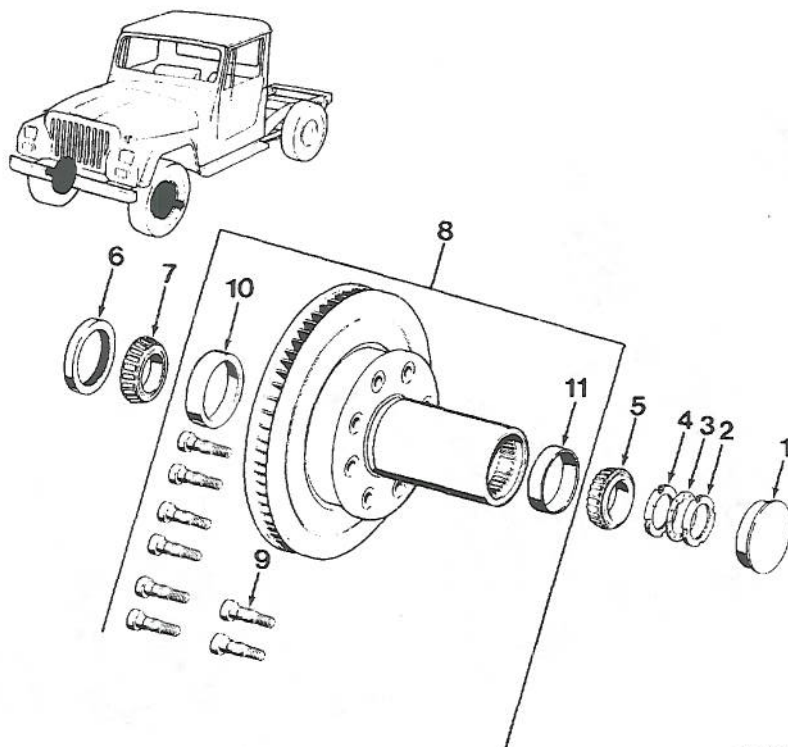

098018

FIGURE 123. FRONT BRAKE DISC


FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
123-	NO NUMBER	92871		FRONT BRAKE DISC	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	5352268	92871		CAP, GREASE, FRONT HUB	2		XBFZZ
-2	5352169	92871		RING, LOCK, WHEEL BEARING	2		XBFZZ
-3	4004815	92871		WASHER, LOCK	2		XBFZZ
-4	4004816	92871		LOCK NUT AND PIN ASSEMBLY,	2		XBFZZ
				INNER			
-5	3156052	92871		CONE AND ROLLERS, DIFFERENTIAL	2		PAFZZN
				BEARING			
-6	5352609	92871		SEAL, HUB	2		PAFZZN
-7	5357401	92871		BEARING ASSEMBLY, CONE AND	2		PAFZZN
				ROLLER			
-8	5359275	92871		HUB AND DISC ASSEMBLY	2		XBFZZ
-9	5359276	92871		BOLT, WHEEL (AP).	8		XBFZZ
-10	JLM104910	60038		CUP, INNER BEARING.	1		PAFZZN
-11	925447	92871		CUP, OUTER BEARING.	1		PAFZZN

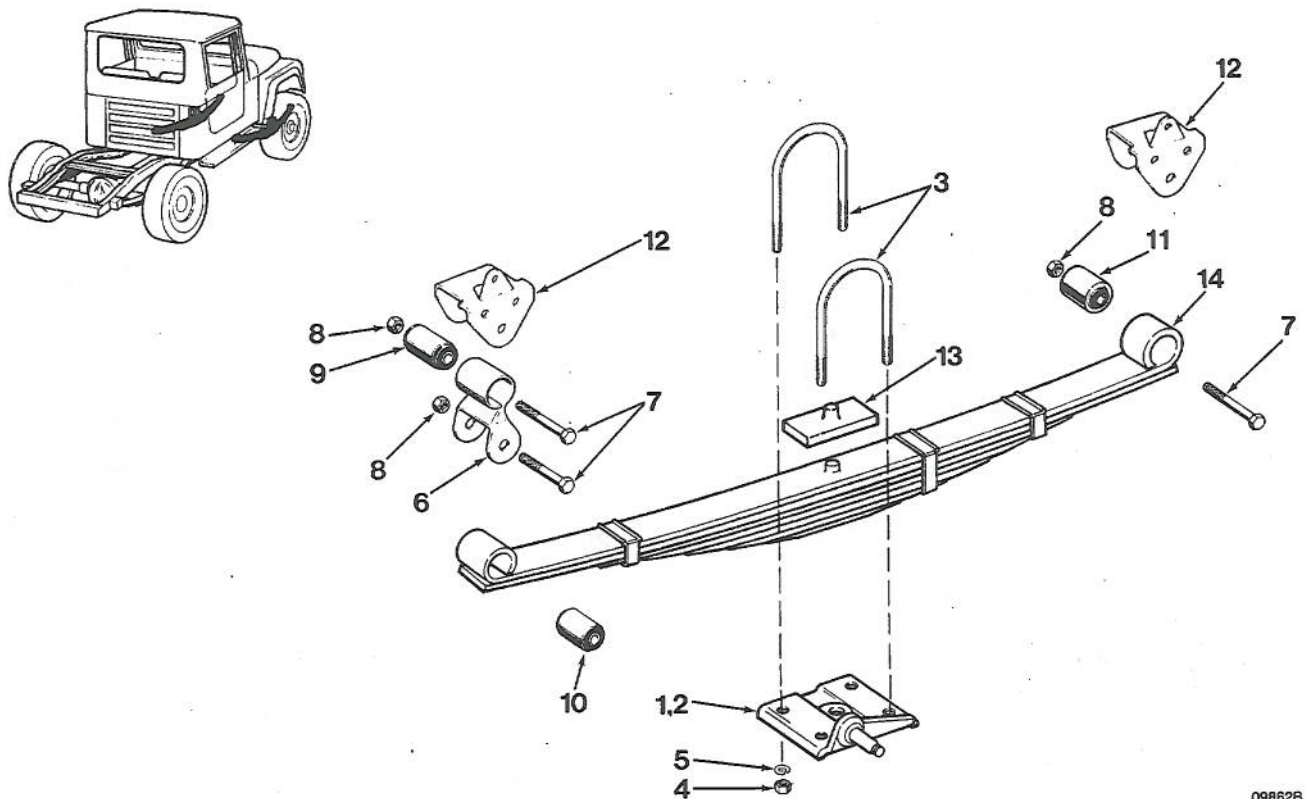

098628

FIGURE 124. FRONT SPRING GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
124-	NO NUMBER	92871		FRONT SPRING GROUP	REF		
-1	5359584	92871		BRACKET ASSEMBLY, STABILIZER	REF		XBFZZ
-2	5359585	92871		SHAFT AND SPRING, LEFT SIDE	REF		XBFZZ
-3	8129474	92871		BRACKET ASSEMBLY, STABILIZER	REF		XBFZZ
	8129476	92871		SHAFT AND SPRING, RIGHT SIDE	REF		XBFZZ
-4	09420350	92871		BOLT, SPRING CLIP, 4.20 INCHES.	1		XBFZZ
-5	4004806	92871		LONG (AP)	3		XBFZZ
-6	5352863	92871		BOLT, SPRING CLIP, 3.60 INCHES.	3		XBFZZ
-7	4004120	92871		LONG (AP)	3		XBFZZ
-8	4005198	92871		NUT, PLAIN, HEX (9420350) (AP).	8		XBFZZ
-9	5352079	92871		WASHER, LOCK (AP).	8		XBFZZ
-10	944870	92871		SHACKLE ASSEMBLY, SPRING, FRONT	2		XBFZZ
-11	5358985	92871		SCREW, CAP, HEX HD (AP)	6		XBFZZ
-12	8129561	92871		NUT, SELF-LOCKING, HEX (AP)	6		XBFZZ
-13	997362	92871		BUSHING, SPRING SHACKLE.	2		XBFZZ
-14	5994117	92871		BUSHING, SPRING, FRONT.	2		XBFZZ
		92871		BUSHING, SPRING PIVOT EYE.	2		XBFZZ
		92871		BRACKET, SPRING PIVOT.	4		XBFZZ
		92871		SPACER, SPRING, FRONT	2		XBFZZ
		92871		SPRING ASSEMBLY, FRONT	2		XBFZZ

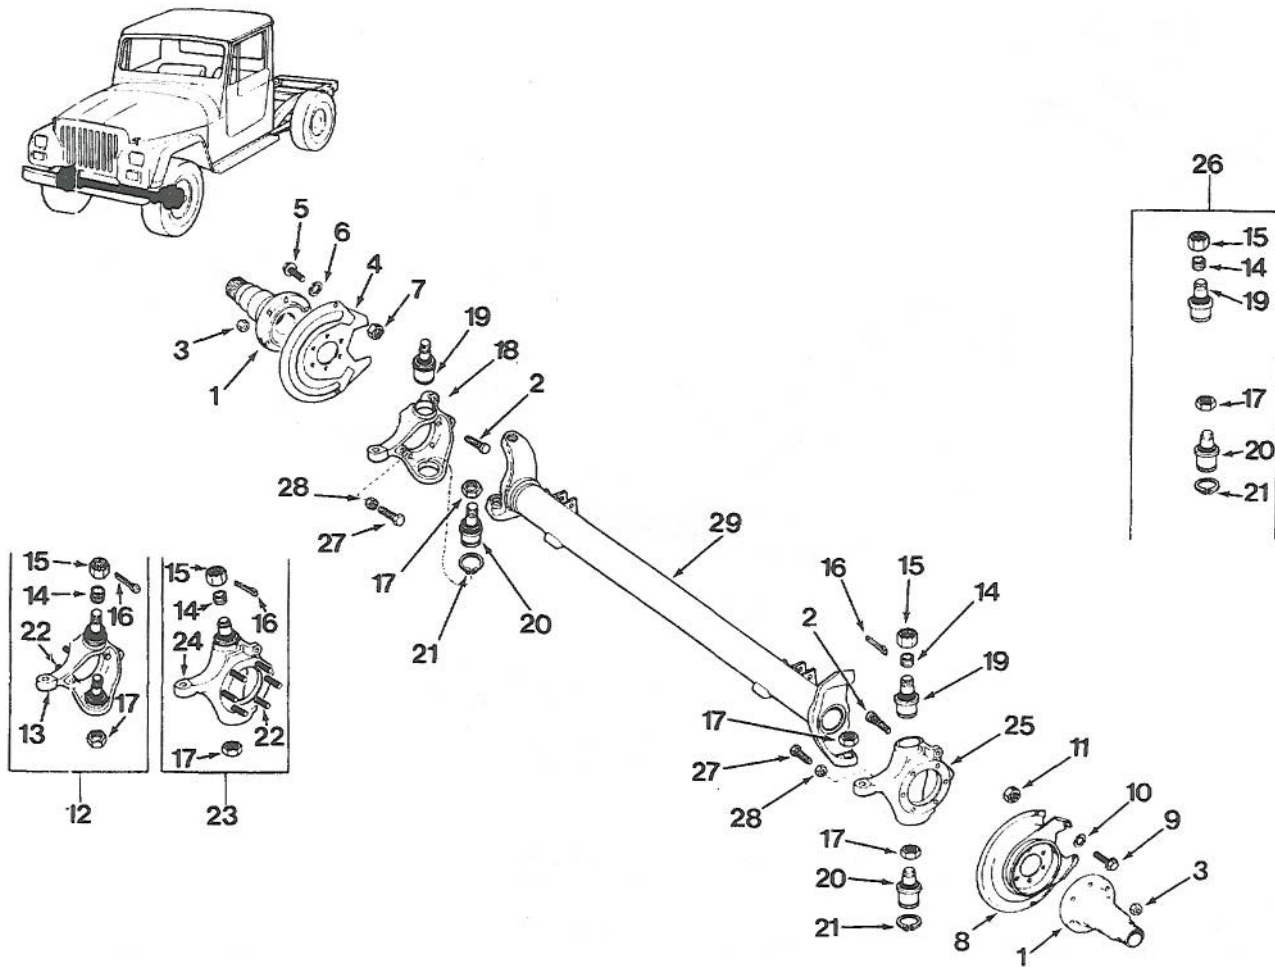

09913B

FIGURE 125. FRONT AXLE HOUSING GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
125--	NO NUMBER	92871		FRONT AXLE HOUSING GROUP (2WD) (PARTS KIT AVAILABLE) (SEE FIGURE 2 FOR NHA)	REF		
--1	70517	97271		SPINDLE AND PLUG ASSEMBLY (8983501538)	2		XBFZZ
--2	8128490	92871		SCREW, CAP, HEX HEAD (AP)	12		XBFZZ
--3	4004836	92871		NUT, HEX (AP)	12		XBFZZ
--4	5370116	92871		BRACKET ASSEMBLY, CALIPER, RIGHT FRONT	1		XBFZZ
--5	6180017	92871		SCREW, CAP, HEX HD (180017) (AP)	1		XBFZZ
--6	4004863	92871		WASHER, HELICAL (AP)	1		XBFZZ
--7	69411783	92871		NUT, HEX, LOCK (9411783) (AP)	1		PAFZZN
--8	5370115	92871		BRACKET ASSEMBLY, CALIPER, LEFT FRONT	1		XBFZZ
--9	6180017	92871		SCREW, CAP, HEX HD (180017) (AP)	1		XBFZZ
--10	4004863	92871		WASHER, HELICAL (AP)	1		XBFZZ
--11	69411783	92871		NUT, HEX, LOCK (9411783) (AP)	1		PAFZZN

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
125-12	706575	97271		KIT, KNUCKLE ASSEMBLY, RIGHT. (8128610) (K11)	1		XBFZZ
-13	70037X	97271		.. KNUCKLE ASSEMBLY, STEERING, RIGHT HAND (NOT SERVICED SEPARATELY) (K11)	1		XBFZZ
-14	35417	97271		.. RING, SPLIT, ADJUSTING (8121365) (K11) (K12)	2		XBFZZ
-15	35416	97271		.. NUT, HEX, SLOTTED (8121364). (K11) (K12)	2		XBFZZ
-16	500024-8	97271		.. PIN, COTTER (8121392) (K11) (K12)	2		XBFZZ
-17	35566	97271		.. NUT, HEX (8121391) (K11) (K12).	2		XBFZZ
-18	38532	97271		.. KNUCKLE, STEERING, RIGHT HAND. (NOT SERVICED SEPARATELY) (K11)	1		XBFZZ
-19	36621	97271		.. SOCKET ASSEMBLY, UPPER. (SERVICED ONLY IN KIT 13) (K11) (K13)	1		XBFZZ
-20	40113	97271		.. SOCKET ASSEMBLY, LOWER. (SERVICED ONLY IN KIT 13) (K11) (K13)	1		XBFZZ
-21	35938	97271		.. RING, SNAP (8124362) (K11). (K13)	1		XBFZZ
-22	36326-2	97271		.. BOLT, BRAKE DISC (NOT SERVICED. SEPARATELY) (K11) (K12)	6		XBFZZ
-23	706576	97271		.. KIT, KNUCKLE ASSEMBLY, LEFT (8128611) (K12)	1		XBFZZ
-24	70038X	97271		.. KNUCKLE ASSEMBLY, STEERING, LEFT HAND (NOT SERVICED SEPARATELY) (K12)	1		XBFZZ
-25	38534	97271		.. KNUCKLE, STEERING, LEFT HAND (NOT SERVICED SEPARATELY) (K12)	1		XBFZZ
-26	706116	97271		.. KIT, SOCKET ASSEMBLY (8124333) (K13)	1		XBFZZ
-27	31026	97271		.. BOLT, STOP (A821).	2		XBFZZ
-28	9114494	92871		.. NUT, HEX, BOLT STOP (114494).	2		XBFZZ
-29	72633	97271		.. TUBE ASSEMBLY, FRONT AXLE. (8983501537)	1		XBFZZ


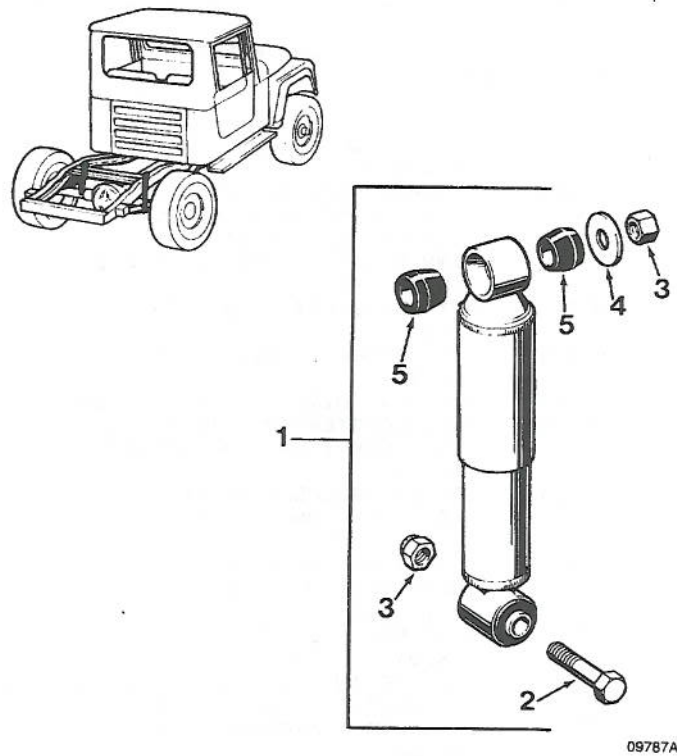


FIGURE 126. REAR SHOCK ABSORBER GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
126-	NO NUMBER	92871		REAR SHOCK ABSORBER GROUP.	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	8134630	92871		ABSORBER ASSEMBLY, SHOCK, REAR,	2		PAFZZN
				HEAVY DUTY			
-2	MS90726-117	96906		SCREW, CAP, HEX HD	2		XBFZZ
-3	4004311	92871		NUT, SELF-LOCKING, HEX	4		PAFZZN
-4	4488495	92871		WASHER, FLAT.	2		XBFZZ
-5	HB779	31033		BUSHING.	4		PAFZZN

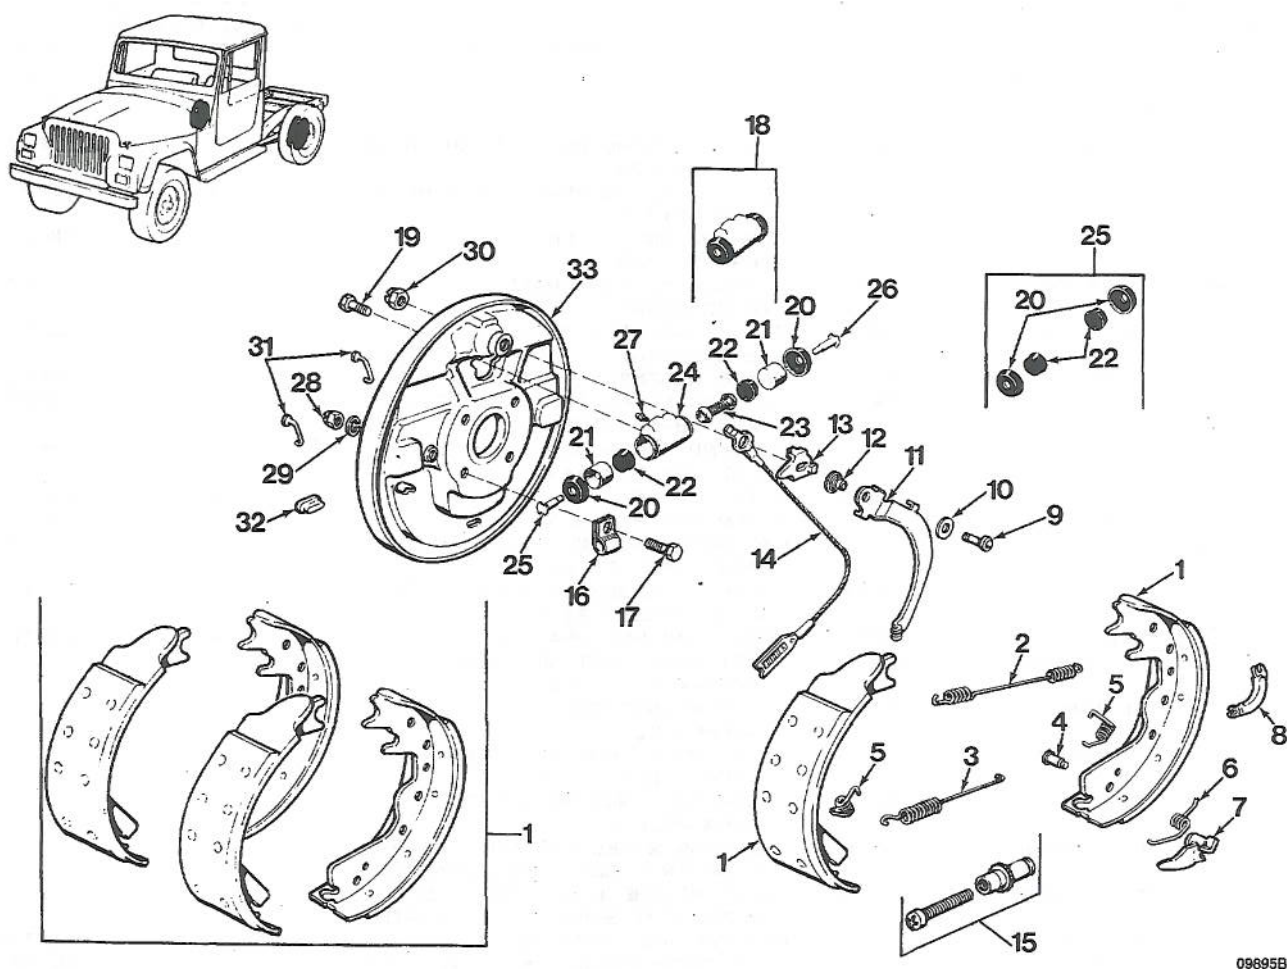


09695B

FIGURE 127. REAR BRAKE AND CYLINDER GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
127-	NO NUMBER	92871		REAR BRAKE AND CYLINDER GROUP.	REF		
				(PARTS KIT AVAILABLE)			
				(SEE FIGURE 2 FOR NHA)			
-1	3207203	14892		SHOE SET, BRAKE (8983501458)	1		PAFZZN
-2	317927	14892		SPRING, SHOE TO SHOE, UPPER	2		XBFZZ
				(8983501464)			
-3	3206951	14892		SPRING, SHOE TO SHOE, LOWER	2		XBFZZ
				(8983501460)			
-4	318223	14892		PIN, LEVER, AUTOMATIC ADJUSTOR.	2		XBFZZ
				(8983501472)			
-5	317925	14892		SPRING, SHOE HOLDDOWN, LEFT	4		XBFZZ
				HAND (8983501478)			
-6	322315	14892		SPRING, AUTOMATIC ADJUSTOR	1		XBFZZ
				RIGHT HAND (8983501474)			
	322314	14892		SPRING, AUTOMATIC ADJUSTOR LEFT.	1		XBFZZ
				HAND (8983501475)			
-7	3205205	14892		LEVER, AUTOMATIC ADJUSTOR RIGHT.	1		XBFZZ
				HAND (8983501476)			
	3205204	14892		LEVER, AUTOMATIC ADJUSTOR LEFT	1		XBFZZ
				HAND (8983501477)			
-8	319040	14892		GUIDE, CABLE (8983501473).	2		XBFZZ
-9	3204264	14892		BOLT, ANCHOR (8983501469).	2		XBFZZ
-10	320804	14892		WASHER, RETAINER, PARKING LEVER	2		XBFZZ
				(8983501449)			


FIG. & INDEX NC.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
127-11	3204270	14892		LEVER, PARKING BRAKE RIGHT HAND. (8983501470)	1		XBFZZ
	3204269	14892		LEVER, PARKING BRAKE LEFT HAND (8983501471)	1		XBFZZ
-12	3204266	14892		BUSHING, ANCHOR POST (8983501468)	2		XBFZZ
-13	3204274	14892		PLATE, CAM, RIGHT HAND. (8983501466)	1		XBFZZ
	3204273	14892		PLATE, CAM, LEFT HAND (8983501467)	1		XBFZZ
-14	317913	14892		CABLE ASSEMBLY (8983501465)	2		XBFZZ
-15	317903	14892		NUT AND SCREW, ADJUSTING RIGHT HAND (8983501462)	1		XBFZZ
	317902	14892		NUT AND SCREW, ADJUSTING LEFT. HAND (8983501463)	1		XBFZZ
-16	8992000097	92871		CLIP, CLOSED	4		XBFZZ
-17	8992000091	92871		SCREW, CAP, HEX HEAD.	8		XBFZZ
-18	3206985	14892		CYLINDER ASSEMBLY, WHEEL, RIGHT HAND (8983501456)	1		PAFZZN
	3206984	14892		CYLINDER ASSEMBLY, WHEEL, LEFT. HAND (8983501457)	1		PAFZZN
-19	4486551	92871		SCREW, CAP, HEX HEAD (AP)	4		XBFZZ
-20	NO NUMBER	92871		BOOT, DUST (NOT SERVICED. SEPARATELY) (K10)	2		
-21	NO NUMBER	92871		PISTON (NOT SERVICED SEPARATELY)	2		
-22	NO NUMBER	92871		CUP, INNER (NOT SERVICED. SEPARATELY) (K10)	2		
-23	NO NUMBER	92871		PUSH ROD (NOT SERVICED SEPARATELY)	1		
-24	NO NUMBER	92871		HOUSING, WHEEL CYLINDER, RIGHT HAND (NOT SERVICED SEPARATELY)	1		
	NO NUMBER	92871		HOUSING, WHEEL CYLINDER, LEFT. HAND (NOT SERVICED SEPARATELY)	1		
-25	937961	92871		KIT, CUP AND BOOT (K10).	1		PAFZZN
-26	315834	14892		LINK, CONNECTING, WHEEL CYLINDER. (8983501459)	4		XBFZZ
-27	920463	92871		SCREW, BLEEDER	2		XBFZZ
-28	8992000093	92871		NUT, HEX	8		XBFZZ
-29	8992000092	92871		WASHER, LOCK	8		XBFZZ
-30	321628	14892		NUT, HEX, SELF LOCKING. (8983501461)	2		XBFZZ
-31	318510	14892		PIN, SHOE HOLD DOWN. (8983501479)	4		XBFZZ
-32	301055	14892		COVER, ADJUSTMENT HOLE (8932000147)	2		XBFZZ
-33	3207917	14892		PLATE ASSEMBLY, BACKING, RIGHT. HAND (8983501454)	1		XBFZZ
	3207916	14892		PLATE ASSEMBLY, BACKING, LEFT HAND (8983501455)	1		XBFZZ

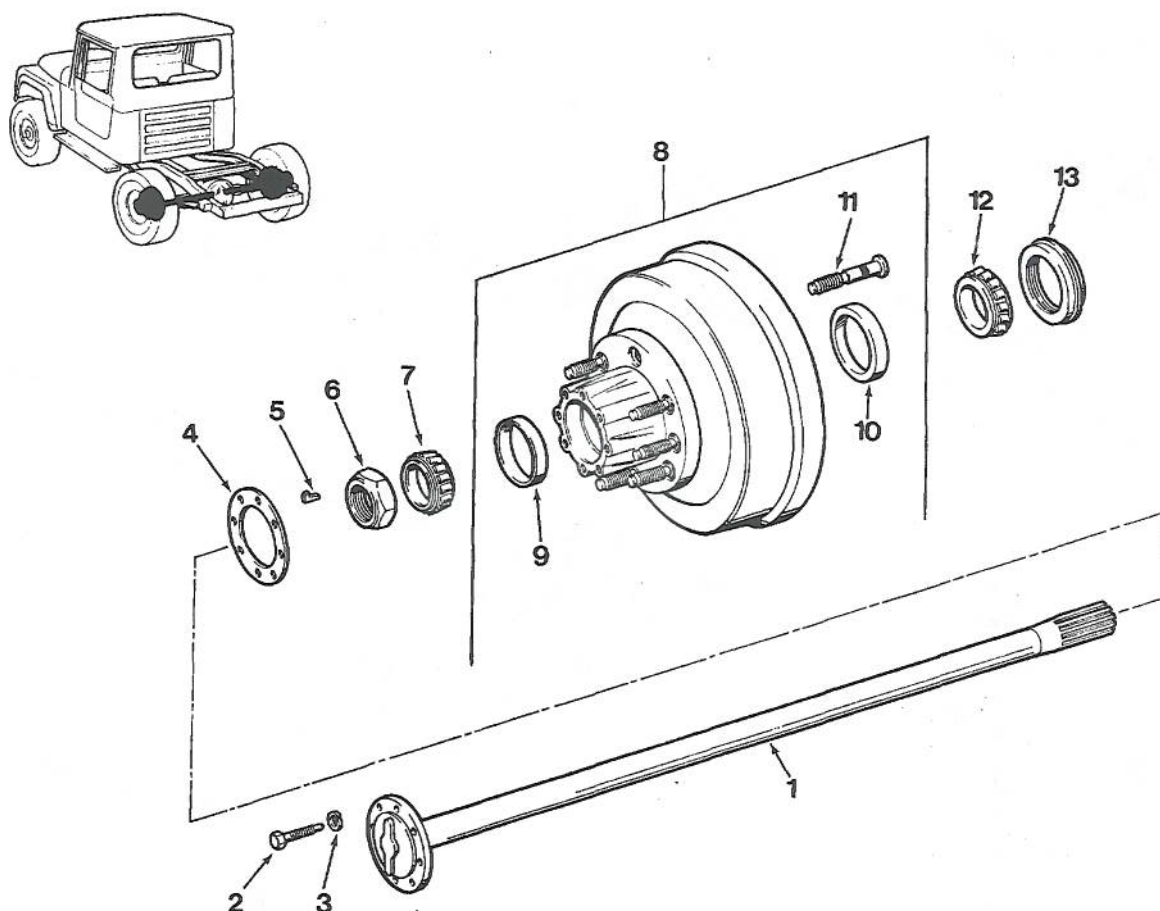

09909B

FIGURE 128. REAR AXLE SHAFTS GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS USABLE PER ASSY.	ON CODE	SMR CODE
128-	NO NUMBER	92871		REAR AXLE SHAFTS GROUP	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	36113 25	97271		. SHAFT, AXLE, RIGHT (8983501512)	1		XBFZZ
	36113 24	97271		. SHAFT, AXLE, LEFT (8983501513)	1		XBFZZ
-2	Q9419076	92871		. BOLT, HEX HEAD, SPECIAL	8		XBFZZ
				(9419076) (AP)			
-3	MS35338-47	96906		. WASHER, LOCK (AP)	8		XA
-4	B992000106	92871		. GASKET, AXLE TO HUB	1		XBFZZ
-5	D5UA-4A406-AA	23040		. WEDGE, LOCKING, REAR AXLE	1		PAFZZN
				(8992000096)			
-6	386017	23040		. NUT, HEX, LOCK (8992000095)	1		XBFZZ
-7	5357401	92871		. BEARING ASSEMBLY, CONE AND	1		PAFZZN
				ROLLER			
-8	14-14403-052	72540		. HUB AND DRUM ASSEMBLY, REAR.	2		XBFZZ
				(8992000081)			
-9	LM104911	60038		. . CUP, BEARING, OUTER, REAR WHEEL	2		PAFZZN
				(8983501506)			
-10	382A	60038		. . CUP, BEARING, INNER, REAR WHEEL	2		PAFZZN
				(8983501507)			
-11	09-001438	72540		. . STUD, MOUNTING, REAR WHEEL	8		XBFZZ
				(8983501480)			
-12	B992000098	92871		. BEARING ASSEMBLY, INNER, CONE	2		PAFZZN
				AND ROLLER			
-13	EDTA-1175-AA	23040		. RETAINER ASSEMBLY, GREASE, INNER.	2		PAFZZN
				REAR WHEEL (8992000094)			

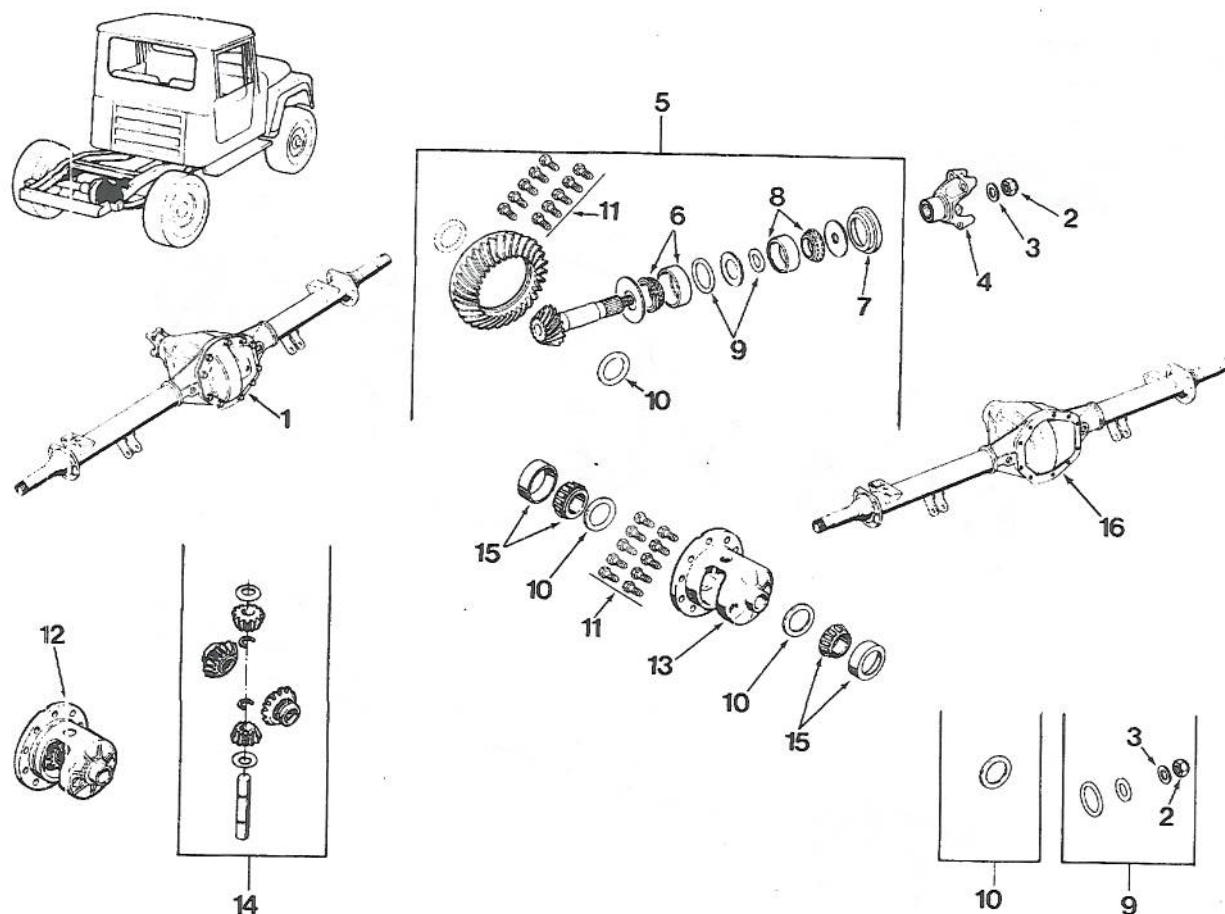

099188

FIGURE 129. REAR AXLE ASSEMBLY AND REAR DIFFERENTIAL GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
129-	NO NUMBER	92871		REAR AXLE ASSEMBLY AND REAR DIFFERENTIAL GROUP (PARTS KIT AVAILABLE) (SEE FIGURE 2 FOR NHA)	REF		
-1	726962X	95019		AXLE ASSEMBLY, REAR, COMPLETE (8983501508)	1		XBFZZ
	NO NUMBER	95019		DIFFERENTIAL ASSEMBLY, REAR	1		XBFZZ
-2	30271	72447		NUT, PINION (919585)	1		XBFZZ
-3	919612	34623		WASHER, PINION NUT (919612)	1		XBFZZ
-4	3801	95019		YOKER ASSEMBLY, END (8134809)	1		XBFZZ
-5	706998 5X	95019		KIT, GEAR AND PINION ASSEMBLY, HYPOID DRIVE (8983501519) (K17)	1		PAFZZN
-6	706861	95019		KIT, BEARING ASSEMBLY, PINION REAR (8983501518) (K18)	1		XBFZZ
	HMB03110	60038		CUP, BEARING (NOT SERVICED SEPARATELY) (K18)	1		XBFZZ
	565986	95019		CONE, BEARING (NOT SERVICED SEPARATELY) (K18)	1		XBFZZ
-7	39439	95019		SEAL, OIL (8983501517)	1		XBFZZ
-8	706045	95019		KIT, BEARING ASSEMBLY, PINION FRONT (8124027) (K19)	1		XBFZZ
	HMB8510	60038		CUP, BEARING (NOT SERVICED SEPARATELY) (K19)	1		XBFZZ

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
129-	HM88542	60038	CONE, BEARING (NOT SERVICED SEPARATELY) (K19)	1		XBFZZ
-9	706603	95019	...	KIT, SHIM, ADJUSTING, PINION AND BEARING (8983501536) (K20)	1		XBFZZ
-10	706604	95019	...	KIT, DIFFERENTIAL ADJUSTING. SHIM (8983501570) (K21)	AR		XBFZZ
-11	30266	72447	...	SCREW, CAP, HEX HEAD (919586)	12		XBFZZ
-12	706609	95019	...	KIT, DIFFERENTIAL CASE (8983501520) (K24)	1		XBFZZ
-13	26308	95019	...	CASE, DIFFERENTIAL (NOT SERVICED SEPARATELY)	1		XBFZZ
-14	706602	95019	...	KIT, DIFFERENTIAL CASE INNER PARTS (8983501521) (K23)	1		PAFZZN
-15	8124028	92871	...	KIT, BEARING ASSEMBLY, SIDE, CARRIER (K22)	2		XBFZZ
	TCAA1244A	23040	CONE, BEARING (NOT SERVICED SEPARATELY) (K22)	1		XBFZZ
	550363	95019	CUP, BEARING (NOT SERVICED, SEPARATELY) (K22)	1		XBFZZ
-16	NO NUMBER	95019	...	HOUSING, REAR AXLE	1		XBFZZ

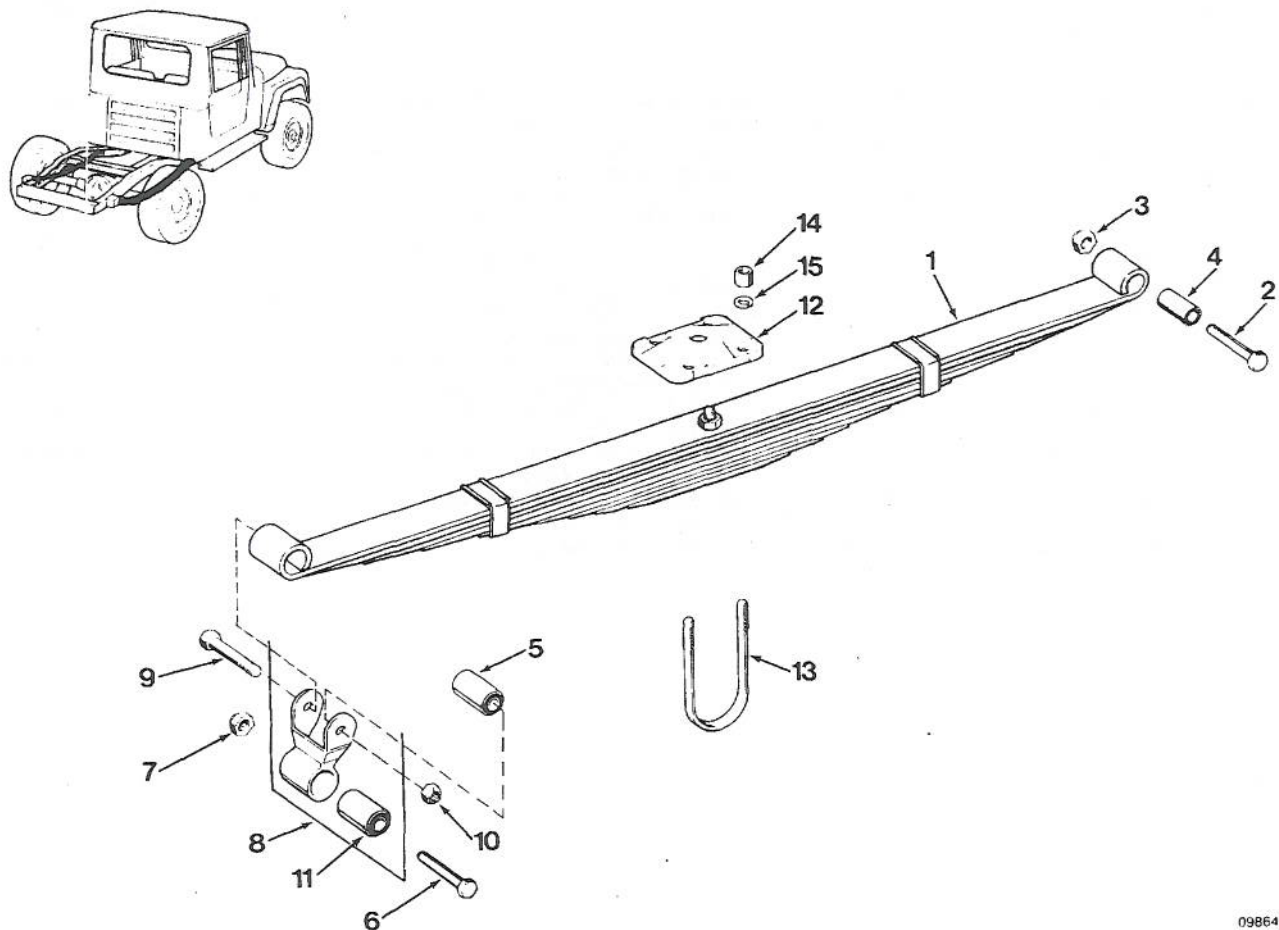


FIGURE 130. REAR SPRING GROUP

FIG & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
130--	NO NUMBER	92871		REAR SPRING GROUP.	REF		
				(SEE FIGURE 2 FOR NHA)			
--1	8992000046	92871		SPRING ASSEMBLY, REAR.	2		XBFZZ
--2	4004120	92871		SCREW, CAP, HEX HD (AP)	2		XBFZZ
--3	4005198	92871		NUT, SELF-LOCKING, HEX (AP)	2		XBFZZ
--4	944870	92871		BUSHING, SPRING, FRONT.	2		XBFZZ
--5	5355369	92871		BUSHING, SPRING, REAR.	2		XBFZZ
--6	4004120	92871		SCREW, CAP, HEX HD.	2		XBFZZ
--7	4005198	92871		NUT, SELF-LOCKING, HEX.	2		XBFZZ
--8	5352863	92871		SHACKLE ASSEMBLY, SPRING FRONT	2		XBFZZ
--9	4004120	92871		SCREW, CAP, HEX HD (AP)	2		XBFZZ
--10	4005198	92871		NUT, SELF-LOCKING, HEX (AP)	2		XBFZZ
--11	5352079	92871		BUSHING, SPRING.	2		XBFZZ
--12	5352084	92871		PLATE, SPRING CLIP.	2		XBFZZ
--13	8992000125	92871		CLIP, SPRING (AP).	4		XBFZZ
--14	69420350	92871		NUT, PLAIN, HEX (9420350) (AP).	8		XBFZZ
--15	4004806	92871		WASHER, LOCK (AP).	8		XBFZZ


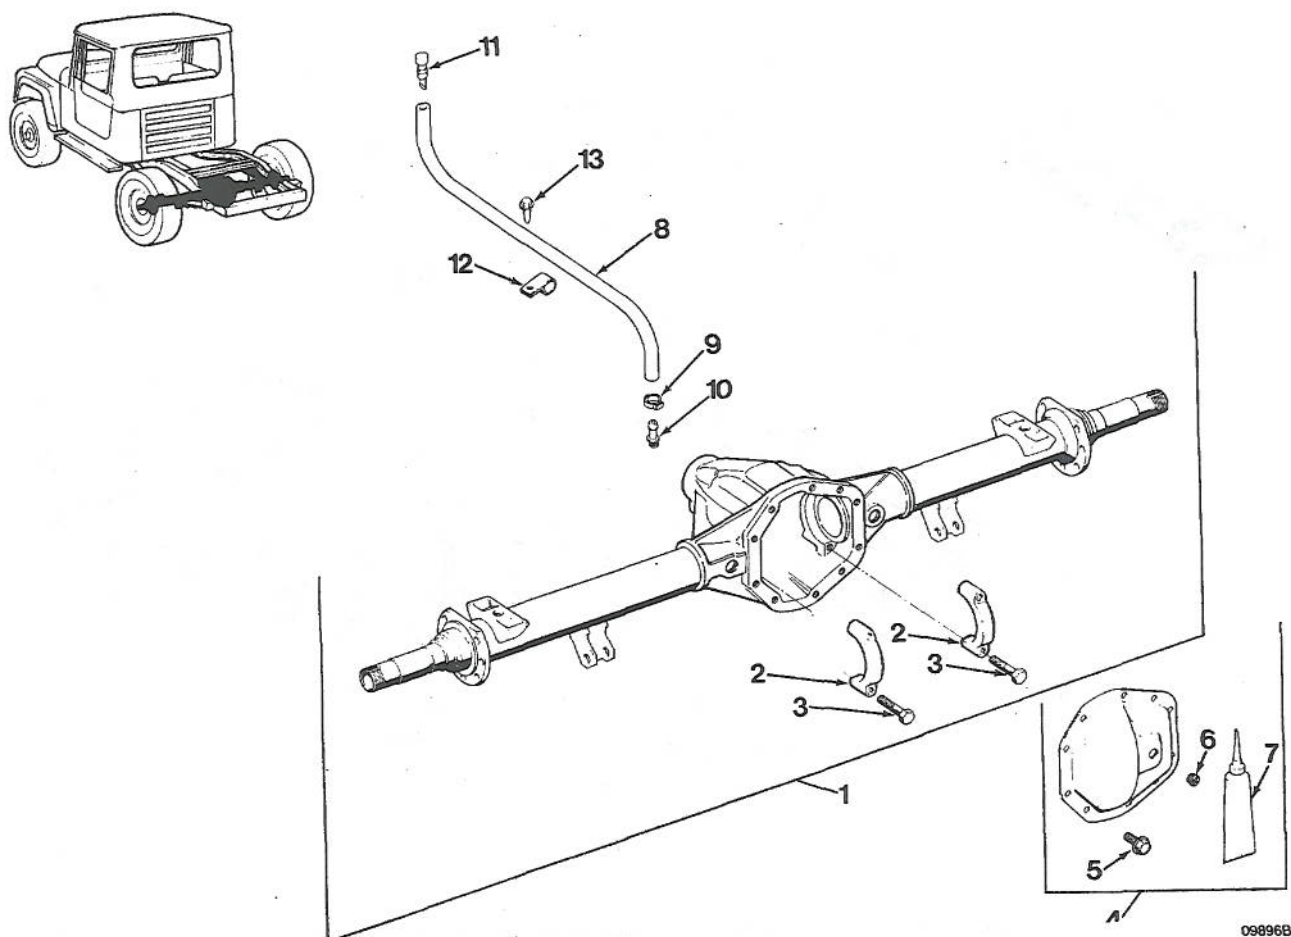


FIGURE 131. REAR AXLE HOUSING GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
131-	NO NUMBER	92871		REAR AXLE HOUSING GROUP.	REF		
				(SEE FIGURE 2 FOR NHA)			
-1	72684	97271		HOUSING, REAR AXLE (8983501514).	1		XBFZZ
-2	NO NUMBER	97271		CAP, CARRIER (NOT SERVICED.	2		XBFZZ
				SEPARATELY)			
-3	8983501515	92871		SCREW, CAP, HEX HEAD (AP).	4		XBFZZ
-4	29948	97271		COVER ASSEMBLY, CARRIER.	1		XBFZZ
				(8983501516)			
-5	650072	11862		SCREW, FLANGE HEAD (991106).	10		XBFZZ
				(AP)			
-6	36472	72447		PLUG, COVER (8983501571).	1		XBFZZ
-7	4269149	86403		SEALANT (8993317).	1		XA
-8	8125823	92871		HOSE, VENT.	1		XBFZZ
-9	3227851	92871		CLAMP, VENT HOSE (AP).	1		XBFZZ
-10	5353494	92871		FITTING, VENT HOSE.	1		XBFZZ
-11	5352955	92871		CAP ASSEMBLY, VENT.	1		XBFZZ
-12	6120526	92871		CLIP, CLOSED (120526).	1		XBFZZ
-13	69426241	92871		SCREW, CAP, HEX WSHR (9426241).	1		PAFZZN
				(AP)			

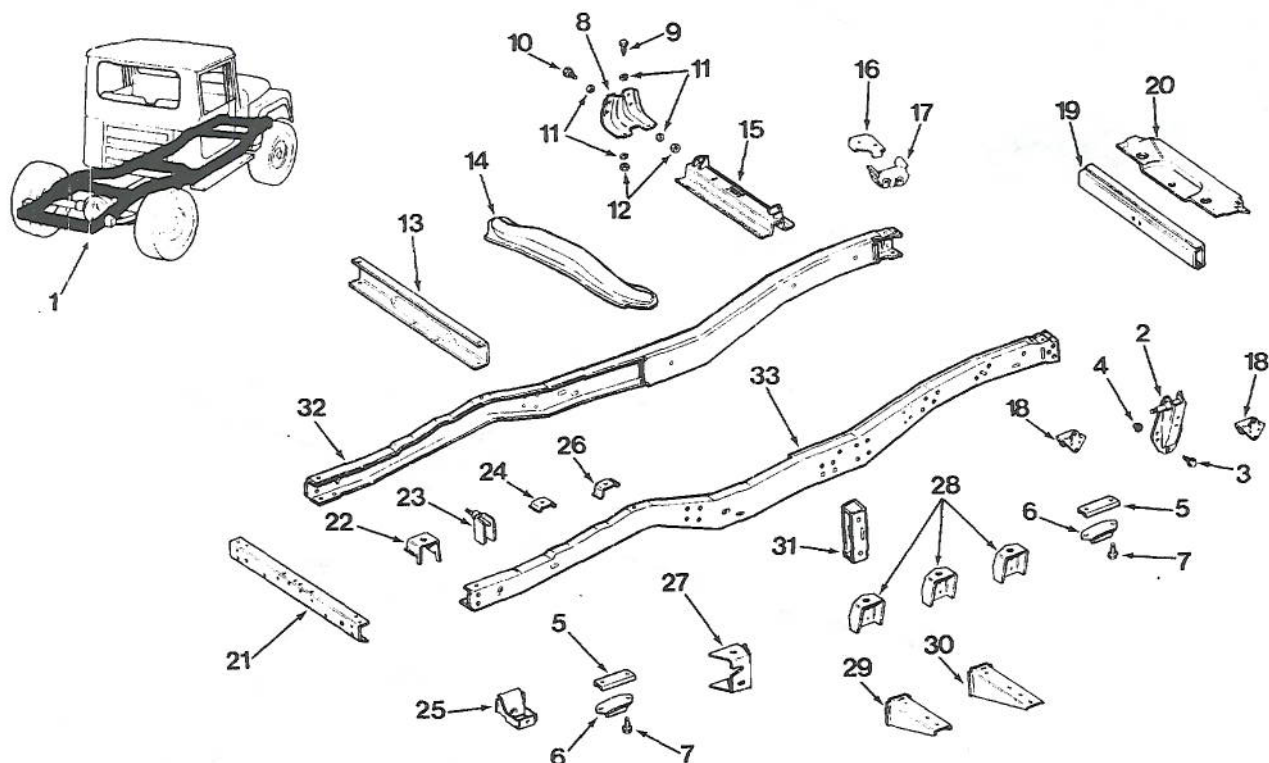

09880B

FIGURE 132. FRAME ASSEMBLY AND FRAME COMPONENTS GROUP

FIG. & INDEX NO.	PART NUMBER	FSCM	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
132-	NO NUMBER	92871		FRAME ASSEMBLY AND FRAME COMPONENTS GROUP (SEE FIGURE 2 FOR NHA)	REF		
-1	8992000038	92871		FRAME ASSEMBLY, COMPLETE	1		XBFZZ
-2	5358051	92871		BRACKET ASSEMBLY, FRONT SHOCK ABSORBER, LEFT HAND	1		XBFZZ
	5358052	92871		BRACKET ASSEMBLY, FRONT SHOCK ABSORBER, RIGHT HAND	1		XBFZZ
-3	4005665	92871		SCREW, MACHINE (AP)	2		PAFZZN
	69421204	92871		SCREW, CAP, HEX HD (9421204) (AP)	4		XBFZZ
-4	4003909	92871		NUT, PLAIN, HEX (AP)	6		PAFZZN
-5	5361023	92871		SPACER, AXLE BUMPER	2		XBFZZ
-6	5355483	92871		BUMPER ASSEMBLY, AXLE	4		XBFZZ
-7	4005063	92871		SCREW, MACHINE (AP)	6		XBFZZ
	4003060	92871		SCREW, MACHINE (AP)	2		XBFZZ
	69424757	92871		SCREW, MACHINE (9424757) (AP)	2		XBFZZ
-8	5994017	92871		BRACKET, SUPPORT, TRANSMISSION CROSSMEMBER	2		XBFZZ
-9	4006863	92871		SCREW, MACHINE (AP)	14		XBFZZ
-10	4006864	92871		SCREW, MACHINE (AP)	8		XBFZZ
-11	62436163	92871		WASHER, FLAT (2436163) (AP)	24		XBFZZ
-12	69416532	92871		NUT, PLAIN, HEX (9416532) (AP)	12		XBFZZ
-13	5994061	92871		CROSSMEMBER ASSEMBLY, INTERMEDIATE	1		XBFZZ
-14	8992000077	92871		CROSSMEMBER ASSEMBLY, INTERMEDIATE	1		XBFZZ

FIG. & INDEX NO.	PART NUMBER	CAGE	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
132-15	5994431	92871	..	CROSSMEMBER ASSEMBLY, TRANSMISSION SUPPORT	1		XBFZZ
-16	5994446	92871	..	QUSET, STEERING GEAR MOUNTING. . . BRACKET	1		XBFZZ
-17	5994444	92871	..	BRACKET, STEERING GEAR MOUNTING . . LEFT HAND	1		XBFZZ
-18	8129561	92871	..	BRACKET, FRONT SPRING	4		XBFZZ
-19	5994600	92871	..	CROSSMEMBER ASSEMBLY, FRONT	1		XBFZZ
-20	5568070	92871	..	PANEL, MOUNTING, FRONT BODY. RADIATOR	1		XBFZZ
-21	5994032	92871	..	CROSSMEMBER ASSEMBLY, REAR.	1		XBFZZ
-22	5568068	92871	..	BRACKET, PICKUP BOX MOUNTING, RIGHT HAND	1		XBFZZ
	5568069	92871	..	BRACKET, PICKUP BOX MOUNTING, LEFT HAND	1		XBFZZ
-23	8126859	92871	..	BRACKET AND SHAFT ASSEMBLY, RIGHT REAR SHOCK	2		XBFZZ
-24	5568064	92871	..	BRACKET, PICKUP BOX SUPPORT, REAR	2		XBFZZ
-25	8126861	92871	..	BRACKET, REAR SPRING.	2		XBFZZ
-26	5568065	92871	..	BRACKET, PICKUP BOX SUPPORT, FRONT	2		XBFZZ
-27	8992000044	92871	..	BRACKET, REAR SPRING PIVOT.	2		XBFZZ
-28	5568062	92871	..	BRACKET, BODY MOUNT	6		XBFZZ
-29	5994140	92871	..	BRACKET, RUNNING BOARD MOUNTING . . REAR	2		XBFZZ
-30	5994139	92871	..	BRACKET, RUNNING BOARD MOUNTING . . FRONT	2		XBFZZ
-31	8992000039	92871	..	REINFORCEMENT ASSEMBLY, FRAME	2		XBFZZ
-32	8992000033	92871	..	SIDEMEMBER, FRAME, LEFT SIDE (NOT SERVICED SEPARATELY)	1		XBFZZ
-33	8992000034	92871	..	SIDEMEMBER, FRAME, RIGHT SIDE. (NOT SERVICED SEPARATELY)	1		XBFZZ


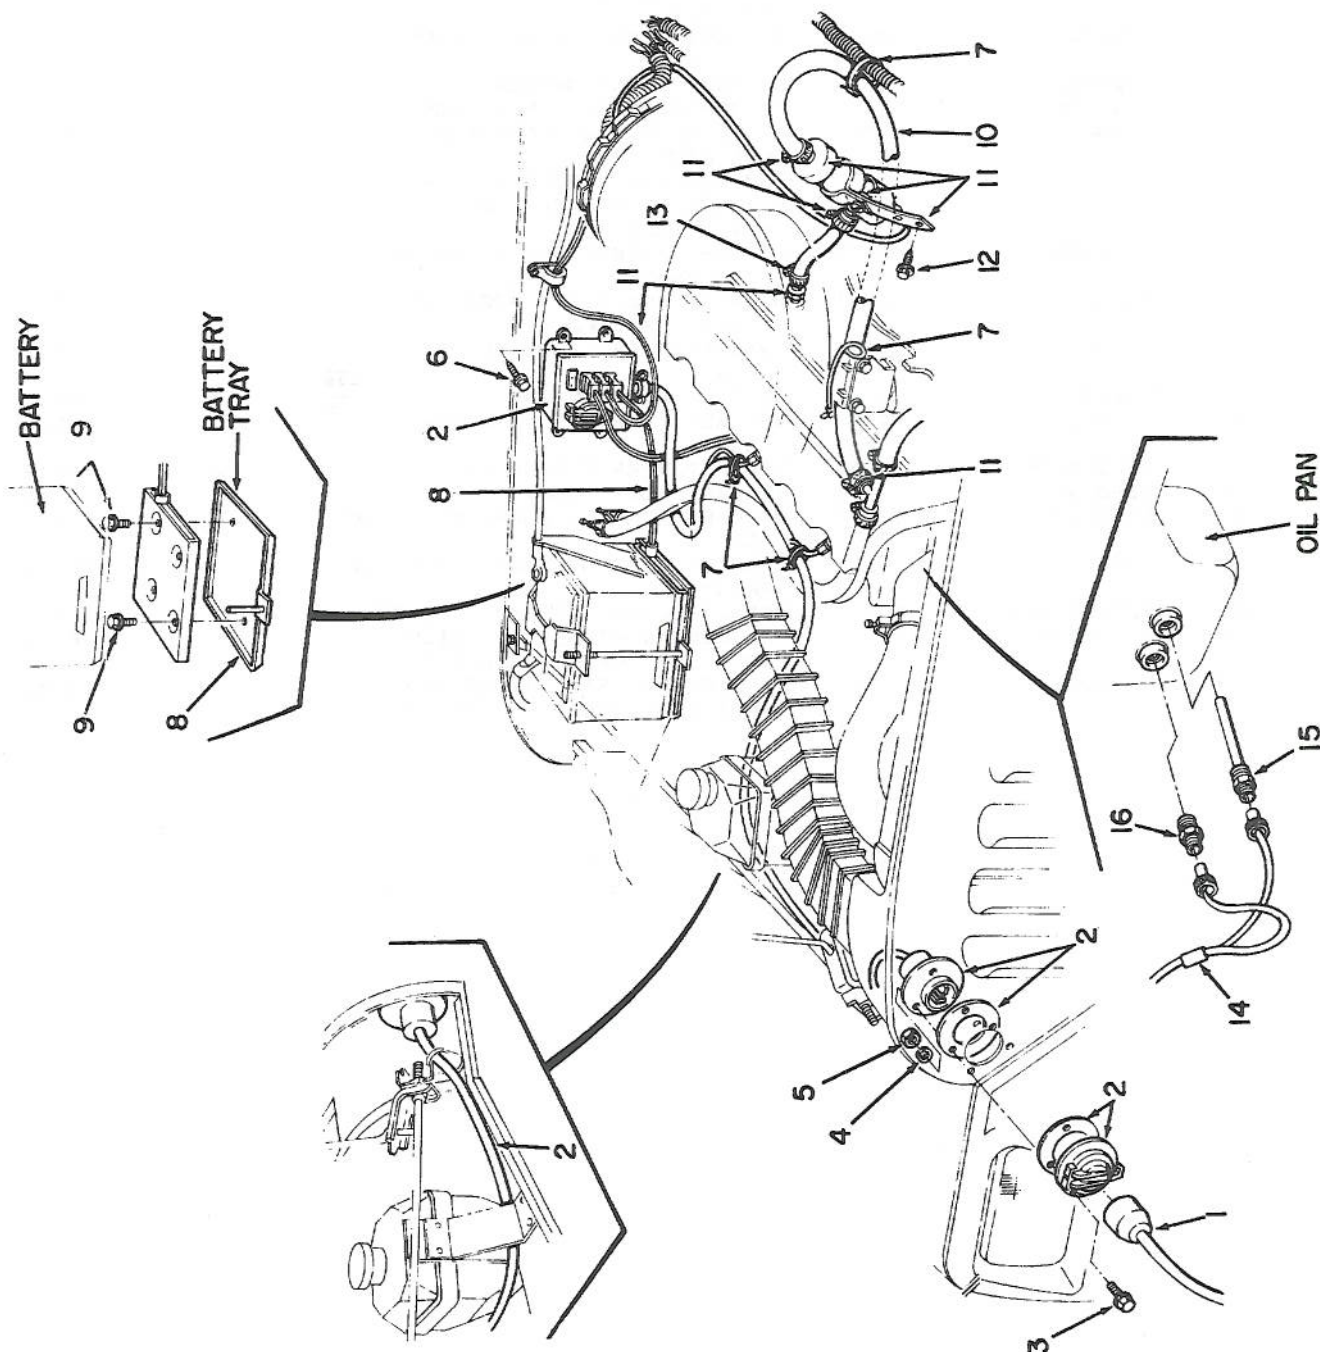


FIGURE 133. WINTERIZATION KIT

14241A

FIG. & INDEX NO.	PART NUMBER	CAGE	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
133-	0000-008430	31509		KIT, WINTERIZATION.	REF		AFFFF
				(SEE FIGURE 2 FOR NHA)			
-1	8500274	06991		. CABLE ASSEMBLY, 25 FT.	1		PAFZZN
				(0000-008435)			
-2	8500215	06991		. BOX ASSEMBLY, JUNCTION	1		PAFZZN
				(0000-008431)			
-3	MS90725-B	96906		. SCREW, CAP, HEX HD (FA02010398)	3		PAFZZN
				(AP)			
-4	MS35338-44	96906		. WASHER, LOCK (FA11010380) (AP)	3		PAFZZN
-5	MS51967-2	96906		. NUT, PLAIN, HEX (FA12010378)	3		PAFZZN
				(AP)			
-6	9419986	24617		. SCREW, SELF-TAPPING, HEX.	4		PAFZZN
				(00NO-008679) (AP)			
-7	MS3367-1	96906		. STRAP, TIEDOWN	4		PAFZZN
-8	8500320	06991		. WARMER, BATTERY (0000-008433)	1		PAFZZN
-9	9419986	24617		. SCREW, SELF-TAPPING, HEX.	2		PAFZZN
				(00NO-008679) (AP)			
-10	65004	73842		. HOSE, HEATER, 5/8 DIA, 48 IN	1		PAFZZN
-11	850-0045	06991		. HEATER, COOLER (0000-008432)	1		PAFZZN
-12	9419986	24617		. SCREW, SELF-TAPPING, HEX.	2		PAFZZN
				(00NO-008679) (AP)			
-13	MS35842-10	96906		. CLAMP, HOSE (HDO1-008297)	1		PAFZZN
	8500371	06991		. KIT, THERMOSTAT (0000-008434)	1		PAFFFFN
-14	32416502	06991		. . CORD ASSEMBLY.	1		PAFZZN
-15	90616204	06991		. . HEATER, OIL PAN	1		PAFZZN
-16	905029	06991		. . THERMOSTAT ASSEMBLY.	1		PAFZZN

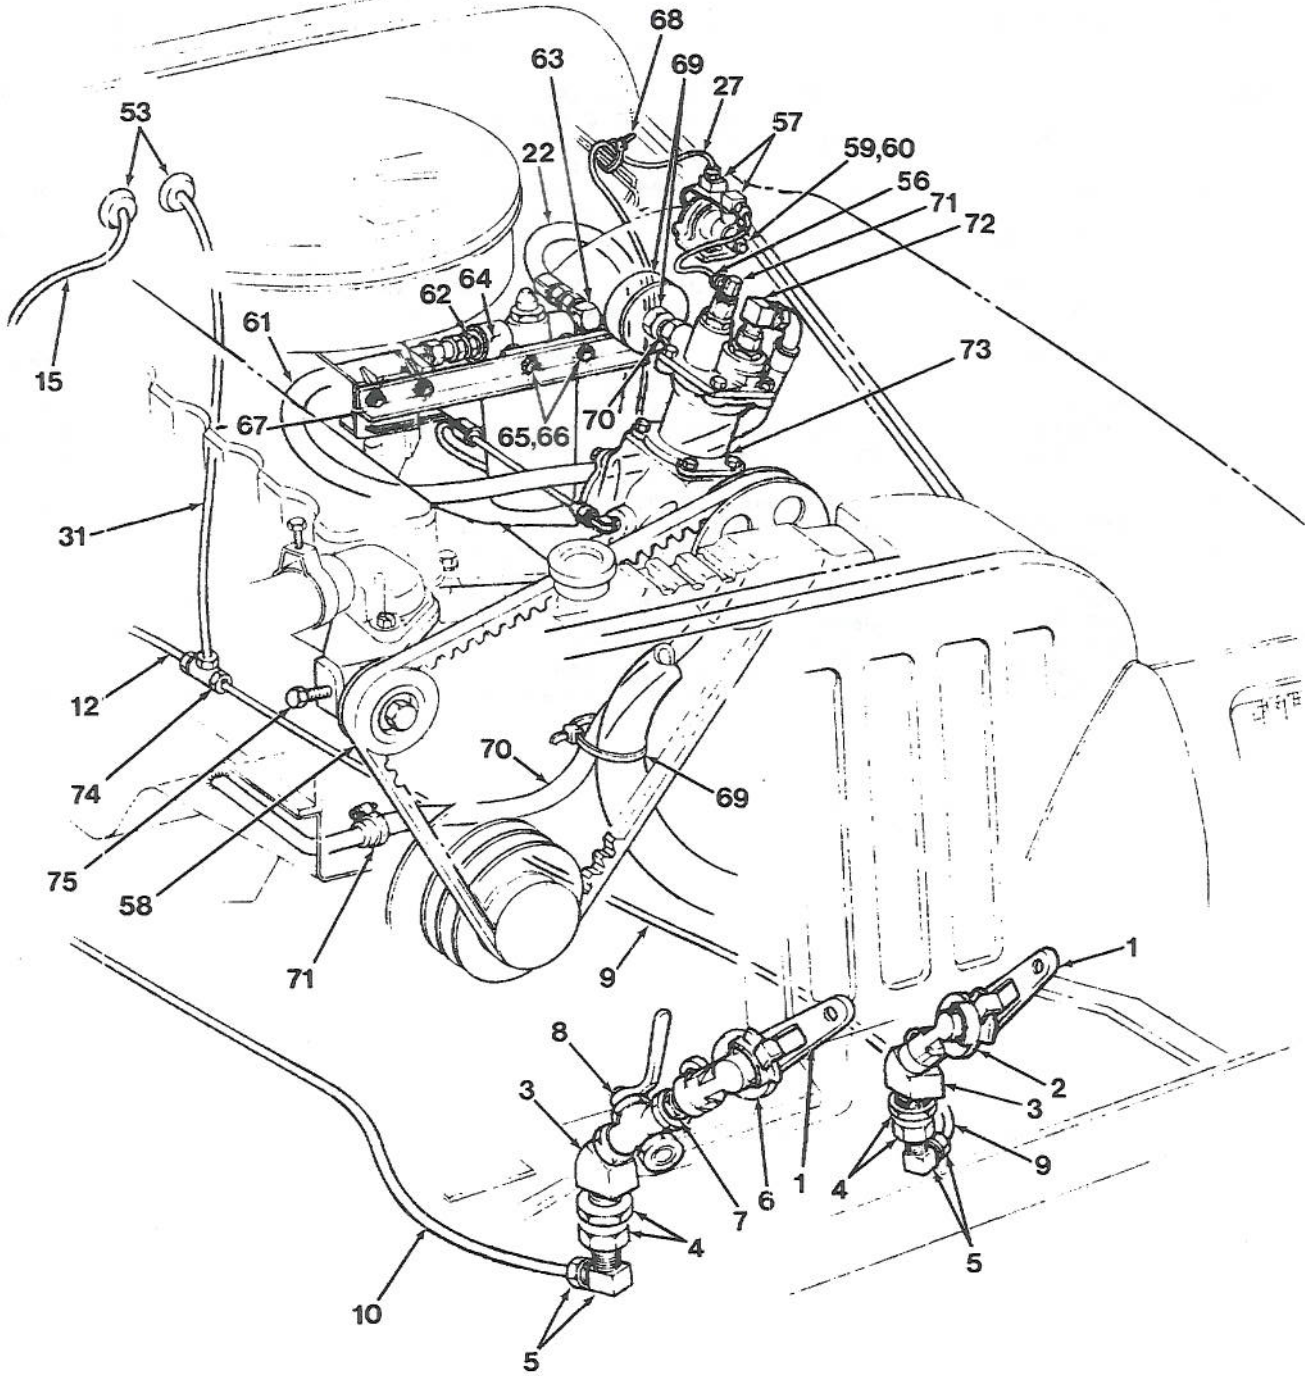

13431A

FIGURE 134. AIR SYSTEM INSTALLATION (SHEET 1 OF 3)



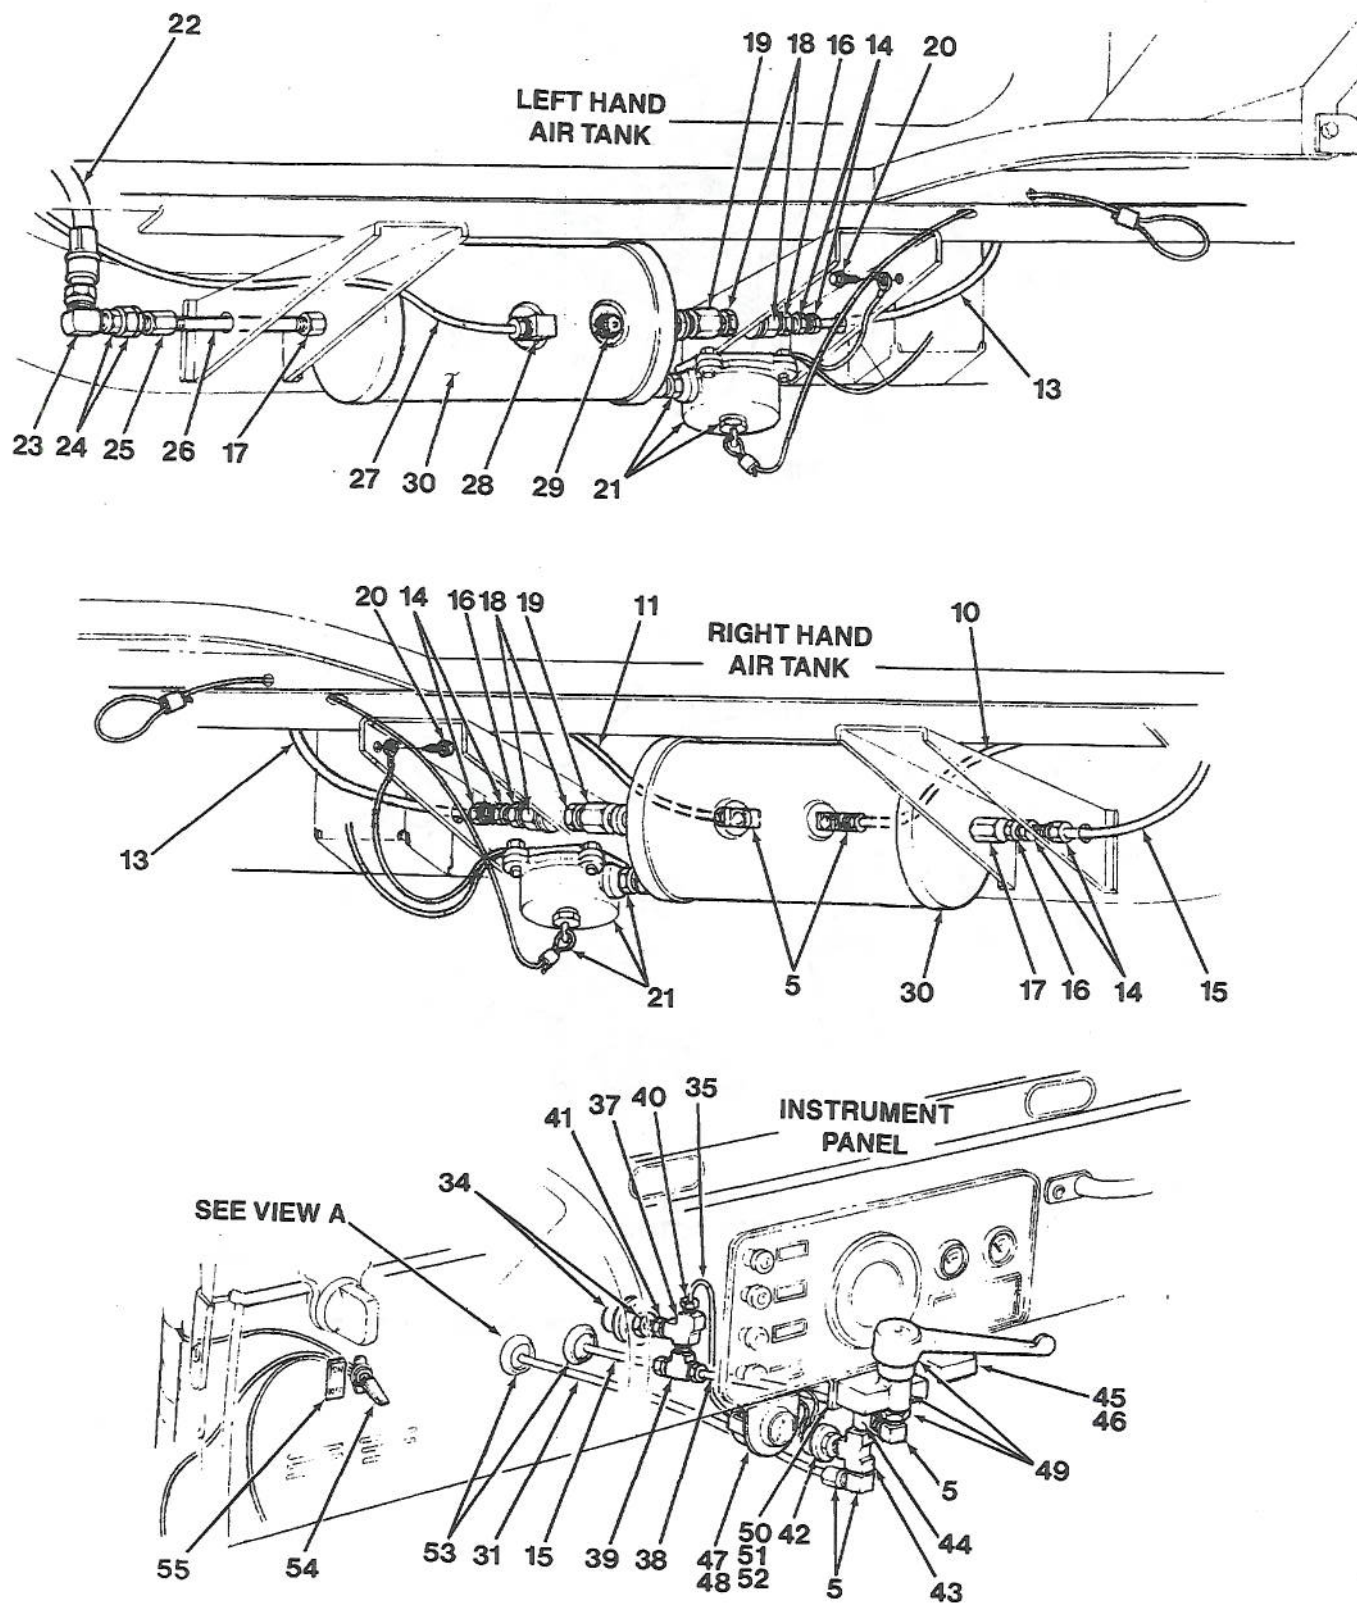


FIGURE 134. AIR SYSTEM INSTALLATION (SHEET 2 OF 3)

13432A

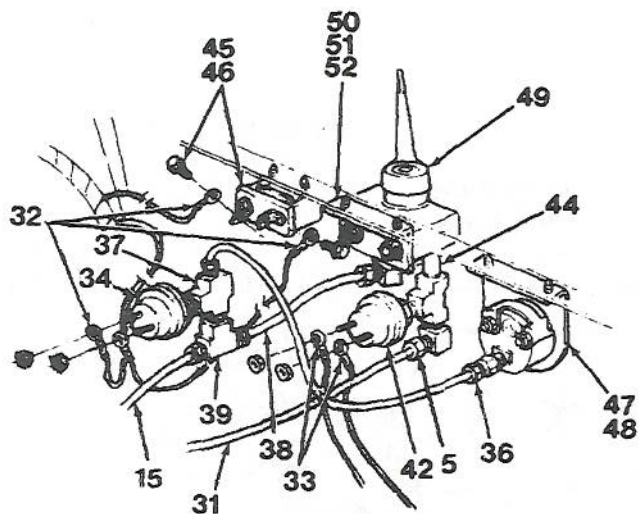

VIEW A

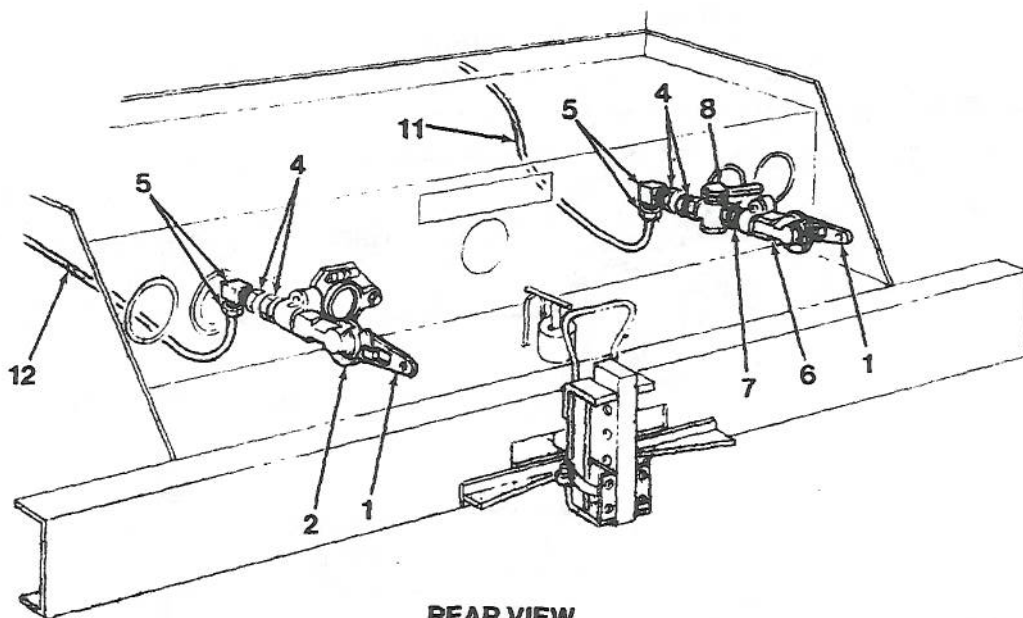


REAR VIEW
OF TRACTOR

13433A

FIGURE 134. AIR SYSTEM INSTALLATION (SHEET 3 OF 3)

FIG. & INDEX NO.	PART NUMBER	CAGE	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
134-	0000-008442	31509		AIR SYSTEM INSTALLATION.	REF		AF FFF
				(SEE FIGURE 2 FOR NHA)			
-1	90V-2583	79146		. COUPLING, DUMMY (BC10008459)	4		PA FZZN
-2	10452-S	06721		. GLAD HAND, SERVICE (BC10008457)	2		PA FZZN
-3	3350XB	79470		. ELBOW, STREET, 45 DEG	2		PA FZZN
				(BC10008474)			
-4	035079	79146		. STUD, CLAMPING, FRAME	4		PA FZZN
				(BC10008461)			
-5	1469X6	79470		. ELBOW, MALE, 90 DEG (BC10008466)	8		PA FZZN
-6	10451-E	06721		. GLAD HAND, EMERGENCY	2		PA FZZN
				(BC10008458)			
-7	3325XB	79470		. NIPPLE, HEX (BC10008478)	2		PA FZZN
-8	N13553	06721		. VALVE, SHUT-OFF, AIR.	2		PA FZZN
				(BC13008444)			
-9	952002-05B0	31509		. HOSE, NONMETALLIC, 56 IN. (MAKE	1		MFFZZ
				FROM NT10006BK)			
-10	952002-03B0	31509		. HOSE, NONMETALLIC, 69 IN. (MAKE	1		MFFZZ
				FROM NT10006BK)			
-11	952002-02B0	31509		. HOSE, NONMETALLIC, 79 IN. (MAKE	1		MFFZZ
				FROM NT10006BK)			
-12	952002-04B0	31509		. HOSE, NONMETALLIC, 100 IN. (MAKE	1		MFFZZ
				FROM NT10006BK)			
-13	952002-01B0	31509		. HOSE, NONMETALLIC, 80 IN. (MAKE	1		MFFZZ
				FROM NT10006BK)			
-14	1468X6	79470		. CONNECTOR, MALE (BC10008473)	3		PA FZZ
-15	952002-06B0	31509		. HOSE, NONMETALLIC, 55 IN. (MAKE	1		MFFZZ
				FROM NT10006BK)			
-16	3220X6X4	79470		. BUSHING (BC10008475)	3		PA FZZN
-17	C3239X6X6	79470		. ADAPTER (BC10008476)	2		PA FZZN
-18	N11246	06721		. COUPLER, FRAME (BC10008476)	2		PA FZZN
-19	C3209X8X6	79470		. ADAPTER	2		PA FZZN
-20	9615	70655		. SCREW, SELF-TAPPING, HEX.	2		PA FZZN
				(FA22008509)			
-21	12014	06721		. VALVE ASSEMBLY, DRAIN.	2		PA FFFN
				(BC13008448)			
	10027	06721		. KIT, CABLE.	1		PA FZZN
	121560018	06721		. VALVE, DRAIN.	1		PA FZZN
	10047	06721		. COIL, HEATER.	1		PA FZZN
-22	H10408-608-670-32	79470		. HOSE ASSEMBLY (HDO4008505)	1		PA FZZN
-23	C5405XB	79470		. ELBOW, 90 DEG (BC10008471)	1		PA FZZN
-24	KN23010	06721		. VALVE, CHECK (BC13008456)	1		PA FZZN
-25	3300X6	79470		. COUPLING, PIPE (BC10008472)	1		PA FZZN
-26	M851953-61	96906		. PIPE, STEEL, 3/8 X 5 IN.	1		PA FZZN
-27	952001-03B0	31509		. HOSE, NONMETALLIC, 54 IN (MAKE	1		MFFZZ
				FROM NT10004BK)			
-28	1469X4X4	79470		. ELBOW, 90 DEG (BC10008464)	1		PA FZZN
-29	12020	06721		. VALVE, RELIEF (BC13008443)	1		PA FZZN
-30	5000-AD	97109		. TANK ASSEMBLY, AIR (TA01008460)	2		PA FZZN
-31	952002-07B0	31509		. HOSE, NONMETALLIC, 7 IN. (MAKE	1		MFFZZ
				FROM NK10006BK)			
-32	WD08008488	31509		. HARNESS, WIRE, 8 IN.	1		PA FZZN
-33	WD08008487	31509		. HARNESS, WIRE, 15 IN.	1		PA FZZN
-34	13241A	06721		. SWITCH, LOW PRESSURE	1		PA FZZN
				(EB13008446)			
-35	952001-01B0	31509		. HOSE, NONMETALLIC, 10 IN. (MAKE	1		MFFZZ
				FROM NK10004BK)			
-36	1466X4	79470		. CONNECTOR (BC04008510)	1		PA FZZN
-37	3750X4	79470		. TEE, STREET (BC10008467)	1		PA FZZN
-38	952002-07B0	31509		. HOSE, NONMETALLIC, 7 IN. (MAKE	1		MFFZZ
				FROM NK10006BK)			
-39	1477X6	79470		. TEE, BRANCH (BC04008511)	1		PA FZZN
-40	1468X4X4	79470		. CONNECTOR (BC10008469)	1		PA FZZN
-41	3220X4X2	79470		. BUSHING (BC10008468)	1		PA FZZN
-42	3250	06721		. SWITCH, STOP LIGHT (FB13008445)	1		PA FZZN
-43	3700X4	79470		. TEE (BC10008480)	1		PA FZZN
-44	3328X4	79470		. NIPPLE, STREET (BC10008479)	1		PA FZZN
-45	4099	13345		. BUZZER, LOW AIR (013739-00A0)	1		PA FZZN


FIG. & INDEX NO.	PART NUMBER	CAGE	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
134-46	10181	70655		SCREW, MACHINE, PAN HD. (FA21008506) (AP)	2		PAFZZN
-47	82329	57733		GAUGE, AIR PRESSURE. (GA02008452)	1		PAFZZN
-48	2978	70655		SCREW, SELF-TAPPING, HEX. (FA43008508) (AP)	2		PAFZZN
-49	KN20561	06721		VALVE, HAND (BC13008449)	1		PAFZZN
-50	9137	70655		BOLT, HEX HD (FA02006060) (AP)	2		PAFZZN
-51	HA01008454	31509		BRACKET, MOUNTING.	1		PAFZZN
-52	5784	70655		SCREW, SELF-TAPPING, HEX. (FA22008507) (AP)	2		PAFZZN
-53	4423	70655		OROMMET (FA03008489).	2		PAFZZN
-54	5582	13445		SWITCH (EB13008485)	1		PAFZZN
-55	0000008486	31509		PLATE, IDENTIFICATION, ON/OFF	1		PAFZZN
-56	952001-02B0	31509		HOSE, NONMETALLIC, 12 IN. (MAKE FROM NK10004BK)	1		MFFZZ
-57	1469X4	79470		ELBOW, 90 DEG (BC10008465)	2		PAFZZN
-58	NO NUMBER	31509		PULLEY MOUNTING, IDLER (SEE FIGURE 135 FOR DETAILS)	1		
-59	KN-18511	06721		GOVERNOR ASSEMBLY, AIR COMPRESSOR (SEE FIGURE 136 FOR DETAILS)	1		PAFFFN
-60	9615	70655		SCREW, SELF-TAPPING, HEX. (FA22008509) (AP)	2		PAFZZN
-61	H10408-680-680- 39	79470		HOSE ASSEMBLY (HDO4008504).	1		PAFZZN
-62	C5205X8X8	79470		CONNECTOR (BC10008462).	1		PAFZZN
-63	C5405X8X8	79470		ELBOW, 90, DEG (BC10008463)	1		PAFZZN
-65	9137	70655		BOLT, HEX HD (FA02006060) (AP)	2		PAFZZN
-66	9302	70655		NUT, PLAN, HEX (FA06006064) (AP).	2		PAFZZN
-67	HA01008455	31509		BRACKET, MOUNTING.	1		PAFZZN
-68	090014	79146		TIE, NYLON (WD07008490).	15		PAFZZN
-69	KN19010	06721		FILTER ASSEMBLY (C903008450).	1		PAFZZN
	100696A	06721		ELEMENT.	1		PAFZZN
-70	BC10008482	31509		ADAPTER	1		PAFZZN
-71	BC10008484	31509		ADAPTER	1		PAFZZN
-72	BC10008483	31509		ADAPTER	1		PAFZZN
-73	NO NUMBER	31509		AIR COMPRESSOR INSTALLATION (SEE FIGURE 138 FOR NHA)	1		

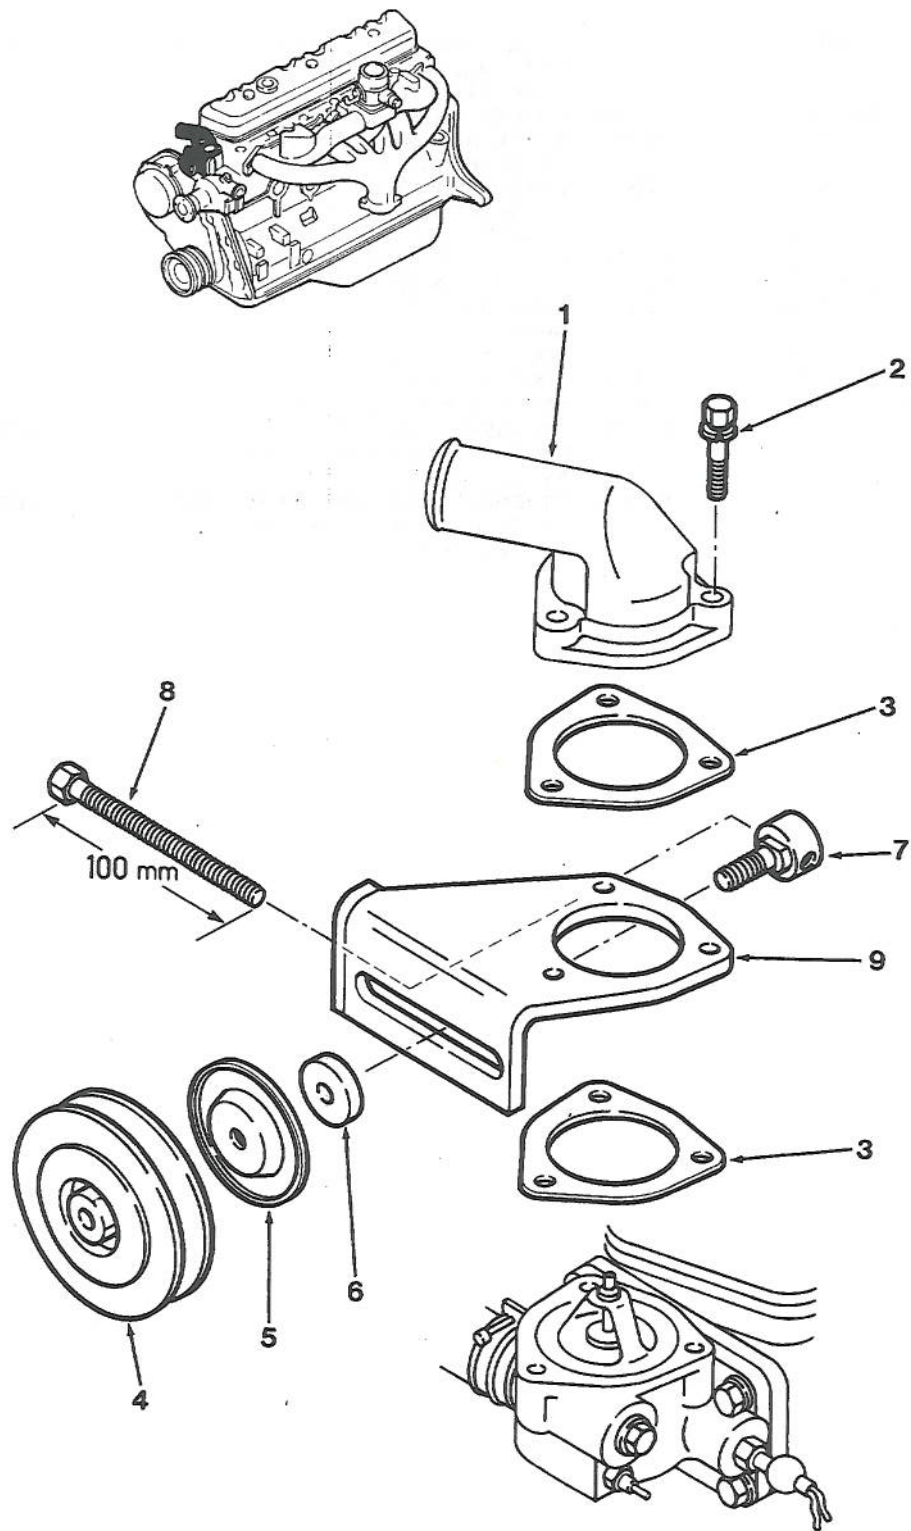

14231A

FIGURE 135. IDLER PULLEY MOUNTING


FIG. & INDEX NO.	PART NUMBER	CAGE	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
135-	NO NUMBER	31509		PULLEY MOUNTING, IDLER (PARTS REF KIT AVAILABLE) (SEE FIGURE 134 FOR NHA)			
-1	11060-C6801	S0356		OUTLET, WATER (8135143).	1		PAFZZN
-2	08110-83062	S0356		SCREW AND WASHER (LESS AIR. COMPRESOR) (8135271) (AP)	3		XBFZZ
	8135116	92871		SCREW AND WASHER (WITH AIR. COMPRESSOR) (AP)	3		XBFZZ
-3	11062-L6000	S0356		GASKET (8135230) (K1) (K2).	1		PAFZZN
	11062-L6000	S0356		GASKET (8135230) (K1) (K2).	2		PAFZZN
-4	8993000077	92871		PULLER, IDLER.	1		PAFZZN
-5	8993000081	92871		SHIELD, DUST, PULLEY.	1		PAFZZN
-6	8993000085	92871		SPACER.	1		PAFZZN
-7	8993000079	92871		BOLT, ADJUSTING, IDLER.	1		PAFZZN
-8	8993000078	92871		BOLT, MOUNTING, IDLER.	1		PAFZZN
-9	8993000074	92871		BRACKET, MOUNTING, IDLER.	1		PAFZZN
	10103-Z9129	S0356		KIT, GASKET, ENGINE (INCLUDES REF PARTS LISTED ABOVE DENOTED BY K1) (K1)			PAFZZN
	10101-Z9128	S0356		KIT, ENGINE, OVERHAUL (INCLUDES REF PARTS LISTED ABOVE DENOTED BY K2) (K2)			PAFZZN

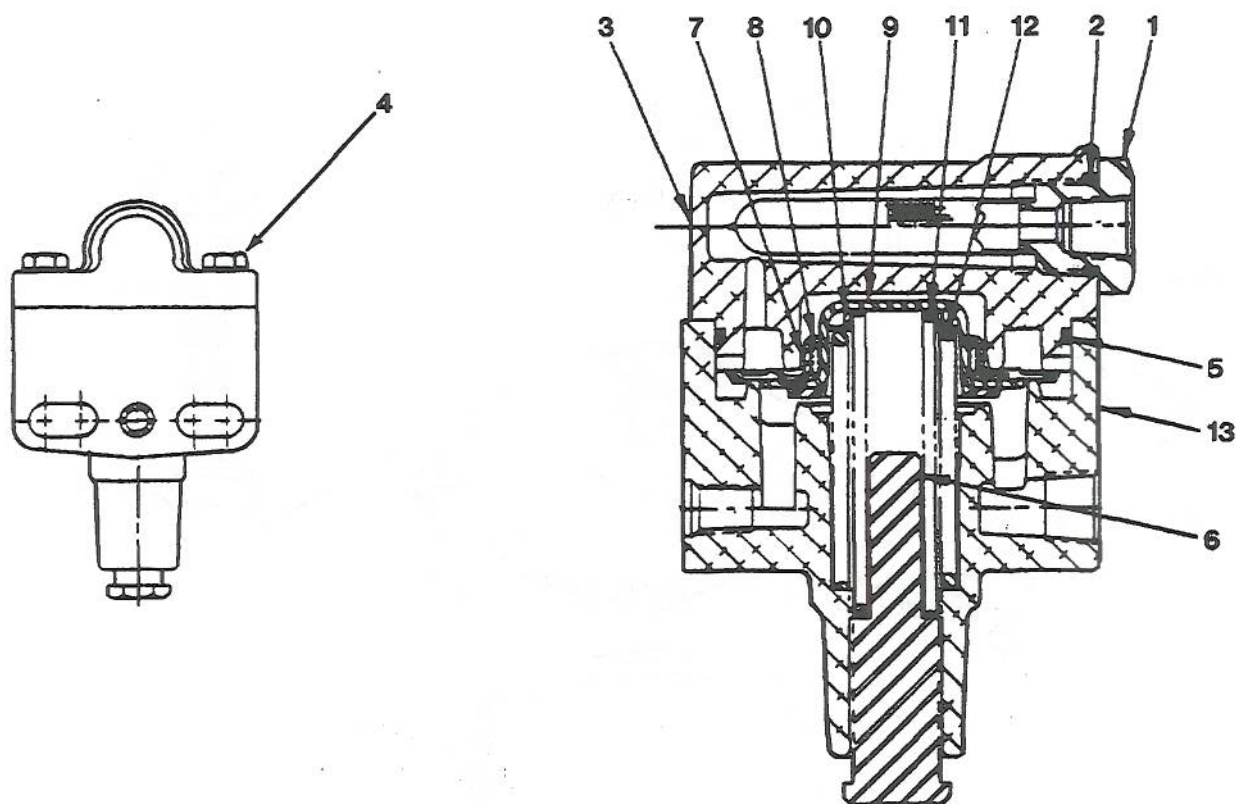

13430A

FIGURE 136. AIR COMPRESSOR GOVERNOR ASSEMBLY


FIG. & INDEX NO.	PART NUMBER	CAGE	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
136-	KN-18511	06721		GOVERNOR ASSEMBLY, AIR COMPRESSOR (PARTS KIT AVAILABLE) (SEE FIGURE 134 FOR NHA)	REF		PAFFFN
-1	102351	06721		FILTER, INLET (K50).	1		PAFZZN
-2	N-11728-V	06721		PACKING, PREFORMED, O-RING (K50).	1		PAFZZN
-3	300475-A	06721		HOUSING, INLET	1		PAFZZN
-4	24W11614	06721		SCREW, CAP, HEX HD (AP)	4		PAFZZN
-5	N-11728-DW	06721		PACKING, PREFORMED, O-RING (K50).	1		PAFZZN
-6	101929-E	06721		SCREW, ADJUSTING	1		PAFZZN
-7	102350	06721		DIAPHRAGM, VALVE (K50)	1		PAFZZN
-8	600399-TX	06721		SPRING.	1		PAFZZN
-9	102349	06721		CAP ASSEMBLY, VALVE (K50).	1		PAFZZN
-10	600457-C	06721		RETAINER, SPRING	1		PAFZZN
-11	600399-TW	06721		SPRING.	1		PAFZZN
-12	600399-XT	06721		SPRING.	1		PAFZZN
-13	300476-E	06721		HOUSING, OUTLET.	1		XA
	RN-32-P	06721		KIT, REPAIR (CONTAINS PARTS LISTED ABOVE DENOTED BY K50) (K50)	1		PAFZZN

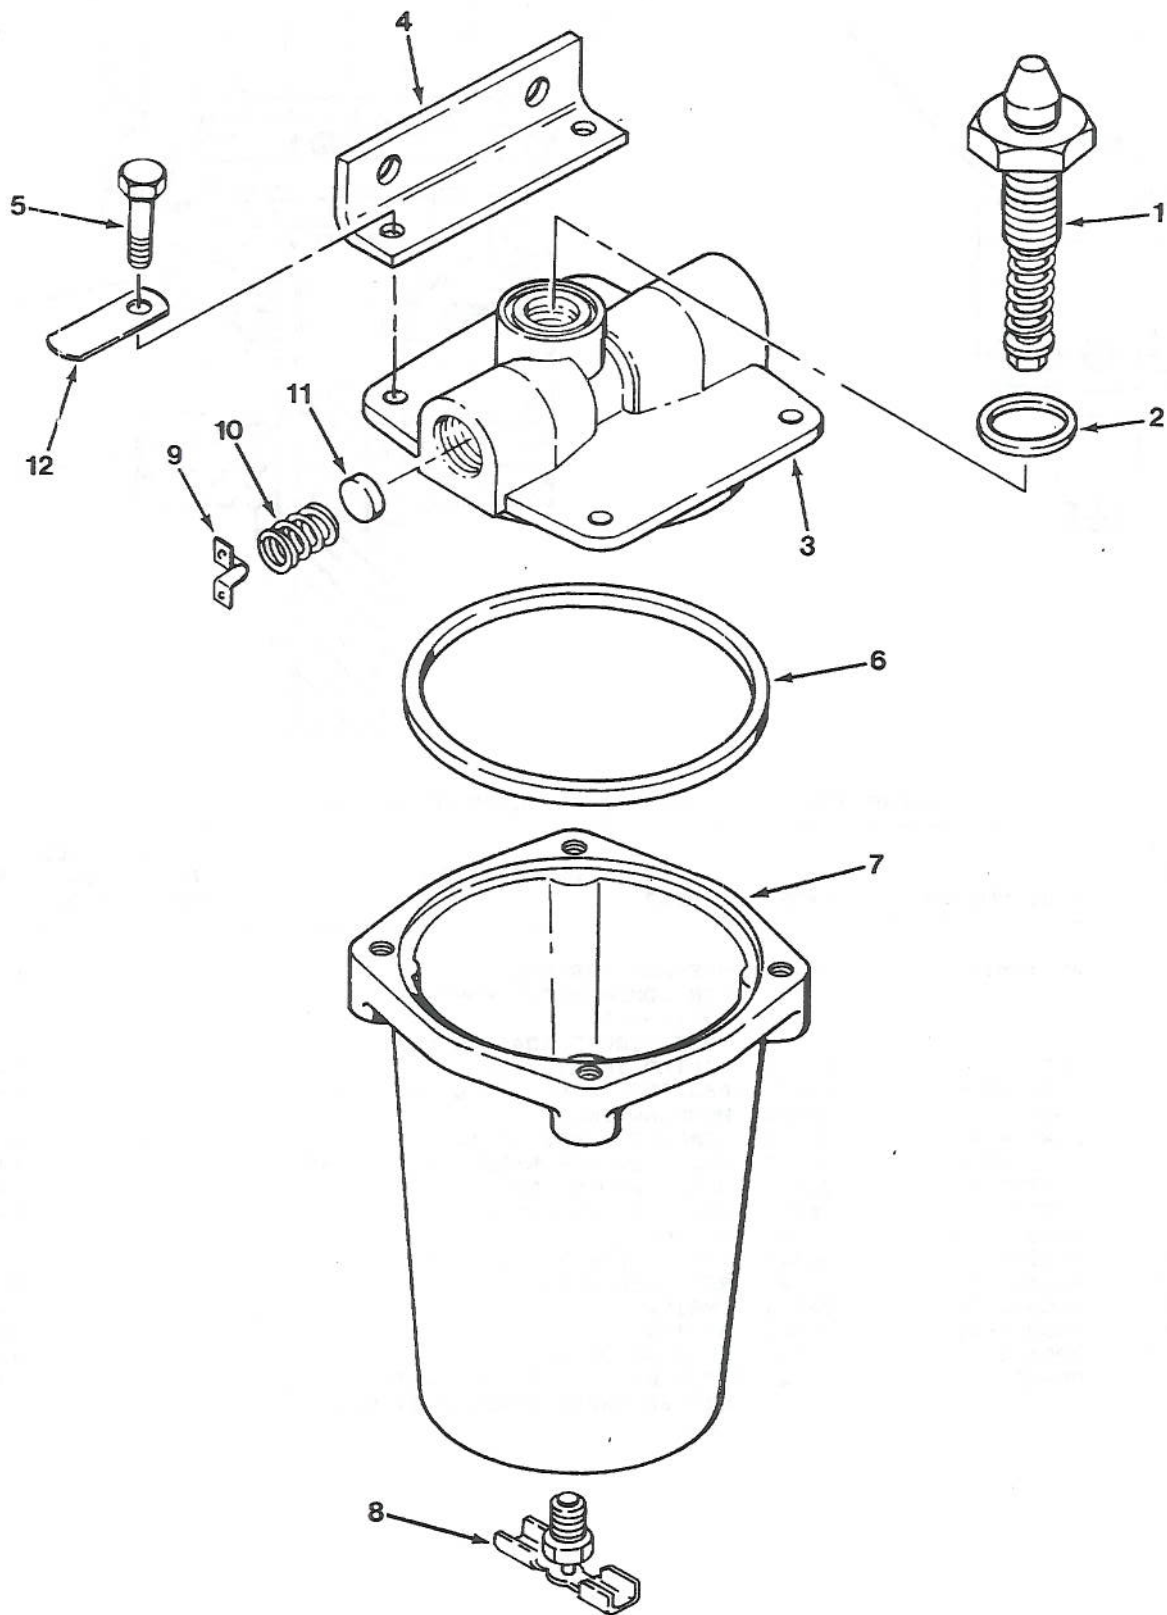

13429A

FIGURE 137. ALCOHOL INJECTOR ASSEMBLY


FIG. & INDEX NO.	PART NUMBER	CAGE	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
137-	AE-72420	06721		INJECTOR ASSEMBLY, ALCOHOL. (PARTS KIT AVAILABLE) (0000008447) (SEE FIGURE 134 FOR NHA)	REF		
-1	AC-75962	06721		. VALVE, SAFETY.	1		PAFZZN
-2	AC-48373	06721		. TETRASEAL (K51)	1		PAFZZN
-3	AE-73494	06721		. COVER	1		PAFZZN
-4	AC-37443	06721		. BRACKET, MOUNTING.	1		PAFZZN
-5	30-X-902	06721		. SCREW, SWAGING (AP).	4		PAFZZN
-6	AC-55710	06721		. TETRASEAL (K51)	1		PAFZZN
-7	AE-55708	06721		. RESERVOIR	1		PAFZZN
-8	AC-42150	06721		. COCK, DRAIN.	1		PAFZZN
-9	AC-55713	06721		. RETAINER (K51).	1		PAFZZN
-10	AC-55714	06721		. SPRING, RETURN (K51)	1		PAFZZN
-11	AC-102507	06721		. VALVE, CHECK (K51)	1		PAFZZN
-12	102241-WA	06721		. PLATE, IDENTIFICATION.	1		PAFZZN
	A-39219	06721		KIT, REPAIR (CONTAINS PARTS LISTED ABOVE DENOTED BY K51)	1		PAFZZN

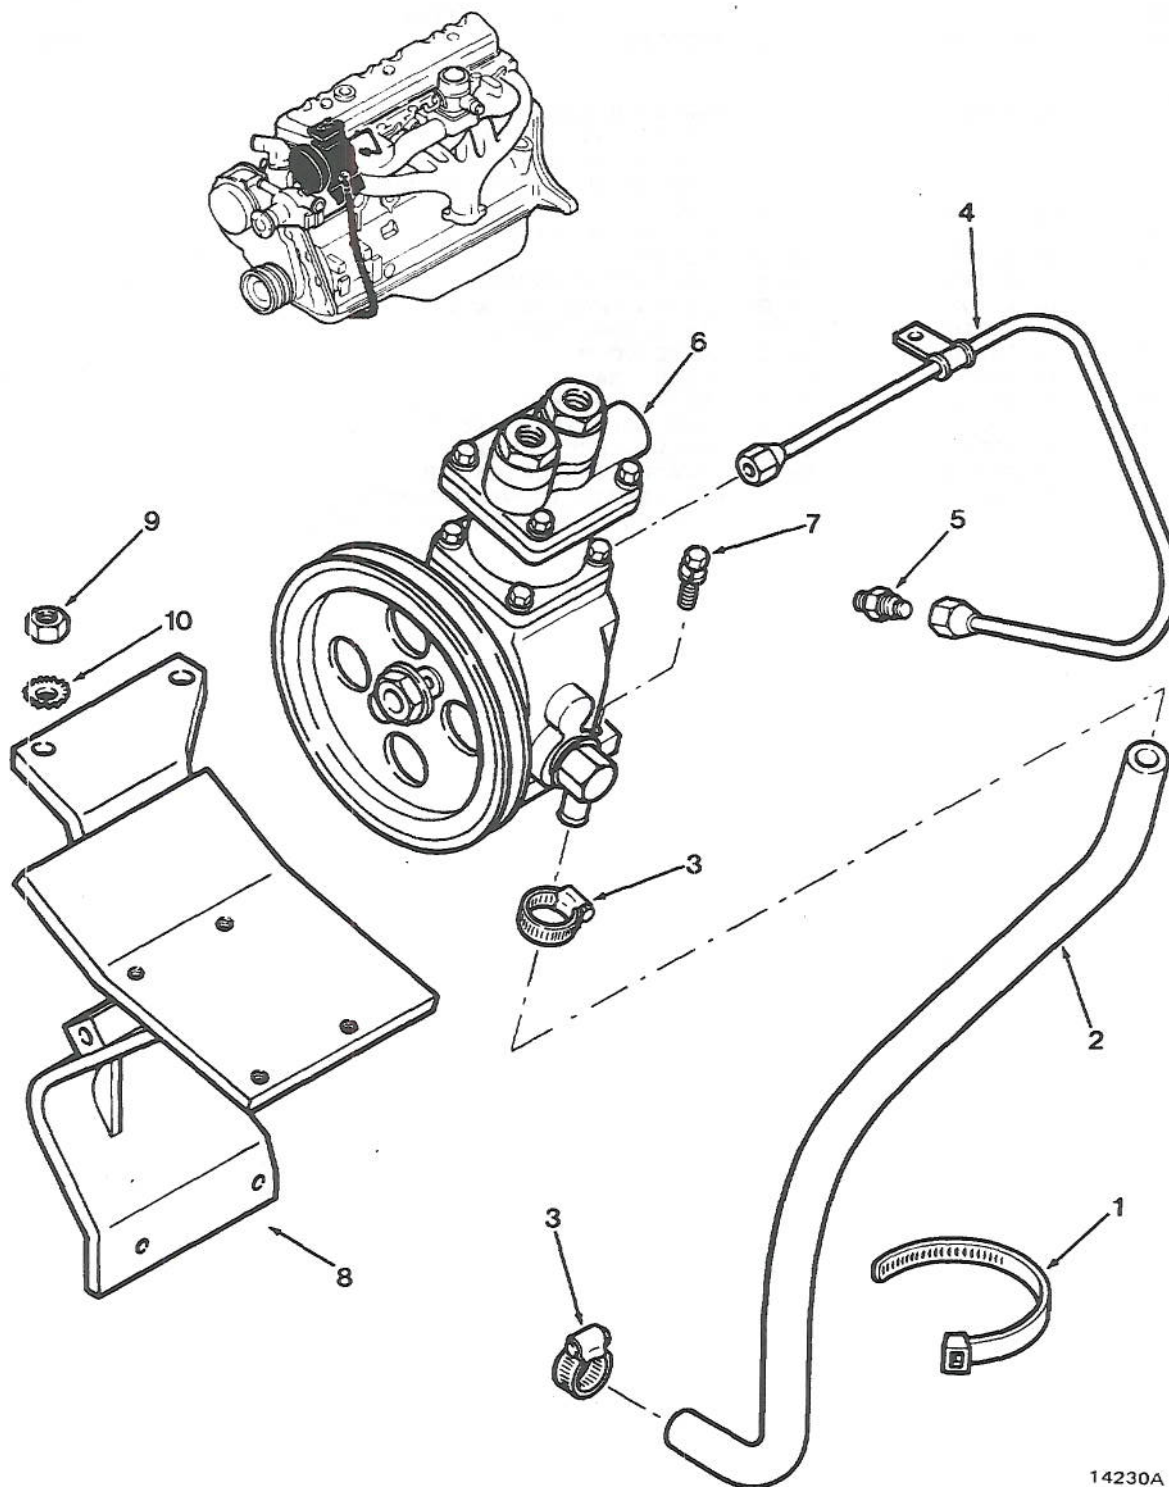

14230A

FIGURE 138. AIR COMPRESSOR INSTALLATION

FIG. & INDEX NO.	PART NUMBER	CAGE	1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
138-	NO NUMBER	31509		AIR COMPRESSOR INSTALLATION. REF			
				(SEE FIGURE 134 FOR NHA)			
-1	3230270	31509		. STRAP, TIE	1		XBFZZ
-2	3203739	31509		. HOSE, NONMETALLIC, 28 IN, OIL.	1		XBFZZ
				RETURN			
-3	3203076	31509		. CLAMP	2		PAFZZN
-4	8953004018	92871		. TUBE, OIL SUPPLY	1		PAFZZN
-5	8135017	92871		. CONNECTOR	1		PAFZZN
-6	92600-90000	90356		. AIR COMPRESSOR ASSEMBLY	1		PAFFFN
				(8993000069)			
				(SEE FIGURE 139 FOR DETAILS)			
-7	8135355	92871		. SCREW, CAP, HEX HD (AP)	4		PAFZZN
-8	8953004019	92871		. BRACKET	1		PAFZZN
-9	893420104	92871		. NUT, PLAIN, HEX (AP).	2		PAFZZN
-10	7903056023	92871		. WASHER, LOCK, STAR (AP)	2		PAFZZN

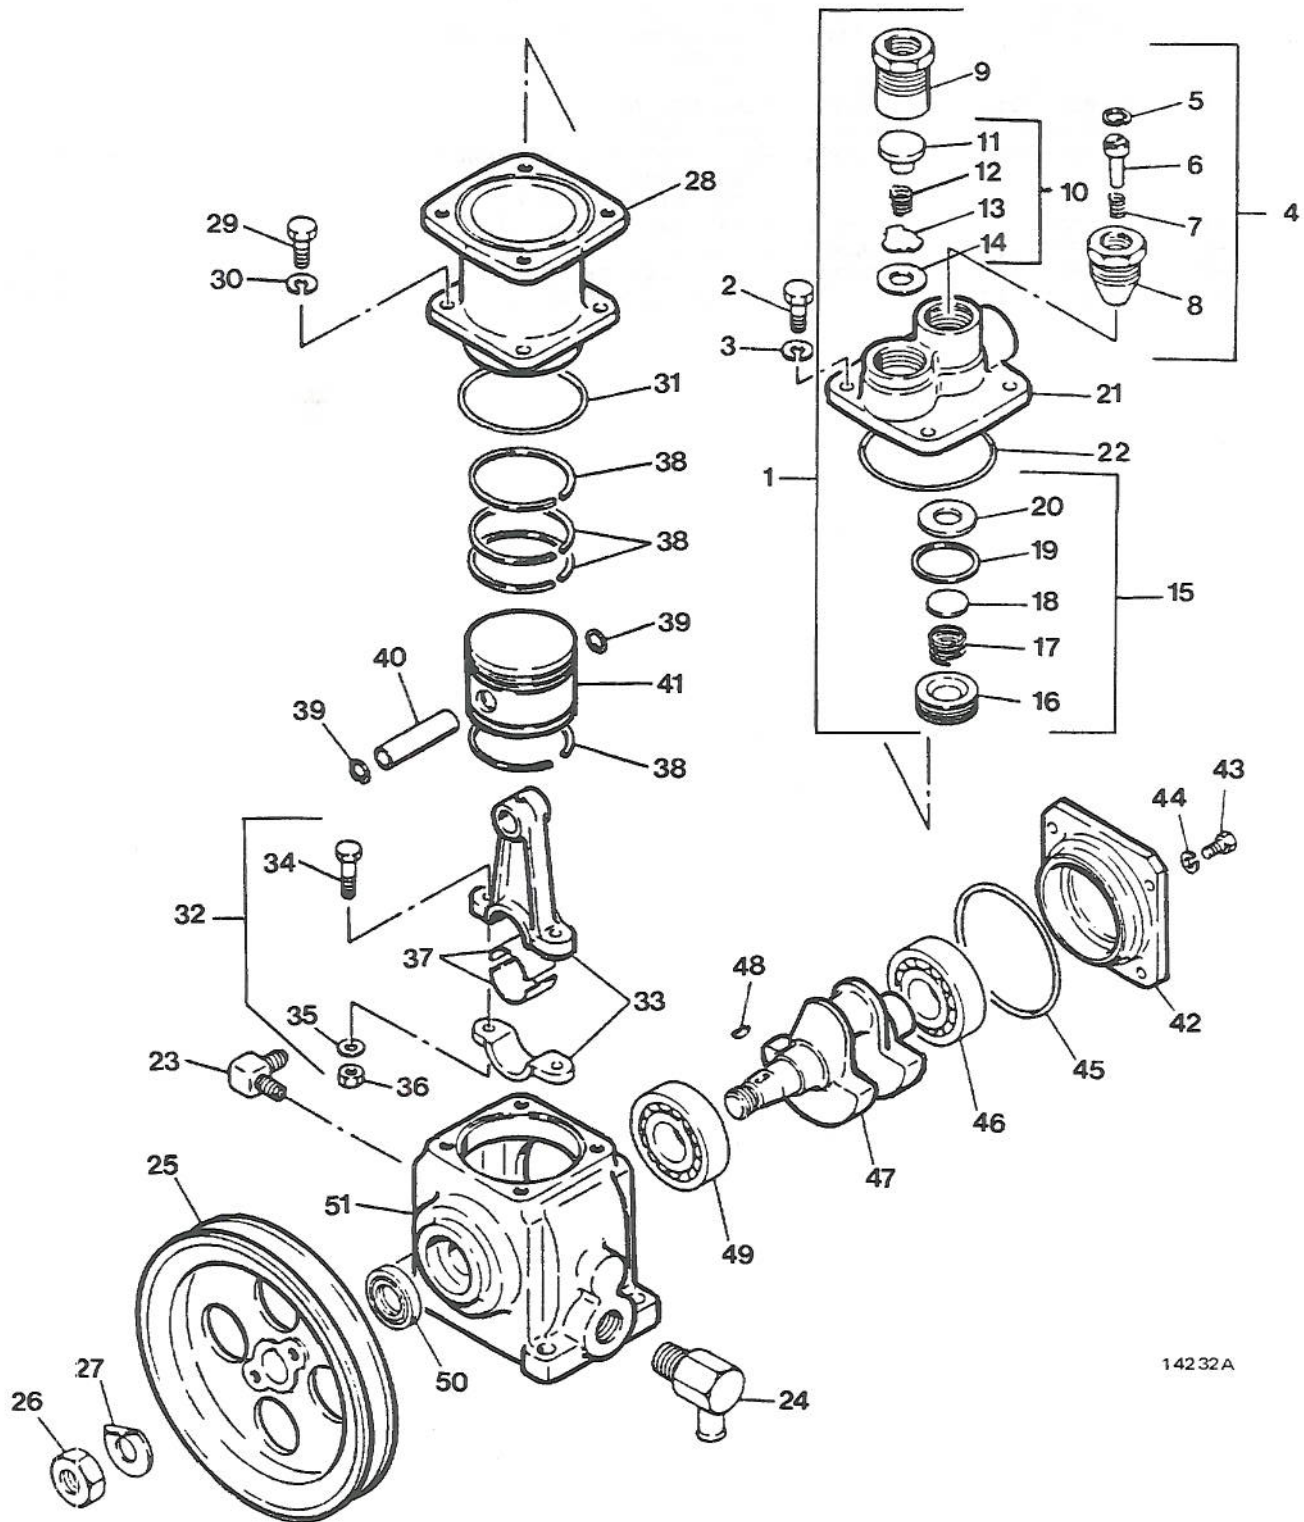

14232A

FIGURE 139. AIR COMPRESSOR ASSEMBLY

FIG. & INDEX NO.	PART NUMBER	CAGE 1234567	DESCRIPTION	UNITS PER ASSY.	USABLE ON CODE	SMR CODE
139-	92600-90000	S0356	AIR COMPRESSOR ASSEMBLY. (8993000069) (SEE FIGURE 138 FOR NHA)	REF		PAFFFN
-1	92620-99000	S0356	HEAD ASSEMBLY, CYLINDER.	1		PAFZZN
-2	45121-99001	S0356	SCREW, CAP, HEX HD (AP)	4		PAFZZN
-3	08915-13810	S0356	WASHER, LOCK (AP).	4		PAFZZN
-4	14552-99000	S0356	VALVE ASSEMBLY, CYLINDER.	1		PAFZZN
-5	14533-90000	S0356	CLIP, RETAINER	1		PAFZZN
-6	NO NUMBER	S0356	VALVE, UNLOADER.	1		
-7	14556-90001	S0356	SPRING, HELICAL, UNLOADER	1		PAFZZN
-8	14555-90001	S0356	HOUSING, UNLOADER VALVE.	1		PAFZZN
-9	92624-99000	S0356	HOLDER ASSEMBLY, DELIVERY VALVE	1		PAFZZN
	14581-90001	S0356	SPRING, HELICAL.	1		PAFZZN
	14554-99001	S0356	HOLDER, DELIVERY VALVE	1		PAFZZN
-10	92630-99025	S0356	VALVE ASSEMBLY, DELIVERY. (8983502755)	1		PAFFFN
-11	92623-99000	S0356	SEAT, VALVE, DELIVERY	1		PAFZZN
-12	14580-90002	S0356	SPRING, HELICAL, DELIVERY VALVE	1		PAFZZN
-13	14569-90002	S0356	VALVE, DELIVERY.	1		PAFZZN
-14	14572-90004	S0356	PACKING, RING.	1		PAFZZN
-15	92629-99025	S0356	VALVE ASSEMBLY, SUCTION (8983502754)	1		PAFZZN
-16	14577-90002	S0356	HOLDER, SUCTION VALVE.	1		PAFZZN
-17	14568-90003	S0356	SPRING, HELICAL, SUCTION VALVE.	1		PAFZZN
-18	92622-99000	S0356	VALVE, SUCTION	1		PAFZZN
-19	14572-90002	S0356	PACKING, PREFORMED, O-RING.	1		PAFZZN
-20	14571-90002	S0356	SEAT, VALVE, SUCTION.	1		PAFZZN
-21	92621-99000	S0356	HEAD	1		PAFZZN
-22	92619-99001	S0356	PACKING, PREFORMED, O-RING.	1		PAFZZN
-23	92627-99000	S0356	FITTING, ELBOW, 90 DEGREE	1		PAFZZN
-24	92626-99000	S0356	FITTING, ELBOW, 90 DEGREE	1		PAFZZN
-25	92625-99000	S0356	PULLEY.	1		PAFZZN
-26	14527-90000	S0356	NUT, HEX (AP).	1		PAFZZN
-27	14526-90000	S0356	WASHER, LOCK (AP).	1		PAFZZN
-28	92631-99000	S0356	LINER	1		PAFZZN
-29	45121-99001	S0356	SCREW, CAP, HEX HD (AP)	4		PAFZZN
-30	08915-13800	S0356	WASHER, LOCK (AP).	4		PAFZZN
-31	92619-99000	S0356	PACKING, PREFORMED, O-RING.	1		PAFZZN
-32	92615-99000	S0356	ROD ASSEMBLY, CONNECTING	1		PAFFFN
-33	NO NUMBER	S0356	ROD AND CAP.	1		
-34	92616-99001	S0356	SCREW, CAP, HEX HD	2		PAFZZN
-35	92617-99000	S0356	WASHER, LOCK.	2		PAFZZN
-36	92616-99002	S0356	NUT, HEX.	2		PAFZZN
-37	92616-99000	S0356	BEARING, ROD.	1		PAFZZN
-38	92628-99025	S0356	RING SET, PISTON (8983502753).	1		PAFZZN
-39	14533-90000	S0356	CLIP, PIN.	2		PAFZZN
-40	14532-90001	S0356	PIN, PISTON.	1		PAFZZN
-41	92618-99000	S0356	PISTON.	1		PAFZZN
-42	92613-99000	S0356	HOLDER, BEARING.	1		PAFZZN
-43	08110-62020	S0356	SCREW, CAP, HEX HD (AP)	4		PAFZZN
-44	45528-29003	S0356	WASHER, LOCK (AP).	4		PAFZZN
-45	14514-29003	S0356	PACKING, PREFORMED, O-RING.	1		PAFZZN
-46	92611-99001	S0356	BEARING, BALL.	1		PAFZZN
-47	92614-99000	S0356	SHAFT, CRANK	1		PAFZZN
-48	14636-90002	S0356	KEY, WOODRUFF.	1		PAFZZN
-49	92611-99000	S0356	BEARING, BALL.	1		PAFZZN
-50	92612-99000	S0356	SEAL, OIL.	1		PAFZZN
-51	92610-99000	S0356	CRANKCASE	1		XA

SECTION III NUMERICAL INDEX

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
A-39219	F137-12	C5405X8	134-23
AC-102507	137-11	C5405X8X8	134-63
AC-37443	137-4	D5UA-4A406-AA	128-5
AC-42150	137-8	EB10010400	SEE 59S-7
AC-48373	137-2	EB10010401	SEE 59W-2-3
AC-55710	137-6	EB11010485	SEE 1300-8
AC-55713	137-9	EB13008446	SEE 13241A
AC-55714	137-10	EB13008485	SEE 5582
AC-75962	137-1	ED02010389	SEE 3532
AE-55708	137-7	ED07010388	SEE 58LS
AE-72420	F137-	EOTA-1175-AA	128-13
AE-73494	137-3	FA02006060	SEE 9137
AB21	SEE 31026	FA02010274	SEE MS90727-215
B-495469	84-2	FA02010334	SEE MS90728-111
BA02010273	SEE CF1-3-8S	FA02010393	SEE MS90725-6
BC04008510	SEE 1466X4	FA02010398	SEE MS90725-8
BC04008511	SEE 1477X6	FA02010419	SEE MS90727-114
BC100008472	SEE 3300X6	FA02010420	SEE MS90727-115
BC10008457	SEE 10452-S	FA02010437	SEE MS18154-113
BC10008458	SEE 10451-E	FA02010449	SEE MS90725-113
BC10008459	SEE 90V-2583	FA02010496	SEE MS90725-134
BC10008461	SEE 035079	FA03008489	SEE 4423
BC10008462	SEE C5205X8X8	FA06006064	SEE 9302
BC10008463	SEE C5405X8X8	FA06010275	SEE MS51968-14
BC10008464	SEE 1469X4X4	FA06010335	SEE MS51967-14
BC10008465	SEE 1469X4	FA08010469	SEE 8D668S
BC10008466	SEE 1469X6	FA09010433	SEE MS35206-265
BC10008467	SEE 3750X4	FA09010487	SEE MS35206-263
BC10008468	SEE 3220X4X2	FA11010276	SEE MS35338-48
BC10008469	SEE 1468X4X4	FA11010290	SEE MS35338-53
BC10008471	SEE C5405X8	FA11010380	SEE MS35338-44
BC10008473	SEE 1468X6	FA11010517	SEE MS35335-32
BC10008474	SEE 3350X8	FA12010291	SEE MS27183-17
BC10008475	SEE 3220X6X4	FA12010378	SEE MS51967-2
BC10008476	SEE C3239X6X6	FA12010379	SEE MS27183-9
BC10008478	SEE 3325X8	FA12010451	SEE MS27183-21
BC10008479	SEE 3328X4	FA17010311	SEE C50LR-BR16-4
BC10008480	SEE 3700X4	FA17010312	SEE MQLP-R8-6
BC10008482	134-70	FA21008506	SEE 10181
BC10008483	134-72	FA22008507	SEE 5784
BC10008484	134-71	FA22008509	SEE 9615
BC13008443	SEE 12020	FA22010385	3-14
BC13008444	SEE N13553	FA27010421	SEE MS51937-1
BC13008448	SEE 12014	FA28010432	SEE 9505-10
BC13008449	SEE KN20561	FA29010384	SEE CL-73-KA-08
BC13008456	SEE KN23010	FA43008508	SEE 2978
B146XOH	67-6	FB13008445	SEE 3250
CF1-3-8S	3-9	FE05010436	SEE 3151X6
C003008450	SEE KN19010	FE05010505	SEE 1069X6
CL-73-KA-08	3-13	FE06010454	SEE 6802
C3DZ13466A	F5-4	FE11010356	SEE 92050657
C3209X8X6	134-19	FE12010472	SEE 9328
C3239X6X6	134-17	FE12010478	SEE 9329
C50LR-BR16-4	F2-21	FFB171	116-31
C5205X8X8	134-62	F102377	67-14

PART NUMBER		FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
QA02008452	SEE 82329		0274474	58-6
Q114494		125-28	0274902	121-11
Q11500221		81-11	0432453	12-10
		81-16	0443632	53-6
Q11500273		69-8	0450649	57-5
Q11501850		81-8	0454783	57-2
Q11501939		81-15	0455683	14-5
Q11502606		81-19	0456334	11-2
Q11502685		81-20	0456695	30-4
Q11502764		44-13	0457002	14-3
Q117972		87-7		57-12
Q120383		65-29	0827572	45-18
Q120388		44-15	0827675	45-9
Q120392		38-3	09411783	44-44
		71-3		118-18
Q120522		71-27		118-22
		73-19		125-7
Q120526		131-12		125-11
Q121224		41-8	09413215	66-4
Q127934		46-5		118-7
		46-9	09413447	69-12
Q137190		65-2	09413562	8-7
		65-15	09414721	29-7
Q140780		77-1	09415163	24-5
Q141281		108-22	09415260	60-2
Q144562	SEE 103856		09416531	37-6
Q155937		70-10		66-3
Q160539		8-3	09416532	132-12
Q161860		11-6	09416918	71-5
Q163210		58-11	09417333	57-13
Q164401		29-3	09417855	24-4
Q179148		73-21	09418738	72-11
Q179798		111-41	09418778	44-14
Q179815		113-8	09419004	63-11
Q180016		71-26	09419076	128-2
		87-10	09419321	8-16
Q180017		125-5	09419337	45-2
		125-9		87-5
Q180077		63-20	09419871	107-10
Q180157		7-1		107-14
Q181404		65-7	09419892	8-4
		65-27	09420350	124-4
Q192107		73-2		130-14
Q219422		108-20	09420510	8-2
Q2436163		132-11	09421021	70-11
Q271169		46-7	09421085	121-3
Q271184		38-4	09421204	F107-9
Q271187		63-6		F107-13
Q271190		57-10		F132-3
		58-2	09421943	87-4
Q271287		65-21	09423284	30-3
		68-4	09424069	F67-2
Q271505		65-8	09424757	F132-7
		65-28	09426241	8-14
Q272121		111-34		37-18
Q272844		53-7		108-4
		54-15		131-13
Q273573		44-20	09431552	81-17
		47-5	09431948	58-9
		63-18	09432476	61-7
Q273773		107-3	HA01008454	134-51
Q273801		63-8	HA01008455	134-67
		63-12	HB779	66-6

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
HB779	120-5 126-5	MS27183-9	F2-25
HC03006021	SEE MS51335-2	MS3367-1	133-7
HC07010459	SEE 559	MS35206-263	4-9
HD01-008297	SEE MS35842-10	MS35206-265	5-3
HDO4008504	SEE H10408-680-680-39	MS35206-279	11-13
HDO4008505	SEE H10408-608-670-32	MS35335-32	4-10
HMB03110	F129-6	MS35335-35	63-3
HMB8510	F129-8	MS35338-44	2-11
HMB8542	F129-8	MS35338-46	118-3
		MS35338-47	65-9
H10408-608-670-32	134-22	MS35338-48	2-3
H10408-680-680-39	134-61	MS35338-50	F2-23
J-2416	116-46	MS35338-52	65-17
JLM104910	123-10	MS35338-53	3-27
KN-18511	134-59	MS35649-202	57-3
	F136-	MS35691-13	38-13
KN19010	134-69	MS35691-37	108-25
KN20561	134-49	MS35842-10	133-13
KN23010	134-24	MS39158-4	71-21
LF10010431	SEE 412	MS51335-2	2-1
LF11010439	SEE 426	MS51937-1	2-9
LF11010440	SEE 426-18	MS51953-61	134-26
LF13010438	SEE 415	MS51967-11	118-11
LF14010434	SEE 408	MS51967-14	F2-20
LF15010402	SEE 431-491	MS51967-2	2-10
LF15010403	SEE 431-49	MS51967-20	F2-23
LH05010483	SEE 1728B	MS51967-8	58-4
LM104911	128-9	MS51968-14	2-4
LR160-9ZF	F83-	MS90725-113	F2-23
	84-1	MS90725-134	2-36
L150-14009	84-6	MS90725-32	63-2
L150-18015	84-5	MS90725-36	69-13
L150-23105	84-15	MS90725-5	72-26
L150-23157	84-18	MS90725-6	F2-25
L150-23251	84-17	MS90725-62	72-10
L150-3317	84-19	MS90725-67	69-6
L150-43301	84-16	MS90725-8	4-20
L150M-14041	84-7	MS90726-117	120-2
L150M-18004	84-8	MS90727-114	2-2
L150M-28031	84-22	MS90727-115	2-6
L150M-29221	84-21	MS90727-215	3-3
L160-13351	F84-14	MS90728-111	F2-20
L160-23201	84-14	MS90728-13	71-2
L160-32001	84-13	MS90728-63	41-17
L160-51001	84-10	MV14-14R/SX	5-37
L160-53016	84-20	MXU14-10FLX	5-39
L160-6500	84-3		5-43
MGLP-R8-6	F2-21	M131282	45-19
	F2-27	N-11728-DW	136-5
MNG14-156DFIX	5-41	N-11728-V	136-2
MS16997-62	5-21	NAS1409A7	121-6
MS18154-113	4-13	N11246	134-18
MS18154-60	81-12	N13553	134-8
MS21044N6	117-2	P-25-1	9-4
MS21333-40	71-24	P-550-WW	45-13
MS24665-355	65-20	Q8500-M28S	54-4
MS27183-12	38-5		70-2
MS27183-13	7-12	RN-32-P	F136-13
MS27183-14	58-3	SD6686	2-29
MS27183-15	37-23	TA01008460	SEE 5000-AD
MS27183-17	4-14	TCAA1244A	F129-15
MS27183-18	41-6	TR12-64	F84-14
MS27183-21	F2-23	VP25-19103	F84-34

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
VP25-29301	84-34	0000010381	2-19
VP25-39401	84-32		F3-
VP25-49201	84-27	0000010390	2-25
VP25-6947A	84-24	0000010391	2-26
VP25-99004	84-23	0000010396	5-38
WD07008490	SEE 090014	0000010397	F5-18
WD08008487	134-33	0000010406	2-20
WD08008488	134-32	0000010407	2-21
WD10010395	SEE 12-10-P	0000010410	2-23
WD10010418	SEE 12010182	0000010411	2-27
WD10010430	SEE 2971962	0000010412	3-1
WD10010445	SEE 2965867	0000010413	3-2
WD10010479	SEE MV14-14R/SX	0000010414	3-19
WD10010484	SEE MXU14-10FLX	0000010415	3-16
WD11010416	SEE 82M-180-P	0000010416	3-33
WD11010417	SEE 1201599	0000010423	5-5
WD11010429	SEE 8900420	0000010424	5-6
WD12010415	SEE MNG14-156DFIX	0000010425	5-1
WD13010399	SEE 62-P	0000010426	5-9
WD14010404	SEE 952F-250-32-NL	0000010427	5-10
WD15010405	SEE 72M-250-32-NL	0000010428	5-11
WD16010442	SEE 2977762	0000010452	2-28
WD16010443	SEE 2973385	0000010458	4-6
WD17010498	SEE 10059	0000010462	5-15
WD18010499	SEE 2306	0000010463	5-16
WD19010518	SEE 9388	0000010464	F2-36
00N0-008679	SEE 9419986	0000010465	F2-36
0000-008430	2-33. 1	0000010466	F2-36
	F133-	0000010467	F2-36
0000-008431	SEE 8500215	0000010468	F2-36
0000-008432	SEE 850-0045	0000010470	4-3
0000-008433	SEE 8500320	0000010471	4-1
0000-008434	SEE 8500371	0000010477	2-18
0000-008435	SEE 8500274	0000010486	5-42
0000-008442	2-33. 2	0000010494	2-34
	F134-	0000010495	2-35
0000008447	SEE AE-72420	0001-008429	SEE 82002
0000008486	134-55	0002-008429	SEE 7507
0000010209	F3-1	00921-43510	101-12
0000010268	3-6	00926-31300	101-8
0000010269	3-7	00926-41600	99-10
0000010270	3-8	00929-51400	104-11
0000010277	3-15	00933-11800	104-8
0000010281	3-17	00933-20650	100-18
	3-25		100-19
0000010282	3-18		104-9
0000010287	3-23	01151-01004	100-20
0000010288	3-24	01351-10124	88-24
0000010289	3-26	01351-11144	92-9
0000010314	2-31		92-15
0000010336	3-28		96-16
0000010340	3-29	01351-22104	83-13
0000010341	F2-	013739-00A0	
0000010342	2-37	01522-05104	99-6
0000010343	F2-		104-2
0000010345	2-30	01642-02114	104-13
0000010350	2-32	01648-00084	100-16
	F4-		104-3
0000010351	2-33	035079	134-4
	F5-	08110-61210	93-62
0000010355	4-12	08110-61262	98-13
0000010366	2-24	08110-61662	99-9
0000010373	3-11	08110-62020	139-43

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
08110-81662	79-13	08911-20610	91-4
	98-9		93-7
08110-82010	80-2	08911-30810	83-22
08110-82062	88-21	08915-13410	83-20
	89-27	08915-13510	83-10
	89-35	08915-13610	94-14
	89-39	08915-13800	139-30
	98-3	08915-13810	80-3
	98-17		83-3
	99-2		83-23
08110-82525	89-30		89-45
08110-82562	89-36		90-4
08110-83062	88-27		98-10
	89-29		99-15
	94-7		139-3
	94-17	08915-14010	89-4
	98-2		93-64
	135-2		99-4
08110-84562	88-14	08915-43410	83-21
	94-16	08915-43510	83-11
	98-5	08915-43810	99-14
08110-85562	88-13	08915-44010	93-65
	89-26	08915-53810	83-4
	98-4	08921-32510	99-16
08110-86562	89-28	08931-30410	104-15
	98-8	09-001438	128-11
08114-02062	94-4	090014	134-68
08114-02562	92-5	10005-04000	100-23
08120-61228	97-2	10006-37500	100-25
08120-61628	101-19	10027	F134-21
08120-61662	101-3	10047	F134-21
08120-62528	97-3	10059	F5-45
08120-81628	102-3	100696A	F134-69
08120-82028	100-24	10101-29128	F2-46
	101-1		F88-29
08120-88062	101-5		F90-8
08121-22528	107-6		F91-23
08121-24028	83-18		F93-67
08124-02028	100-26		F96-20
08124-03028	83-7		F97-9
08124-03533	83-1		F98-19
08124-05028	89-2		F100-27
08124-06028	88-12		F101-20
08124-09510	89-3		F102-10
08131-06510	99-3		F105-
08267-03510	90-8		F135-9
08320-61410	88-16	10103-29129	F2-47
08360-41012	83-19		F88-29
08360-51014	96-1		F90-8
08360-51026	92-11		F91-23
08360-62514	91-2		F96-20
08363-61214	94-15		F99-35
08363-81626	79-2		F100-27
08712-14205	104-14		F106-
08723-11200	96-14		F135-9
08723-11800	92-7	10181	134-46
08723-12000	83-16	101929-E	136-6
08723-13600	88-10	102241-WA	137-12
08740-11011	96-13	102263	67-30
08911-10510	83-9	102349	136-9
08911-10810	89-44	102350	136-7
	90-3	102351	136-1
08911-14010	93-63	103375	38-16

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
103856	45-6	1201599	5-19
10451-E	134-6	12020	134-29
10452-B	134-2	12024-37501	103-2
1069X6	4-5	12030-37500	103-6
11009-C6801	F104-	12032-37500	103-1
11012-76201	104-6	12033-J2204	103-3
11019-76200	100-17	120376	7-11
11019-90002	104-7		12-6
11023-97000	88-23		58-7
11025-61501	83-14	120383	SEE Q120383
11026-61000	97-6	120386	14-6
11032-C6801	105-12	120388	SEE Q120388
11032-C6802	94-9	120392	SEE Q120392
11032-C6803	94-10	120522	SEE Q120522
11041-C6800	94-8	120526	SEE Q120526
11044-61514	100-7	12100-37502	F103-3
	100-27	12109-37502	103-5
	105-4	12113-37501	103-4
11045-76201	106-1	12117-Y5200	103-7
	88-22	12117-Y5201	F103-7
	105-27	12117-Y5202	F103-7
11050-76200	106-7	12117-Y5203	F103-7
11052-76203	100-15	12117-Y5204	F103-7
11056-73400	100-22	12121-Y5201	104-16
11056-37502	100-10	121224	SEE Q121224
11059-76201	100-8	12123-Z5000	104-17
11060-C6801	100-9	121560018	F134-21
	88-26	12200-90063	F103-7
11062-1.6000	135-1	12205-76200	103-13
	88-28	12207-61506	103-10
	105-28	12209-61506	F103-10
11065-34W00	106-8	12210-61506	F103-10
11067-34W01	135-3	12211-61506	F103-10
11075-37501	F135-3	12212-61506	F103-10
11076-76203	87-1	12279-76200	102-10
11086-C7800	87-8		105-2
11110-90070	100-12	12280-37503	103-12
	100-11	12280-37504	F103-12
	87-2	12280-37505	F103-12
	97-1	12281-37502	103-11
11121-61502	97-4	12281-37503	F103-11
11128-69200	105-13	12281-37504	F103-11
11232-90000	97-5	12289-14600	102-9
11233-90002	107-5		105-1
11446	107-7	12293-37501	104-1
114494	116-18	12305-90060	102-1
11500221		12305-90300	F102-1
11500273	SEE Q114494	12306-61503	102-2
11501850	SEE Q11500221	12307-61501	102-4
	SEE Q11500273	12309-61503	103-8
	SEE Q11501850		
11501939	SEE Q11501939	12310-90167	102-5
11502606	SEE Q11502606		109-7
11502635	SEE Q11502635	12312-61500	102-8
11502764	SEE Q11502764	12314-61500	102-7
11504336		12316-76200	102-6
11689	81-10	12318-37502	F103-11
	116-34	12319-37503	F103-12
	116-37	12320-37502	F103-11
117972	SEE G117972	12321-37503	F103-12
11801		127934	SEE G127934
12-10-P	116-5		
	5-31	1300-8	2-22
12010-J5312	F103-	13001-90109	99-11
12010182	5-32	13002-90010	104-5
12014	134-21		

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
13010-90002	99-8	13352-043-6420	72-24
13014-37500	99-1	13368	116-35
13020-90000	83-2		116-36
13021-37501	103-14	13627	115-15
13024-37502	99-7	13672	116-7
13030-37500	99-5	13684	115-22
13031-90004	98-16	13692	115-9
13034-Y7503	98-1	13702	116-9
13036-J2001	98-12	1370910	118-8
13036-34W00	98-7	137190	SEE G137190
13037-90002	98-19	13724	117-8
13041-Y5201	105-9	13725	117-5
	98-15	13727	117-9
13043-76200	105-10	13728	115-18
	98-6	13733	117-12
13044-J2001	105-8	13734	117-13
	98-14	13735	117-10
13044-Y5201	105-31	13736	117-11
	98-11	13738	116-26
	105-11	13747	116-1
13052-37500	93-61	13749	116-4
13068	116-45	13753	116-41
13081-76201	104-10		116-47
131282	SEE M131282	13758	116-29
1315158	111-21	13759	116-28
13201-Y5200	99-35	13774	116-6
13201-Y5201	F99-35	13775	116-33
13201-Y5202	F99-35	13776	116-38
13202-C8700	99-34	13786	116-10
13202-C8701	F99-34	13798	116-44
13202-C8702	F99-34	13863	116-15
13203-T7200	99-33	13885	116-19
13207-C8700	99-32	13903	115-19
	105-6	13905	116-32
13207-C8701	106-3		116-39
13207-C8702	F99-32	13967	116-8
13208-Y1400	F99-32	13969	116-11
13209-37501	99-30	13985	117-14
13214-Y5200	99-31	14-14403-052	128-8
	100-14	14003-C6800	90-2
13215-Y5200	100-13	14004-C6801	90-1
13215-Y5201	F100-13	14018-90016	100-21
13215-Y5202	F100-13	14035-90000	90-7
13222-37504	99-12		105-17
13224-76200	99-13		106-6
13231-78201	99-29	14037-32200	90-6
13238-37502	99-28	14037958	117-4
13240-37502	100-2	14038-90001	90-5
13241A	134-34	140580	38-11
13252-61502	99-25	140780	SEE G140780
13255-58000	99-18	141281	SEE G141281
13256-18010	99-22	14320-Q4000	91-23
13256-58000	99-19	14325-C6802	91-1
13257-37503	99-24	14327-61500	91-20
13258-37503	99-23		105-16
13265-C6800	100-1		106-5
13270-C6800	100-4	14329-37500	91-15
	105-5	14330-C6800	91-19
	106-2	14331-61501	91-17
13284-37503	99-21	14332-37500	91-14
13285-37503	99-20	14333-G7000	91-3
13287-37501	99-27	14341-C6802	91-10
13288-37500	99-26	14341-J6500	91-18
13289-58000	99-17	14345-37500	91-16
13352-031-1611	72-23	14345-37501	F91-16

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
14345-37502	F91-16	15201-61502	89-6
14348-C6803	91-11	15207	116-13
14348-C6804	91-13		116-16
14349-J2001	95-34	15208-61525	89-8
14349-37701	91-7	15213-61502	89-7
14352-61500	95-58	15224-61501	89-13
14371-37500	91-5	15237-C6800	89-15
14514-Z9003	139-45	15239-V1700	89-5
14526-90000	139-27		105-18
14527-90000	139-26	15247	116-17
14532-90001	139-40	15255-W1100	100-5
14533-90000	139-5	15262-C6800	80-1
	139-39	15266-C6800	100-3
14552-99000	139-4		105-29
14554-99001	F139-9		106-9
14555-90001	139-8	15270-78500	100-6
14556-90001	139-7		105-30
14568-90003	139-17	15280-90001	89-23
14569-90002	139-13	15291-90003	89-14
14571-90002	139-20	15300-76200	89-19
14572-90002	139-19	15301-76201	89-18
14572-90004	139-14	15303-61503	89-16
14577-90002	139-16		89-20
14580-90002	139-12	15304-61501	89-17
14581-90001	F139-9		89-21
14636-90002	139-48	15306	116-27
1466X4	134-36	15307	116-43
14665-Y7500	83-12	15333	116-42
14670-90061	83-15	15341-61500	89-22
14671-C0370	83-17	15477	116-25
1468X4X4	134-40	15506	116-14
1468X6	134-14	1556082	112-13
14682-90004	83-8	155937	SEE G155937
1469X4	134-57	15811	116-24
1469X4X4	134-28	15835	116-3
1469X6	134-5	15836	116-21
1477X6	134-39	15904	116-23
15010-90065	F101-	160539	SEE G160539
15015-90010	101-4	16096	117-6
15021-61503	101-7	16097	117-7
15022	9-3	16098	116-20
15023	9-2	16100	115-11
15023-61503	101-6	16101	115-20
15027-C6800	101-9	16123	66-7
15028-61502	101-10	161860	SEE G161860
15040-90003	101-17	16258-C6801	79-11
15042-90001	104-4	1626749	111-45
15050-J5301	101-2	163210	SEE G163210
15053	115-24	1636464	112-6
15054	115-16	16403-Z7000	92-3
15066-90007	101-16	16405-T9003	72-20
15107	105-15	16413-T9005	72-22
15108-C6800	115-8	16413-31W00	96-15
15132-37501	93-66	16417-T9000	72-21
15133-37500	101-15	16419-C8700	92-4
15136-37500	101-14	16424	116-22
15140-C6800	101-13	164401	SEE G164401
15147-37500	97-7	16442-C6800	92-1
	97-8	16454-G4000	92-8
	105-14		
15150-90002	97-9		
15158	116-30		
15181	115-27		
15199-04000	101-11		
15200-C6800	89-1		

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
16454-99002	92-2	16739-37500	F93-36
16500-90066	79-1	16739-99001	93-36
16509-99100	79-7	16740-37500	93-38
16526-C7800	79-5	16741-37500	93-37
16533-62210	79-8	16741-37501	F93-37
16546-C7800	79-6	16741-37502	F93-37
16548-C0300	79-9	16741-37503	F93-37
16551-W7000	79-3	16741-37504	F93-37
16568-Y4100	79-4	16741-37505	F93-37
16573-90065	79-12	16741-37506	F93-37
16600-36W00	96-19	16741-37507	F93-37
16627-J5570	96-12	16741-37508	F93-37
16635-J2000	96-20	16741-99004	93-20
	105-7	16742-37500	95-69
	106-4	16742-37501	93-41
16635-J5570	96-18	16743-99003	93-21
	105-32	16744-29001	93-39
	106-10	16745-95000	93-18
16640-C6801	92-17	16748-37500	93-19
16643-C6800	93-67	16750-37500	93-24
16644-90000	92-18	16751-37500	93-23
16645-37501	92-26	16752-37500	92-14
16646-37500	92-25	16754-C6800	92-28
16647-37500	92-23	16754-37501	93-40
16648-37502	92-33	16754-61501	93-42
16652-37500	92-22	16755-37500	95-12
16653-37500	92-21	16757-37500	92-13
16655-37501	92-19		93-14
16656-37501	92-27	16757-76201	95-32
16657-37500	92-24	16759-37500	93-22
16658-99000	92-30	16760-99003	93-35
16659-37500	92-20	16761-99002	93-11
16660-37500	92-32	16767-37500	93-30
16662-37500	92-29	16768-37500	93-29
16671-C7800	96-11	16769-37500	93-27
16678-C7800	96-17	16770-C6800	93-26
16680-61500	96-5	16772-37500	93-25
16681-61500	96-6	16773-37500	93-34
16682-61500	96-7	16776-29000	93-32
16683-61500	96-8	16776-37500	93-28
16684-61500	96-9	16777-37500	93-33
16685-61500	96-10	16778-37500	93-12
16686-37501	96-2	16778-99001	93-15
16688-37501	96-3	16778-99002	93-6
16689-61501	96-4	16791-61500	93-43
16700-90061	F2-45	16792-61500	93-44
	F93-	16810-C6800	93-47
16701-37504	93-60	16811-99000	93-53
	105-24	16813-C6801	94-3
16702-37501	98-18	16817-C6801	92-6
16703-C6800	93-1	16818-C6801	92-10
16710-76203	93-16	16818-90066	92-16
16711-99000	93-5	16819-C6801	92-12
16714-37501	93-17	16821-C6800	93-54
16716-37500	93-4	16822-37500	93-55
16719-90000	95-46	16822-37501	F93-55
16720-C6800	93-2	16822-37502	F93-55
16723-37503	93-3	16822-37503	F93-55
16725-C6800	93-46	16822-37504	F93-55
16726-37500	93-13	16822-37505	F93-55
16727-99006	93-31	16823-C6800	93-56
16729-37500	93-9	16824-C6800	93-57
16738-C6800	93-45	16825-90004	93-8

PART NUMBER	FIO & INDEX NUMBER	PART NUMBER	FIO & INDEX NUMBER
16825-90005	91-9	192107	SEE 0192107
16825-99000	93-52	19211-37500	95-2
16826-99000	93-51	19212-37500	95-4
16826-99001	F93-51	19212-37501	F95-4
16826-99002	F93-51	19215-37500	95-5
16826-99003	F93-51	19215-99001	95-50
16826-99004	F93-51	19217-99000	F95-21
16826-99005	F93-51	19218-37500	95-6
16826-99006	F93-51	19219-99002	95-22
16826-99007	F93-51	19220-37500	95-1
16826-99008	95-56	19221-76200	95-15
16826-99009	F95-56	19225-99003	95-38
16827-99000	93-50	19227-99000	95-57
16828-37500	93-49	19227-99001	95-54
16829-37500	93-48	19230-99002	95-53
16830-37500	93-59	19231-96000	95-41
16831-37500	93-58	19232-61500	95-42
16874-90001	95-61	19234-37500	95-40
16885-90001	91-6	19235-61500	95-3
	95-33		95-39
17288	3-10	19235-90002	95-60
1736521	113-21	19240-C6800	95-36
17745	45-5	19241-37500	95-35
179148	SEE 0179148	19241-37501	F95-35
179798	SEE 0179798	19241-37502	F95-35
179815	SEE 0179815	19241-37503	F95-35
18000022	39-10	19241-37504	F95-35
18000134	39-11	19241-37505	F95-35
180016	SEE 0180016	19241-37506	F95-35
180017	SEE 0180017	19241-37507	F95-35
18005408	122-5	19243-J2001	95-26
180077	SEE 0180077	19244-C6800	95-37
18007953	122-2	19245-37503	95-27
18007954	122-1		95-28
18007963	39-1	19247-37500	95-31
18007964	39-7	19248-37500	95-30
18007965	39-5	19250-99002	95-67
18007968	39-4	19251-99001	F95-52
18007969	39-3	19256-90000	95-43
18007978	39-6	19256-99002	91-8
18008106	122-8	19258-37500	95-65
18010091A	39-16	19259-76200	95-64
18012143	122-7	19261-99005	95-44
180157	SEE 0180157	19262-37502	95-66
181404	SEE 0181404	19265-37500	95-16
18424-90005	91-22	19268-86000	95-29
1893	43-35	19276-J2000	95-52
	45-20	19276-J2001	F95-52
19133-99004	95-20	19276-J2002	F95-52
19135-99000	95-49	19276-J2003	F95-52
191985	18-3	19276-J2004	F95-52
19200-90019	94-1	19276-J2005	F95-52
	F95-	19276-J2006	F95-52
19201-90705	F95-	19276-J2007	F95-52
19203-99000	95-9	19277-Y7504	95-55
19203-99001	95-10	19278-99010	92-31
19203-99002	95-24	19278-99014	93-10
19204-99004	95-23	19281-99001	95-51
19205-99000	95-8	19287-99005	95-63
19206-76200	95-17	19290-C6800	95-45
19206-99001	95-11	19294-95000	95-7
19206-99006	95-13		95-14
19208-99000	95-19	19312-J2001	95-62

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
19352-90004	91-12	21303-61520	89-46
19363-99003	95-68		105-23
19363-99004	95-59	21304-C8700	89-34
19382-76200	95-48	21306-61520	89-37
19387-99000	95-47		105-20
19388-99003	95-18	21307-61520	89-33
19389-99007	94-2		105-19
1941831	111-19	21309-C8700	89-38
1942021	113-4	21310-90011	89-40
1942054	114-28		105-22
1942063	114-26	21317-99004	89-47
1942064	F114-26	21320-76200	89-41
1942065	F114-26	21331-76201	89-42
1942080	113-25		105-21
1942081	113-19	2136455	23-3
	113-23	21383-Z5000	94-11
1942109	112-1	219422	SEE G219422
1942123	111-3	2204622	113-12
	111-11	2204623	F113-12
1942130	111-12	2204820	111-18
	111-30	2204823	111-31
1942132	111-14	2204952	111-15
1942133	114-29	22178-90004	101-18
1942137	111-35	22179-90001	101-20
1942141	111-33		105-3
1942150	111-29	2306	F5-45
1942187	113-30	23168-C6801	83-6
19811-90001	94-12	23174-37600	83-5
19813-31W01	94-13	23300-61504	F2-45
19816-C6802	94-18		F83-17
19820-C7802	94-5		F86-
19823-C6801	94-6	23306-61503	86-9
19850-31W02	94-19	23310-61503	86-11
1997985	43-15	23313-99111	86-14
2032403	50-13	23318-61501	86-16
2065-0732	84-28	23319-61503	86-17
2084-0631	84-33	23322-61502	86-19
2084-0641	84-31	23330-61503	86-5
21010-T8200	88-11	23333-61503	86-8
21013-61502	88-15	23337-61504	86-3
21014-61503	88-17	23338-61503	86-4
	105-26	23340-61501	86-1
21051-90062	88-8	23343-61504	86-18
21060-J5500	88-1	23366-61500	86-2
21064-P0300	88-4	23369-61503	86-15
21069-61500	88-9	23372-99004	86-10
21070-90005	80-4	23379-61503	86-7
21074-37502	88-18	23380-61501	86-6
	105-25	23383-61504	86-12
2116-1491A	84-25	23441-37501	86-13
2116-1502	84-29	23446-61501	86-20
2116-1511A	84-26	24W11614	136-4
21200-96011	88-29	2400284	F113-12
21202-90063	88-20	2400389	108-24
21219-90209	80-5	2400580	113-27
2124826	114-10	2400662	113-24
	114-24	24210-01W05	89-31
2124835	114-18	24340-90001	76-12
2124848	111-16	24341-90000	76-13
2124851	111-1	24342-90000	76-14
2124857	111-36		
2124872	113-14		
21300-C8700	89-25		
21300-90066	89-32		
21302-C6801	89-43		

PART NUMBER	FIG & INDEX NUMBER
2436163	SEE 02436163
2466324	113-9
2466539	113-26
2466548	111-43
2466803	114-23
2466806	114-22
2466811	F114-26
2466882	108-13
2466892	112-18
2466894	111-46
2466909	112-19
2466954	108-14
25230-J5570	87-9
2538034	112-21
2538042	112-22
2538185	113-28
2621778	122-4
2621779	122-6
2621780	122-9
2621781	122-3
2622520	39-8
26308	129-13
2644324	108-18
27070-M0200	88-19
27070-21600	88-25
271166	6-5
	55-22
271169	57-22
	45-7
	46-3
271169	SEE 271169
271172	6-9
	11-14
	55-20
	61-8
	72-27
271184	SEE 0271184
271187	SEE 0271187
271190	SEE 0271190
271287	SEE 0271287
271505	SEE 0271505
272121	SEE 0272121
272844	SEE 0272844
273573	SEE 0273573
273773	SEE 0273773
273801	SEE 0273801
274474	SEE 0274474
274902	SEE 0274902
2801157	112-20
2801167	114-11
2801241	111-28
2801281	111-25
2801311	113-22
2801348	113-11
2801961	114-12
	114-25
2801992	114-27
2892233	111-32
2892656	113-20
2962793	76-5
2965867	5-36
2971962	5-8
	5-18

PART NUMBER	FIG & INDEX NUMBER
2971962	5-34
2973385	5-35
2977762	5-33
2978	134-48
2984503	76-6
29948	131-4
30-X-902	137-5
300475-A	136-3
300476-E	136-13
301055	127-32
30266	129-11
30271	129-2
30412-P5100	104-12
3062-1171	84-30
31026	125-27
3123943	119-4
3131615	119-2
3137319	115-6
3151X6	4-7
3155600	81-6
3156052	123-5
315834	127-26
3165783	119-3
3165784	119-5
3165949	119-1
3177594	60-11
3178454	39-14
317902	F127-13
317903	127-15
317913	127-14
317925	127-5
317927	127-2
318223	127-4
318510	127-31
3186888	76-11
3186890	SEE 2984503
3186964	42-3
3186965	42-6
3186967	42-5
3187249	42-9
	43-8
	48-2
3187255	42-10
	43-9
	48-3
3187257	42-8
	43-7
	48-1
319040	127-8
3191827	44-33
3193332	40-3
3193369	40-4
3194110	44-34
3194569	41-2
	60-12
3194672	37-3
	44-23
3196286	110-6
3196503	43-33
3196504	43-34
3196505	43-29
3196870	44-17
3196896	SEE 7809615

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
3196897	44-19	3217200	110-5
3197995	59-1	3217581	38-9
3200501	65-16		38-17
3200501	SEE 5667628	3220X4X2	134-41
3202756	8-12	3220X6X4	134-16
3203076	138-3	3220125	110-2
3203739	53-4	32202-90004	103-9
	53-5	3220312	70-8
	138-2	3220433	38-7
3204264	127-9	3220677	110-1
3204266	127-12	3222405	110-8
3204269	F127-11	3222572	38-15
3204270	127-11	322314	F127-6
3204273	F127-13	322315	127-6
3204274	127-13	3223227	39-15
3204812	SEE 5686539		54-7
3204814	SEE 5689008		70-4
3204818	SEE 5687973		71-14
3204820	SEE 5689010		77-10
3204824	SEE 7828565		81-4
3204833	SEE 5687182	3223656	110-9
3204875		3226937	81-1
3204878	44-39	3227850	72-5
3205204	44-38	3227851	72-6
3205205	F127-7		131-9
3206951	127-7		
3206984	127-3	3228743	SEE 7819738
3206985	F127-18	3229970	48-7
3207057	127-18	3229970	SEE 1997985
3207203	SEE 5696151	3230056	43-30
		3230270	53-1
3207886	68-6		138-1
3207916	F127-33	3231211	59-7
3207917	127-33	3231216	59-9
3208008	SEE 7800580	3231217	59-10
320804		3231218	59-8
3208377	127-10	3231223	59-3
3209575	SEE 5694191	3231224	59-4
3209660		3231225	59-5
3209661	SEE 5689357	3232194	60-9
3209664	SEE 5689358	3232844	60-7
	SEE 5688014		
3209669	SEE 5688015		108-23
3209670	SEE 5688049	3238343	43-24
3209671	SEE 5688035		48-11
3209672	SEE 5688109		37-12
3209673	SEE 5688037	3238418	110-3
3209678	SEE 5688044	3239820	68-1
3211169	SEE 7811342	3240553	133-14
3211423		32416502	79-14
		3242264R	134-42
	43-17	3250	
	48-12	3251017	SEE 7840045
3212004	60-4		
3212549	37-9	3300X6	134-25
	37-16	3325X8	134-7
3212844	47-4	3328X4	134-44
3212845	47-7	33327-011-1100	72-13
3212846	47-2	33327-011-1110	72-18
3212847	47-3	33327-011-1610	72-17
3212893	47-6	33327-011-5410	72-16
3213963	61-3	33327-011-6010	72-14
3214097	109-2	33327-011-6020	72-15
3215679	43-32		
	44-2		
3215925	71-31		
321628	127-30		
3216462	44-7		
3216464	44-5		

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
33327-043	72-9	4000056	50-5
3350X8	134-3		50-10
3410437	111-7		52-2
3410440	111-2	4000306	77-8
3410441	111-10	4000424	18-5
3410444	111-6	4001091	37-8
3410445	111-5		37-15
3410518	111-9	4001102	37-2
3410570	114-13	4001104	118-17
3410908	111-20	4001120	118-6
342007	113-6	4001134	118-16
3515077	114-21	4001714	55-3
3515079	111-22	4001885	108-19
3515137	113-1	4001916	19-3
3515387	111-44	4001933	24-3
3515451	112-16		24-10
3515479	112-14		37-20
3515996	111-38	4002250	22-6
3516003	22-2	4003060	F132-7
3532	2-17	4003556	10-6
35416	125-15		71-8
35417	125-14	4003706	18-6
35566	125-17	4003803	72-12
35938	125-21		81-13
36113 24	F128-1	4003909	39-19
36113 25	128-1		41-18
3613467	18-9		107-4
3632495	22-13		107-11
36326-2	125-22		107-15
3641913	22-11		132-4
3641914	22-1	4003925	44-6
	49-1	4003926	121-20
36472	131-6	4003975	107-2
36621	125-19	4004077	73-20
366773	67-32	4004120	124-7
3681105	114-1		130-2
3681688	113-16		130-6
3681709	114-17		130-9
3684028	34-8	4004167	42-4
3700X4	134-43	4004171	12-2
3726992	18-7	4004208	70-17
3743068	113-31		71-9
3743338	111-17	4004295	37-5
3743353	111-27		37-14
3743517	112-2		37-22
3743519	112-11		110-7
3743580	111-26	4004311	41-5
3743621	114-20		120-3
3743622	114-14		126-3
3743624	114-19	4004370	108-21
3743689	113-10	4004455	6-2
3750X4	134-37		7-10
3801	129-4		10-5
382A	128-10	4004507	110-4
3836058	108-1	4004515	21-9
3836059	113-18	4004520	44-18
38532	125-18	4004532	16-16
38534	125-25	4004566	55-11
386017	128-6	4004616	34-5
3878313	111-42	4004626	38-20
3878447	108-7	4004711	36-6
39439	129-7	4004801	63-4
4000021	71-32		64-2

PART NUMBER	FIO & INDEX NUMBER	PART NUMBER	FIO & INDEX NUMBER
4004805	58-25	4005677	F15-13
4004806	124-5	4005678	15-13
	130-15	4005691	73-24
4004809	F67-3	4005695	58-23
4004812	16-11	4005765	62-14
4004815	123-3	4005817	16-8
4004816	123-4		54-19
4004819	118-5	4005834	74-2
4004836	119-8	4005835	56-7
	125-3	4005840	55-6
4004863	125-6	4005843	55-9
	125-10	4005844	55-4
4004866	63-21	4005871	10-4
4004868	10-3	4005897	54-11
4004875	27-20	4005969	18-8
	58-26		32-3
4004894	63-14		62-12
4004901	72-7		62-18
	73-4	4006047	115-3
	77-7	4006101	54-6
4004903	39-20	4006112	118-9
4004919	25-3		118-13
4004926	27-4	4006136	21-2
4004928	77-6	4006176	21-6
4004943	67-3	4006366	34-3
4004949	17-11	4006393	71-30
	58-28	4006403	57-24
4004956	12-5	4006423	36-2
	15-9	4006444	58-20
	15-12	4006445	121-17
	15-17		121-22
4004959	60-3	4006455	15-2
4004991	41-14		40-2
	57-20	4006481	F58-24
4004995	15-6	4006486	37-1
4005015	14-13	4006502	70-6
4005063	72-8		71-18
	73-3	4006614	61-9
	132-7	4006661	71-11
4005095	70-15		71-13
4005122	14-19	4006662	71-15
4005142	69-5	4006664	71-16
4005198	124-8	4006681	115-23
	130-3	4006691	68-2
	130-7	4006832	34-2
	130-10	4006863	132-9
4005338	73-10	4006864	121-19
4005506	34-6		132-10
4005522	54-2	4006870	17-3
4005533	54-10	4006874	16-14
4005559	60-10	4006878	16-7
4005600	57-8	4006907	61-6
4005612	67-2	4007016	21-4
4005613	F67-2	4007028	71-19
4005633	7-2	4007053	F58-24
4005650	73-13	4007054	58-27
4005658	27-15	4007076	58-24
4005665	41-15	4007088	6-4
	107-9	4007091	11-16
	107-13	4007101	21-10
	132-3		23-2
4005669	62-16	4007209	34-4
4005672	62-3	4007220	12-8

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
40113	125-20	4487670	49-5
4028377	113-5	4487671	F49-5
4037634	67-8	4487672	F49-5
4058443	114-15	4487673	F49-5
4058527	108-28	4487674	F49-5
4058647	114-3	4487675	49-3
4058648	114-2	4487676	49-4
4058665	113-15	4487696	SEE 7805822
4058741	111-24	4487711	42-11
4058756	112-8	4487711	SEE 7804768
4058757	112-9	4487713	43-18
4058929	113-7		48-13
4058997	108-16	4487714	SEE 7804413
408	5-12	448772	44-11
4099	134-45	4487739	SEE 7804439
410-15	F5-4	4487741	SEE 7804558
410-21	F5-4	4487742	43-40
412	5-2	4487743	SEE 7804440
4130193	113-2	4487755	SEE 7807282
4130543	113-34	4487761	SEE 7806867
4130853	112-10	4487763	SEE 7808587
4130894	112-3	4487765	SEE 7804771
415	F5-10	4487772	48-15
4177111	76-3	4487774	SEE 7804410
4177870	76-2	4487777	SEE 7805950
4179420	76-8	4487779	SEE 7832112
4179421	76-7	4487782	SEE 7804536
4179456	59-2	4487785	SEE 7805546
42000414	SEE 7829221	4487791	SEE 7804403
4200301	39-2	4487799	SEE 7807551
4200303	39-17	4487801	SEE 7830314
4200304	73-8	4487816	48-4
4200306	73-7	4487994	38-6
4200318	55-18	4488006	76-1
4200414	69-7	4488301	48-8
4202631	42-2	4488301	SEE 7809128
4210617	111-40	4488318	43-21
424105-2	115-10		48-6
424132	45-10	4488330	SEE 7808195
424470	45-11	4488431	44-35
426	45-3	4488495	120-4
426-18	F5-9		126-4
426460	F5-9	4489040	SEE 7810761
4269149	F5-10	4489041	SEE 7811667
4269957	45-4	4489045	SEE 7810567
4269958	115-28	4489046	SEE 7811173
431-49	131-7	4489483	61-4
431-491	108-8	4489486	22-14
432453	108-11	4487487	58-15
4363256	5-27	450649	SEE 6450649
4411	5-26	45121-99001	139-2
4423	28-5	454783	139-29
442902	F5-14	45528-29003	139-44
443632	134-53	455683	SEE 6455683
4486551	45-14	456334	SEE 6456334
4486679	127-19	456695	SEE 6456695
4486713	44-37	457002	SEE 6457002
4487154	SEE 7805700	5SLS	2-16
4487659	SEE 5697804	5000-AD	134-30
4487660	49-7	500024-8	125-16
	49-6	53001372	91-24
		5350273	77-3
		5350644	121-4

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
5351742	38-10	5361747	69-2
5351803	41-4	5361822	71-4
5351844	41-10	5362173	43-20
5352079	124-9	5362568	42-1
	130-11	5362838	43-31
5352084	130-12	5363088	69-11
5352163	65-1	5363106	37-11
5352169	123-2	5363169	70-5
5352184	73-5	5363231	SEE 7839049
5352268	123-1	5363389	115-5
5352278	65-14	5363521	41-1
5352589	37-17	5363757	108-2
5352609	123-6	5370115	125-8
5352622	41-3	5370116	125-4
	60-13	543-XE	45-1
5352665	65-18	5450077	27-10
5352703	121-10		27-13
5352787	121-2		27-18
5352863	124-6	5450252	57-4
	130-8	5452057	29-6
5352882	119-10	5452266	59-6
5352955	131-11	5452305	29-4
5353384	66-1	5452306	29-2
5353415	73-9	5453638	98-14
5353494	131-10	5453805	31-3
5354540	81-3	5453806	31-5
5354934	44-32	5453866	27-8
5355076	73-17	5453933	41-13
5355287	38-8	5453945	12-7
5355315	121-12	5453949	20-2
5355369	130-5	5453950	12-1
5355483	132-6	5453957	62-7
5355593	121-1	5453958	62-10
5355594	121-5	5453960	62-9
5355596	121-8	5453963	62-11
5355597	121-9	5454145	18-1
5356329	119-6	5454146	18-2
5357401	123-7	5454156	18-4
	128-7	5454903	77-4
5357732	40-1	5455264	6-3
5358051	132-2		15-5
5358052	F132-2	5455265	6-6
5358177	70-19	5457045	12-9
5358879	118-15	5457097	15-11
5358978	69-14	5457098	15-10
5358985	124-11	5457300	14-4
5359274	70-18	5457825	77-2
5359275	123-8	5457831	21-1
5359276	123-9	5458945	27-16
5359322	73-6	5459081	62-6
5359584	121-13	5459147	58-10
	124-1	5459184	36-4
5359585	121-14	5459189	50-9
	124-2		52-1
5359695	66-8	5459207	15-4
5359885	SEE 7834355	5459245	27-7
5360060		5459267	27-12
5360117	42-7	5459280	15-1
5360178	37-19	5459281	15-14
5361023	37-4	5459282	62-15
	132-5		
5361659	71-1	5459286	15-3
5361661	71-12	5459515	36-3
5361662	71-10	5459516	6-1

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
5459524	36-5	5568147	8-1
5459644	20-5	5568148	F8-1
5460142	53-2	5568181	20-6
5460180	24-1	5568191	118-1
5461281	27-1	5582	134-54
5461575	55-7	559	3-12
5461591	56-6	565986	F129-6
5461808	39-12	5667628	67-25
5461816	60-1	5686527	67-7
5462328	56-5	5686539	67-27
5462343	55-2	5686540	67-29
5462352	55-24	5687182	67-12
5462392	55-12	5687973	67-15
5462412	15-7	5688014	82-23
5462413	15-8	5688015	82-7
5462424	12-4	5688035	82-4
5462425	15-15	5688037	82-10
5462438	12-3	5688044	F82-25
5462473	15-16	5688049	82-11
5462700	57-23	5688109	82-8
5462707	55-5	5689008	67-33
5462709	54-17	5689010	67-35
5462710	57-26	5689357	82-13
5462711	57-16	5689358	82-22
5462712	57-18	5689388	F82-18
5462713	55-14	5690698	67-4
5462728	53-10	5694191	43-5
5462731	53-9	5696151	44-30
5462784	54-16	5697804	67-28
5463555	55-21	5750016	67-22
5463556	58-16	5750339	49-2
5463620	54-18	5750340	56-1
5463655	52-4	5750949	56-3
5463656	26-2	5751098	46-4
5463657	26-1	5751144	46-8
5463658	27-9	5751149	50-7
5463794	52-7	5751190	62-5
5463813	52-5	5751191	62-4
5463814	52-6	5751815	11-12
5463866	54-9	5751827	11-15
5464904	54-12	5751959	58-19
5465058	55-13	5752279	55-15
5469877	54-3	5752366	47-1
5469898	53-8	5752530	57-21
550363	54-14	5752810	46-6
5567916	79-15	5752813	11-8
5567917	11-1	5752814	50-4
5568054	6-11	5752815	50-15
5568055	55-19	5752816	50-14
5568056	55-1	5752817	52-9
5568057	F129-15	5752818	52-10
5568062	10-2	5756124	52-11
5568064	14-11	5756587	52-8
5568065	14-9	5756806	33-1
5568068	14-7	5757433	34-7
5568069	14-8	5757455	62-17
5568070	132-28	5757742	63-1
	132-24	5758170	21-5
	132-26		16-10
	132-22		
	F132-22		
	132-20		

SEE P-25-1

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
5758176	16-13	5994061	132-13
5758177	16-12	5994117	124-14
5758184	17-1	5994139	132-30
5758185	17-2	5994140	132-29
5758190	16-15	5994144	30-2
5758191	16-1	5994277	73-14
5758192	16-3	5994278	73-12
5758193	16-4	5994281	24-12
5758194	16-2	5994282	24-11
5758372	13-1	5994283	24-7
5758468	16-6	5994284	24-6
5758469	16-5	5994340	29-8
5758501	27-17	5994341	29-1
5758687	50-12	5994358	41-7
5758706	57-27	5994360	F58-1
5758809	54-8	5994367	8-15
5758898	17-8	5994379	58-21
5758950	17-4	5994380	F58-21
5758951	17-5	5994387	8-5
5758971	12-11	5994388	30-1
5760072	34-9	5994391	71-25
5760075	34-13		108-6
5760078	34-10	5994395	29-5
5760699	32-4	5994402	75-7
5761111	SEE 543-XE	5994430	48-5
5761130	14-10	5994431	132-15
5761131	14-12	5994437	8-17
5761180	6-10	5994441	F118-1
5761344	32-2	5994444	132-17
5761345	32-1	5994446	132-16
5761372	7-8	5994464	9-1
5761531	57-11	5994465	F9-1
5762157	34-12	5994474	24-2
5762158	34-1	5994475	24-9
5762336	62-1	5994476	31-1
5762337	62-2	5994478	7-9
5762370	22-7	5994479	10-1
5762381	75-5	5994518	41-16
5762384	20-4	5994521	36-1
5762385	20-3	5994523	27-5
5763510	58-18	5994524	27-6
5763630	57-19	5994528	27-3
5763696	62-13	5994529	27-2
5764039	75-11	5994596	8-8
5764164	57-1	5994598	70-14
5764554	21-7	5994600	132-19
5764555	21-8	5994604	70-3
5764621	18-11	5994605	70-1
5764665	63-17	5994615	64-1
5764752	58-12	5994621	F8-15
5765376	16-18	5994666	75-6
5765377	16-17	5994670	29-9
5766604	14-14	5994704	24-8
5766613	46-2	5994730	40-5
5784	134-52	5994733	F10-1
598-7	5-20	5994788	75-3
59W-2-3	5-25	5994839	58-1
5900415	70-13	5994845	39-18
5900582	70-7	5994878	81-18
5994006	20-1	5994885	81-9
5994017	132-8	5994890	81-14
5994020	118-14	5994907	81-7
5994032	132-21	5994959	70-9

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
5994962	85-2	706602	129-14
5994977	88-7	706603	129-9
5994980	81-5	706604	129-10
5994993	81-2	706609	129-12
5995007	69-10	706861	129-6
5995114	70-16	706998 5X	129-5
5995129	50-1	72M-250-32-NL	5-29
5995139	50-2		5-44
5995141	87-3	72633	125-29
	87-6	72684	131-1
5995228	73-1	726962X	129-1
5995325	31-2	7507	2-36. 2
5995326	31-4	7700650261	SEE 5758184
5995424	38-1	77008	45-8
5995441	63-5	7703001402	88-2
5995454	72-25	7800580	43-12
600399-TW	136-11	7804403	44-3
600399-TX	136-8	7804410	43-28
600399-XT	136-12	7804413	44-1
600457-C	136-10	7804439	44-24
6022817	112-15	7804440	44-25
6022818	113-17	7804536	43-42
6023355	108-17	7804558	43-19
6023943	113-3	7804768	43-10
6024311	F113-17	7804771	43-11
6024312	F113-17	7805546	43-36
6024336	111-8	7805700	44-26
6025031	112-7	7805822	44-27
6025570	112-17	7805950	43-38
6027153	111-23	7806867	43-23
6028095	108-12	7807282	43-41
	108-15	7807551	43-26
	112-24	7807845	67-11
6028864	111-4		67-13
6028873	111-13	7808195	82-5
6030849	108-9	7808587	43-16
6030895	111-39	7809128	43-4
6030910	111-37	7809229	82-9
6031613	112-4	7809615	44-21
6031621	108-26	7810567	44-28
61570	115-25	7810761	44-4
61573	115-12	7810897	67-10
61575	115-13	7811173	43-22
62-P	5-30	7811342	44-8
6202E	84-12	7811659	44-12
63038M	84-9	7811667	44-22
637427	73-16	7812526	43-25
65004	133-10	7812784	82-24
650072	131-5	7813194	82-25
664607	57-9	7813631	67-19
664836	57-15	7814503	82-12
664843	57-6	7816516	67-16
67	9-5		67-20
6802	4-11		67-24
689294	6-7		67-37
689311	57-7	7817355	67-34
70037X	125-13	7817485	67-31
70038X	125-24	7817725	67-5
70517	125-1	7819510	43-6
706045	129-8	7819738	43-3
706116	125-26	7825171	82-19
706575	125-12	7825561	82-17
706576	125-23	7826470	67-23

PART NUMBER	FIGURE & INDEX	PART NUMBER	FIGURE & INDEX
7826744	F82-25	8120880	114-6
7826850	67-17	8120882	114-4
7827111	44-9	8120884	114-5
7828565	67-9	8120886	114-8
7829123	67-36	8120888	114-9
7829221	43-2	8120889	SEE 2801167
7829257	44-31	8120891	SEE 2124826
7830236	82-6	8120895	SEE 3410570
7830314	43-27	8120898	113-13
7830909	82-3	8120898	SEE 2204622
7831729	44-16	8120899	SEE 2204623
7832008	82-2	8120900	SEE 2400284
7832112	44-29	8120908	SEE 2124872
7832299	43-39	8120914	SEE 6022818
7833100	82-1	8120916	SEE 1942054
7834131	67-21	8120918	SEE 2124835
7834284	67-18	8120924	SEE 2466806
7834355	43-1	8120927	SEE 2466803
7836369	82-15	8120929	SEE 2801992
7837130	82-14	8120933	SEE 2801961
7837132	82-18	8120935	SEE 1942063
7837284	F82-18	8120937	SEE 1942064
7837321	F82-25	8120939	SEE 1942065
7837322	F82-25	8120940	SEE 2466811
7839049	67-1	8120966	114-7
7839341	82-16	8120976	SEE 1942109
7839667	82-21	8120979	SEE 2466954
7839669	82-20	8120981	SEE 1941831
7840045	F2-44	8120982	SEE 1315158
		8120984	SEE 2644324
	81-21	8120987	SEE 2124851
7903056008	F82-	8120988	SEE 1942123
7903056023	88-3	8120990	SEE 6030910
8.75X16.5, 10 PLY	138-10	8121005	SEE 6024311
803366	119-9	8121009	SEE 6024312
8051546	63-10	8121015	SEE 2892656
8051547	63-7	8121026	SEE 2400662
8051659	63-9	8121027	SEE 1942080
8053258	19-2	8121028	SEE 1736521
		8121050	SEE 6024336
8053259	19-1	8121054	SEE 3410908
806746	65-6	8121055	SEE 1942130
	65-26	8121057	SEE 6022817
8120052	50-3	8121058	SEE 1636464
	56-2	8121059	
	56-4		112-5
	57-14	8121062	112-12
	61-12	8121063	112-23
	79-16	8121064	
8120054	54-13	8121070	
	55-8	6121072	SEE 1942081
	55-16	8121075	SEE 2538185
8120097	SEE 7812526	8121076	SEE 2400580
8120531	SEE 7809229	8121078	SEE 3515451
8120840	SEE 6028095	8121080	
8120842	SEE 2466882	8121086	SEE 2400389
8120846	SEE 1942187	8121090	SEE 2204952
8120848	SEE 3743068	8121094	SEE 3410440
8120850		8121095	SEE 3410445
8120855	SEE 2466324	8121096	SEE 3410444
8120857	SEE 342007	8121097	SEE 3410437
8120859	SEE 1942021		
8120865	SEE 2801348		
8120867	SEE 3743689		
8120871	SEE 6023943		

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
8121101	SEE 3410518	8124027	SEE 706045
8121103	SEE 2124848	8124028	129-15
8121104	SEE 6028873	8124191	SEE 7816516
8121107	SEE 3410441	8124333	SEE 706116
8121109	SEE 1942132	8124362	SEE 35938
8121119	SEE 1942133	8124464	SEE 3743519
8121120	SEE 2204820	8124497	SEE 3743353
8121122	SEE 2204823	8124498	SEE 3743517
8121141	SEE 3515079	8124571	SEE 2621778
8121142	60-8	8124572	SEE 2621779
8121145	SEE 6023355	8124573	SEE 2621780
8121149	SEE 3515479	8124574	SEE 2621781
8121150	SEE 1556082	8124581	SEE 3743580
8121155	SEE 3515077	8124617	65-22
8121157	SEE 2801157	8124732	SEE 3743624
8121158	SEE 2466909	8124733	SEE 3743622
8121159	SEE 2466892	8124734	SEE 3743621
8121160	108-10	8124775	SEE 3743338
8121164	SEE 2466894	8124816	65-19
8121171	SEE 1942150	8124818	65-23
8121173	SEE 2801241	8124819	65-30
8121174	SEE 6027153	8124820	65-24
8121181	SEE 2801281	8124821	65-25
8121184	SEE 2124857	8124862	SEE 2466548
8121185	SEE 2538042	8124863	SEE 3878313
8121189	SEE 1942141	8124869	SEE 3515137
8121191	SEE 2892233	8124870	SEE 6028864
8121194	SEE 1942137	8125035	SEE 7817725
8121239	SEE 1626749	8125037	SEE 7817485
8121285	SEE 2801311	8125764	22-12
8121364	SEE 35416	8125811	61-2
8121365	SEE 35417	8125814	71-17
8121391	SEE 35566	8125823	72-4
8121392	SEE 500024-8		115-2
8121404	61-10		131-8
8121405	61-11	8125843	72-3
8121741	61-5	8125883	39-13
8121746	SEE 7810897	8125991	SEE 18000022
8122174	55-17	8126247	SEE 5686527
8122425	27-11	8126250	SEE 7807845
	27-14	8126614	68-5
	27-19	8126663	69-1
8122438	108-27	8126859	132-23
8122874	22-3	8126861	132-25
8122875	22-10	8126893	SEE 6030895
8122876	22-8	8126898	SEE 4028377
8122877	F22-8	8126905	SEE 3836059
8122878	F22-8	8126919	45-15
8122879	F22-8	8126920	SEE 442902
8122880	F22-8	8127369	SEE 7826744
8122881	22-9	8127645	SEE 7826850
8122958	SEE 7813631	8127677	22-4
8123042	SEE 3515996	8127831	SEE 7819510
8123058	SEE 424105-2	8127965	SEE 7817355
8123200	SEE 3681709	8128300	SEE 2622520
8123297	SEE 3681105	8128427	SEE 5690698
8123315	65-3	8128447	68-8
8123317	65-5	8128467	SEE 7813194
	65-13	8128488	107-1
8123318	65-4	8128490	125-2
	65-12	8128610	SEE 706575
8123319	65-11	8128611	SEE 706576
8123320	65-10	8128683	8-9

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
8128797	SEE 3878447	8130872	SEE 13627
8128889	44-10	8130873	SEE 13728
	48-14	8130874	SEE 13903
8128894	SEE 7829257	8130875	SEE 13702
8128965	SEE 4058997	8130876	SEE 13736
8128969	SEE 4058648	8130877	SEE 13786
8128970	SEE 4058647	8130878	SEE 13969
8128973	SEE 4058929	8130879	SEE 13885
8128977	SEE 4058665	8130967	SEE 16424
8128980	114-16	8130968	SEE 15306
8128982	SEE 4058443	8130969	SEE 15477
8128983	113-33	8130970	SEE 13738
8128983	SEE 3681688	8130971	SEE 13747
8129044	SEE 4058741	8130972	SEE 89323
8129317	43-14	8130974	SEE 13749
	48-10	8130975	SEE 15307
8129335	43-13	8130976	SEE 15333
	48-9	8130977	SEE 13798
8129378	55-23	8130979	SEE 15107
8129405	8-11	8130980	115-7
8129439	8-6	8130981	SEE 13758
8129474	124-3	8130982	SEE 13759
8129476	F124-3	8130983	SEE 13692
8129561	124-12	8130984	SEE 4210617
	132-18	8130985	115-4
8129592	8-10	8132472	SEE 7830909
8129722	SEE 18005408	8132473	SEE 7830236
8130000	55-10	8132474	SEE 7833100
8130053	8-13	8132475	SEE 7832008
8130179	SEE 7831729	8132482	SEE 4130193
8130335	SEE 6025031	8132491	SEE 4130543
8130351	F111-46	8132505	SEE 6030849
	F112-24	8132511	SEE 6031621
8130676	SEE 7832299	8132537	SEE 7834131
8130802	SEE 13068	8132538	SEE 7834284
8130805	SEE 15053	8132676	44-40
8130807	SEE FFB171	8133311	SEE 18007953
8130808	SEE 13905	8133312	SEE 18007954
8130813	SEE MS21044N6	8133316	SEE 18007963
8130815	SEE 11689	8133317	SEE 18007964
8130816	SEE 13368	8133318	SEE 18007968
8130817	SEE 13775	8133319	SEE 18007969
8130818	SEE 13776	8133321	SEE 18007965
8130819	SEE 13753	8133322	SEE 18007978
8130821	SEE 13733	8133578	SEE 3515387
8130822	SEE 13727	8133585	22-5
8130823	SEE 95472	8133641	SEE 61570
8130824	SEE 15054	8133768	33-2
8130825	SEE 61575	8133773	SEE 67
8130826	SEE 11801	8133781	SEE 6031613
8130827	SEE 13774	8133827	SEE 7837284
8130830	SEE 99780	8133828	SEE 7837321
8130836	SEE J-2416	8133829	SEE 7837322
8130851	SEE 13735	8133957	SEE 7839669
8130853	SEE 14037958	8133958	SEE 7839667
8130854	SEE 13725	8134122	63-16
8130855	SEE 15181	8134130	SEE 15835
8130856	SEE 93433	8134184	SEE P-550-WW
8130866	SEE 11446	8134372	SEE 7829123
8130867	SEE 13684	8134411	SEE 15158
8130868	SEE 13967	8134422	18-10
8130869	SEE 865168R91	8134454	SEE 13863
8130870	SEE 13672	8134540	SEE 18010091A

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
8134568	SEE 7826470	8135045	SEE 14018-90016
8134582	69-9	8135046	SEE 15255-W1100
8134629	120-1	8135047	SEE 11075-37501
8134630	126-1	8135048	SEE 13001-90109
8134680	SEE 4269958	8135049	SEE 13010-90002
8134761	SEE 4269957	8135050	SEE 08110-61662
8134763	F108-28	8135051	SEE 13024-37502
	F111-46	8135052	SEE 13014-37500
	F112-24	8135053	SEE 24340-90001
	F113-34	8135055	SEE 00926-41600
	F114-29	8135056	SEE 13030-37500
8134809	SEE 3801	8135057	SEE 08915-14010
8134851	20-7	8135058	SEE 08131-06510
8134852	14-15	8135059	SEE 13231-78201
8134853	14-16	8135060	SEE 13238-37502
8134859	SEE 15022	8135061	SEE 13252-61502
8134860	SEE 15023	8135062	SEE 13222-37504
8135000	SEE 11009-C6801	8135063	SEE 13257-37503
8135001	SEE 01522-05104	8135064	SEE 13258-37503
8135002	SEE 01648-00084	8135065	SEE 13284-37503
8135003	SEE 12293-37501	8135066	SEE 13285-37503
8135004	SEE 15042-90001	8135067	SEE 13255-58000
8135005	SEE 13002-90010	8135068	SEE 13289-58000
8135006	SEE 11012-76201	8135069	SEE 08921-32510
8135007	SEE 30412-P5100	8135070	SEE 13256-18010
8135008	SEE 00929-51400	8135071	SEE 13256-58000
8135009	SEE 00933-11800	8135072	SEE 13287-37501
8135010	SEE 00933-20650	8135073	SEE 13288-37500
8135011	SEE 11019-90002	8135074	SEE 13224-76200
8135012	SEE 13081-76201	8135075	SEE 08915-43810
8135013	SEE 01642-02114	8135077	SEE 13201-Y5200
8135014	SEE 08110-82010	8135078	SEE 13201-Y5201
8135015	SEE 08931-30410	8135079	SEE 13201-Y5202
8135016	60-5	8135080	SEE 13202-C8700
8135017	138-5	8135081	SEE 13202-C8701
8135017	SEE 08712-14205	8135082	SEE 13202-C8702
8135018	60-6	8135083	SEE 13203-T7200
8135019	SEE 12121-Y5201	8135084	SEE 13207-C8700
8135020	SEE 12123-Z5000	8135085	SEE 13207-C8701
8135021	SEE 15262-C6800	8135086	SEE 13207-C8702
8135022	SEE 21219-90209	8135087	SEE 13209-37501
8135023	SEE 21070-90005	8135088	SEE 13208-Y1400
8135024	SEE 15040-90003	8135089	SEE 15200-C6800
8135025	SEE 22178-90004	8135090	SEE 15208-61525
8135026	SEE 08120-61628	8135091	SEE 16729-37500
8135027	SEE 11041-C6800	8135092	SEE 15201-61502
8135028	SEE 11076-76203	8135093	SEE 15213-61502
8135029	SEE 11019-76200	8135094	SEE 15224-61501
8135030	SEE 08124-02028	8135095	SEE 15300-76200
8135031	SEE 11050-76200	8135096	SEE 15301-76201
8135032	SEE 13215-Y5200	8135097	SEE 15304-61501
8135033	SEE 13215-Y5201	8135098	SEE 15303-61503
8135034	SEE 13215-Y5202	8135099	SEE 15280-90001
8135035	SEE 13214-Y5200	8135100	SEE 15341-61500
8135036	SEE 11052-76203	8135101	SEE 16403-27000
8135037	SEE 01151-01004	8135102	SEE 16442-C6800
8135038	SEE 10005-Q4000	8135103	SEE 16454-99002
8135039	SEE 10006-37500	8135104	SEE 16413-31W00
8135040	SEE 11056-37502	8135106	SEE 19850-31W02
8135041	SEE 11059-76201	8135107	SEE 11067-34W01
8135042	SEE 11086-C7800	8135108	SEE 25230-J5570
8135043	SEE 13265-C6800	8135111	SEE 24342-90000
8135044	SEE 13240-37502	8135112	SEE 24341-90000

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
8135115	SEE 08121-24028	8135187	SEE 23330-61503
8135116	F135-2	8135188	SEE 23340-61501
8135117	SEE 16752-37500	8135189	SEE 23366-61500
8135118	SEE 16711-99000	8135190	SEE 23383-61504
8135119	SEE 16778-99002	8135191	SEE 23441-37501
8135120	SEE 16720-66800	8135192	SEE 23318-61501
8135121	SEE 16723-37503	8135193	SEE 23319-61503
8135122	SEE 16716-37500	8135194	SEE 23446-61501
8135123	SEE 16825-90004	8135195	SEE 23322-61502
8135124	SEE 19231-96000	8135196	SEE 23343-61504
8135125	SEE 19278-99014	8135199	SEE 6202E
8135126	SEE 16778-37500	8135200	SEE 10101-29128
8135127	SEE 16761-99002	8135201	SEE 12289-14600
8135128	SEE 27070-M0200	8135202	SEE 12279-76200
8135132	SEE 08124-06028	8135203	SEE 22179-90001
8135133	SEE 21051-90062	8135204	SEE 11044-61514
8135135	SEE 21069-61500	8135205	SEE 13270-66800
8135136	SEE 08723-13600	8135207	SEE 16635-J2000
8135138	SEE 21010-T8200	8135208	SEE 13043-76200
8135140	SEE 21200-96011	8135209	SEE 13037-90002
8135141	SEE 21202-90063	8135210	SEE 13041-Y5201
8135142	SEE 08320-61410	8135211	SEE 13044-Y5201
8135143	SEE 11060-66801	8135212	SEE 11026-61000
8135144	SEE 21013-61502	8135213	SEE 11121-61502
8135145	SEE 27070-21600	8135214	SEE 15147-37500
8135146	SEE 11023-07000	8135215	SEE 15066-90007
8135147	SEE 01351-10124	8135216	SEE 14327-61500
8135149	SEE 19234-37500	8135218	SEE 14035-90000
8135150	SEE 19261-99005	8135220	SEE 15239-V1700
8135151	SEE 19250-99002	8135221	SEE 21307-61520
8135152	SEE 19387-99000	8135222	SEE 21306-61520
8135153	SEE 19389-99007	8135223	SEE 21331-76201
8135154	SEE 19135-99000	8135224	SEE 21310-90011
8135155	SEE 19256-90000	8135225	SEE 21303-61520
8135156	SEE 19259-76200	8135226	SEE 16701-37504
8135157	SEE 19287-99005	8135227	SEE 21074-37502
8135158	SEE 19219-99002	8135228	SEE 21014-61503
8135159	SEE 14349-J2001	8135229	SEE 11045-76201
8135160	SEE 19232-61500	8135230	SEE 11062-L6000
8135161	SEE 19388-99003	8135231	SEE 10103-29129
8135162	SEE 16742-37500	8135233	SEE 12010-J5312
8135163	SEE 19363-99003	8135235	SEE 12100-37502
8135164	SEE 16757-76201	8135236	SEE 12030-37500
8135165	SEE 19262-37502	8135237	SEE 12109-37502
8135166	SEE 19268-86000	8135238	SEE 12113-37501
8135167	SEE 19248-37500	8135239	SEE 12033-J2204
8135168	SEE 19247-37500	8135240	SEE 12024-37501
8135169	SEE 19245-37503	8135241	SEE 12032-37500
8135170	SEE 23300-61504	8135242	SEE 12117-Y5200
8135172	SEE 08360-41012	8135243	SEE 12117-Y5201
8135173	SEE 08915-13410	8135244	SEE 12117-Y5202
8135174	SEE 08915-43410	8135245	SEE 12117-Y5203
8135175	SEE 08911-30810	8135246	SEE 12117-Y5204
8135177	SEE 23310-61503	8135247	SEE 12200-90063
8135178	SEE 23372-99004	8135248	SEE 32202-90004
8135179	SEE 23313-99111	8135249	SEE 12309-61503
8135180	SEE 23369-61503	8135250	SEE 12207-61506
8135181	SEE 23306-61503	8135251	SEE 12209-61506
8135182	SEE 23380-61501	8135252	SEE 12210-61506
8135183	SEE 23379-61503	8135253	SEE 12211-61506
8135184	SEE 23333-61503	8135254	SEE 12212-61506
8135185	SEE 23337-61504	8135255	SEE 12281-37502
8135186	SEE 23338-61503	8135256	SEE 12281-37503

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
8135257	SEE 12281-37504	8135332	SEE VP25-49201
8135258	SEE 12318-37502	8135335	SEE L150M-14041
8135259	SEE 12320-37502	8135336	SEE 6303BM
8135260	SEE 12280-37503	8135338	SEE L150-18015
8135261	SEE 12280-37504	8135339	SEE L150M-29221
8135262	SEE 12280-37505	8135340	SEE B-495469
8135263	SEE 12319-37503	8135341	SEE VP25-99004
8135264	SEE 12321-37503	8135342	SEE 2084-0631
8135265	SEE 12205-76200	8135343	SEE VP25-6947A
8135266	SEE 13021-37501	8135344	SEE L150-23105
8135267	SEE 13034-Y7503	8135345	SEE 16500-90066
8135268	SEE 13031-90004	8135346	SEE 16546-C7800
8135269	SEE 16702-37501	8135347	SEE 16548-C0300
8135270	SEE 08110-82062	8135348	SEE 16509-99100
8135271	SEE 08110-83062	8135349	SEE 16533-62210
8135272	SEE 08110-85562	8135350	SEE 3062-1171
8135273	SEE 08110-84562	8135351	SEE VP25-39401
8135274	SEE 13036-34W00	8135352	SEE VP25-29301
8135275	SEE 08110-86562	8135353	SEE 23174-37600
8135276	SEE 08915-13810	8135354	SEE 23168-C6801
8135277	SEE 08110-81662	8135355	138-7
8135278	SEE 11110-90070	8135355	SEE 08124-03028
8135279	SEE 11128-69200	8135356	SEE 08124-03533
8135280	SEE 08120-61228	8135357	SEE L150-23251
8135281	SEE 15140-C6800	8135358	SEE 08911-10510
8135282	SEE 15150-90002	8135359	SEE 08915-13510
8135283	SEE 08120-62528	8135360	SEE 08915-43510
8135285	SEE 08120-82028	8135361	SEE 14671-C0370
8135286	SEE 15010-90065	8135362	SEE 14665-Y7500
8135287	SEE 16671-C7800	8135363	SEE 11025-61501
8135288	SEE 16680-61500	8135364	SEE 14670-90061
8135289	SEE 16681-61500	8135365	SEE 01351-22104
8135290	SEE 16682-61500	8135366	SEE 08723-12000
8135291	SEE 16683-61500	8135367	SEE 13020-90000
8135292	SEE 16684-61500	8135369	SEE 08915-53810
8135293	SEE 16685-61500	8135370	SEE 14682-90004
8135294	SEE 16686-37501	8135371	SEE 2065-0732
8135295	SEE 16688-37501	8135372	SEE 2116-1491A
8135296	SEE 16689-61501	8135373	SEE 2116-1511A
8135297	SEE 08360-51014	8135374	SEE 2116-1502
8135300	SEE 16600-36W00	8135375	SEE 15291-90003
8135302	SEE 16678-C7800	8135376	SEE 08124-05028
8135303	SEE 15027-C6800	8135377	SEE 08124-09510
8135304	SEE 00926-31300	8135378	SEE 11032-C6801
8135305	SEE 15023-61503	8135379	SEE 11032-C6802
8135306	SEE 08120-88062	8135380	SEE 08110-82525
8135307	SEE 15015-90010	8135381	SEE 08110-82562
8135308	SEE 08120-61662	8135382	SEE 24210-01W05
8135309	SEE 15050-J5301	8135383	SEE 16643-C6800
8135310	SEE 15132-37501	8135385	SEE 21383-25000
8135311	SEE 15133-37500	8135387	SEE 11032-C6803
8135312	SEE 15136-37500	8135389	SEE 19823-C6801
8135313	SEE 00921-43510	8135390	SEE 21302-C6801
8135314	SEE 15199-04000	8135391	SEE 21317-99004
8135315	SEE 12305-90060	8135392	SEE 19820-C7802
8135316	SEE 12307-61501	8135393	SEE 16662-37500
8135318	SEE 12306-61503	8135394	SEE 16644-90000
8135319	SEE 08120-81628	8135395	SEE 16645-37501
8135321	SEE 12312-61500	8135396	SEE 16646-37500
8135324	SEE 12316-76200	8135397	SEE 16647-37500
8135325	SEE 12314-61500	8135398	SEE 16657-37500
8135329	SEE L150-43301	8135399	SEE 16648-37502
8135331	SEE L150M-28031	8135400	SEE 16652-37500

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
8135401	SEE 16653-37500	8135472	SEE 08110-61262
8135402	SEE 16658-99000	8135473	SEE 15028-61502
8135403	SEE 16659-37500	8135474	SEE 15021-61503
8135404	SEE 19278-99010	8135475	SEE 08363-81626
8135405	SEE 16660-37500	8135476	SEE 16258-C6801
8135406	SEE 16655-37501	8135477	SEE 16573-90065
8135407	SEE 16656-37501	8135478	SEE 16551-W7000
8135408	SEE 16754-C6800	8135479	SEE 16568-Y4100
8135409	SEE 08114-02562	8135480	SEE 14003-C6800
8135411	SEE 08723-11800	8135481	SEE 14004-C6801
8135412	SEE 16817-C6801	8135482	SEE 08267-03510
8135413	SEE 16818-C6801	8135483	SEE 14037-32200
8135414	SEE 16819-C6801	8135484	SEE 14038-90001
8135415	SEE 08360-51026	8135485	SEE 08911-10810
8135416	SEE 16454-Q4000	8135486	SEE 14325-C6802
8135420	SEE 16627-J5570	8135487	SEE 08360-62514
8135421	SEE 08740-11011	8135488	SEE 18424-90005
8135422	SEE 08723-11200	8135489	SEE 14320-Q4000
8135427	SEE 08911-14010	8135490	SEE 14330-C6800
8135428	SEE 08114-02062	8135491	SEE 14331-61501
8135429	SEE 08915-44010	8135492	SEE 14332-37500
8135430	SEE 15108-C6800	8135493	SEE 14333-97000
8135431	SEE 16813-C6801	8135494	SEE 08911-20610
8135432	SEE 19811-90001	8135495	SEE 14345-37500
8135433	SEE 19221-76200	8135496	SEE 14345-37501
8135434	SEE 2084-0641	8135497	SEE 14345-37502
8135435	SEE 15266-C6800	8135498	SEE 14341-J6500
8135436	SEE 15270-78500	8135499	SEE 14348-C6803
8135437	SEE 13044-J2001	8135500	SEE 14341-C6802
8135438	SEE 16635-J5570	8135501	SEE 19256-99002
8135439	SEE 16726-37500	8135502	SEE 16825-90005
8135440	SEE 16757-37500	8135503	SEE 14371-37500
8135441	SEE 19215-37500	8135504	SEE 16885-90001
8135442	SEE 19218-37500	8135505	SEE 14349-37701
8135443	SEE 19220-37500	8135506	SEE 14329-37500
8135444	SEE 19211-37500	8135507	SEE 14348-C6804
8135445	SEE 19212-37500	8135508	SEE 19352-90004
8135446	SEE 16778-99001	8135509	SEE 19225-99003
8135447	SEE 16703-C6800	8135510	SEE 16719-90000
8135448	SEE 19200-90019	8135511	SEE 19290-C6800
8135449	SEE 16810-C6800	8135512	SEE 19382-76200
8135450	SEE 16640-C6801	8135522	SEE 16831-37500
8135451	SEE 13052-37500	8135523	SEE 16830-37500
8135452	SEE 08110-61210	8135529	107-8
8135453	SEE 16818-90066	8135600	107-12
8135454	SEE 01351-11144	82M-180-P	5-40
8135455	SEE 19212-37501	82002	2-36.1
8135456	SEE 19235-61500	822164	45-16
8135457	SEE 19294-95000	82329	134-47
8135458	SEE 19813-31W01	824842	45-12
8135459	SEE 19265-37500	827497	45-17
8135460	SEE 19816-C6802	83504930	86-2
8135461	SEE 19208-99000	850-0045	133-11
8135462	SEE 08363-61214	8500215	133-2
8135463	SEE 08915-13610	8500274	133-1
8135464	SEE 19133-99004	8500320	133-8
8135465	SEE 19258-37500	8500371	F133-13
8135466	SEE 11232-90000	865168R91	116-40
8135467	SEE 11233-90002	8900420	5-7
8135468	SEE 08121-22528		5-17
8135469	SEE 11065-34W00	8932000147	SEE 301055
8135470	SEE 11056-T3400	89323	116-2
8135471	SEE 13036-J2001	893420104	138-9
		8934201397	58-13

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
8953004015	138-8	8983501537	SEE 72633
8953004018	138-4	8983501538	SEE 70517
8953004019	85-3	8983501544	SEE 4058527
8983500071	SEE 7836369	8983501546	SEE 4058757
8983500258	SEE 15247	8983501547	SEE 4058756
8983500259	SEE 15506	8983501548	SEE 4130853
8983501186	SEE 16700-90061	8983501549	SEE 4130894
8983501249	116-12	8983501550	SEE 4202631
8983501356	SEE 18012143	8983501570	SEE 706604
8983501360	SEE 18008106	8983501571	SEE 36472
8983501420	SEE 21300-C8700	8983501597	SEE L160-51001
8983501421	SEE 21304-C8700	8983501598	SEE L160-32001
8983501422	SEE 21309-C8700	8983501599	SEE L160-53016
8983501423	SEE 21320-76200	8983501801	SEE L150-23152
8983501424	SEE 16419-C8700	8983501802	SEE L160-23201
8983501429	SEE 8983501249	8983501803	SEE L150-14009
8983501430	SEE 16096	8983501804	SEE L160-6500
8983501431	SEE 15207	8983501806	SEE L150M-18004
8983501432	SEE 16100	8983502753	SEE 92628-99025
8983501433	SEE 16101	8983502754	SEE 92629-99025
8983501437	SEE 15811	8983502755	SEE 92630-99025
8983501449	SEE 320804	8983510093	SEE 16098
8983501454	SEE 3207917	8983510094	SEE 15904
8983501455	SEE 3207916	8983510095	SEE 15836
8983501456	SEE 3206985	8992000008	121-15
8983501457	SEE 3206984	8992000009	121-18
8983501458	SEE 3207203	8992000010	121-21
8983501459	SEE 315834	8992000033	132-32
8983501460	SEE 3206951	8992000034	132-33
8983501461	SEE 321628	8992000038	132-1
8983501462	SEE 317903	8992000039	132-31
8983501463	SEE 317902	8992000042	118-12
8983501464	SEE 317927	8992000044	132-27
8983501465	SEE 317913	8992000046	130-1
8983501466	SEE 3204274	8992000047	73-15
8983501467	SEE 3204273	8992000048	73-18
8983501468	SEE 3204266	8992000049	73-23
8983501469	SEE 3204264	8992000050	38-19
8983501470	SEE 3204270	8992000051	71-22
8983501471	SEE 3204269	8992000052	71-20
8983501472	SEE 318223	8992000055	71-7
8983501473	SEE 319040	8992000059	72-2
8983501474	SEE 322315	8992000060	37-21
8983501475	SEE 322314	8992000062	38-18
8983501476	SEE 3205205	8992000063	69-4
8983501477	SEE 3205204	8992000064	69-3
8983501478	SEE 317925	8992000065	47-8
8983501479	SEE 318510	8992000066	119-7
8983501480	SEE 09-001438	8992000067	71-6
8983501506	SEE LM104911	8992000068	72-1
8983501507	SEE 382A	8992000077	132-14
8983501508	SEE 726962X	8992000081	SEE 14-14403-052
8983501512	SEE 36113 25	8992000087	74-1
8983501513	SEE 36113 24	8992000091	127-17
8983501514	SEE 72684	8992000092	127-29
8983501515	131-3	8992000093	127-28
8983501516	SEE 29948	8992000094	SEE EOTA-1175-AA
8983501517	SEE 39439	8992000095	SEE 386017
8983501518	SEE 706861	8992000096	SEE D5UA-4A406-AA
8983501519	SEE 706998 5X	8992000097	127-16
8983501520	SEE 706609	8992000098	128-12
8983501521	SEE 706602	8992000100	38-12
8983501536	SEE 706603	8992000106	128-4

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
8992000108	117-1	8996000104	75-9
8992000110	SEE 33327-043	8996000105	75-8
8992000112	38-21	8996000106	75-1
8992000119	37-13	8996000109	75-10
8992000121	37-10	8996000110	46-1
8992000125	130-13	8996000111	50-8
8992000131	37-24	90V-2583	134-1
8993000023	F2-44	905029	133-16
8993000025	68-3	90616204	133-15
8993000026	SEE 3836058	913387	SEE 424132
8993000029	115-1	913388	SEE 824842
8993000032	109-6	9137	134-50
8993000033	SEE 12310-90167		134-65
8993000034	109-8	919585	SEE 30271
8993000035	109-3	919586	SEE 30266
8993000036	109-12	919612	129-3
8993000037	109-9	919612	SEE 919612
8993000038	109-10	920463	127-27
8993000039	109-11	92050657	4-8
8993000040	109-4	925062	76-9
8993000041	109-5	925447	123-11
8993000042	109-1	92600-90000	138-6
8993000048	108-3		F139-
8993000062	SEE 21060-J5500	92610-99000	139-51
8993000063	SEE 21064-P0300	92611-99000	139-49
8993000069	SEE 92600-90000	92611-99001	139-46
8993000072	SEE 12305-90300	92612-99000	139-50
8993000074	135-9	92613-99000	139-42
8993000077	135-4	92614-99000	139-47
8993000078	135-8	92615-99000	139-32
8993000079	135-7	92616-99000	139-37
8993000081	135-5	92616-99001	139-34
8993000085	135-6	92616-99002	139-36
8993000093	F85-1	92617-99000	139-35
	F88-6	92618-99000	139-41
8993317	SEE 4269149	92619-99000	139-31
8993538	63-15	92619-99001	139-22
8995000550	58-8	92620-99000	139-1
8995000552	21-3	92621-99000	139-21
8995000553	25-1	92622-99000	139-18
8995000556	25-2	92623-99000	139-11
8995000560	34-11	92624-99000	139-9
8995000561	13-5	92625-99000	139-25
8995000562	13-4	92626-99000	139-24
8995000563	13-6	92627-99000	139-23
8995000566	58-22	92628-99025	139-38
8995000584	35-1	92629-99025	139-15
8995000593	28-2	92630-99025	139-10
8995000594	28-1	92631-99000	139-28
8995000595	28-4	926878	77-9
8995000596	28-3	9302	134-66
8995000600	17-6	932370	SEE 2962793
8995000601	17-7	9328	4-2
8995000603	23-1	9329	4-4
8995000610	13-3	93433	115-26
	14-2	934878	68-7
8995000611	13-2	937961	127-25
	14-1	9388	4-17
8996000092	85-1	940121	66-2
	88-6	940298	108-5
8996000095	75-2	940707	SEE 5686540
8996000096	75-12	941011	71-29
8996000097	SEE LR160-9ZF	9411783	SEE 09411783

PART NUMBER	FIG & INDEX NUMBER	PART NUMBER	FIG & INDEX NUMBER
9413215	SEE 09413215	938629	41-12
9413447	SEE 09413447	961042	54-1
9413562	SEE 09413562	9615	134-20
941399			134-60
9414712		968155	24-13
9414721	SEE 09414721	970432	63-19
9415163	SEE 09415163	971669	7-4
9415260	SEE 09415260	971672	7-3
9416531	SEE 09416531	971673	7-6
9416532	SEE 09416532	972278	7-5
9416918	SEE 09416918	973857	11-7
9417333	SEE 09417333	974559	57-25
9417855	SEE 09417855	974764	53-3
9418738	SEE 09418738		58-17
9418778	SEE 09418778	976871	7-7
9419004	SEE 09419004	978984	11-10
9419076	SEE 09419076	979210	6-8
9419321	SEE 09419321	979305	11-5
9419337	SEE 09419337	979722	11-3
9419871	SEE 09419871	979725	11-4
9419892	SEE 09419892	986491	63-23
9419886		987066	58-5
		987079	54-5
		987145	11-9
9420350	SEE 09420350		38-2
9420510	SEE 09420510	987911	50-6
9421021	SEE 09421021		50-11
9421085	SEE 09421085		52-3
9421204	SEE 09421204	991106	
9421943	SEE 09421943	991546	73-22
9423284	SEE 09423284	991641	76-10
9424069	SEE 09424069	994603	44-43
9424757	SEE 09424757	994605	44-42
9426241	SEE 09426241	997362	124-13
942794		99780	115-21
9431552	SEE 09431552	998475	76-4
9431948	SEE 09431948	998710	44-36
9432476	SEE 09432476		
944870			
945201			
945266			
945269			
946177			
946861			
948180			
9505-10			
952F-250-32-NL			
952001-0180			
952001-0280			
952001-0380			
952002-0180			
952002-0280			
952002-0380			
952002-0480			
952002-0580			
952002-0680			
952002-0780			
95472			
957868			